

The Best Way To Go About Your Business

Published: 9/1/2001 Revision: I, 1/19/2017





Models Inlcuded: B0-200-00 BurdenMaster (B 2-00) B0-210-36 BurdenMaster (B 2-10) B0-210-36 AMB Ambulance B0-210-48 BurdenMaster (B 2-10)

MANUAL MB-210-07

Operation, Troubleshooting and Replacement Parts Manual

Serial Number Starting: 147865

Taylor-Dunn Contact information

Service, Parts, Sales:

Taylor-Dunn has a network of dealers distributed around the globe to support our vehicles. Information regarding vehicle sales, replacement parts, or service should be obtained through your local dealer. A dealer locator can be found on the Taylor-Dunn website at www.taylor-dunn.com.

If you do not have access to the internet, you can call the factory direct at: 01(714)956-4040

Feedback regarding this or any Taylor-Dunn vehicle manual can be sent to: Taylor-Dunn Manufacturing Attn: Tech Writer 2114 West Ball Road Anaheim, CA 92804





B2-48 With Dump Bed Option



B2-10 Ambulance



B2-48 with Steel Cab, Foldaway 4-Passenger Seat and Stake Sides



P2-50 30,000 Pound Tow Tractor




ET 3000



ET1-50 Full Size Truck



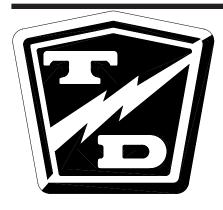

Taylor-Dunn[®]

Model B0-200-00, B0-210-36, B0-210-36AMB Operator and Service Manual Section Index

Introduction	1
Safety Rules and Operating Instructions	2
General Maintenance	3
Front Axle Service	4
Steering Component Service	5
Brakes Service	6
Motor Service	7
Transaxle Service	8
Suspension	9
Tires and Wheels	10
Battery Service	11
Motor Speed Control	12
Chargers	
Wire diagram	13
Illustrated Parts	14
Appendix A Special Tools	15
Appendix B Suggested Torque Values	16
Appendix C Brake Lining Handling Precautions	17

This quick reference section index guide will assist you in locating a desired topic or procedure.

Refer to each sectional Table of Contents for the page number location for specific topics or procedures.



D N N TAYLOR



Table of Contents

About this manual	2
Who Should Read This Manual	2
Responsibilities	2
How To Use This Manual	
Conventions	3
How to Identify Your Vehicle	4
Taking Delivery of Your Vehicle	5









Various versions of the model B 2-10 with optional equipment added



ABOUT THIS MANUAL

The purchase of this vehicle shows a belief in high quality products manufactured in the USA. Taylor-Dunn[®], a leading manufacturer of electric burden and personnel carriers since 1949, wants to be sure this vehicle provides years of reliable service. Please continue to read this manual and enjoy this high quality Taylor-Dunn[®] vehicle.

This manual is to serve as a guide for the service, repair, and operation of Taylor-Dunn[®] vehicles and is not intended as a training guide. Taylor-Dunn[®] has made every effort to include as much information as possible about the operation and maintenance of this vehicle.

Included in this manual are:

- Vehicle Description
- Safety Rules and Guidelines
- Operational Information
- Operator Responsibilities
- Owner Responsibilities
- Control Operation and Location Information
- Maintenance and Troubleshooting Information
- Standard Parts List

Before servicing, operating, training or performing maintenance on this or any other Taylor-Dunn[®] vehicle, read the appropriate Taylor-Dunn[®] manual.

Each Taylor-Dunn[®] manual references the applicable models and serial numbers on the front cover.

Please, be aware of all cautions, warnings, instructions, and notes contained in this manual.

WHO SHOULD READ THIS MANUAL

This manual is intended for use by anyone who is going to operate, own, perform maintenance on, service, or order parts for this Taylor-Dunn[®] vehicle. Each person should be familiar with the parts of this manual that apply to their use of this vehicle.

RESPONSIBILITIES

Of the Owner...

The owner of this or any Taylor-Dunn[®] vehicle is responsible for the overall maintenance and repairs of the vehicle, as well as the training of operators. Owners should keep a record of conducted training and maintenance performed on the vehicle. (OSHA Regulation, 29 CFR 1910.178 Powered Industrial Truck Operator Training).

Of the Operator...

The operator is responsible for the safe operation of the vehicle, preoperational and operational checks on the vehicle, and the reporting of any problems to service and repair personnel.

Of the Service Personnel...

The service personnel are responsible for the service and maintenance of the vehicle. At no time should a service person allow any untrained personnel to service or repair this or any Taylor-Dunn[®] vehicle. For the purposes of training, a qualified service person may oversee the repairs or services being made to a vehicle by an individual in training. At no time should an untrained individual be allowed to service or repair a vehicle without supervision. This manual is not a training guide.

Of the Passengers ...

The passengers are responsible to remain fully seated, keeping their hands, arms, and legs inside the vehicle at all times. Each passenger should be fully aware of the vehicle's operation. All forms of recklessness are to be avoided. Do not engage in horseplay.



Model B 2-10 shown withstake sides and steel cab with doors options

HOW TO USE THIS MANUAL

This manual is organized into five main sections:

INTRODUCTION

This section describes how to use this service manual and how to identify your vehicle.

Safety Rules and Operating Instructions

This section outlines the safety and operational issues, location and operation of controls, and the operational checks that are to be performed on this vehicle. It also includes various subjects that should be included in the operator and service training program.

Maintenance Service and Repair

This section gives specific information on the servicing of the vehicle and a schedule for maintenance checks.

Electrical and Charger Troubleshooting

This section identifies the troubleshooting procedures for testing the electrical system and battery charger.

Illustrated Parts

This section provides an illustrated view of various assemblies. The illustrations are accompanied by tables identifying the parts.

Conventions

Symbols and/or words that are used to define warnings, cautions, instructions, or notes found throughout this manual. Refer to the examples below.

A shaded box with the word "Warning" and the symbol above denotes a warning. A warning alerts the reader of a hazard that may result in injury to themselves or others. Be sure to follow any instructions contained within a warning and exercise extreme care while performing the task.

A shaded box with and the word "Warning" and the symbol habove denotes a warning. This warning alerts the reader of a high voltage hazard that may result in injury to themselves or others. Be sure to follow any instructions contained within a warning and exercise extreme care while performing the task.



Model R 3-80 shown equiped with a cargo box and steel cab with doors options

ACAUTION

A box with the word "CAUTION" and the symbol above denotes a caution and is used to inform the reader that property damage may occur. Be sure to exercise special care and follow any instructions contained with in a caution.

Note: Alerts the reader to additional information about a subject.




HOW TO IDENTIFY YOUR VEHICLE

This manual applies to vehicles with the same model and serial numbers listed on the front cover.

These vehicles are designed for driving on smooth surfaces in and around facilities such as industrial plants, nurseries, institutions, motels, mobile home parks, and resorts. They are not to be driven on public highways.

This vehicle is not designed to be driven on public roads or highways. It is available in maximum designed speeds ranging from 7 to 15 mph. Do not exceed the maximum designed speed. Exceeding the maximum designed speed may result in steering difficulty, motor damage, and/ or loss of control. Do not exceed locally imposed speed limits. Do not tow at more than 5 mph.

This vehicle conforms to requirements for Type E vehicles as described in O.S.H.A. Standard Section 29 CFR 1910.178 (Powered Industrial Trucks) and with all applicable portions of the American National Standard for Personnel and Burden Carriers (ANSI B56.8).

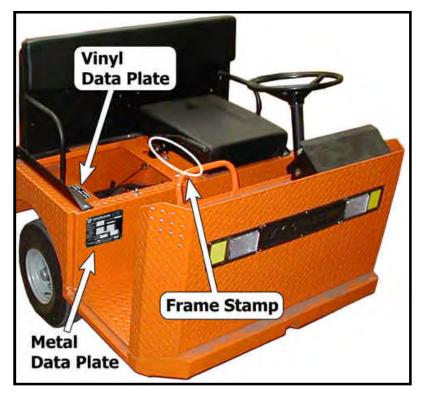

The locations of the model and serial numbers are illustrated below:

The model B 2-10 and B 2-00 look identical from the exterior. The easiest method to determine your model is to look at the rear drive axle.



INTRODUCTION

TAKING DELIVERY OF YOUR VEHICLE

Inspect the vehicle immediately after delivery. Use the following guidelines to help identify any obvious problems:

- Examine the contents of all packages and accessories that may have come in separate packages with the vehicle.
- Make sure everything listed on the packing slip is there.
- Check that all wire connections, battery cables, and other electrical connections are secure.
- Check battery cells to be sure they are filled.
- Check the tire pressure, tightness of lug nuts, and for any signs of damage.

Check the operation of each of the following controls:

- Accelerator
- Brake
- Parking Brake
- Key-Switch
- Forward/Reverse Switch
- Reverse Beeper (if equipped)
- Front Headlight Switch
- Steering Wheel
- Horn

What To Do If a Problem is Found

If there is a problem or damage as a result of shipping, note the damage or problem on the bill of lading and file a claim with the freight carrier. The claim must be filed within 48 hours of receiving the vehicle and its accessories. Also, notify your Taylor-Dunn[®] dealer of the claim.

If there is a problem with the operation of the vehicle, DO NOT OPERATE THE VEHICLE. Immediately contact your local Taylor-Dunn[®] distributor and report the problem. The report must be made within 24 hours of receiving the vehicle and its accessories.

The only personnel authorized to repair, modify, or adjust any part of this or any Taylor-Dunn[®] vehicle is a factory authorized service technician.

The only personnel authorized to repair, modify, or adjust any part of this or any Taylor-Dunn[®] vehicle is a factory authorized service technician. Repairs made by unauthorized personnel may result in damage to the vehicles systems which could lead to an unsafe condition resulting in severe bodily injury and/or property damage. Unauthorized repairs may also void the vehicles warranty.







SC1-00 Stock Chaser

B2-48 With Stake Side Dump Bed Option



E4-55 Sit Down Tow Tractor



C4-25 Sit Down Tow Tractor

TABLE OF CONTENTS

2

Standard Specifications Burden Carrier
Safety Rules and Guidelines
Driver Training Program
Driver Qualifications
Vehicle Controls4
Dash EndingSerial #1796664
Dash EnuingSenai #179000
1) Key-Switch
2) Horn Switch
4) Battery Gauge / Smart View
3) Hour Meter 4 5) Accessory Switch (Optional) 4
7) Auxiliary Switches
6) Headlight Switch
8) Forward-Off-Reverse Switch
Dash Starting Serial #1796675
1) Headlight Switch
2) Wiper Switch (Optional)
3) Strobe Switch (Optional)
4) Forward-Off-Reverse Switch
5) Hi-Low Switch (optional)
6) Smart View Display
7) Horn Switch
8) Key-Switch
Battery Status Indicator, Analog
Battery Status Indicator, Digital Bargraph 6
Directional Signals (Optional) 6
Hazard Light Switch (Optional) 6
Accelerator Pedal 7
Foot Brake Pedal 7
Park Brake7
Charger Interlock7
Seat Interlock Switch
Steering
Reverse or Motion Alarm
Smart View Display
Vehicle Operation Guidelines
Safety Guidelines
Starting:
While driving:
Loading and Unloading
Parking
Automatic Electric Park Brake
Towing This Vehicle
Charging your vehicle14
Signet® Charger Operation, Model HB Series 14
Signet Charger Operation, Model HBS series 14
Lestronic II® Charger Operation
New Battery Break in
Charging Time
Storing / Returning to Service
Storing Your Vehicle
Returning to Service
Periodic Maintenance Checklist
Standard Periodic Maintenance Schedule
for the Smart View Display17
Daily Visual inspection:
Severe Duty Applications18

Structions **J** S Ú afet J)peratin S



STANDARD SPECIFICATIONS BURDEN CARRIER

ITEM	MODEL	VOLTAGE	SPECIFICATION
Occupancy			2-Passenger (standard)
Dimensions			302.3L X 114.3 W X 122 H Centimeters 119 L X 45 W X 48 H Inches
Turning Radius			317.5 Centimeters (125 inches)
Dry Weight Without Batteries	B 2-10 B 2-00		529 kg (1,166 pounds) 459 kg (1,012 pounds)
Min/Max Battery Weights			158 kg to 194 kg (348 lbs to 428 lbs)
Maximum Load Deck dimensions	B 2-10 B 2-00		1,089 kg (2,400 lbs) 907 kg (2,000 pounds) 109 W 190.5 L Centimeters (43 W x 75 L Inches)
Electrical System	B 2-10	36 Volt	Six-217 Amp Hour, 6 Volt, Lead Acid Batteries, Solid State Speed Control, 300 Amp
	B 2-00	36 Volt	Six-217 Amp Hour, 6 Volt, Lead Acid Batteries, Solid State Speed Control, 270 Amp
Transmission	B 2-10 B 2-00		Helical Gear, Oil Bath, Automotive Type Hypoid Differential Helical Gear, Oil Bath, Direct Drive
Motor, DC Separately Excited Field	B 2-10		4.9 kW, (6.6 Horse Power) for 5 min
Brakes	B 2-10 B 2-00		Rear Wheel Hydraulic Disc, Hand Operated Park Brake Rear Wheel Hydraulic Drum, Hand Operated Park Brake
Steering			Automotive Steering 24:1
Tires			5.70 X 8 Load Range B
Frame			Steel Unitized Body, Heavy Duty 16 Gauge Steel, Diamond Plate
Instrumentation			Battery Discharge Indicator, Key Switch, Horn Button, Forward/Reverse Switch, Headlight Switch, Reverse Alarm
Light Accessories		12 Volt	Dual Headlight / Tail/Brake Lights
Charger		36 Volt	1kW, Built-In, Automatic

* - Specifications are subject to change without notice.

This vehicle conforms to requirements for Type E vehicles as described in O.S.H.A. Standard Section 1910.178 (Powered Industrial Trucks) and with all applicable portions of the American National Standard for Personnel and Burden Carriers (ANSI B56.8).

SAFETY RULES AND GUIDELINES

It is the responsibility of the owner of this vehicle to assure that the operator understands the various controls and operating characteristics of this vehicle (extracted from the American National Standards Institute Personnel and Burden Carriers ANSI B56.8). As well as, following the safety rules and guidelines outlined in ANSI B56.8 and listed below.

These vehicles are designed for driving on smooth surfaces in and around facilities such as industrial plants, nurseries, institutions, motels, mobile home parks, and resorts. They are not to be driven on public highways.

These vehicles are not designed to be driven on public roads or highways. They are available in maximum designed speeds ranging from 7 to 15 mph. Do not exceed the maximum designed speed. Exceeding the maximum designed speed may result in steering difficulty, motor damage, and/ or loss of control. Do not exceed locally imposed speed limits. Do not tow this vehicle at more than 5 mph.

Refer to Vehicle Operational Guidelines, Safety Guidelines section for important safety information regarding operating this vehicle.

Read and follow all of the guidelines listed below. Failure to follow these guidelines may result in severe bodily injury and/or property damage.

Before working on a vehicle:

- 1. Make sure the key-switch is in the "OFF" position, then remove the key.
- 2. Place the forward-reverse switch in the center "OFF" position.
- 3. Set the park brake.
- 4. Place blocks under the front wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.

DRIVER TRAINING PROGRAM

According to ANSI B56.8, the owner of this vehicle shall conduct an Operator Training program for all those who will be operating this vehicle. The training program shall not be condensed for those claiming to have previous vehicle operation experience. Successful completion of the Operator Training program shall be required for all personnel who operate this vehicle.

The Operator Training program shall include the following:

- Operation of this vehicle under circumstances normally associated with your particular environment.
- Emphasis on the safety of cargo and personnel.
- All safety rules contained within this manual.
- Proper operation of all vehicle controls.
- A vehicle operation and driving test.

Driver Qualifications.

Only those who have successfully completed the Operator Training program are authorized to drive this vehicle. Operators must possess the visual, auditory, physical, and mental ability to safely operate this vehicle as specified in the American National Standards Institute Controlled Personnel and Burden Carriers ANSI B56.8.

The following are minimum requirements necessary to qualify as an operator of this vehicle:

- Demonstrate a working knowledge of each control.
- Understand all safety rules and guidelines as presented in this manual.
- Know how to properly load and unload cargo.
- Know how to properly park this vehicle.
- Recognize an improperly maintained vehicle.
- Demonstrate ability to handle this vehicle in all conditions.

SAFETY RULES AND OPERATING INSTRUCTIONS

VEHICLE CONTROLS

DASH ENDINGSERIAL #179666

1) Key-Switch

A key-switch, located on the right side of the instrument panel, turns on the vehicle. Rotate the key clockwise to turn the vehicle power on, counterclockwise to turn the vehicle power off.

The key-switch should be in the "OFF" position whenever the operator leaves the vehicle.

This switch is also designed to secure and disable the vehicle. The key can only be removed when the keyswitch is in the "OFF" position.

2) Horn Switch

The horn switch is located to the right side of the instrument panel. Depress the switch to sound the horn, release it to turn it off.

3) Hour Meter

The hour meter is located to the right of the battery status indicator. It records the number of hours the vehicle has been in operation.


4) Battery Gauge / Smart View

Depending on how your vehicle was configured, this gauge may be one of two types of battery status gauges or a Smart View gauge. Refer to details later in this section for descriptions of the gauges.

5) Accessory Switch (Optional)

The accessory switch is located on the left side of the instrument panel and to the right of the headlight switch. Push the top of the switch to turn on the accessory. Push the bottom of switch to turn off the accessory. The accessory can be turned on with the key switch in the "OFF" position. If a vehicle is equipped with windshield wipers and one or more accessories, the windshield wipers are controlled from this switch. Other accessories are controlled from the auxiliary switchs (#7).

This switch may also function as an optional High/Low speed switch.

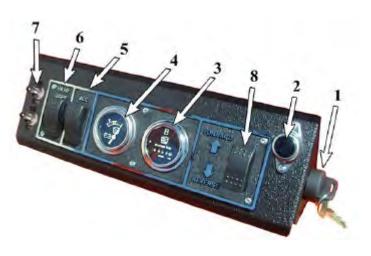

7) Auxiliary Switches

The auxiliary switchs located on the left side of the instrument panel and to the left of the headlight switch. Push the switch handle up turn on the accessory. Push the switch handle down turn off the accessory. The accessory can be turned on with the key switch in the "OFF" position.

6) Headlight Switch

The headlight switch is located on the top left of the instrument panel. Push the right side of the switch to turn the lights on. Push the left side of the switch to turn the light off.

8) Forward-Off-Reverse Switch

The forward-Off-reverse switch, located on the right side of the instrument panel, determines the direction of travel of the vehicle. Push the top of the switch to engage the forward direction. Push the bottom of the switch to engage the reverse direction.

DO NOT SWITCH from forward to reverse or vice-versa while the vehicle is in motion. Make sure the vehicle is completely stopped before shifting.

The forward-off-reverse switch should be in the center "OFF" position, with the key-switch off and the park brake set whenever the operator leaves the vehicle.

DASH STARTING SERIAL #179667

1) Headlight Switch

The headlight switch is located on the top left of the instrument panel. Push the right side of the switch to turn the lights on. Push the left side of the switch to turn the light off.



2) Wiper Switch (Optional)

The wiper switch is located on the left side of the instrument panel and to the right of the headlight switch. Push the top of the switch to turn on the wiper. Push the bottom of switch to turn off the wiper. The wiper can be turned on with the key switch in the "OFF" position.

3) Strobe Switch (Optional)

The strobe switch is located on the left side of the instrument panel and to the right of the wiper switch. Push the top of the switch to turn on the strobe. Push the bottom of switch to turn off the strobe. The strobe can be turned on with the key switch in the "OFF" position.

4) Forward-Off-Reverse Switch

The forward-off-reverse switch, located on the right side of the instrument panel, determines the direction of travel of the vehicle. Push the top of the switch to engage the forward direction. Push the bottom of the switch to engage the reverse direction.

DO NOT SWITCH from forward to reverse or vice-versa while the vehicle is in motion. Make sure the vehicle is completely stopped before shifting.

The forward-off-reverse switch should be in the center "OFF" position, with the key-switch off and the park brake set whenever the operator leaves the vehicle.

5) Hi-Low Switch (optional)

The high-low switch is located on the lower left of the instrument panel. Toggle the switch lever up for normal speed. Toggle the switch lever down for slow speed.

6) Smart View Display

Refer to details later in this chapter.

7) Horn Switch

The horn switch is located on the right side of the instrument panel. Depress the switch to sound the horn, release it to turn it off.

8) Key-Switch

A key-switch, located on the right center side of the instrument panel, turns on the vehicle. Rotate the key clockwise to turn the vehicle power on, counterclockwise to turn the vehicle power off.

The key-switch should be in the "OFF" position whenever the operator leaves the vehicle.

This switch is also designed to secure and disable the vehicle. The key can only be removed when the key-switch is in the "OFF" position.

Page 6

SAFETY RULES AND OPERATING INSTRUCTIONS

Battery Status Indicator, Analog

The battery status indicator is located to the left of the hour meter. The normal operating range is in the green zone. Park the vehicle for a few minutes for an accurate reading. The vehicle needs charging if it is in the yellow zone. During and immediately following charging, the needle will be in the red zone to the right. The needle will move through the green zone toward the yellow zone as the batteries discharge. Charge the batteries when the needle is in the yellow zone. If it is in the red zone to the left, the batteries are empty and the truck should be taken out of service and charged to avoid damaging the batteries.

Battery Status Indicator, Digital Bargraph

The battery status indicator is located to the left of the hour meter. The battery status indicator has a LED bar graph that indicates the relative state of charge of the battery. The top LED will light only when connected to a fully charged battery or after completing a charging cycle. Successive lower LED's will light as the battery charge diminishes. When the second from the bottom LED flashes the battery energy status is in energy reserve and should be placed on charge as soon as possible. When the two bottom LED's are alternately flashing the batteries are empty and the truck should be taken out of service and charged to avoid damaging the batteries. The BSI will reset to fully charged only after a complete charge cycle is completed. A complete charge cycle is defined as battery voltage exceeding 2.35 volts per cell for a minimum of 6 minutes.

Directional Signals (Optional)

The turn signal lever is located on the left side of the steering column. Push the lever forward to activate the right turn signal and pull the lever back to activate the left turn signal.

Hazard Light Switch (Optional)

The hazard light switch is located on the left side of the steering column. The switch is a small tab. To activate the hazard lights, pull the tab out. To turn the hazard lights off, push forward or pull back the directional signal lever.







SAFETY RULES AND OPERATING INSTRUCTIONS

Accelerator Pedal

The accelerator pedal is located to the right of the brake pedal. It controls the speed of the vehicle and operates similar to the accelerator pedal in an automobile. Depress the pedal to increase speed and release the pedal to decrease speed.

Foot Brake Pedal

The foot brake pedal, is located to the right of the steering column, it is for operation with the right foot only. It works similar to the brake in an automobile. Applying pressure to the brake pedal slows the vehicle according to the amount of pressure applied. Relieving pressure from the pedal releases the braking action. Directional indicator switch

Park Brake

The parking brake is actuated with a hand lever, which is located to the right of the driver. To set the parking brake, push down on the brake pedal and pull the lever up until it locks. To release the park brake, depress the foot brake pedal, pull up on the park brake handle, push the release button, and lower the handle.

Charger Interlock


The charger interlock is designed to disable the vehicle from being driven while the AC charger cord is plugged into a functioning power source.Seat Interlock Switch

Seat Interlock Switch

A switch located under the driver's seat disables the power to the vehicle when the driver leaves the seat. The driver must be seated for the vehicle to operate.

Whenever the driver leaves the vehicle, the driver should turn the key-switch off, place the forward-off-reverse switch in the center "OFF" position, and set the park brake.

The seat interlock switch is only one part of the vehicle safety system. The interlock switch should not be relied upon as the only safety feature used to disable or disengage this vehicle. Doing so could result in unexpected movement of the vehicle causing severe bodily injury and/or property damage.

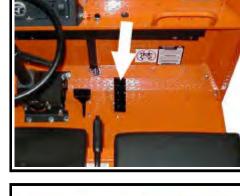








SAFETY RULES AND OPERATING INSTRUCTIONS

Steering

The steering wheel and steering system are similar to an automobile. To turn right, turn the steering wheel clockwise. To turn left, turn the steering wheel counter-clockwise. If equipped with tilt steering, the release lever is located on the lower left of the steering column. Pull the lever up to reposition the steering wheel.

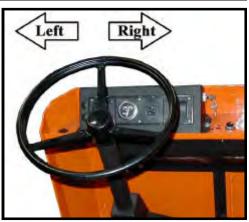


Reverse or Motion Alarm

The reverse alarm is located in the electronics compartment mounted in the speed control panel enclosure. The reverse alarm is activated when the Key switch is in the "ON" position and the Forward-Off-Reverse switch is in the reverse position. The alarm makes a repeated audible sound.

The motion alarm is the same alarm that is used for the reverse alarm, only it operates in both the forward and reverse directions.

Smart View Display

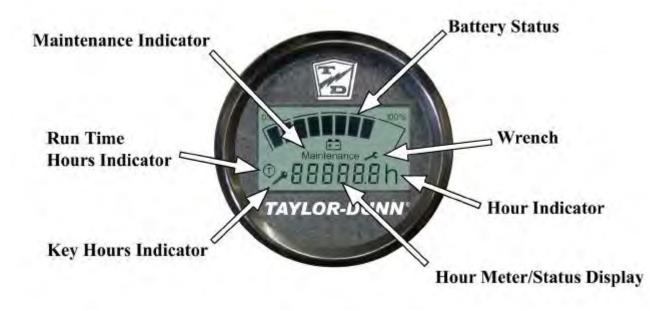

The Smart View Display (SVD) functions as a Battery Status Indicator (BSI), Hour Meter (HM), speed controller status monitor, and as an optional maintenance monitor feature. The operation of each of these functions is described below. The Smart View is optional for the B 2-00.

BSI: A bar graph representing the current state of charge is located across the top of the display. When the batteries are fully charged, all segments of the bar graph will be on. As the batteries are used, segments will turn off in the order of right to left.

When the batteries are discharged to 75%, the last three segments will flash indicating that you are approaching the end of the battery cycle. At this time, the vehicle's batteries should be charged as soon as possible.

At 90%, all segments will flash and the vehicles speed will be reduced. At this time, the vehicle should be removed from service for charging. Discharging beyond 90% will result in damage to the batteries that will shorten the battery life-span.

NOTE: The battery status gauge as well as any faults indicating low battery voltage will not reset until the batteries have successfully completed a charging cycle. **<u>HM</u>**: Depending on the revision level of the controller, there are one or two hour meter functions, Key Hours and Run Time Hours (see note below).

Key Hours is the accumulated length of time in hours that the key switch is in the "ON" position.

Run Time Hours is the accumulated length of time that the vehicles has been in operation. Time is accumulated when the FS-1 switch in the accelerator module is closed.

One of the Hours functions is being displayed whenever the either of the Hours Indicators are visible at the right side of the display.

NOTE: The Key Hours function was discontinued starting with revision K controllers shipped in 2007.

Key Hours: When the display is turned on, the Key Hours will be displayed for approximately 5-seconds as indicated by the Key Hours Indicator located at the lower left of the display. The icon represents the silhouette of a key.

<u>Run Time Hours:</u> After the initial 5-seconds, the Run Time Hours will be displayed as indicated by the Run Time Hours Indicator located at the left of the display. The icon represents a motor symbol with a "T" in the center.





Display showing Maintenance and Wrench icons

Maintenance Monitor:

NOTE: The Maintenance Monitor function is optional. The Maintenance Monitor function can be turned ON or OFF by your dealer.

Operation: The SMD notifies the operator 10-hours (standard) before a scheduled maintenance is due. During this warning period, the meter will continue to alert the operator. This should allow sufficient time for the operator to schedule the maintenance that is due, with minimal down time. If the scheduled maintenance is not performed before the warning period elapses, then the vehicles maximum speed will be significantly reduced.

<u>Warning period:</u> The warning starts when the Maintenance Indicator is ON and the Wrench icon is flashing. The Wrench icon will continue to flash until the warning time has expired.

<u>Maintenance Due:</u> Once the warning has expired and the maintenance is due, the Wrench icon will stop flashing and remain ON. Additionally, the vehicles maximum speed will be significantly reduced until the maintenance is performed and the display is reset. The display should only be reset by an authorized technician. Refer to the *Illustrated parts* section for information regarding tools required to reset the Smart View Display.



Speed controller status: The display will indicate a fault code whenever the control system logic detects a problem with the control system. A fault code is being displayed whenever the Fault Code Indicator (the letter 'F') is visible at the left of the numeric display. Refer to the fault code table in this section for a summery description of the fault codes.

Level 5 Faults



Fault Code Tables

NOTE: Most faults are a result of a fault in the control system that will require service by a qualified technician. These faults are shown here for reference only.

Operator correctable faults are shown in bold and underlined.

			F05005
	=		F05006
Level 1 F	-aults		F05007
Fault Code	Description	What to do	F05008
F01000	P/S Motor Overheated	Stop the vehicle and allow	F05009
		the system to cool down.	F05010
F01001	Motor Brush Fault	Refer to service technician	F05011
F01002	Pump Motor Brush Fault	Refer to service technician	F05012
F01003	P/S motor Brush Fault	Refer to service technician	F05013
F01004	Low Battery Volts	Batteries are empty and	F05014
	-	require charging. If this	F05015
		fault does not reset after the	F05016
		charge cycle is complete	F05017
		then there may be a	F05018
		problem with the charger or	F05019
		batteries.	F05020
		Refer to qualified service	F05021
		technician.	F05022
F01005	Controller Overheated	Stop the vehicle and allow	F05023
		the system to cool. This	F05024
		could be a result of an	F05025
		overloaded vehicle.	F05026
F01006	Traction Motor Hot	Stop the vehicle and allow	F05027
		the system to cool down.	F05028
		This could be a result of an	F05029
		overloaded vehicle	F05030
F01007	Pump Motor Overheated	Stop the vehicle and allow	F05031
		the system to cool down.	F05032
F01008	Wiring fault	Refer to service technician	F05033
			F05034
			F05035
Level 4 F	Faults		F05036
Fault Code	Description	What to do	F05037
F04000	Open Contactor	Refer to service technician	F05038
F04001	Contactor Welded	Refer to service technician	F05039
F04002	Steer POT Fault	N/A	F05040
F04003	Sequence Fault	Start up switches were not	F05041
	•	operated in the correct	F05042
		order. Refer to Vehicle	F05043
		Operation Guidelines for	F05044
		correct sequence.	F05045
F04004	F&R Fault	Refer to service technician	F05046

Direction was selected before start switch was

closed. Place direction

and restart.

not closed.

selector in the OFF position

Seat or foot interlock switch

F&R switch NOT in neutral.

Extreme low battery voltage

at the controller. May be a

result of severely

discharged battery or

wrong battery installed. Confirm that the correct

battery is installed and

Refer to service technician

Refer to service technician

Refer to service technician

Refer to service technician

charge the battery.

Refer to service technician

F04005

F04006

F04007

F04008

F04009

F04010

F04011

F04012

F04013

F&R Fault

Interlock Fault

Steer Fault

Inch Switch Fault

Low Battery Volts

High battery Volts

CRC Fault

Capacitor Fault

Out of Range Fault

Level 2 Faults Fault Code **Description** Throttle Fault E02000

Open Contactor

. Open Field R

<u>F02000</u>	Throttle Fault
F02001	Throttle Fault
F02002	Belly Switch Fault
F02003	Open Field
F02004	Open Field L

F02005

<u>Fault Code</u>	<u>Description</u>
F05000	Contactor Over Current
F05001	Controller Fault
F05002	Configuration Error
F05003	Internal Fault
F05004	VA Fail
F05005	Data Layer Fault
F05006	MOSFET Short
F05007	Power Up Fault
F05008	Line Contactor Short
F05009	Wiring/Motor Short
F05010	Power Up Fault
F05011	Drive 0 ON
F05012	Drive 1 ON
F05013	Drive 0 OFF
F05014	Drive 1 OFF
F05015	Drv 0 MOSFET Trip
F05016	Drv 1 MOSFET Trip
F05017	Traction ON
F05018	Traction OFF
F05019	MOSFET Short L
	_
F05020	Power Up Fault
F05021	Traction Welded
F05022	Traction MOSFET
F05023	Auto Zero
F05024	Drive 0 ON L
F05025	Drive 1 ON L
F05026	Drive 0 OFF L
F05027	Drive 1 OFF L
F05028	0 MOSFET trip L
F05029	1 MOSFET trip L
F05030	Traction ON L
F05031	Traction OFF L
F05032	MOSFET Short R
F05033	Power Up Fault
F05034	Traction Welded
F05035	Traction MOSFET
F05036	Auto Zero R
F05037	Drive 0 ON R
F05038	Drive 1 On R
F05039	Drive 0 OFF R
F05040	Drive 1 OFF R
F05041	0 MOSFET Trip R
F05042	1 MOSFET Trip R
F05043	Traction ON R
F05044	Traction OFF R
F05045	Stack Corrupt
505040	On an Onestantan

What to do

Refer to service technician Refer to service technician

What to do

Occurs if throttle control voltage is high at start up indicating that the throttle pedal was depressed when the start switch was closed. If the pedal was not depressed, then refer to qualified service technician.

Refer to service technician Refer to service technician Refer to service technician Refer to service technician

SAFETY RULES AND OPERATING INSTRUCTIONS

VEHICLE OPERATION GUIDELINES

Safety Guidelines

- Only qualified and trained operators may drive this vehicle.
- Drive only on level surfaces or on surfaces having an incline of no more than 10% (5.6 degrees).
- Drive slowly when making a turn, especially if the ground is wet or when driving on an incline.
- This vehicle may overturn easily if turned sharply or when driven at high speeds.
- · Observe all traffic regulations and speed limits.
- Keep all body parts (head, arms, legs) inside this vehicle while it is moving.
- Keep the vehicle under control at all times.
- Yield right of way to pedestrians, ambulances, fire trucks, or other vehicles in emergencies.
- Do not overtake another vehicle at intersections, blind spots, or other dangerous locations.
- Do not drive over loose objects, holes, or bumps.
- Yield right of way to pedestrians and emergencies vehicles.
- Stay in your driving lane under normal conditions, maintaining a safe distance from all objects.
- Keep a clear view ahead at all times.

Starting:

Perform all necessary vehicle preparation steps, inspections, or maintenance before operating this vehicle.

- NOTE: The vehicle is equipped with a seat or foot interlock switch. This switch must be closed BEFORE the throttle is depressed.
 - 1. Make sure the forward-off-reverse switch is in the center "OFF" position.
 - 2. If equipped with a manual park brake, set the parking brake.
 - 3. Hold down the foot brake.
 - 4. Rotate the ON-OFF switch to the "ON" position.
 - 5. Wait 1-second then place the forward-off-reverse switch in the desired direction of travel.
 - 6. Release the parking brake.
 - 7. Release the foot brake.
 - 8. Slowly depress the throttle pedal.

While driving:

- Slow down and sound the horn to warn pedestrians or when approaching a corner or other intersection.
- No reckless driving.
- Do not drive this vehicle on steep inclines or where prohibited.
- Immediately report any accidents or vehicle problems to a supervisor.
- NOTE: This vehicle is equipped with regenerative motor braking. When the throttle pedal is released, the motor is converted into a generator. This will slow the vehicle and return this energy to the battery. To disable the motor braking action and allow the vehicle to coast, hold slight pressure on the throttle pedal.
- NOTE: If the operator leaves the driver seat while in motion, the vehicle will come to an abrupt stop.

Loading and Unloading

- Do not carry more than the maximum number of passengers allowed for this vehicle.
- Do not exceed the cargo load capacity.
- Do not load cargo that can fall off.
- Be careful when handling cargo that is longer, wider, or higher than this vehicle, be sure to properly secure all loads.

Towing Loads:

- Do not exceed the towing capacity of the tractor.
- Do not exceed the load capacity of the trailer. Refer to documentation supplied with your trailer for information regarding load capacity of the trailer.
- Make sure all loads are securely tied down. Refer to documentation supplied with your trailer for information regarding attaching loads to the trailer.
- Do not back up when towing more than one trailer.
- Drive slowly when towing loads with a high center of gravity.
- When turning, be sure to allow for "corner cutting" of the trailer.
- Allow for longer stopping distances when towing heavy loads.
- Allow for longer stopping distances when driving down a grade.

Parking

Before leaving the vehicle:

- Set the parking brake.
- Set the forward-off-reverse switch to the ` "OFF" position.
- Rotate the start switch to the "OFF" position.

In addition:

- If parking this vehicle on an incline, turn the wheels to the curb, or block the wheels.
- Do not block fire aisles, emergency equipment, stairways, or exits.

Automatic Electric Park Brake

This vehicle may be equipped with an automatically applied electric parking brake. Under normal driving conditions, the parking brake will be applied when the start switch is turned off or the operator leaves the driver seat. It will also be applied if the control system loses power such as when the emergency battery disconnect switch (if equipped) is activated.

NOTE: The vehicle will come to an abrupt stop if the start switch is turned off or the operator leaves the driver seat while the vehicle is in motion.

The parking brake is powered by the vehicle battery. It will be applied whenever the batteries are disconnected. It may be applied if the batteries are severely discharged.

If the vehicle power system fails and applies the brake, the can be released by disconnecting the electric brake from the control system and connecting a 20 to 24 volt DC source (1.5A) to the electric brake.

Towing This Vehicle

To tow this vehicle, attach a tow strap to the front bumper tow-bar.

NOTE: If the vehicle is equipped with the automatic electric park brake, do not tow the vehicle with the drive wheels on the ground.

Use another driver to steer this vehicle while it is being towed. Be sure the driver uses the brakes when the towing vehicle slows or stops. Do not tow the vehicle faster than 5 m.p.h. or its maximum designed speed, whichever is lower.

If at all possible, this vehicle should be placed on a carrier, rather than towing.

The automatic park brake should be disabled for servicing or towing procedures <u>only</u>. Do not operate the vehicle while the automatic park brake is disabled. Operating the vehicle with the automatic park brake disabled could lead to severe bodily injury and/or property damage.

ACAUTION

This vehicle is equipped with regenerative braking. Follow these steps before towing this vehicle.

1. To tow this vehicle the start switch must be in the "OFF" position.

2. Place the forward/reverse switch in the center "OFF" position.

Failure to follow these instructions may result in damage to the vehicle.



CHARGING YOUR VEHICLE

Explosive mixtures of Hydrogen gas are present within battery cells at all times. Do not work with or charge battery in an area where open flames (including gas furnace or water heater pilots), sparks, cigarettes, or any other sources of combustion are present. Always provide ample ventilation in rooms where batteries are being charged. Failure to do so may result in severe bodily injury and/or property damage.

Battery electrolyte is poisonous and dangerous. It contains sulfuric acid. Avoid contact with skin eyes or clothing. Wear rubber gloves and safety glasses while servicing batteries. DO NOT INGEST! This may result in severe bodily injury.

The key switch must be in the "OFF" position when charging the batteries. Failure to turn the key switch "OFF" may result in damage to the vehicles electrical system.

Signet[®] Charger Operation, Model HB Series

The Signet[®] HB series chargers use a semiautomatic charging system. The charger will turn itself ON when the AC power cord is connected to the AC power source and turn itself OFF when the batteries are



Typical Signet[®] HB

fully charged. Refer to the data plate on the charger for the voltage and type power required for the charger.

There is a series of LED's on the faceplate of the charger that serve two functions:

- 1. Status of charge. The LED's will display an approximate percent of charge during the charging cycle. Refer to the table below.
- Error condition. All three LED's flashing is an indication of a charging problem (charger will also be beeping). Refer to the *Charger Troubleshooting* section for information on fault codes.



Charging State	harging State LED1 LED2		LED3
0 to 50%	Blinking	OFF	OFF
50% to 75%	ON	Blinking	OFF
75% to 100%	ON	ON	Blinking
Cycle complete	ON	ON	ON

Signet Charger Operation, Model HBS series

The Signet[®] HBS series chargers are fully automatic. The charger will turn itself ON when the AC power cord is connected to the AC power source and turn itself OFF when the batteries are fully charged. Once the charge cycle is complete, the charger will continue to monitor the batteries. If the battery voltage



drops during storage, the charger will start a new cycle to keep the batteries fully charged.

NOTE: If the charger restarts during a short time period of storage, then it would be an indication of faulty batteries.

Refer to the data plate on the charger for the voltage and type power required for the charger.

There is a series of LED's on the faceplate of the charger that serve two functions:

- 1. Status of charge. The **STATUS** LED's will display an approximate percent of charge during the charging cycle. Refer to the table below.
- 2. Error condition. The *FAULT* LED flashing is an indication of a charging problem (charger may also be beeping). Refer to the *Charger Troubleshooting* section for information on error codes.



Lestronic II[®] Charger Operation

The Lestronic II[®] charger is a semi-automatic charging system. The charger will turn itself ON when the AC power cord is connected to the AC power source and turn itself OFF when the batteries are fully charged. Refer to the data plate on the charger for the voltage and type power required for the charger. When plugged in, the charger assumes that the batteries require charging and will charger for a minimum of approximately 4-hours. This charger should not be plugged in until the batteries are discharged beyond 50% or the batteries may be overcharged..

New Battery Break in

New batteries require a break in period of up to 40-cycles. The batteries will not have their full capacity during this break in period and may require longer charging times.

To obtain the maximum battery life:

Charge the batteries only after they reach a normal discharge as indicated on the Battery Status Indicator (BSI). Failure to follow this guideline could result in the batteries entering an overcharge state, which will reduce the life of the batteries. If you find it necessary to charge the batteries before they are completely discharged we recommend waiting until they are discharged a minimum of 25% to reduce the possibility of overcharging. Refer to Vehicle Controls in this section for information on how to read the BSI.

Do not discharge the batteries beyond a normal discharge as indicated on the BSI. Refer to Vehicle Controls in this section for information on how to read the BSI.

Check the battery electrolyte once a week. Do not charge the batteries if the battery electrolyte is low. Charging when the electrolyte is low will damage the batteries and shorten their life-span. Only authorized personnel should perform battery maintenance including maintaining the battery electrolyte level. Refer to Section Maintenance, Service and Repair for battery maintenance information.

Do not interrupt the charging cycle. When the charger is plugged in, allow it to turn off before disconnecting. Interrupting the charging cycle could lead to overcharging or discharging the batteries too deep. Both circumstances will shorten the life of the batteries.

Charging Time

Average charging time is 8 to 10-hours. The time required to fully charge your batteries will vary depending on:

- · Capacity of the batteries, higher capacity requires longer charge time.
- Output of the charger, higher output requires less charge time.
- Depth of discharge, the deeper a battery is discharged, the longer it takes to charge.
- Temperature, low temperatures require longer charge time.

It is not unusual for charge times to exceed 15-hours, especially with new batteries.

Charging time is limited to 20-hours (HBS) or 18-hours (HB). A fault will occur if the charging time exceeds the 20-hour limit.

STORING / RETURNING TO SERVICE

Both storing your vehicle and returning it to service should only be performed by authorized personnel.

Storing Your Vehicle

- Clean the batteries, then fill and charge before putting the vehicle in storage. Do not store batteries in a discharged condition.
- Lube all grease fittings.
- Clean, dry, and check all exposed electrical connections.
- Inflate tires to proper pressure (if applicable).
- For extended storage, the vehicle should be elevated so that the tires do not touch the ground.

If stored for a prolonged period, the batteries should be charged as follows:

<u>Returning</u>	to
Service	

• Check the battery's state	Storage Temperature (F)	Charging Interval (months)
of charge and	Over 60	1
charge if required.	Between 40 and 60	2
Perform ALL	Below 40	6

maintenance checks in the periodic checklist.

- · Remove any blocks from the vehicle and/or place the vehicle down on to the ground.
- Test drive before putting into normal service.



PERIODIC MAINTENANCE CHECKLIST

Taylor-Dunn

Preventative Maintenance Schedule for GT Drive with Series Motor

Date: Inspected I Serviced E	By:		Serial	l #: Hour Meter: #: D#:
Interval (hours) ¹	Inspected ²	Service Required	Service Complete	Item Description
				Master cylinder fluid level
			2	Parking brake for secure hold
]		Battery water level
			1 3	Tire inflation (pneumatic tires)
Operator				Tire tread / damage
Daily				All lights (head, tail, brake, warning, dash panel)
Checklist				Steering (hard steering, excessive play, unusual noises)
				Inspect brake and throttle pedal (play, binding, noise)
			- 20.	Horn
			1 3	Motion alarm (if equipped)
				Fluid leaks (brakes, rear axle, battery, hydraulic system)
		1	2	Adjust service and park brake systems
				Inspect all steering linkages and hardware
				Tighten steering shaft to steering gear coupler (if equipped)
			1	Lubricate the vehicle
				Wash batteries and clean terminals
500			- 80	Inspect for fluid leaks
			1	Check all electrical interlocks for proper operation
		[Inspect wheel bearings for play and noise
				Inspect front fork collar bearings for play and noise (3-wheel vehicle only)
			2. S7	Inspect and tighten all hardware (first 500 hours only, then 1000 hours and every 1000 hours)
	1	1	2	Inspect and tighten all hardware
				Clean and repack front wheel bearings, replace grease seals
				Inspect all electrical connections for signs of overheating
			1	Tighten all electrical connections
1000				Inspect all wiring for cracks, fraying or wear
1000			- 20.	Blow carbon from motor
			1 2	Inspect motor brushes and commutator
				Clean and lubricate motor coupler
			3	Inspect steering king pins for play
				Align front end
				Change rear axle oil
		(j	1 2	Flush hydraulic brake system
2000				Inspect suspension bushings (spring, shock)
			1	Inspect suspension bumpers
				Replace brake pedal/treadle return spring
3				Inspect frame for damage

Notes (1) and (2), Refer to "Maintenance Guidelines for Severe Duty" in the vehicles service manual

Form PM-0001 GT Drive / Series Motor, Revision A 07/11/2006

STANDARD PERIODIC MAINTENANCE SCHEDULE FOR THE SMART VIEW DISPLAY

NOTE: The maintenance function is optional. Your vehicle may be equipped with a customized maintenance schedule

PREVENTATIVE MAINTENANCE SCHEDULE			
MAINTENANCE LEVEL	HOUR INTERVAL ¹	MAINTENANCE TO BE PERFORMED ^{2,3}	
		Inspect the brake system including the park brake and mounting harware	
		Inspect the steering system, tighten the steering shaft coupler on the steering gear input shaft	
		Lubricate the vehicle, check for leaks	
1	500	Inspect safety interlocks	
		Inspect front and rear wheel bearings	
		Inspect and adjust fork collar bearings (3-wheel trucks only)	
	Inspect and tighten all nuts and bolts. First 500 hours and then every 1000 hours.		
		Inspect and tighten all nuts and bolts	
	1000	Clean and repack front wheel bearings	
2		Inspect and tighten all wire connections	
2		Inspect the motor brushes and commutator	
		Inspect the king pin bushings	
		Check front end alignment	
	2000	Change oil in the drive and rear axle	
		Flush hydraulic brake system	
3		Inspect suspension bushings	
		Replace brake pedal/treadle return spring	
		Inspect frame for damage	

1, 2, 3 - See notes on following pages.



Daily Visual inspection:

Tire condition and pressure.

External frame damage (body).

Operation of all lights and warning alarms and/or horns.

Smooth and proper operation of all controls such as but not limited to:

- Accelerator pedal, Brake pedal, Steering, Parking brake, etc.
- Proper operation of all locking devises such as but not limited to:
- Tool box, Removable battery trays, Cargo box, Cab doors, etc.
- Proper operation of all interlocking switches such as but not limited to:
- Key switch, Seat interlock switch, Charger interlock switch, etc.

Inspect for leaking fluids or grease.

MAINTENANCE GUIDELINES FOR SEVERE DUTY APPLICATIONS

1. This maintenance checklist is based on the average application. If the vehicle is operated under "severe conditions", service procedures should be conducted more frequently than specified. The frequency of service under severe conditions is determined by the use of the vehicle. The owner/ operator must evaluate the operating environment to determine the increase in maintenance frequency.

In addition, the whole vehicle should be inspected monthly for signs of damage. The damage must be repaired immediately.

The following list is meant as a guide and is not all-inclusive of a "severe duty" application.

- Extreme temperature.
- Bumpy, dusty, or ill maintained roads.
- Excessively wet areas.
- Corrosive or contaminated areas.
- Frequent loading of vehicle at/near capacity.
- Use on multiple shifts.
- 2. Any deficiencies found during an inspection should corrected before the vehicle is returned to service.
- 3. Battery water level should be inspected on a weekly schedule.



General Maintenance

TABLE OF CONTENTS

Maintenance Guidelines	.2
Troubleshooting Guide	
Lubrication Chart	





MAINTENANCE GUIDELINES

Periodic maintenance and service must be performed on this vehicle. Failure to complete these scheduled maintenance and service procedures can result in severe bodily injury and/or property damage. It is the owner and/or operators responsibility to insure that proper service and maintenance is performed on the vehicle, described in this manual.

Before starting any repairs:

- **1.** Make sure the key-switch is in the "OFF" position, then remove the key.
- 2. Place the forward-reverse switch in the center "OFF" position.
- 3. Set the park brake.
- 4. Place blocks under the front wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.


Read and follow all of the guidelines listed below. Failure to follow these guidelines may result in severe bodily injury and/or property damage.

- Avoid fire hazards and have fire protection equipment present in the work area. Conduct vehicle performance checks in an authorized area where safe clearance exists.
- Before starting the vehicle, follow the recommended safety procedures in Section 2, "Safety Rules and Operational Information."
- Ventilate the work area properly.
- Regularly inspect and maintain in a safe working condition, brakes, steering mechanisms, speed and directional control mechanisms, warning devices, lights, governors, guards, and safety devices.
- Inspect and maintain battery limit switches, protective devices, electrical conductors, and connections in conformance with Taylor-Dunn's recommended procedures.
- Keep the vehicle in clean condition to minimize fire hazards and facilitate detection of loose or defective parts.
- Do not use an open flame to check level or leakage of battery electrolyte.
- Do not use open pans of fuel or flammable fluids for cleaning parts.
- Only properly trained and authorized technicians should perform maintenance or repairs to this vehicle.

TROUBLESHOOTING GUIDE

Symptom	Probable Cause		
	Front End Out of Alignment		
Steering Pulls in One Direction	Low Tire Pressure		
Hard Steering	Dry Lube Points in Steering Linkage		
	Damaged King Pin/Ball Joint		
	Low Tire Pressure		
	Worn Ball Joints		
Excessive Steering Play	Mis-Adjusted or Worn Steering Gear		
	Loose Steering Linkage		
	Brakes or Parking Brakes Dragging		
	Worn Drive Gears		
Lack of Power or Slow Operation	Front End Out of Alignment		
	Defective Speed Control		
	Worn Drive Gears or Bearings		
Abnormal Noise	Worn Front /Rear Axle Bearings		
	Loose Lug Nuts		
	Motor Bearings Worn		
Oil Look in Door Pooring Area	Rear Wheel Bearing and/or Gasket Failed		
Oil Leak in Rear Bearing Area	Drive Over Filled		
Brake Pedal Soft or Spongy	Air in Brake Lines		
	Brake Worn (1/16" Wear Limit)		
Brake Pedal Low	Brake Fluid Low		
	Brakes Out of Adjustment		
	Brake Worn (1/16" Wear Limit)		
Braking Power Low	Brake Pads Contaminated with Fluid		
	Brake Pedal Linkage Binding		
	Brakes Out of Adjustment		
	Air in Brake Lines		

LUBRICATION CHART

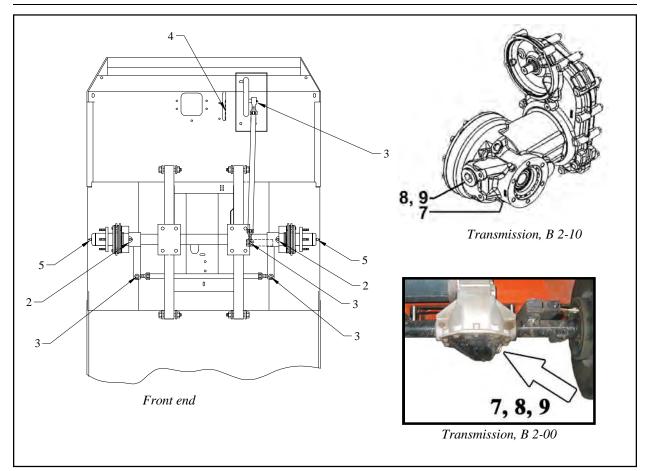

#	Description	Locations	Lubricant Type
1			
2	King Pin	2	General Purpose Grease
3	Ball Joints	4	General Purpose Grease
4	Pedal Linkages	1	General Purpose Grease
5	Front Wheel Bearings	2	High Temperature Wheel Bearing Grease
6			
7	Drive Drain Plug	1	
8	Drive Level Plug	1	
9	Drive Fill Plug, B 2-10	1	SAE 80W90 Gear Oil
	Drive Fill plug, B 2-00	1	30 wt Motor oil
10			

Front Axle Service

TABLE OF CONTENTS

Inspect the Front Wheel Bearings and	
King Pin	2
Adjust Front Wheel Bearings	3
Front Axle Removal and Installation	4
Removal	4
Installation	5
Front Axle Disassembly	6
Replace Front Wheel Bearings	7
Replace the King Pins and Bushings	9
Replace the Steering Knuckle	11





INSPECT THE FRONT WHEEL BEARINGS AND KING PIN

1. Make sure the key-switch is in the "OFF" position, then remove the key.

- 2. Place the forward-reverse switch in the center "OFF" position.
- 3. Set the park brake.
- 4. Place blocks under the rear wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Raise the front of the vehicle and support with jack stands.

Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in severe bodily injury.

- Grab the top and bottom of the tire/wheel assembly. Feel for any movement or play while pulling and pushing on the top and bottom of the tire. Any movement or play is indication of loose wheel bearings or king pin.
 - NOTE: Refer to the Adjust Front Wheel Bearings section for information regarding the adjustment of the wheel bearings.
 - NOTE: If the king pin is loose, then refer to **Replace the King Pins and Bushings** for information regarding replacing the king pin bushings. There are no adjustments for the king pin or bushings.
- 8. Spin the wheel and listen for any grinding noise. Any grinding noise may be an indication of worn or damaged wheel bearings.

NOTE: Refer to the **Replace Front Wheel Bearings** section for information regarding the replacement of the wheel bearings.

- 9. Lower the vehicle.
- 10. Reconnect the main positive and negative cables at the batteries.
- 11. Remove the blocks from behind the wheels.
- 12. Release the park brake and test drive the vehicle.


ADJUST FRONT WHEEL BEARINGS

1. Make sure the key-switch is in the "OFF" position, then remove the key.

- 2. Place the forward-reverse switch in the center "OFF" position.
- 3. Set the park brake.
- 4. Place blocks under the rear wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Raise the front of the vehicle and support with jack stands.

Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in severe bodily injury.

- 7. Remove the hub dust cap and cotter pin.
- 8. While rotating the hub, tighten the spindle nut to 30 ft-lbs. This seats the bearings.
- 9. Back off the spindle nut one flat until the hub turns, but is not loose.
- 10. Spin the wheel and listen for any grinding noise. Any grinding noise may be an indication of worn or damaged wheel bearings.
 - NOTE: Refer to the **Replace Front Wheel Bearings** section for information regarding the replacement of the wheel bearings.

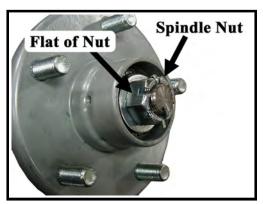

Hub with Dust Cap Removed

- 11. Install a new cotter pin.
- 12. Install the dust cap.
- 13. Lower the vehicle.
- 14. Reconnect the main positive and negative cables at the batteries.
- 15. Remove the blocks from behind the wheels.
- 16. Release the park brake and test drive the vehicle.





FRONT AXLE REMOVAL AND INSTALLATION

<u>Removal</u>

- **1.** Make sure the key-switch is in the "OFF" position, then remove the key.
- 2. Place the forward-reverse switch in the center "OFF" position.
 - 3. Set the park brake.
 - 4. Place blocks under the rear wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Raise the front of the vehicle and support with jack stands.



AWARNING

Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in severe bodily injury.

- 7. Remove both front wheels. Refer to *Tires and Wheels* section for information regarding removing the front wheels.
- 8. Tie up or support the front axle so it can not fall out of the vehicle.
- 9. Disconnect the drag link ball joint or rod end from the steering knuckle or the steering gear pitman arm.

NOTE: Refer to the **Replacing the Ball Joints** section for information regarding the removal of the ball joints or rod ends.

- 10. If equipped with front brakes, disconnect the hydraulic brake lines from the brake bodies.
- 11. Disconnect the front axle beam from the front springs and remove the axle from the vehicle.
 - NOTE: In some configurations the front springs and or shocks will have to be removed in order to remove the axle beam. Refer to section **Front Suspension** for information regarding removing the springs and shocks.



Installation

1. Make sure the key-switch is in the "OFF" position, then remove the key.

- 2. Place the forward-reverse switch in the center "OFF" position.
- 3. Set the park brake.
- 4. Place blocks under the rear wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Raise the front of the vehicle and support with jack stands.

Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in severe bodily injury.

7. Install the front axle in reverse order of removal.

NOTE: Use all new cotter pins.

- NOTE: Refer to the **Replacing the Ball Joints** section for information regarding the installing the ball joints or rod ends.
- NOTE: Refer to **Tires and Wheels** section for information regarding removing the front wheels.
- 8. Realign the front wheels. Refer to **Steering Component Service** section for information regarding realigning the front wheels.
- 9. If equipped with front brakes, bleed the brakes. Refer to **Brake Service** section for information regarding bleeding the brakes.
- 10. Lower the vehicle.
- 11. Reconnect the main positive and negative cables at the batteries.
- 12. Remove the blocks from behind the wheels.
- 13. Release the park brake and test drive the vehicle.






FRONT AXLE DISASSEMBLY

Disassembling and reassembling involves removing and replacing the left and right steering knuckles and king pin bushings. Refer to the following sections for information regarding these procedures:

Replace the Steering Knuckle

Replace the King Pins and Bushings

NOTE: The front axle does not have to be removed unless the axle beam must be replaced. Refer to **Front Axle Removal and Installation** for information regarding removing the front axle.

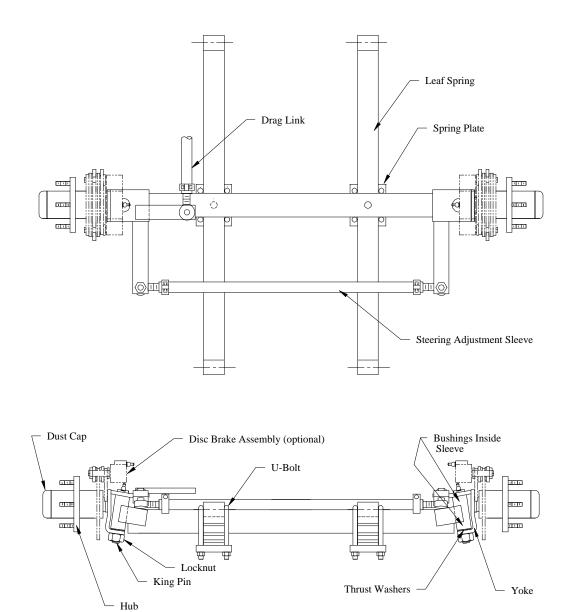

REPLACE FRONT WHEEL BEARINGS

- **1.** Make sure the key-switch is in the "OFF" position, then remove the key.
- 2. Place the forward-reverse switch in the center "OFF" position.
- 3. Set the park brake.
- 4. Place blocks under the rear wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Raise the front of the vehicle and support with jack stands.

AWARNING

Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in severe bodily injury.

- 7. Remove the tire/wheel assembly from the hub. Refer to **Replace the Steering Knuckle** for information regarding removing the steering knuckle.
- 8. Remove the hub dust cap, cotter pin, and spindle nut.
- 9. Remove the hub from the steering knuckle.

NOTE: For a front disc brake option you must remove the brake body before removing the hub. Refer to the **Brakes** section for information regarding the removal of the brake body.

NOTE: Catch the outer bearing as it falls out.


- 10. Thoroughly clean all grease from the inside of the hub and the bearings.
- 11. Inspect and replace the races and bearings as a set.

NOTE: It is recommended to replace all four bearings and races in the left and right wheels as a set.

- 12. Assemble in reverse order, using new grease seals.
 - a. Pack inner and outer bearings with grease.
 - b. While rotating the hub, tighten the spindle nut to 30 ft-lbs. This seats the bearings.
 - c. Back off the spindle nut one flat until the hub turns, but is not loose.
 - d. Install a new cotter pin.



Hub with Dust Cap Removed

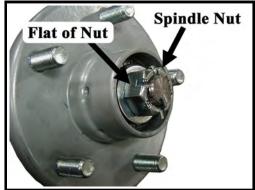

Hub with Dust Cap Removed





- 13. Install the hub dust cap.
- 14. Reinstall the brake body and the tire/wheel assembly.

NOTE: Refer to the **Brakes** section for information regarding the installation of the brake body.

- 15. Lower the vehicle.
- 16. Reconnect the main positive and negative cables at the batteries.
- 17. Remove the blocks from behind the wheels.
- 18. Release the park brake and test drive the vehicle.





REPLACE THE KING PINS AND BUSHINGS

There are different types of king pin bushings depending on the configuration of your vehicle.

- Bronze bushings in the axle beam.
- Bronze bushings in the steering knuckle.
- Metal backed teflon bushings in the axle beam.
 - NOTE: Bronze bushings must be reamed or broached to the proper diameter after they are pressed into the axle beam or steering knuckle.

AWARNING

Failure to correctly broach or ream bronze bushings may result in steering difficulty and loss of control of the vehicle causing severe bodily injury and /or property damage.

Refer to the illustration below for the type of bushing in your vehicle.

- **1.** Make sure the key-switch is in the "OFF" position, then remove the key.
- 2. Place the forward-reverse switch in the center "OFF" position.

- 3. Set the park brake.
- 4. Place blocks under the rear wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Raise the front of the vehicle and support with jack stands.

Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in severe bodily injury.





7. Remove the steering knuckle. Refer to Replace the Steering Knuckle for information regarding removing the steering knuckle.

NOTE: It is not necessary to remove the tie rod or drag link for this procedure.

- 8. Press the king pin bushings out from the axle or steering knuckle.
- 9. Press new bushings into the axle or steering knuckle.
- 10. Inspect the king pin for damage or wear. If any damage or wear is noted then the king pin must be replaced.
- 11. Reassemble in reverse order.
 - NOTE: Refer to **Replace the Steering Knuckle** for information on installing the steering knuckle.
 - NOTE: It is recommended that the thrust washers or bearing be replaced whenever replacing the king pin bushings. Refer to the **Replacement Parts** section for the orientation of the bearing or washers in your vehicle.
- 12. Grease the bushings (bronze only).
- 13. Lower the vehicle.
- 14. Reconnect the main positive and negative cables at the batteries.
- 15. Remove the blocks from behind the wheels.
- 16. Release the park brake and test drive the vehicle.



REPLACE THE STEERING KNUCKLE

1. Make sure the key-switch is in the "OFF" position, then remove the key.

AWARNING

- 2. Place the forward-reverse switch in the center "OFF" position.
- 3. Set the park brake.
- 4. Place blocks under the rear wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Raise the front of the vehicle and support with jack stands.

Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in severe bodily injury.

- 7. Remove the tire/wheel assembly. Refer to *Tires and Wheels* section for information regarding removing the tire/wheel assembly.
- 8. Remove the hub bearing cap, cotter pin and nut, then remove the hub from the steering knuckle.
 - NOTE: For a front disc brake option you must remove the brake body before removing the hub. Refer to the **Brakes** section for information regarding the removal of the brake body. Do not remove the hydraulic brake line from the brake body. If the brake line is removed then it will be necessary to bleed the brakes.

NOTE: Catch the outer bearing as it falls out.



Hub with Dust Cap Removed

- Remove the drag link and/or tie rod from the steering knuckle. Refer to *Replace the Ball Joints, Tie Rods, Drag Link* in this section for information regarding removal of the drag link or tie rod.
- 10. While supporting the knuckle, remove the king pin and thrust bearing.
- 11. Remove the knuckle from the axle.




12. Thoroughly clean and/or replace all bearings, nuts, washers, and bushings.

NOTE: Both the left and right side bushings and thrust bearings should be replaced as a set.

- 13. Assemble in reverse order.
- 14. Pack the thrust bearing with grease.
- 15. Install the king pin and tighten the king pin nut until it contacts the bottom of the knuckle. Do not tighen so much as to squeeze the legs of the knuckle together.

NOTE: Refer to **Replace Front Wheel Bearings** for information regarding proper tightening of the spindle nut

- 16. Install new cotter pins.
- 17. Realign the wheels.

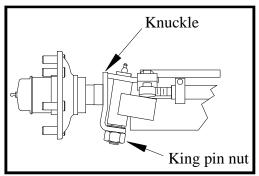

NOTE: Refer to the **Steering** section for information regarding realignment of the front wheels.

- 18. Lower the vehicle.
- 19. Reconnect the main positive and negative cables at the batteries.
- 20. Remove the blocks from behind the wheels.
- 21. Release the park brake and test drive the vehicle



Steering Component Service

TABLE OF CONTENTS

Front End Alignment	.2
Inspect Ball Joints	.6
Adjust the Steering Gear	.7
Replace the Steering Shaft	.9
Replace the Steering Wheel	.11
Replace the Steering Gear	.12
Replace the Ball Joints, Tie Rods, and Drag	
Link	40
	.13
Replacing the Drag Link1	5
	5
Replacing the Drag Link1	5
Replacing the Drag Link19 Replacing the Tie Rod19	5 6 .17
Replacing the Drag Link11 Replacing the Tie Rod	5 6 .17 .17





FRONT END ALIGNMENT


This section will refer to two different types of ball joints. One type is has a grease fitting and a tapered shaft where it is fitted to the steering arm or pitman arm. The second type cannot be greased and has a straight shaft. See the illustrations to the right. Depending on the configuration of your truck, it may be equipped with one or both types of ball joints.

In this text:

The first type has a grease fitting and will be referred to as a "Ball Joint."

The second type has no grease fitting and will be referred to as a "Rod End."



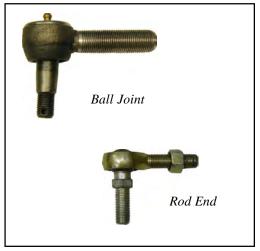

- 1. Make sure the key-switch is in the "OFF" position, then remove the key.
- 2. Place the forward-reverse switch in the center "OFF" position.

- 4. Place blocks under the rear wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Raise the front of the vehicle and support with jack stands.

3. Set the park brake.

Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in severe bodily injury.

- 7. Turn the front wheels so that they are in the straight ahead position and then tie off the wheels so that they cannot turn from the straight ahead position.
- 8. Disconnect the drag link from the pitman arm.

NOTE: Refer to **Replace the Ball Joints** section for information regarding removing the ball joint or rod end from the drag link.

9. Center the steering gear and tie off the steering wheel so that it cannot rotate.

NOTE: Refer to **Center the Steering Gear** section for information regarding centering of the steering gear.

10. At this point both the steering wheel **and** the front wheels should be tied up and held in position. If one or the other is not tied up then you must start from the beginning.



Do not drive the vehicle while the steering wheel or front wheels are tied in position. Driving the vehicle while the steering wheel or front wheels tied in the position may cause loss of control of the vehicle resulting in severe bodily injury and/or property damage.

11. Loosen the ball joint clamps or the rod end jam nuts on the drag link.

NOTE: Remember the position and orientation of the clamps.

- 12. Adjust the drag link so that it can be easily inserted into the pitman arm.
- 13. Tighten the ball joint or rod end nut as specified below:

Ball joint - 40-45 ft-lbs.

- 14. If equipped with ball joints, position the ball joint clamps in their original location and orientation.
- 15. Tighten the ball joint clamps (28-32 ft. lbs.).
- 16. Untie the steering wheel and the front wheels.
- 17. Reconnect the main positive and negative cables at the batteries.
- 18. Rotate the steering wheel from a full left turn to a full right turn and make sure that the ball joint clamps do not contact any other component.



If the clamps are positioned so that they contact other components, it may result in steering failure and loss of control of the vehicle causing property damage and/or severe bodily injury.

- 19. Remove the blocks from behind the wheels.
- 20. Release the parking brake and test drive the vehicle.







Front wheel alignment

NOTE: It is recommended to center the steering before aligning the front wheels. Refer to the **Center the Steering** section for information.

- **1.** Make sure the key-switch is in the "OFF" position, then remove the key.
- 2. Place the forward-reverse switch in the center "OFF" position.
- 3. Set the park brake.
- 4. Place blocks under the rear wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Raise the front of the vehicle and support with jack stands.

Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in severe bodily injury.

7. Turn the front wheels so that they are in the straight ahead position and tie off the steering wheel so that it cannot rotate.



Do not drive the vehicle while the steering wheel or front wheels are tied in position. Driving the vehicle while the steering wheel or front wheels tied in the position may cause loss of control of the vehicle resulting in severe bodily injury and/or property damage.


8. Using a piece of chalk, mark a line around the center of both front tires.

HINT: Hold the chalk on the center of the tire and rotate the tire to mark the line.


9. Loosen the ball joint clamps or the rod end jam nuts on the tie rod.

NOTE: Remember the position and orientation of the ball joint clamps.

10. Lower the front wheels to the ground and push the vehicle back and forth a few feet to settle the suspension.

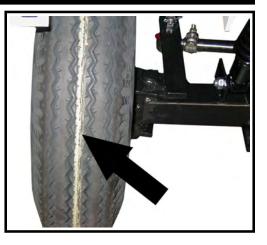

- 11. Measure the distance between the lines at the front of the tires.
- 12. Measure the distance between the lines at the rear of the tires.
- 13. Adjust the tie rod so that the distance at the front and rear of the tires is the same.
- 14. If equipped with ball joints, position the ball joint clamps in their original location and orientation.
- 15. Tighten the ball joint clamps (28-32 ft. lbs.).
- 16. Untie the steering wheel.

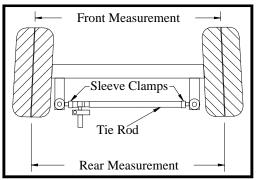



Rotate the steering wheel from a full left turn to a full right turn and make sure that the ball joint clamps do not contact any other component. Clamps positioned so that they contact other components may result in steering failure and loss of control of the vehicle causing severe bodily injury and/or property damage.

- 17. Reconnect the main positive and negative cables at the batteries.
- 18. Remove the blocks from behind the wheels.
- 19. Release the parking brake and test drive the vehicle.



INSPECT BALL JOINTS

NOTE: A set of ball joints and/or rod ends will wear at the same rate. If a ball joint and or rod end is worn out, then all should be replaced as a set.

1. Make sure the key-switch is in the "OFF" position, then remove the key.

2. Place the forward-reverse switch in the center "OFF" position.

- 3. Set the park brake.
- 4. Place blocks under the rear wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Tie off the front fork so that it cannot turn.

Do not drive the vehicle while the steering wheel or front wheels are tied in position. Driving the vehicle while the steering wheel or front wheels tied in position may cause loss of control of the vehicle resulting in severe bodily injury and/or property damage.

- 7. While watching the ball joints, rapidly rotate the steering wheel to the left and right.
- If the ball joint housing moves up or down then the ball joint is worn out and should be replaced. Refer to section *Replacing a Ball Joint* for information regarding replacing ball joints.
- 9. Untie the front fork.
- 10. Reconnect the main positive and negative cables at the batteries.
- 11. Remove the blocks from behind the wheels.
- 12. Release the parking brake and test drive the vehicle.



ADJUST THE STEERING GEAR

NOTE: In some vehicle configurations it may be necessary to remove the steering gear to perform this procedure. Refer to **Replace the Steering Gear** for information regarding removing the steering gear.

- **1.** Make sure the key-switch is in the "OFF" position, then remove the key.
- 2. Place the forward-reverse switch in the center "OFF" position.

AWARNING

- 4. Place blocks under the rear wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Raise the front of the vehicle and support with jack stands.

3. Set the park brake.


AWARNING

Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in serious bodily injury.

7. Disconnect the drag link from the pitman arm.

NOTE: Refer to **Replace the Ball Joints** section for information regarding removing the ball joint from the drag link.


- 8. Loosen the gear lash jam nut and the worm bearing adjuster jam nut.
- 9. Unscrew the gear lash adjuster all of the way to the stop.
- 10. Loosen the worm bearing adjuster and then tighten just enough to remove all end play from the input shaft and then an additional 1/8 turn more.

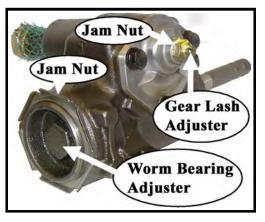

- 11. While holding the worm bearing adjuster so that it cannot turn, tighten the worm bearing adjuster jam nut.
- 12. Find the center position of the steering shaft:
 - A. Turn the steering shaft all of the way in one direction.
 - B. While counting the rotations, turn the steering shaft all of the way in the opposite direction.
 - C. Turn the steering shaft 1/2 the number of turns in the original direction.

Maintenance, Service, and Repair

- 13. While rotating the input shaft back and forth through its centered position, adjust the gear lash adjusting screw so that there is a slight drag as the steering gear is rotated through its centered position.
- 14. While holding the gear lash adjusting screw so that it cannot turn, tighten the gear lash adjusting screw jam nut.
- 15. Reconnect the main positive and negative cables at the batteries.
- 16. Remove the blocks from behind the wheels.
- 17. Release the parking brake and test drive the vehicle.

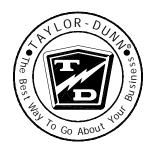



REPLACE THE STEERING SHAFT

1. Make sure the key-switch is in the "OFF" position, then remove the key.


- 2. Place the forward-reverse switch in the center "OFF" position.
- 3. Set the park brake.
- 4. Place blocks under the front wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. If equipped with a horn switch in the steering wheel, remove the switch, disconnect the wires from the switch and cut the terminals off of the wires.
- 7. Remove the steering wheel.

NOTE: Refer to **Replace the Steering Wheel** section for information regarding removing the steering wheel.

8. Remove the upper steering shaft bushing or bearing from the steering column.



- 9. Remove the steering gear access cover from the steering column (if equipped).
- 10. Remove and discard the pinch bolt and nut from the steering shaft coupler.

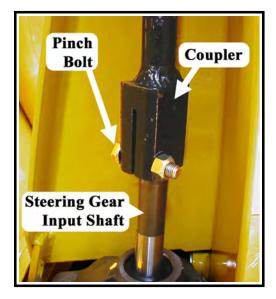




NOTE Most vehicle configurations will now allow the steering shaft to slide off of the steering gear input shaft and then back down out of the steering column. If there is not enough clearance for this procedure then the steering gear must be removed. Refer to **Replace the Steering Gear** for information regarding removing the steering gear.



- 11. Remove the steering shaft from the vehicle.
- 12. Lightly grease the input shaft splines, steering wheel splines and the upper steering shaft bushing.
- Install the steering shaft in reverse order using a new pinch bolt. Orientate the shaft so that the pinch bolt is opposite the flat in the steering gear shaft. See the illustration to the right.

Make sure that the pinch bolt is not aligned with the flat on the steering shaft. Aligning the bolt with the flat could result in failure of the steering and loss of control of the vehicle. This could lead to property damage and/or severe bodily injury.

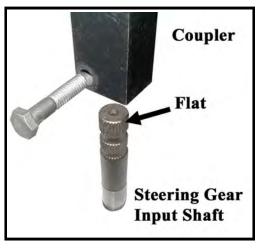

AWARNING

Do not use the original pinch bolt and nut. Failure to replace the pinch bolt and nut may result in failure of the steering causing loss of control of the vehicle. This could lead to property damage and/or severe bodily injury.

- 14. Tighten the pinch bolt to 24-26 ft-lbs.
- 15. Reconnect the main positive and negative cables at the batteries.
- 16. Remove the blocks from behind the wheels.
- 17. Release the parking brake and test drive the vehicle.



REPLACE THE STEERING WHEEL

1. Make sure the key-switch is in the "OFF" position, then remove the key.

- 2. Place the forward-reverse switch in the center "OFF" position.
- 3. Set the park brake.
- 4. Place blocks under the front wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. If equipped with a horn switch in the steering wheel, remove the switch and disconnect the wires from the switch.
- 7. Remove the steering wheel nut.
- 8. Using a steering wheel puller, remove the steering wheel.
- 9. Position the front wheels in the straight ahead position.



- 10. Lightly grease the steering wheel splines and install the replacement steering wheel orientated as shown in the illustration to the right.
- 11. Tighten the steering wheel nut to 28-32 ft lbs.
- 12. Reinstall the horn switch (if equipped).
- 13. Reconnect the main positive and negative cables at the batteries.
- 14. Remove the blocks from behind the wheels.
- 15. Release the parking brake and test drive the vehicle.







REPLACE THE STEERING GEAR

1. Make sure the key-switch is in the "OFF" position, then remove the key.

- 2. Place the forward-reverse switch in the center "OFF" position.
- 3. Set the park brake.
- 4. Place blocks under the rear wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Remove the steering wheel. Refer to **Replace the Steering Wheel** section for information regarding removing the steering wheel.
- 7. Remove the steering shaft. Refer to **Replace the Steering Shaft** section for information regarding removing the steering shaft.
- 8. Remove the pitman arm using a pickle fork.
 - NOTE: On some vehicle configurations it may be required to remove the drag link from the pitman arm. Refer to **Replace the Ball Joints** section for information regarding removing the ball joint from the pitman arm.
- 9. Support the steering gear so that it cannot fall out of the vehicle.
- 10. Remove the bolts holding the steering gear to the vehicle frame and remove the steering gear from the vehicle.

AWARNING

Failure to support the steering gear will result in the steering gear falling out of the vehicle and could cause property damage and/ or severe bodily injury.




Steering Gear with Pitman Arm

- 11. Center the steering gear. Refer to **Center the Steering Gear** section for information regarding centering the steering gear.
- 12. Install in reverse order. Torque the pitman arm nut to 75-100 ft-lbs.
- 13. Reconnect the main positive and negative cables at the batteries.
- 14. Remove the blocks from behind the wheels.
- 15. Release the parking brake and test drive the vehicle.

REPLACE THE BALL JOINTS, TIE RODS, AND DRAG LINK

This section will refer to two different types of ball joints. One type is has a grease fitting and a tapered shaft where it is installed on the steering arm or pitman arm. The second cannot be greased and has a straight shaft. See the illustrations to the right. Depending on the configuration of your vehicle, it may be equipped one or both types of ball joints.

In this text: The first type will be referred to as a "Ball Joint." The second type will be referred to as a "Rod End." *NOTE: If a rod end or ball joint is worn out, we recommend replacing all of the ball joints and/or rod ends as a set.*

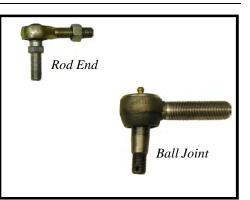


Replacing a Rod End

- 1. Make sure the key-switch is in the "OFF" position, then remove the key.
- 2. Place the forward-reverse switch in the center "OFF" position.
- **AWARNING** 3. Set the park brake.
 - 4. Place blocks under the front wheels to prevent vehicle movement.
 - 5. Disconnect the main positive and negative cables at the batteries.
 - 6. Raise the front of the vehicle and support with jack stands.

Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in severe bodily injury.

- 7. Loosen the rod end jam nut or clamp on the steering sleeve.
- 8. Remove the rod end nut.
- 9. Remove the rod end from the steering arm.

HINT: Count the number of turns required to remove the rod end from the steering sleeve. This will make it easier to realign the wheels.

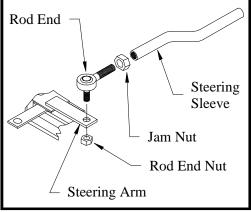

Maintenance, Service, and Repair

- 10. Install the new rod end into the steering sleeve. Screw it into the sleeve the same number of turns counted in the previous step. Do not tighten the rod end clamp or jam nut at this time.
- 11. Install the rod end into the steering arm. Tighten the rod end nut to 20-25 ft-lbs.
- 12. Realign the front wheels.

NOTE: Refer to the **Steering** section for information regarding realignment of the front wheels.

- 13. Lower the vehicle.
- 14. Reconnect the main positive and negative cables at the batteries.
- 15. Remove the blocks from behind the wheels.
- 16. Release the park brake and test drive the vehicle.

Replacing a Ball Joint

- 1. Make sure the key-switch is in the "OFF" position, then remove the key.
- 2. Place the forward-reverse switch in the center "OFF" position.
- 3. Set the park brake.
 - 4. Place blocks under the front wheels to prevent vehicle movement.
 - 5. Disconnect the main positive and negative cables at the batteries.
- 6. Raise the front of the vehicle and support with jack stands.

AWARNING


AWARNING

Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in severe bodily injury.

- 7. Loosen the ball joint clamp on the steering sleeve.
- 8. Remove the cotter pin and ball joint nut.
- 9. Using a pickle fork, remove the ball joint from the steering arm.
- 10. Remove the ball joint from the steering sleeve.

HINT: Count the number of turns required to remove the ball joint from the sleeve. This will make it easier to realign the wheels.

11. Install the new ball joint into the steering sleeve. Screw it into the sleeve the same number of turns counted in the previous step. Do not tighten the ball joint clamp at this time.

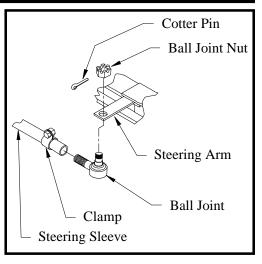

- 12. Install the ball joint into the steering arm. Tighten the ball joint nut to 40-45 ft-lbs. and install a new cotter pin.
- 13. Realign the front wheels.

NOTE: Refer to the **Steering** section for information regarding realignment of the front wheels.

- 14. Lower the vehicle.
- 15. Reconnect the main positive and negative cables at the batteries.
- 16. Remove the blocks from behind the wheels.
- 17. Release the park brake and test drive the vehicle.

Replacing the Drag Link

The Drag Link is the linkage that connects the steering gear pitman arm to the steering knuckle. Refer to the illustration on the following page.

1. Make sure the key-switch is in the "OFF" position, then remove the key.

2. Place the forward-reverse switch in the center "OFF" position.

- 3. Set the park brake.
- 4. Place blocks under the front wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Raise the front of the vehicle and support with jack stands.

AWARNING

AWARNING

Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in severe bodily injury.

7. Remove the ball joints or rod ends from the steering knuckle and pitman arm.

NOTE: Refer to the **Replacing the Ball Joints** section for information regarding the removal of the ball joints or rod ends.

- 8. Remove the drag link as an assembly.
- 9. Install in reverse order.
- 10. Realign the front wheels.
 - NOTE: Refer to the **Steering** section for information regarding realignment of the front wheels.

Pitman Arm Drag Link Steering Knuckle

Typical Drag Link

- 11. Lower the vehicle.
- 12. Reconnect the main positive and negative cables at the batteries.
- 13. Remove the blocks from behind the wheels.
- 14. Release the park brake and test drive the vehicle.

Replacing the Tie Rod

The Tie Rod is the linkage that connects the two steering knuckles together. Refer to the illustration below..

1. Make sure the key-switch is in the "OFF" position, then remove the key.

- 2. Place the forward-reverse switch in the center "OFF" position.
- 3. Set the park brake.
- 4. Place blocks under the front wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Raise the front of the vehicle and support with jack stands.




Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in severe bodily injury.

7. Remove the ball joints or rod ends from the steering knuckles.

NOTE: Refer to the **Replacing the Ball Joints** section for information regarding the removal of the ball joints or rod ends.

- 8. Remove the tie rod as an assembly.
- 9. Install in reverse order.
- 10. Realign the front wheels.

NOTE: Refer to the **Steering** section for information regarding realignment of the front wheels.

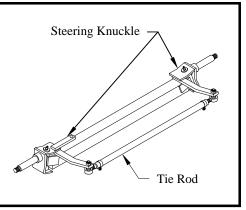

Typical Front Axle Assembly

- 11. Lower the vehicle.
- 12. Reconnect the main positive and negative cables at the batteries.
- 13. Remove the blocks from behind the wheels.
- 14. Release the park brake and test drive the vehicle.

CENTER THE STEERING GEAR

This procedure should only be performed with the steering gear removed from the vehicle.

- 1. Rotate the input shaft clockwise until it stops.
- 2. While counting the rotations, rotate the input shaft counter clockwise until it stops.
- 3. Rotate the input shaft clockwise 1/2 the rotations counted in the previous step.
- 4. Mark the input shaft and pitman shaft in relation to the housing.

PITMAN SHAFT ALIGNMENT

1. Make sure the key-switch is in the "OFF" position, then remove the key.

- 2. Place the forward-reverse switch in the center "OFF" position.
- 3. Set the park brake.
- 4. Place blocks under the rear wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Center the steering gear. Refer to **Center the Steering Gear** section for information regarding centering the steering gear.
- 7. Tie the steering wheel in position so that it cannot rotate.

Do not drive the vehicle while the steering wheel or front wheels are tied in position. Driving the vehicle while the steering wheel or front wheels tied in position may cause loss of control of the vehicle resulting in severe bodily injury and/or property damage.

- 8. Install the pitman shaft on the steering gear so that it is as close as possible to centered between the steering stops. Torque the pitman arm nut to 75-100 ft-lbs.
- 9. Adjust the drag link as required to position the front wheels to the straight ahead position.
- 10. Untie the steering wheel.
- 11. If required, remove and reposition the steering wheel. Refer to **Replace the Steering Wheel** section for information regarding repositioning the steering wheel.
- 12. Reconnect the main positive and negative cables at the batteries.
- 13. Remove the blocks from behind the wheels.
- 14. Release the parking brake and test drive the vehicle.



REPAIR THE STEERING GEAR

Disassembly

- NOTE: The steering gear must be removed from the vehicle for this procedure. Refer to **Replace the Steering Gear** section for information regarding removing the steering gear.
- NOTE: The steering gear is packed with grease. Only perform maintenance on the steering gear in an area that will contain any grease that may spill out of the steering gear when it is disassembled.

Refer to the illustration at the end of this section for a blown up view of the steering gear assembly.

- 1. Center the steering gear.
 - A. Turn the steering shaft all of the way in one direction.
 - B. While counting the rotation, turn the steering shaft all of the way in the opposite direction.
 - C. Turn the steering shaft 1/2 the number of turns in the original direction.
- 2. Remove the worm bearing adjuster locking ring and the worm bearing adjuster.

 


3. Remove the side cover/pitman shaft assembly by removing the three side cover bolts and then pulling the assembly out of the housing.

NOTE: The side cover/pitman shaft assembly normally does not have to be disassembled.



- 4. Remove the worm shaft and ball nut assembly from the bottom of the housing.
- 5. Remove the worm shaft seal.
- 6. Remove the pitman shaft seal.
- 7. Remove the upper worm bearing and bearing cup from the housing.



- 9. Remove the ball guide clamps, ball guides and all of the ball bearings.
- 10. Remove the ball nut from the worm shaft.
- 11. Thoroughly clean and inspect all parts for signs of corrosion, damage or wear and replace as required.





Reassembly

- 1. Lightly lubricate all parts before reassembly.
- 2. Install a new worm shaft seal and pitman shaft seal into the housing.
- 3. Install the upper worm bearing cup.
- 4. Divide the ball bearing into two equal groups.
- 5. Position the ball nut onto the worm as shaft as shown in the illustration.
- 6. Insert the ball guides into the ball nut.
- 7. Insert each group of bearings into the ball guides.


NOTE: Do not rotate the worm shaft while installing the bearings. This may cause one or more of the bearings to enter the crossover passage in the ball nut, causing improper operation.

8. Install the ball guide clamp.





9. Place the upper worm bearing on the worm shaft and install the worm shaft/ball nut assembly into the housing being careful not to damage the worm shaft seal.

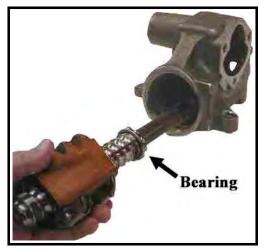


- 10. Install the assembled worm bearing adjuster into the housing and tighten just enough to remove all play in the worm shaft.
- 11. Install, but do not tighten the worm bearing adjuster lock nut.
- 12. Rotate the worm shaft to center the ball nut in the housing.
- 13. Place a new gasket onto the housing and install the assembled pitman shaft/side cover onto the housing using two of the three mounting bolts.
- 14. Pack the steering gear with grease through the open side cover bolt hole and then install the bolt.
- 15. Adjust the steering gear.
 - NOTE: Refer to Adjust the Steering gear section for information regarding adjusting the steering gear.



16. Once the adjustments are completed, make sure that the locking ring and jam nut are tight.



Exploded View of Steering Gear

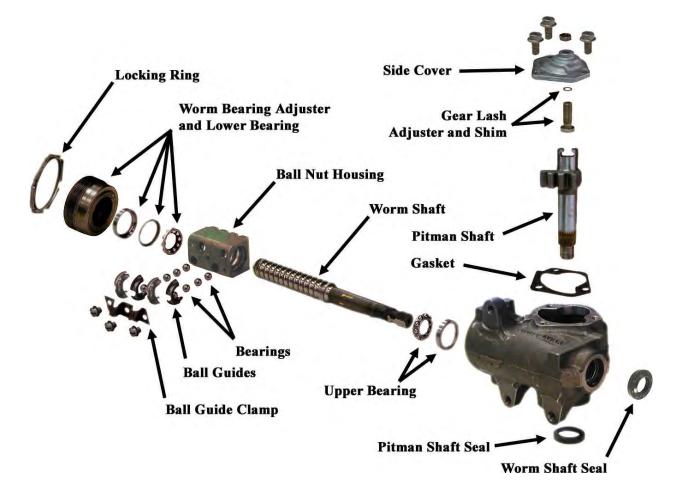


NNN TAYLOR



Brake Service

TABLE OF CONTENTS

Inspect the Service Brake	2
Disc Brake Pads (B 2-10, front B 2-00 optional)	
Disc Brake Rotor (B 2-10, front B 2-00 optional)	
Inspect the Parking brake	
Wheel Park Brake	
Adjust the Service Brakes, B 2-10	
Two or Four Wheel Hydraulic Disc Brakes	
Adjust the Service Brakes, B 2-00	
Adjust the Parking Brake	7
Wheel Park Brake, B 2-00	7
Wheel Park Brake, B 2-10	8
Check Master Cylinder Fluid	
Bleed the Brakes	
Flush the Brake System	
Replace the Parking Brake Lining	
Wheel Park Brake	
Replace Front Brake Pads	15
Replace Rear Brake Pads or Shoes	
Hydraulic Disc, B 2-10	
Rear Drum Brakes, B 2-00	
Replace the Wheel Cylinder	
Disc Brake Body Assembly (front or rear)	
Torque Spider. B 2-00	
Repair the Disc Brake Body	
Replace the Master Cylinder	
Repair the Master Cylinder	

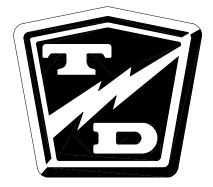



INSPECT THE SERVICE BRAKE

Disc Brake Pads (B 2-10, front B 2-00 optional)

AWARNING

Current Taylor-Dunn[®] brakes are asbestos free. However, there is the possibility that the original brakes were replaced with aftermarket parts containing asbestos. Since this possibility exists, all brake parts should be handled as if they contain asbestos. Refer to appendix C for recommended handling precautions.

NOTE: The brake pad must be removed to accurately measure the lining thickness. Refer to **Replace the Front or Rear Brake Pads** section for information on removing the brake pads.

Measure the brake pad lining at the thinnest point on the pad. If the brake pad lining is 1/16-inch or less then the brake pad must be replaced.

It is recommended to replace the left and right side brake pads as a set.




Disc Brake Rotor (B 2-10, front B 2-00 optional)

Current Taylor-Dunn[®] brakes are asbestos free. However, there is the possibility that the original brakes were replaced with aftermarket parts containing asbestos. Since this possibility exists, all brake parts should be handled as if they contain asbestos. Refer to appendix C for recommended handling precautions.

- NOTE: The front brake rotor is an integral part of the front hub. If the brake rotor is worn beyond its service limits, then the front hub must be replaced. Refer to **Front Axle Service** for information on replacing the front hub.
- NOTE: Depending on the rear axle configuration, the rear brake rotor may be an integral part of the rear axle. If the brake rotor is worn beyond its service limits, then the rear axle must be replaced. Refer to **Transmission** section for information regarding replacing the rear axle
- NOTE: The wheel must be removed to accurately measure the rotor thickness. Refer to **Tires and Wheels** section for information on removing the wheel.
- 1. Measure the run out of the rotor at its maximum diameter. If the run out exceeds 0.005, then the rotor must be machined. Do not machine the rotor beyond its service limits.

NOTE: A bent axle or damaged rear axle could cause excessive brake rotor run out.

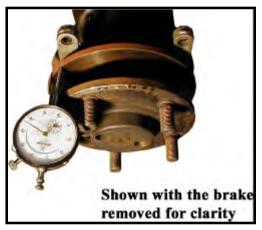

2. Measure the thickness of the brake rotor in 3 places. If the brake rotor thickness is less than 0.20-inches, then the rotor must be replaced.

> Do not use a rotor that is worn beyond its service limits. A rotor worn beyond its service limits could fail and cause loss of brakes resulting in severe bodily injury and/or property damage.



Rotor removed for clarity. The rotor does not have to be removed for this procedure.



INSPECT THE PARKING BRAKE


Wheel Park Brake

NOTE: The parking brake is actuated through a pin in the center of the rear left and right brake body on the rear axles.

1. Make sure the key-switch is in the "OFF" position, then remove the key.

2. Place the forward-reverse switch in the center "OFF" position.

- 3. Set the park brake.
- 4. Place blocks under the front wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Release the park brake.
- Inspect the rear brake pads or shoes. Refer to *Inspect the Service Brake* section to inspect the brake pads.
- 8. <u>B 2-10 only</u>: Inspect the park brake pin and bushing for any signs of damage or corrosion.
 - NOTE: The park brake pin is inside of the brake body. Refer to **Repair the Brake Body** for information on removing the park brake pin.
- 9. Inspect all brake cables and linkages for any signs of damage, wear, or missing cotter pins.
- 10. Inspect the brake handle locking mechanism for any signs of damage.
 - NOTE: Refer to Adjust the Parking Brake section for information regarding adjusting the parking brake.

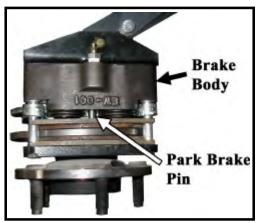



If any sign of damage or wear is found on the locking mechanism, cables, or linkages then they must be repaired or replaced immediately. Failure to repair or replace any damaged component could result in failure of the park brake causing property damage and/or severe bodily injury.

ADJUST THE SERVICE BRAKES, B 2-10

Two or Four Wheel Hydraulic Disc Brakes

The hydraulic disc brake system is automatically adjusted. A low brake pedal or lack of braking power could be caused by:

- Brake fluid level low in the master cylinder. See Check the Master Cylinder Fluid section.
- Air in the brake lines. See *Bleed the Brakes* section.
- Worn brake pads. See Inspect the Service Brake section.
- Worn brake rotor. See *Inspect the Service Brake* section.
- Binding brake pedal linkage.

If you are experiencing a low brake pedal or lack of braking power, the entire brake system should be inspected.

Refer to **Replace the Master Cylinder** section for information regarding adjusting the master cylinder push rod.



ADJUST THE SERVICE BRAKES, B 2-00

NOTE: The brake adjustment is inside of the left and right brake. Do not adjust the brake by means of the brake cables as this will cause mis-operation of the brakes. If you hear a single "clunking" noise while braking it may be due to mis-adjustment of the brake cables or linkage. Refer to **Replace Brake Linkages/Cables** for information regarding proper adjustment of the cables and linkages.

Adjusting the brakes by means of the brake cables could cause a hard brake pedal with little or no braking power. This could cause loss of control of the vehicle resulting in property damage and/or severe bodily injury.

- 1. Make sure the key-switch is in the "OFF" position, then remove the key.
- 2. Place the forward-reverse switch in the center "OFF" position.
- 3. Confirm the electric park brake is set.
- 4. Place blocks under the front wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.

Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in severe bodily injury.

- 6. Raise the rear of the vehicle and support with jack stands.
- 7. Remove the rear tires from each side of the vehicle.
- 8. Release the park brake.
- 9. Align the adjusting slot on the brake drum with the star wheel.
- 10. Turn the star wheel until the brakes lock the wheel.
- 11. Back off the star adjusting nut until the wheel spins freely with a minimum of drag.
- 12. Repeat steps 9 through 11 for the other side.
- 13. Lower the vehicle.
- 14. Reconnect the main positive and negative at the batteries.
- 15. Remove the blocks from behind the wheels.
- 16. Test drive the vehicle.



Brake drum with adjusting slot aligned with star wheel

ADJUST THE PARKING BRAKE

Wheel Park Brake, B 2-00

NOTE: The service brake must be properly adjusted before attempting to adjust the parking brake. Refer to **Adjust the Service Brakes** for information regarding adjusting the service brakes.


Do not use this procedure to adjust the brakes. This procedure should only be performed when replacing any of the mechanical brake linkages or cables or it is found that the cables or linkages have been adjusted incorrectly.

- 1. Make sure the key-switch is in the "OFF" position, then remove the key.
- 2. Place the forward-reverse switch in the center "OFF" position.
- 3. Confirm the electric park brake is set.
- 4. Place blocks under the front wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Loosen the jam nut on the main brake cable clevis.
- Remove the clevis pin from the main brake cable clevis.
- 8. Position the left and right brake levers so that they are in contact with the brake shoes but not actually moving the brake shoe and clamp in place.
- 9. Adjust the main cable clevis so that the clevis pin can be easily inserted. Install a new cotter pin.
- 10. Tighten the main brake cable until the clevis pin is has a slight drag and tighten the main cable jam nut.
- 11. Remove clamps from the brake arms and test drive.



Wheel Park Brake, B 2-10


The parking brake is actuated through a pin in the center of the rear left and right brake body on the rear axles.

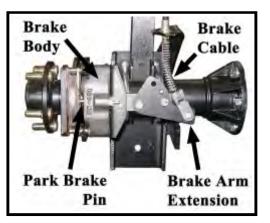

- **1.** Make sure the key-switch is in the "OFF" position, then remove the key.
- 2. Place the forward-reverse switch in the center "OFF" position.
- 3. Set the park brake.
 - 4. Place blocks under the front wheels to prevent vehicle movement.
 - 5. Disconnect the main positive and negative cables at the batteries.
- 6. Release the park brake.
- 7. Loosen the jam nuts on the Primary Adjustment Rod.
- 8. Tighten the Primary Adjustment Rod until it is difficult to rotate the brake arm clevis pin on both wheels.
- 9. Loosen the Primary adjustment rod one to two turns so that both wheels rotate whith no brake drag.




The threaded rod must be screwed into the clevis with at least 3/8" of threads. Less than 3/8" of threads in a clevis could result in brake failure causing severe bodily injury and/or property damage.

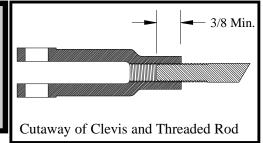

NOTE: If there is no adjustment left in the Primary Adjustment Rod, then the Brake Arm Extension must be rotated to engage the next hole in the arm.

- 10. Tighten the jam nuts on the park brake linkage.
- 11. Set the park brake
- 12. Reconnect the main positive and negative cables at the batteries.
- 13. Remove blocks from behind the wheels.
- 14. Release the park brake and test drive the vehicle.

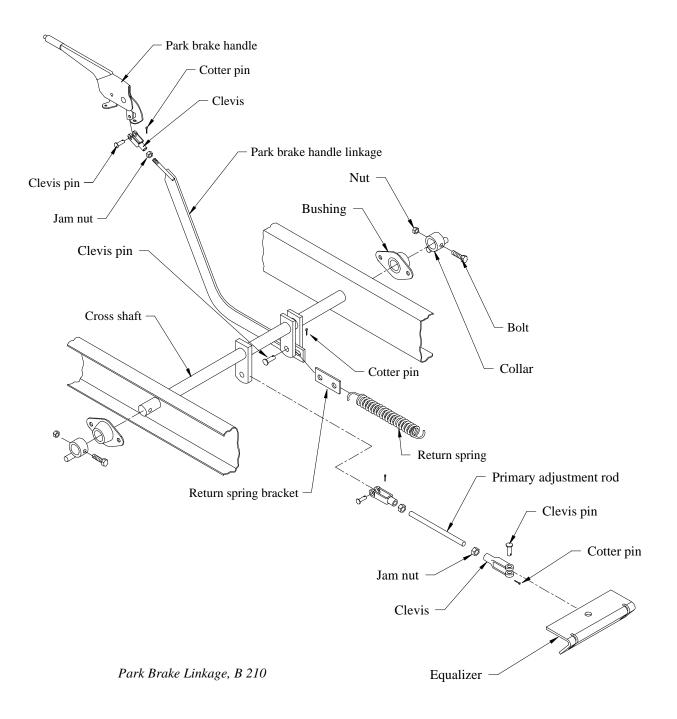



CHECK MASTER CYLINDER FLUID

Do not ingest brake fluid or allow contact with skin or eyes. Always wear protective clothing and a face shield when working with or around brake fluid.

SKIN CONTACT

Flush area immediately with water for several minutes. If a rash or skin irritation develops, get medical attention immediately.

EYE CONTACT

Immediately flush the eye with water for 15 minutes and call physician.

INGESTION

Get medical attention immediately.

- **1.** Make sure the key-switch is in the "OFF" position, then remove the key.
- 2. Place the forward-reverse switch in the center "OFF" position.

- 3. Set the park brake.
- 4. Place blocks under the front wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Thoroughly clean the area around the master cylinder cap.
- 7. Remove the master cylinder cap.
- 8. If the fluid in the master cylinder is contaminated then the entire brake system must be flushed. Refer to **Bleed the Brakes** for information regarding flushing the brake system.
- 9. Fill with brake fluid from a new sealed container to within 1/4-inch of the top of the master cylinder chamber and reinstall the cap.
- 10. Reconnect the main positive and negative cables at the batteries.
- 11. Remove blocks from behind the wheels.
- 12. Release the parking brake and test drive the vehicle.



• Only use DOT 3 brake fluid from a new sealed container.

• DOT 3 brake fluid is corrosive and will damage paint finishes.

AWARNING

- Dispose of brake fluid in accordance with local state and federal regulations.
- Read and follow all warnings on the brake fluid container.

BLEED THE BRAKES

Do not ingest brake fluid or allow contact with skin or eyes. Always wear protective clothing and a face shield when working with or around brake fluid.

SKIN CONTACT

Flush area immediately with water for several minutes. If a rash or skin irritation develops, get medical attention immediately.

EYE CONTACT

Immediately flush the eye with water for 15 minutes and call physician.

INGESTION

3. Set the park brake.

Get medical attention immediately.

- NOTE: Start this procedure at the wheel furthest from the master cylinder, then work toward the wheel closest to the master cylinder.
 - 1. Make sure the key-switch is in the "OFF" position, then remove the key.

4. Place blocks under the front wheels to prevent vehicle movement.

2. Place the forward-reverse switch in the center "OFF" position.


- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Thoroughly clean the area around the master cylinder cap and remove the cap.



Maintenance, Service, and Repair

- 7. Add brake fluid from a new sealed container to the master cylinder. Fill to 1/4" from the top of the master cylinder chamber.
 - Only use DOT 3 brake fluid from a new sealed container.
 - DOT 3 brake fluid is corrosive and will damage paint finishes.

- Dispose of brake fluid in accordance with local state and federal regulations.
- Read and follow all warnings on the brake fluid container.
- 8. The master cylinder fluid level will drop as the brakes are bled. Periodically check and fill the master cylinder during this procedure. Do not allow the fluid level in the master cylinder to drop too low as this will allow air into the brake lines.
- 9. Attach a clear hose to the bleeder valve on the brake cylinder that is to be bled. Route the hose into a clear container for waste brake fluid.
- 10. Pump the brake pedal a few times and then press and hold light pressure to the brake pedal.
- 11. Open the bleeder valve on the hydraulic brake body.
- 12. Depress the foot pedal to the floor and then close the bleeder valve. Do not release pressure on the brake pedal until the bleeder valve is closed.
- 13. Slowly release the foot pedal, allowing it to return to its released position.

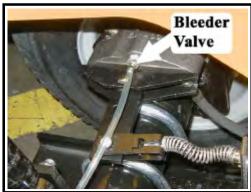

Bleeder valve with hose attached

NOTE: Check and fill the master cylinder frequently during the bleeding process. Do not allow the fluid level in the master cylinder to drop low enough to allow air to enter the brake lines. If air enters the brake lines during the bleeding process, then you will have to start again from the beginning.

Always use brake fluid from a new sealed container. Never reuse any brake fluid that has been removed from the brake system. Use of contaminated brake fluid will degrade the braking performance and may cause property damage or severe bodily injury.

- 14. Repeat the above steps until you are sure that all of the air is expelled from the brake line. Any air bubbles that can be seen in the clear hose attached to the bleeder is an indication that there is still air in the brake lines.
- 15. Repeat this process with each of the other wheels.

NOTE: When finished, top off the master cylinder with fluid. See **Check Master Cylinder Fluid** for information on filling the master cylinder.

- 16. Reconnect the main positive and negative cables at the batteries.
- 17. Remove the blocks from behind the wheels.
- 18. Release the park brake and test drive the vehicle.

FLUSH THE BRAKE SYSTEM

1. Make sure the key-switch is in the "OFF" position, then remove the key.

AWARNING

- 2. Place the forward-reverse switch in the center "OFF" position.
- 3. Set the park brake.
- 4. Place blocks under the front wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Raise the rear wheels off of the ground and support with jack stands.

Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in severe bodily injury.

- 7. If equipped with front brakes, raise the front wheels off of the ground and support with jack stands.
- 8. Release the park brake.
- Remove both rear wheels and, if equipped with front brakes, the front wheels. Refer to *Tires* and Wheels section for information regarding removing the wheels.
- 10. Remove the wheel cylinders from each axle. Refer to **Replace the Wheel Cylinder** section for information regarding removing the wheel cylinder.
- 11. Attach a clear hose to the bleeder valve on each of the wheel cylinders and route the hoses into a container for waste brake fluid.
- 12. Position the wheel cylinders so that the bleeder screw is pointing to the ground and open all bleeder screws.
- 13. Pump the master cylinder until all fluid has been pumped from the brake lines and all wheel cylinders.
- 14. Close all bleeder screws.
- 15. Fill the master cylinder with fluid.
- 16. Open one of the bleeder screws and pump the master cylinder until all fluid has been pumped from the master cylinder and close the bleeder screw.
- 17. Repeat the above two steps for each wheel cylinder.
- 18. Reinstall the wheel cylinders and bleed the brakes. Refer to **Bleed the Brakes** for information regarding bleeding the brakes.
- 19. Set the park brake.
- 20. Install the wheels and lower the vehicle to the ground.
- 21. Reconnect the main positive and negative cables at the batteries.
- 22. Release the park brake and test drive the vehicle.



Bleeder valve with hose attached



REPLACE THE PARKING BRAKE LINING

Current Taylor-Dunn[®] brakes are asbestos free. However, there is the possibility that the original brakes were replaced with aftermarket parts containing asbestos. Since this possibility exists, all brake parts should be handled as if they contain asbestos. Refer to appendix C for recommended handling precautions.

Wheel Park Brake

The parking brake is the same as the rear service brake. See *Replace Rear Brake Pads or Shoes* section for information on replacing the park brake lining.

REPLACE FRONT BRAKE PADS

NOTE: It is recommended that both the left and right brake pads be replaced as a set.

Current Taylor-Dunn[®] brakes are asbestos free. However, there is the possibility that the original brakes were replaced with aftermarket parts containing asbestos. Since this possibility exists, all brake parts should be handled as if they contain asbestos. Refer to appendix C for recommended handling precautions.

NOTE: Installing new brake pads will raise the brake fluid level in the master cylinder.

1. Make sure the key-switch is in the "OFF" position, then remove the key.

- 2. Place the forward-reverse switch in the center "OFF" position.
- 3. Set the park brake.

4. Place blocks under the rear wheels to prevent vehicle movement.

5. Disconnect the main positive and negative cables at the batteries.


- 6. Thoroughly clean the area around the master cylinder cap.
- 7. Remove fluid from the master cylinder until it is 1/2 full.



8. Raise the front of the vehicle and support with jack stands.

Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in severe bodily injury.

9. Remove the tire/wheel assembly. Refer to *Tires and Wheels* section for information on removing the tire and wheel assembly.

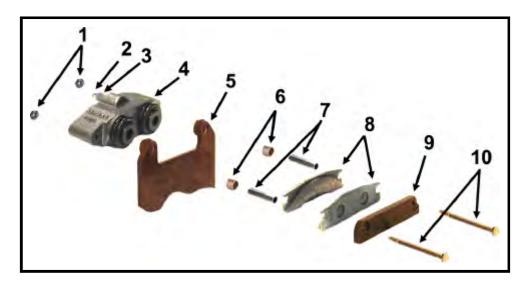

NOTE: Refer to the illustration above for the following steps.

- 10. Remove the brake body bolts (10) and discard the lock nuts (1) and brake pads (8).
- 11. Remove the spacer bushings (6) from the mounting bracket (5) and discard the bushings.
- 12. Inspect the brake rotor. See **Inspect the Service Brakes** section for information regarding inspecting the brake rotor.
- 13. Inspect the spacers (7) and replace if any wear or damage is found.
- 14. Install new spacer bushings in the mounting bracket.
- 15. Install new brake pads in reverse order. Torque the mounting bolts to 11 ft-lbs.
- 16. Repeat this procedure for the other wheel.
- 17. Install the tire/wheel assembly and lower the vehicle to the ground.
- 18. Fill the master cylinder to the proper level. Refer to **Check Master Cylinder Fluid** section for information on the proper master cylinder fluid level.
- 19. Reconnect the main positive and negative cables at the batteries.
- 20. Remove the blocks from behind the wheels.
- 21. Release the park brake and test drive the vehicle.

REPLACE REAR BRAKE PADS OR SHOES

Hydraulic Disc, B 2-10

Current Taylor-Dunn[®] brakes are asbestos free. However, there is the possibility that the original brakes were replaced with aftermarket parts containing asbestos. Since this possibility exists, all brake parts should be handled as if they contain asbestos. Refer to appendix C for recommended handling precautions.

1. Make sure the key-switch is in the "OFF" position, then remove the key.

2. Place the forward-reverse switch in the center "OFF" position.

AWARNING 3. Set the park brake.

4. Place blocks under the front wheels to prevent vehicle movement.

5. Disconnect the main positive and negative cables at the batteries.

NOTE: Installing new brake pads will raise the brake fluid level in the master cylinder.

- 6. Thoroughly clean the area around the master cylinder cap.
- Remove fluid from the master cylinder until it is 1/2 full.



8. Raise the rear of the vehicle and support with jack stands.

Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in severe bodily injury.

NOTE: It is recommended that both the left and right brake pads be replaced as a set.



9. Remove the tire/wheel assembly.

NOTE: Refer to **Tires and Wheels** section for information on removing the tire and wheel assembly.

- 10. Release the park brake (wheel brake only).
- 11. Remove the brake body bolts and discard the lock nuts and brake pads.
- 12. Remove the spacer bushings from the mounting bracket and discard.
- 13. Inspect the brake rotor. Refer to **Inspect the Service Brake** section for information regarding inspecting the brake rotor.
- 14. Inspect the spacers and replace if any wear or damage is found.
- 15. Install new spacer bushings in the mounting bracket.
- 16. Back off the parking brake adjustment (wheel park brake only).
- 17. Install new brake pads in reverse order. Torque the mounting bolts to 11 ft-lbs.
- 18. Repeat this procedure for the other wheel.
- 19. Install the tire/wheel assembly and lower the vehicle to the ground.
- 20. Fill the master cylinder to the proper level. Refer to **Check Master Cylinder Fluid** section for information regarding the correct master cylinder fluid level.
- 21. Adjust the parking brake (wheel park brake only). Refer to Adjust the Parking Brake section.
- 22. Set the park brake.
- 23. Reconnect the main positive and negative cables at the batteries.
- 24. Remove the blocks from behind the wheels.
- 25. Release the park brake and test drive the vehicle.

Rear Drum Brakes, B 2-00


NOTE: It is recommended that both the left and right brake pads be replaced as a set.

1. Make sure the key-switch is in the "OFF" position, then remove the key.

- 2. Place the forward-reverse switch in the center "OFF" position.
- 3. Set the park brake.
- 4. Place blocks under the front wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.

Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in severe bodily injury.

- 6. Release the park brake.
- 7. Raise the rear wheels off of the ground and support with jack stands.
- 8. Remove the tire/wheel assembly. Refer to *Tires and Wheels* section for information on removing the wheel.

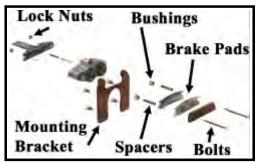

Current Taylor-Dunn[®] brakes are asbestos free. However, there is the possibility that the original brakes were replaced with aftermarket parts containing asbestos. Since this possibility exists, all brake parts should be handled as if they contain asbestos. Refer to appendix C for recommended handling precautions.

- 9. Remove and inspect the brake drum. Refer to *Inspect the Service Brake* section for information regarding inspecting the brake drum.
- 10. Remove the retracting springs and torsion springs from the brake shoes.
- 11. Remove the hair pin clips from the actuating arms and discard.
- 12. Remove the brake shoes and brake adjustor assembly from the backing plate.
- 13. Thoroughly clean and inspect the adjustor assembly. Replace parts as required.
- 14. Apply a <u>very light</u> coating of high temperature grease to the adjustor screw threads.
- 15. Install in reverse order.
- 16. Repeat for the opposite side.
- 17. Adjust the brakes. See Adjust the Service
 - Brakes section for information regarding adjusting the brakes.
- 18. Set the park brake.
- 19. Reconnect the main positive and negative at the batteries.
- 20. Lower the wheels to the ground.
- 21. Remove the blocks from behind the wheels.
- 22. Release the park brake and test drive the vehicle.





REPLACE THE WHEEL CYLINDER


Disc Brake Body Assembly (front or rear)

& WARNING	Current Taylor-Dunn [®] brakes are asbestos free. However, there is the possibility that the original brakes were replaced with aftermarket parts containing asbestos. Since this possibility exists, all brake parts should be handled as if they contain asbestos. Refer to appendix C for recommended handling precautions.				
	Do not ingest brake fluid or allow contact with skin or eyes. Always wear protective clothing and a face shield when working with or around brake fluid.				
	SKIN CONTACT				
	Flush area immediately with water for several minutes. If a rash or skin irritation develops, get medical attention immediately.				
	EYE CONTACT				
	Immediately flush the eye with water for 15 minutes and call physician.				
	INGESTION				
	Get medical attention immediately.				
I					
	1. Make sure the key-switch is in the "OFF" position, then remove the key.				
	2. Place the forward-reverse switch in the center "OFF" position.				
	3. Set the park brake.				
	4. Place blocks under the wheels to prevent vehicle movement.				
	5. Disconnect the main positive and negative cables at the batteries.				
6. Release th	ie park brake.				
	wheel off of the ground and support with jack stands.				
& WARNING	Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in severe bodily injury.				

- 8. Remove the tire/wheel assembly. Refer to *Tires and Wheels* section for information on removing the tire and wheel assembly.
- 9. Thoroughly clean the area around the brake body.
- 10. Remove the brake body bolts and discard the lock nuts.
- 11. Inspect the brake rotor. Refer to *Inspect the* **Service Brake** section for information regarding inspecting the brake rotor.
- 12. Disconnect the brake hose from the brake body.
- 13. Install the new brake body assembly in reverse order.
 - Use teflon tape thread sealant on the brake hose fitting.
 - Torque the brake body bolts to 11 ft-lbs.
- 14. Bleed the brakes. Refer to **Bleed the Brakes** section for information regarding bleeding the brakes.
- 15. Set the park brake.
- 16. Reconnect the main positive and negative cables at the batteries.
- 17. Lower the wheel to the ground.
- 18. Remove the blocks from behind the wheels.
- 19. Release the park brake and test drive the vehicle.

Torque Spider. B 2-00

The torque spider has no internally serviceable components. If it is damaged or defective, it must be replaced.

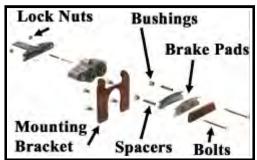



REPAIR THE DISC BRAKE BODY

& WARNING	Hydraulic brake system components must be kept clean. Make survive your work area is free from dirt and debris and will contain any brake fluid spills. Any debris or contaminates left in the brake system could lead to brake failure and result in property damage and/or severe bodily injury.				
	Do not ingest byske fluid av alleur sentest with skin av aves. Abysys				
	Do not ingest brake fluid or allow contact with skin or eyes. Always wear protective clothing and a face shield when working with or around brake fluid.				
	SKIN CONTACT				
	Flush area immediately with water for several minutes. If a rash or skin irritation develops, get medical attention immediately.				
	EYE CONTACT				
	Immediately flush the eye with water for 15 minutes and call physician.				
	INGESTION				
	Get medical attention immediately.				
	 Make sure the key-switch is in the "OFF" position, then remove the key. 				
•	2. Place the forward-reverse switch in the center "OFF" position.				
	3. Set the park brake.				
	4. Place blocks under the front wheels to prevent vehicle movement.				
	5. Disconnect the main positive and negative cables at the batteries.				
 Remove the function of the functi	ne brake body from the vehicle.				
	E: Refer to Replace the Brake Body Assembly (front or rear) section for information on removing the brake body.				
7. Pull the pis	stons out of the brake body.				

AWARNING

The pistons are very fragile. If the piston is damaged it must be replaced. Failure to replace a damaged piston could lead to brake failure and result in property damage and/or severe bodily injury.

- 8. Remove the piston rubber boot.
- 9. Remove the piston o-ring from inside of the brake body.
- 10. Inspect and replace parts as required.

- 11. Lubricate the brake parts with clean brake fluid from a sealed container.
- 12. Install the o-rings into the brake body. Make sure that the o-rings are installed into the second groove and that they are not twisted.





13. Using tool #41-350-13, slide the rubber boots onto the pistons as shown. The boot should be hanging off of the end of the piston.

14. Insert the rubber boot/piston into the brake body making sure that the boot is properly seated in the groove.



- 15. Press the pistons all the way down into the brake body making sure that the boot seats properly into the upper groove on the piston.
- 16. Install any fittings or plugs that were removed from the brake body using teflon tape thread sealant.
- 17. If the brake body assembly is not to be immediately installed onto a vehicle, plug the brake hose fitting hole to prevent any contaminates from entering the brake body.





REPLACE THE MASTER CYLINDER

Do not ingest brake fluid or allow contact with skin or eyes. Always wear protective clothing and a face shield when working with or around brake fluid.

SKIN CONTACT

Flush area immediately with water for several minutes. If a rash or skin irritation develops, get medical attention immediately.

EYE CONTACT

Immediately flush the eye with water for 15 minutes and call physician.

INGESTION

Get medical attention immediately.

- **1.** Make sure the key-switch is in the "OFF" position, then remove the key.
- 2. Place the forward-reverse switch in the center "OFF" position.

AWARNING

- 3. Set the park brake.
- 4. Place blocks under the rear wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.


NOTE: Most vehicle configurations do not require lifting the vehicle to remove the master cylinder. Lifting the vehicle may not be required.

6. If required, raise the vehicle and support with jack stands.

Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in severe bodily injury.

- 7. Place a drain pan under the master cylinder.
- 8. Disconnect the brake line(s) to the master cylinder and pump out the fluid in the master cylinder by depressing the pedal several times.
- 9. Remove the master cylinder bolts and remove the master cylinder from the vehicle.

- 10. Install in reverse order.
- 11. Adjust the master cylinder push rod so that it is approximately 1/8 inch away from the master cylinder plunger when the brake pedal is up.
- 12. Fill the master cylinder with brake fluid from a sealed container.
- 13. Pump the brake pedal a short distance of one to two inches until no bubbles are seen coming from the inlet ports inside of the master cylinder chamber.
- 14. If the vehicle was raised, lower it to the ground.
- 15. Bleed the brakes. refer to **Bleed the Brakes** section for information regarding bleeding the brakes.
- 16. Reconnect the main positive and negative cables at the batteries.
- 17. Remove the blocks from behind the wheels.
- 18. Release the park brake and test drive the vehicle.

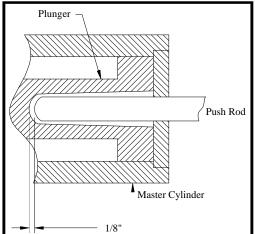

Cutaway of typical master cylinder showing the push rod clearance

- Only use DOT 3 brake fluid from a new sealed container.
- **DOT 3** brake fluid is corrosive and will damage paint finishes.

AWARNING

- Dispose of brake fluid in accordance with local state and federal regulations.
- Read and follow all warnings on the brake fluid container.



REPAIR THE MASTER CYLINDER

NOTE: Hydraulic brake system components must be kept clean. Make sure your work area is free from dirt and debris and will contain any brake fluid spills.

Remove the master cylinder from the vehicle. See Replace the Master Cylinder section .

Drain all fluid from the master cylinder and discard.

Remove the rubber boot.

Depress the plunger and remove the plunger spring clip retainer.

Pull the plunger and all seals out of the master cylinder bore.

Thoroughly clean, inspect and replace parts as required.

If any damage is found in the bore of the master cylinder then it must be replaced.

Lubricate all parts with clean brake fluid from a sealed container.

Reassemble in reverse order.

If the master cylinder is not to be immediately installed onto a vehicle, plug the brake line fitting hole to prevent any contaminates from entering the master cylinder.

Motor Service

TABLE OF CONTENTS

Inspecting the Motor Brushes	. 2
Motors with internal cooling fans2	
Motor Removal and Installation	. 3
Motor Inspection	. 3
Replacing the Brushes or Armature Bearing	g 7
Repairing the Commutator	. 8
Service Limits	



AWARNING

INSPECTING THE MOTOR BRUSHES


Motors with internal cooling fans

- NOTE: There are four brushes in the motor. The brushes will not wear at the same rate. It is recommended that all four brushes are inspected at the same time.
- NOTE: In some vehicle configurations it may not be possible to inspect all four brushes while the motor is in the vehicle. Refer to **Transmission Service** section for information on removing the motor.



Typical motor with cooling fan indicated by the arrow

- **1.** Make sure the key-switch is in the "OFF" position, then remove the key.
- 2. Place the forward-reverse switch in the center "OFF" position.
- 3. Set the park brake.
- 4. Place blocks under the front wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- Look through the brush cover and compare the top of the brush to the top of the brush holder. If it is even with or below the top of the brush holder then the brushes should be removed and measured. Refer to *Replacing the Brushes* section for information regarding removing the motor brushes.
- If any one brush is less than or equal to the service limit specified in Service Limits, then all four brushes should be replaced.
- 8. Reconnect the main positive and negative cables at the batteries.
- 9. Remove the blocks from behind the wheels, release the park brake and test drive.

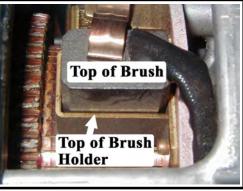

Typical brush and brush holder

MOTOR REMOVAL AND INSTALLATION

See the *Transmission* section for information on removing or installing the motor.

MOTOR INSPECTION

Disassembly

- 1. Remove the motor from the vehicle. See the *Transmission* section for information on removing the motor.
- 2. Remove the brush cover and pull the brushes out away from the commutator.
- 3. Remove the dust cap from the rear motor housing.
- 4. Place the motor in a press, and press the armature out of the rear bearing.


NOTE: Removing the armature will damage the motor bearing. The motor bearing should be replaced whenever the armature is removed.

- 5. Remove the housing screws from the rear motor housing and remove the housing from the motor.
- 6. Remove the nuts from the armature studs and remove the two brush assemblies.
- 7. Remove the bearing circlip and press the motor bearing out of the housing and discard.

Inspection

- 1. Measure the length of each motor brush.
 - If any one brush is less than or equal to the service limit specified in section *Service Limits*, then all four brushes should be replaced. Refer to *Replacing the Brushes* section for information regarding replacing the motor brushes.



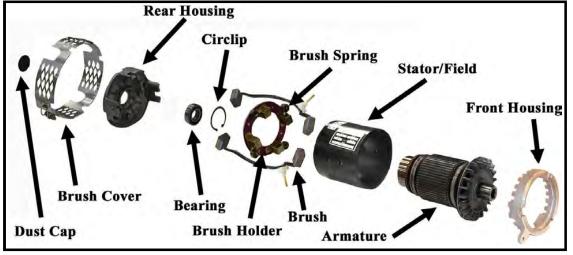



- 2. Measure the diameter of the commutator.
 - If the commutator is less than the minimum diameter specified in section Service Limits, then the motor must be replaced.



Hacksaw blade

Correct

Insulation

Commutator

Incorrect

Undercut

Armature


Min. OD

- 3. Measure the commutator undercut depth in 5-places around the commutator.
 - If any one of the measurements is less than the minimum undercut depth specified in Service Limits at the end of this section, then the commutator must be undercut. Refer to Repair Commutator section for information regarding undercutting the commutator.
- 4. Inspect the commutator for groves.
 - If the commutator is grooved then it must be machined on a lathe. Do not machine the commutator past the minimum diameter specified in *Service Limits* section. Refer to *Repair Commutator* section for information regarding machining the commutator.
- 5. Inspect the commutator for burn marks.
 - Burn marks and/or raised commutator segments 90 or 180 degrees apart is evidence of a shorted armature. A tool called a growler is required to reliably test for a shorted armature.
- 6. Inspect the commutator for raised segments. Raised segments could be a result of a stalled motor or shorted armature. A tool called a growler is required to reliably test for a shorted armature.
 - If the armature is not shorted then the raised segments can be removed by machining the commutator. Do not machine the commutator past the minimum diameter specified in Service Limits section. Refer to Repair Commutator section for information regarding machining the commutator.




Typical burn mark on a shorted armature

- 7. Visually inspect the armature windings for burnt insulation. Burnt insulation is a direct result of motor overheating and could lead to a shorted armature.
 - If the insulation is cracked or burnt, then it is recommend that the armature or motor be replaced.
 - NOTE: If the armature has been burnt then there is a good possibility that the field windings may also be burnt. Symptoms indicating a shorted field include high motor current, lack of power and possibly excessive speed.
- 8. Using a growler, test the armature for shorts.
 - If the armature is shorted, then we recommend that the armature or motor be replaced.
- 9. Using the continuity function of digital multi meter, check the continuity around the entire commutator by placing one test lead against one of the commutator segments and the other test lead against all of the other segments one at a time. There should be continuity around the entire commutator. If any segment indicates an open circuit, then the motor must be replaced.
- 10. Using the continuity function of digital multi meter, check the continuity from any one of the commutator segments and the armature frame. If it is not an open circuit, then the armature is shorted and the motor must be replaced.

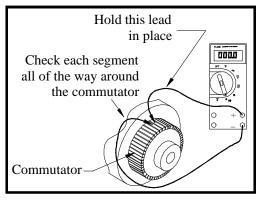

11. Measure the armature and field resistance (refer to Service Limits table at end of this section). If the armature of field resistance is not within specification then the motor must be repaired or replaced.

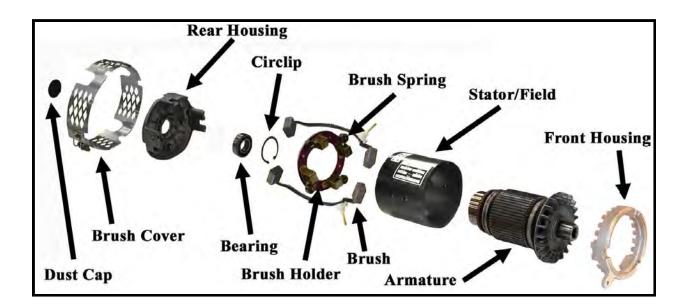



Assembly

- 1. Press a new bearing into the motor housing and install the circlip.
- 2. Install the two brush assemblies so that the brushes are just far enough out of the brush holder so that the brush springs hold them in place away from the commutator. See the illustration to the right.
- 3. Install the rear motor housing to the stator housing.
- 4. Lightly grease the inside diameter of the armature bearing.
- 5. Carefully insert the armature through the stator housing and onto the motor bearing in the rear housing.
- 6. While supporting the inner race of the bearing, press the armature into the bearing.
- 7. Push the motor brushes into the brush holder until the brush spring snaps into place. Be certain that the spring does not rest up against the brush wire. See the illustrations below.
- 8. Install the brush cover.








REPLACING THE BRUSHES OR ARMATURE BEARING

- NOTE: It is recommended that all four brushes be replaced as a set.
- NOTE: The motor must be disassembled to replace the brushes or the bearing. Refer to **Motor Inspection-Disassembly** section for information on taking the motor apart.
- NOTE: The motor must be removed from the vehicle for this procedure. Refer to **Transmission Service** section for information on removing the motor.



REPAIRING THE COMMUTATOR

- 1. The motor must be removed from the vehicle for this procedure. Refer to **Transmission Service** section for information on removing the motor.
- 2. The armature must be removed from the motor for this procedure. Refer to *Motor Inspection-Disassembly* section for information on taking the motor apart.
- 3. Using a lathe, cut the armature just enough to remove all grooves, depressions or ridges.

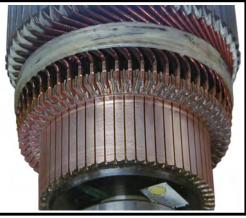

Example of freshly cut commutator

 Measure the diameter of the commutator. If the commutator is less than the minimum diameter specified in *Service Limits*, then the motor must be replaced.




- 5. Thoroughly clean all copper debris from between the commutator segments.
- Measure the commutator undercut depth in 5-places around the commutator. If any one of the measurements is less than the minimum undercut depth specified in *Service Limits*, then the commutator must be undercut.
- 7. While still in the lathe, smooth the commutator with fine emery cloth.



Properly undercut and cleaned commutator segments

Undercutting the commutator

- 1. Using a small straight cut saw blade, cut the commutator insulation to the proper depth. Refer to undercut depth in *Service Limits*.
- 2. Once all segments have been properly undercut, mount the armature in a lathe and smooth the commutator with fine emery cloth.

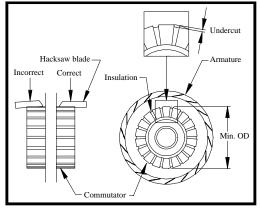

- 3. Inspect the armature for shorts. Refer to *Motor Inspection* section for information on testing the armature.
 - NOTE: Copper debris in the undercut area can give a reading of a shorted armature.



Example of freshly cut commutator

SERVICE LIMITS

Motor Specification Number	Undercut Depth		Commutator Diameter (min)		Brush Length (min)		Resistance (Ohms@75° F)	
i tullioor	mm	inches	mm	inches	mm	inches	Armature	Field
70-054-40 (XP-1672 or DV1-4002)	0.635	0.025	69.85	2.75	15.87	0.625	.0116	1.20
70-054-41 (XP-1789 or DY2-4001)	0.635	0.025	69.85	2.75	15.87	0.625	0.011	0.43
70-057-40 (XP-1673 or DV1-4003)	0.635	0.025	69.85	2.75	15.87	0.625	0.008	0.58
70-052-40 (XP 1876 or DD3-4004)	0.635	0.025	69.85	2.75	15.87	0.625	0.011	0.73

Table of Contents

Charger

Remove/Install	2
Troubleshooting	
Programming	
Delta-Q	
Signet	4
Delta-Q IC650	5







REMOVE/INSTALL

AWARNING A

HIGH VOLTAGE.

Disconnect the batteries and make sure that the AC power cord has been unplugged before disconnecting any wires or removing the cover of the charger.

Failure to follow this instruction may result in serious injury due to electric shock and/or property damage.

The charger must be connected to a properly grounded AC receptacle. Improper connection will increase the risk of electric shock and can cause severe personal injury or death.

There are many charger options available for this model. The different charger may have different wiring connections.

Disconnect the batteries and make sure that the AC power cord has been unplugged before disconnecting any charger wires or cords.

Some charger models have disconnects close to the charger and some have full length wire and molded cords. When replacing chargers with full length wires and molded cords, DO NOT cut and splice the wires or cord. Cutting the wires or cord will void the charger warranty and may result in incorrect operation of the charger or premature failure.

TROUBLESHOOTING

Troubleshooting control system is not included in this manual.

All electrical troubleshooting information is included in a separate manual "Troubleshooting Electric Vehicles".

The manual part number is M7-001-69 and was provided on the original vehicle CD. A hard copy can be purchased from your authorized Taylor-Dunn distributor or can be downloaded from the Taylor-Dunn web site.

AWARNING A

Charger AC power source is High Voltage. Only **personnel qualified for work high voltage AC** power lines should repair the charger AC power cord. Improper repair or incorrect wiring may result in an electrical shock hazard causing severe bodily injury or death by electrocution.

Standard Single Phase AC wire Color Codes as of 2010. Note: Older systems may use a alternate color code.

Refer high voltage wiring repairs to a qualified technician

United States / Canada

Neutral: White Hot: Black or Red Ground: Green

IEC (Europe) and United Kingdom

Neutral: Blue Hot: Brown Ground: Green/Yellow

<u>Delta-Q</u>

NOTICE

The algorithms stored in the Delta-Q charger will vary depending on where the charger was obtained. The following information applies ONLY to chargers purchased from Taylor-Dunn.

Using the incorrect charging algorithm may result in loss of run time due to insufficiently charged batteries or premature failure of the batteries due to overcharging.

The Delta-Q charger has 10 pre-programed algorithms available.

Identify Active Profile

- 1: Disconnect AC power source and wait for LED's to turn off.
- 2: Remove the positive charger lead from the battery.
- 3: Reconnect to AC power source.
- 4: After the self test completes, the current algorithm code will be displayed on the charger LED's (see illustration).


Codes 1 through 6 will show on the top LED's and also flash the lower LED. Codes above 6 will flash the lower LED.

Codes with 2-digits will flash the lower LED in sequence. Each digit will be followed by a short pause. There will be a long pause after the code is complete and then it will repeat.

The algorithm code will be displayed for 11 seconds.

The following is the list of algorithms available in Taylor-Dunn chargers. Contact Delta-Q for any additional detail or for information on codes not listed.

Code	Mfg	Battery	Туре	Algorithm
1	Trojan	Generic	FLA	
7	Trojan	T145	FLA	dV/dT
11	Generic	200-255Ah	FLA	dV/dT
26	Deka	8GGC2	GEL	
42	Discover	80-150Ah	AGM	
43	Discover	Generic	AGM	
51	Exide/Sonnenschein	180Ah	GEL	
71	Generic	140-200Ah	FLA	dV/dT
125	Full River	160-220Ah	AGM	
151	Full River	220-290Ah	AGM	

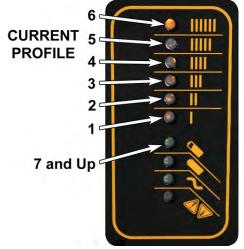







Changing the Active Profile (manual)

- 1: Disconnect the AC power source for a minimum of 20 seconds.
- 2: Disconnect the charger positive battery lead.
- 3: Reconnect the AC power source.
- 4: Touch the positive battery lead to the battery terminal for 3 seconds and then remove.
 •The active algorithm will increment to the next stored on the list.
- 5: Repeat until the desired algorithm is selected.
- 6: Touch the positive battery lead to the battery terminal for 10 seconds to store the selected algorithm as active. You should hear a relay in the charger pick up (click).
- 7: Remove the lead from the battery.
- 8: Disconnect the AC power source for a minimum of 20 seconds.
- 9: Reconnect the AC power source and confirm the desired profile is active.
- 10: Disconnect the AC power source for a minimum of 20 seconds.
- 11: Reconnect the charger positive battery lead and confirm all connections are secure.

Changing the Active Profile (PC)

The charging profile can be changed using the QuiQ Programmer PC application and a laptop computer with USB port. Refer to the Special Tools section for part number of the QuiQ Programmer.

This application will also allow viewing the charging history to aid in troubleshooting or uploading other algorithms.

Instructions for using the application are included with the application or contact Delta-Q.

Taylor-Dunn does not offer 3rd party computer application support, contact Delta-Q for assistance in using the application.

Notes:

- Taylor-Dunn does not support charging profiles not already included with chargers purchased from Taylor-Dunn.
- Taylor-Dunn does not provide charging profiles to be uploaded into a charger.

Signet





Delta-Q IC650

Your charger was configured for use with the batteries originally installed in your vehicle from the factory. The IC650 charger can store up to 25 different profiles in its internal memory. The list of available profiles is listed below.

Profile	Mfg	Optimized for	*Temperature Compensated	Battery Type	AH Range
1	Trojan	T105	Yes	FLA	150-260
5	Trojan	31XHS	Yes	FLA	80-150
6	Deka	8G31	Yes	GEL	80-150
8	Concord	AGM	Yes	AGM	80-150
12	Exide	DF06240	Yes	GEL	200-300
26	Deka	8GCC2	Yes	GEL	180-220
11	US	125	No	FLA	180-250
28	Deka	8GCC2	Yes	GEL	180-220
42	Discover	EV31A	Yes	AGM	80-150
43	Discover	EVGC6A	Yes	AGM	200-400
62	Trojan	31XHS	No	FLA	80-150
71	US	8VCX	No	FLA	140-200
72	US	305HC	No	FLA	250-335
73	US	L16HC	No	FLA	300-400
125	Full River	DC180-8, DC224-6	Yes	AGM	160-200

Contact your Taylor-Dunn dealer for information regarding batteries not listed.

* Temperature compensated profile: Charger temperature sensor must be connected.

NOTICE

SLA/AGM batteries must be charged with a charger configured for SLA/AGM batteries. Use of any other charger will result in damage and premature failure of the batteries.

To Change the Profile


- 1: Disconnect the AC power source.
- 2: Press and hold the Change Profile button then reconnect the AC power source. Hold the button until the Fault Indicator is on solid and the Charging Output Indicator is flashing, then release the button.
- The Error display will flash a code for the currently selected profile. Press and release the Change Profile button to sequential advance through all stored profiles.
- 4: When the correct profile is selected, press and hold the Change Profile button until the Fault Indicator and Charging Output Indicator turns off (about 10 seconds).
- 5: Confirm the correct profile was selected by pressing the Change Profile button.

NOTICE

Use of charge profiles with batteries that they were not designed for is done at your own risk. Delta-Q is continuously testing and updating charge profiles with various batteries. Though many profiles will work with a range of batteries, variations in manufacturing, chemical composition, battery health, and other properties may cause unacceptable charging performance.

Always closely monitor a suggested battery/profile combination for at least three cycles to ensure the batteries are being properly charged.

If you are not sure of how to monitor a battery charge, contact Delta-Q Technical Support for advice.

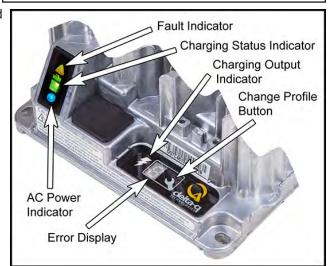



Notes:



Transmission

TABLE OF CONTENTS


Check Oil Level	2			
Change Oil	3			
Motor Removal and Installation	4			
Rear Hub or Rotor	5			
Removing and Installing the Rear Axles	6			
Transmission Assembly Remove and Install				
Disassembly and Reassembly of the Primary				
Disassembly and Reassembly of the Pri	mary			
Disassembly and Reassembly of the Pri Reduction Gear Case	-			
	10			
Reduction Gear Case	10 13			
Reduction Gear Case Disassembling the 3rd Member	10 13 16			
Reduction Gear Case Disassembling the 3rd Member Assembling the 3rd Member Pinion Bearing Preload Pinion Gear Shimming Instructions	10 13 16 19 20			
Reduction Gear Case Disassembling the 3rd Member Assembling the 3rd Member Pinion Bearing Preload	10 13 16 19 20			

Note: Special Washers

The washers for the primary gear case housing and carrier housing side plate are in the shape of a cone referred to as conical or belleville washers.

This type of washer is designed to maintain tension in bolted assemblies.

 Belleville washers must be orientated correctly to function properly. See illustration.








CHECK OIL LEVEL


The oil flows freely between the main gear case (3rd member) and the primary reduction gear case. It is only necessary to check the oil level of the 3rd member.

Park the vehicle on a level surface.

- **1.** Make sure the key-switch is in the "OFF" position, then remove the key.
- 2. Place the forward-reverse switch in the center "OFF" position.

- 3. Set the park brake.
- 4. Place blocks under the front wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Place an oil drain pan underneath the 3rd member.
- 7. Remove the fill/level plug.
- 8. The oil level should be very close to the bottom of the level plug opening.
 - a. If the oil level is below the bottom of the opening, add oil as required until level with the bottom of the opening. Refer to the *Lube Chart* section for information regarding type of oil.
 - b. If oil comes out of the opening, allow to drain until level with the bottom of the opening.
- 9. Replace the fill/level plug.
- 10. Reconnect the main positive and negative cables at the batteries.
- 11. Remove the blocks from the wheels.
- 12. Release the park brake and test drive the vehicle.

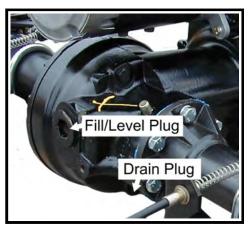

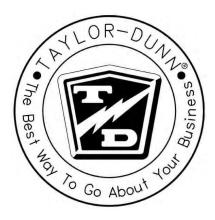


CHANGE OIL

1. Make sure the key-switch is in the "OFF" position, then remove the key.

AWARNING

- 2. Place the forward-reverse switch in the center "OFF" position.
- 3. Set the park brake.
- 4. Place blocks under the front wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Raise the rear of the vehicle and support with jack stands.
- 7. Place a four quart drain pan under the drive assembly.
- 8. Remove the drain plugs from the differential case and gear case.
- 9. Once the oil has drained, replace the drain plugs and lower the vehicle to the ground.
- 10. Remove the fill/level plug and fill the differential up to the bottom of the level plug opening. Refer to the *Lube Chart* section for information regarding type of oil.
- 11. Replace the fill plug.
- 12. Reconnect the main positive and negative cables at the batteries.
- 13. Remove the blocks from the wheels.
- 14. Release the park brake and test drive the vehicle.

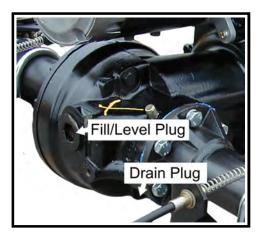





MOTOR REMOVAL AND INSTALLATION

NOTE: Some applications will require removing the drive assembly from the vehicle to remove the motor. Refer to **Removing and Installing the Drive Assembly** for information on removing the drive assembly.

Some vehicles are equipped with an automatic electric brake. The automatic electric brake is sandwiched between the drive motor and the gear case. The electric brake is retained by the drive motor mounting screws. Once the motor is removed the electric brake will no longer be retained by any hardware.

1. Make sure the key-switch is in the "OFF" position, then remove the key.

AWARNING

- 2. Place the forward-reverse switch in the center "OFF" position.
- 3. Set the park brake.
- 4. Place blocks under the front wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Remove the wires from the motor.

NOTE: Label the motor wires with the number of the motor terminal before they are removed from the motor.

- 7. If equipped, remove the motor support bracket ubolt (only used on larger motors).
- 8. Remove the motor mounting bolts and slide the motor off of the input shaft.
- 9. Install the motor in reverse order.

NOTE: Apply a light coating of grease to the splines on the transmission input shaft only.

- 10. Reconnect the main positive and negative cables at the batteries.
- 11. Remove the blocks from behind the wheels.
- 12. Release the park brake and test drive the vehicle.



Support bracket u-bolt

REAR HUB OR ROTOR

NOTE: The torque specification for the axle hub bolt is 275 ft-lbs. An impact wrench will be required to remove the bolt.

- **1.** Make sure the key-switch is in the "OFF" position, then remove the key.
- 2. Place the forward-reverse switch in the center "OFF" position.
- 3. Set the park brake.
- 4. Place blocks under the front wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Raise the wheel off of the ground.

Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in severe bodily injury.

- 7. Remove the tire/wheel assembly, Refer to *Tires and Wheels* section for information regarding removing the tire/wheel assembly.
- 8. Remove the axle hub bolt and washer and remove the hub from the axle.
- 9. Remove the outer brake pad. Refer to section *Brake Service* for information regarding removing the brake pads.
- 10. Remove the rotor.
- 11. Install in reverse order.
 - a. Lightly grease the axle splines.
 - b. Refer to section **Brake Service** for information regarding installing the brake pads.
 - c. Torque the axle hub bolt to 275 ft-lbs.
 - d. Refer to *Tires and Wheels* section for information regarding installing the tire/wheel assembly.
- 12. Lower the wheel to the ground.
- 10. Reconnect the main positive and negative cables at the batteries.
- 11. Remove the blocks from behind the wheels.
- 12. Release the park brake and test drive the vehicle.






REMOVING AND INSTALLING THE REAR AXLES

The oil level in the housing is above the bottom of the axle flange. To minimize oil spills, raise the side of the vehicle high enough so that the oil level is below the bottom of the axle flange. If both axles are to be removed, you must drain all of the oil from the housing.

> NOTE: This procedure does not require that the rear end or drive assembly be removed from the vehicle.

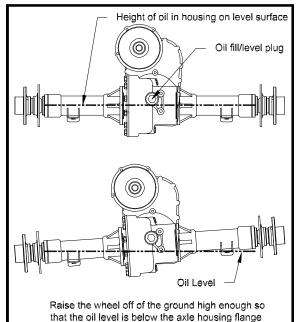


- **1.** Make sure the key-switch is in the "OFF" position, then remove the key.
- 2. Place the forward-reverse switch in the center "OFF" position.

AWARNING

- 3. Set the park brake.
- 4. Place blocks under the front wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. If required, drain the oil from the 3rd member.
- 7. Raise the rear of the vehicle and support with jack stands.

Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in severe bodily injury.

- 8. Release the park brake.
- Remove the tire and wheel assembly. Refer to section *Tires and Wheels* for information regarding removing the tire and wheel assembly.
 - a. If the axle shaft, hub or bearing is to be replaced then remove the hub bolt, wheel hub and disc rotor at this time.
- 10. Remove the four bolts attached to the axle retaining plate.

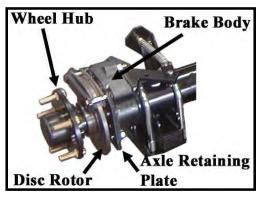

- 11. Remove the axle retaining plate and brake body assembly as one unit.
- 12. Secure the brake body assembly, do not let it hang by the brake hose.
- 13. Pull the axle out of the housing.
- 14. Inspect all bearings for roughness or play, replace as needed.
- 15. Install in reverse order, lubricate the o-ring.

NOTE: Be sure not to damage the o-ring.

16. Use new bolts for the axle retaining plate.

The axle retaining plate bolts have a pre-applied thread locking compound. They are intended for one time use only. If removed they must be replaced. Reusing the original bolts could cause loss of brakes resulting in severe bodily injury and/or property damage.

Refer to section Rear Brakes in Illustrated Parts for the part number of the bolt.


- 17. If the wheel hub was removed, install the hub and rotor. Torque the hub bolt to 275 ft-lbs.
- 17. Fill with oil to the level of the fill plug threads. Refer to Changing the Differential Oil.
- 18. Lower the vehicle.
- 19. Set the park brake.
- 20. Reconnect the main positive and negative cables at the batteries.
- 21. Remove the blocks from behind the wheels.
- 22. Release the park brake and test drive the vehicle.



TRANSMISSION ASSEMBLY

Remove and Install

- **1.** Make sure the key-switch is in the "OFF" position, then remove the key.
- 2. Place the forward-reverse switch in the center "OFF" position.
- 3. Set the park brake.
- 4. Place blocks under the front wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Release the park brake.
- 7. Remove the park brake cables from the spring axle mounting brackets and brake arms.
- 8. Disconnect the wiring from the motor.
- 9. Disconnect the hydraulic brake lines from the left and right brake bodies.
- 10. Remove the nuts from the left and right side lower spring hanger bolts. <u>Do not remove the bolts at this time.</u>

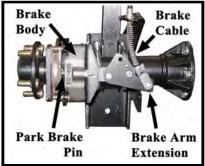


- 11. Raise the rear of the vehicle just high enough so that there is no tension on the spring hanger bolts. Do not remove the bolts at this time.
- 12. Remove the four u-bolts holding the spring to the axle tubes.
- 13. Remove the two lower spring hanger bolts and raise the vehicle high enough to remove the drive and support the frame with jack stands.

AWARNING

Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in severe bodily injury.

- 14. Install the transmission assembly in reverse order of removal.
 - a. Bleed the brake system. Refer to section **Brake Service** for information regarding bleeding the brakes.
 - b. Adjust the park brake. Refer to section **Brake Service** for information regarding adjusting the park brake.
- 15. Lower the vehicle and set the park brake
- 17. Reconnect the main positive and negative cables at the batteries.
- 18. Remove the blocks from behind the wheels
- 19. Release the park brake and test drive the vehicle.

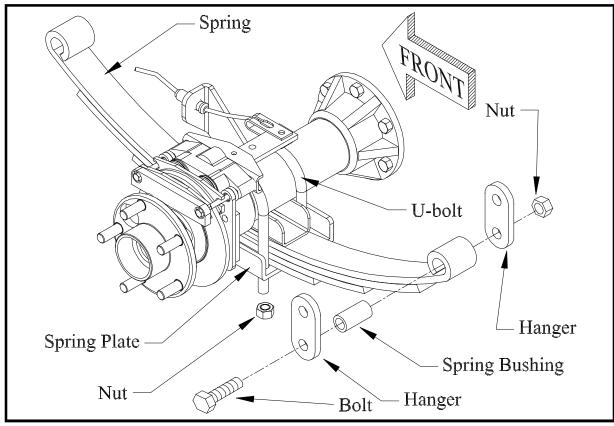

Rear Suspension

DISASSEMBLY AND REASSEMBLY OF THE PRIMARY REDUCTION GEAR CASE

1. Make sure the key-switch is in the "OFF" position, then remove the key.

AWARNING

- 2. Place the forward-reverse switch in the center "OFF" position.
- 3. Set the park brake.
- 4. Place blocks under the front wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Raise the rear of the vehicle and support with jack stands.

Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in severe bodily injury.

- 7. Place a drain pan under the gear case that is capable of holding four quarts of oil and drain the oil from the front gear case.
- 8. If required, remove the drive assembly from the vehicle
 - NOTE: Refer to **Removing and Installing the Drive Assembly** for information on removing the drive from the vehicle.
- 9. Remove the motor only if the entire drive is to be disassembled.
 - NOTE: Refer to **Motor Removal and Installation** for information on removing the motor.



Oil Drain Plug

- 10. Remove the cover retaining bolts.
- 11. Remove the cover plate from the differential and let the remaining oil drain from the housing.



Be careful not to damage the sealing surfaces on the housings. Damage to the sealing surface may lead to an oil leak resulting in damage to the internal parts of the drive.



12. Remove the circlip from the idler gear.

13. Remove the input shaft/bearing assembly and idler gear/ bearing assembly from the gear case cover at the same time.

14. Remove the pinion nut from the output gear and remove the output gear from the pinion shaft.

NOTE: If necessary, remove the seal from the input shaft bore at this time.

- 15. Mark the gear case position in relation to the 3rd member housing so that it will be reassembled in the same position.
- Remove the six retaining bolts holding the gear case to the 3rd member housing.

NOTE: Make note of the angle of the gear case.

- 17. Remove the gear case housing from the 3rd member housing.
- 18. Inspect all parts for signs of wear or damage.











ACAUTION

Lubricate all parts with gear oil before installation. Failure to prelube the parts may result in premature failure.

- 19. Assemble the gear case in reverse order.
 - NOTE: Torque the drain plug to 21-25 foot-pounds.
 - NOTE: Torque the gear case to 3rd member retaining bolts to 18-20 footpounds.
 - NOTE: Torque the pinion nut to 154-169 foot-pounds.
 - NOTE: Apply gasket sealer (#94-430-05) to the front flange on the 3rd member and gear case cover.
 - NOTE: Pack the motor seal with non-acetic based grease.
- 20. Fill the differential with oil.
 - NOTE: Refer to **Changing the Differential Oil** for information on filling the drive with oil.
- 21. Lower the vehicle.
- 22. Reconnect the main positive and negative cables at the batteries.
- 23. Remove the blocks from behind the wheels.
- 24. Test drive the vehicle.



DISASSEMBLING THE 3RD MEMBER

1. Make sure the key-switch is in the "OFF" position, then remove the key.

- 2. Place the forward-reverse switch in the center "OFF" position.
- 3. Set the park brake.
- 4. Place blocks under the front wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Raise the rear of the vehicle and support with jack stands.




Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in severe bodily injury.

7. Remove the complete drive from the vehicle.

NOTE: Refer to **Removing and Installing the Drive Assembly** for information on removing the drive from the vehicle.

- 8. Place a drain pan under the gear case that is capable of holding four quarts of oil and drain the oil from the front gear case and 3rd member.
- 9. Place the 3rd member on an appropriate stand.
- 10. Remove the axle shafts and tubes as an assembly from the 3rd member by removing the six axle tube flange bolts on each axle tube.
- Remove the primary reduction gear case. Refer to *Disassembly and reassembly of the Primary Reduction Gear Case* for information on removing the gear case.
- 12. Remove the 12 side plate bolts, then remove the side plate.

 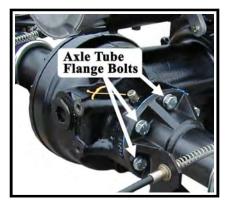


 












15. Remove the differential assembly from the 3rd member

14. Turn the side plate over and remove the carrier bearing race from the side plate.

13. Remove the carrier bearing adjusting nut roll pin and

adjusting nut from the side plate.











17. Remove the carrier bearing race from the 3rd member housing.

18. Remove the front bearing from the input shaft.

NOTE: The input shaft may have to be driven out to perform this procedure.

19. Remove the input shaft's shims and spacer.

- 20. Remove the pinion shaft from the 3rd member.
- 21. Remove the front and rear pinion bearing races.
- 22. Inspect all parts for signs of wear or damage.
- 23. Thoroughly clean all parts.



Go Abou

ne













ASSEMBLING THE 3RD MEMBER

- 1. Temporarily install the pinion gear (hand tighten only).
- 2. Install the carrier bearing race ring nuts into the housing and cover.





Housing

3. Install the carrier bearing races into the housing and cover.





Housing





- 4. Place the differential assembly into the housing.
- 5. Tighten the housing carrier bearing race ring nut so that the ring gear is not in binding against the pinion gear.
- 6. Remove the differential assembly.

NOTE: Do not allow the ring nut to rotate.

- 7. Remove the pinion gear and then reinstall the differential assembly.
- 8. Install the cover onto the housing using 4-bolts in a cross pattern and torque to 45-50 ft-lbs.
- 9. Pre set the carrier bearing preload by tightening the housing carrier bearing race ring nut until it requires 1.5 to 3.3 ft-lbs to rotate the differential assembly.

NOTE: Rotate the carrier assembly whenever adjusting the ring nuts.

- 10. Mark the position of each carrier bearing ring nut in relation to the drive housing and cover and then remove the differential assembly, do not allow the ring nuts to rotate.
- 11. Install the pinion gear. Re-shim if required.

If the ring and pinion gears or bearings are replaced then the pinion gear must be re-shimmed. Improper pinion gear shims will result in drive noise and premature failure. Refer to Pinion Gear Shimming Instructions.

- 12. Install the pinion gear holding tool (96-500-42) and tighten the pinion nut enough to keep the pinion gear from rotating.
- 13. Install the differential assembly.
- 14. Install the cover and all of the cover bolts. Torque to 45-50 ft-lbs.
- 15. Check the gear lash between the ring and pinion gears. The gear lash should be .005 to .007 inches.
- 16. Adjust the gear lash if needed by tightening or loosening the carrier bearing race ring nuts. The two ring nuts must be turned equally in opposite directions.
 - NOTE: To move the ring gear closer to the pinion: Loosen the <u>housing</u> carrier bearing race ring nuts and tighten the <u>cover</u> carrier bearing race ring nut equally.
 - NOTE: To move the ring gear away from the pinion: Loosen the <u>cover</u> carrier bearing race ring nut and tighten the <u>housing</u> carrier race ring nut equally.

ACAUTION

The two ring nuts must be turned the same amount in opposite directions. This allows the carrier assembly to be positioned with the proper gear lash without upsetting the bearing preload. If the ring nuts are not turned the same amount, then the bearing preload will no longer be correct and will result in drive noise and premature failure.







- 17. Install the locking roll pins into the housing and cover to lock the ring nuts in place.
- 18. Remove the pinion gear holding tool.
- 19. Install the primary reduction gear case, axles and housings, motor, and install the complete drive onto the vehicle.
- 20. Fill the drive with oil. Refer to the *Lube Chart* section for information regarding type of oil. Refer to *Change Oil* section for information regarding the proper oil level..
- 21. Lower the vehicle.
- 22. Reconnect the main positive and negative cables at the batteries.
- 23. Remove the blocks from behind the wheels.
- 24. Test drive the vehicle.




Pinion Bearing Preload

NOTE: The pinion gear depth must be set before the preload. Refer to **Setting the Pinion Gear Depth**.

- 1. Install the pinion gear, spacer, and shims into the housing.
- 2. Install the outer pinion bearing.
- 3. Install the main gear onto the pinion shaft and torque the pinion nut to 154-169 ft lbs.
- 4. Measure the torque required to rotate the pinion shaft in the housing.
- 5. The torque required to rotate the pinion shaft should be between 1.1 and 2.9 ft-lbs. If the torque is not within specifications then add or subtract from the total shim thickness and repeat this procedure until the proper preload is obtained.

NOTE: Add shims to decrease torque.

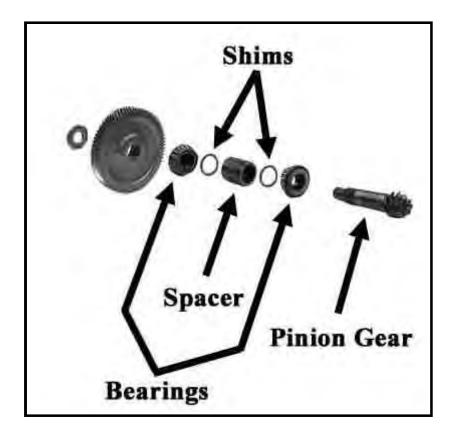



PINION GEAR SHIMMING INSTRUCTIONS

- NOTE: This procedure is required only when replacing the front or rear pinion bearings and races or the ring and pinion gears.
- NOTE: To perform this procedure, all parts must be clean and the bearings lightly lubricated.

Setting the Pinion Gear Depth

This formula is used to calculate the amount of shims that are required:

C - B - A + (DV) = Pinion Shim (mm) where,

DV = The number on the face of the pinion gear.

A = The distance in millimeters from the face of the pinion gear to the top of the inner pinion bearing race (see below)


B = 54.

 \mathbf{C} = The number on the edge of the differential side plate closest to the input shaft (see next page).


 \mathbf{D} = The number on the edge of the differential side plate farthest from the input shaft (see next page).

E = The distance in millimeters from the rear of the drive housing to the face of the pinion gear (see next page).

Once a shim has been selected and the pinion gear is installed, confirm that: $\mathbf{E} - \mathbf{D} = \mathbf{B} + (\mathbf{DV})$

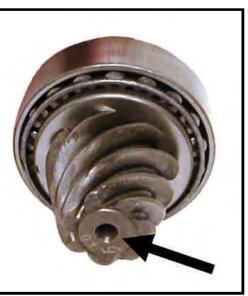



Face of pinion gear

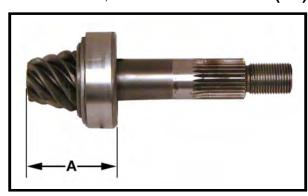



Number on face of pinion gear

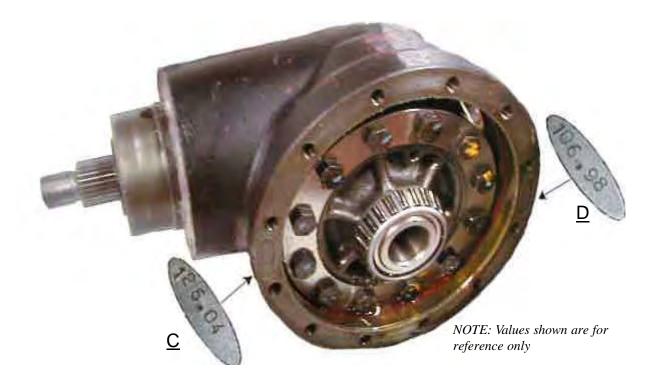

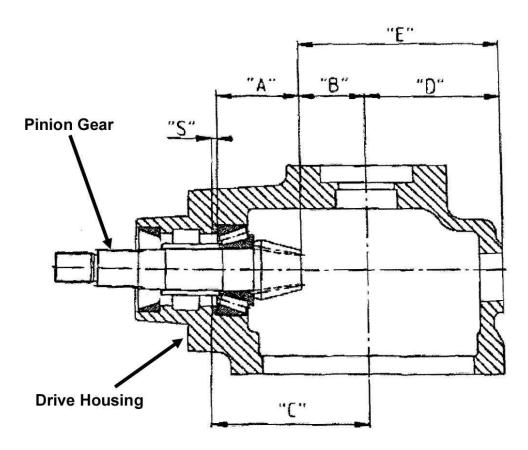

D N N TAYLOR



Transmission 2 (B 2-00)

TABLE OF CONTENTS

Check Oil Level	2
Change Oil	3
Motor	
Removal	4
Installation	4
Rear Hub with Brake Drum	5
Removal and Installation	5
Rear Axle	6
Replace the Axle Bearing	8
Transmission	9
Removal	9
Installation	10
Differential Case	12
Disassemble	12
Assemble	15






CHECK OIL LEVEL

Park the vehicle on a level surface.

- **1.** Make sure the key-switch is in the "OFF" position, then remove the key.
- 2. Place the forward-reverse switch in the center "OFF" position.
- **AWARNING** 3. Set the park brake.
 - 4. Place blocks under the front wheels to prevent vehicle movement.
 - 5. Disconnect the main positive and negative cables at the batteries.
 - 6. Place a drain pan that can hold a minimum of 2-quarts of oil under the transmission level plug.
 - 7. Remove the level plug. When the plug is removed, a small amount of oil should come out. This indicates that the transmission has the correct amount of oil.

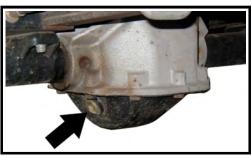

8. If no oil comes out, then lift the side of the vehicle with the level plug and add 11-ounces of oil through the level plug hole. See the illustration below.

Level Plug viewed from in front of the right rear wheel

Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in severe bodily injury.

- 9. Lower the vehicle, allow any excess oil to drain into the drain pan, and then reinstall the level plug.
- 10. Reconnect the main positive and negative cables at the batteries.
- 11. Remove blocks from behind the wheels.
- 12. Test drive the vehicle



CHANGE OIL

AWARNING

Park the vehicle on a level surface.

- **1.** Make sure the key-switch is in the "OFF" position, then remove the key.
- 2. Place the forward-reverse switch in the center "OFF" position.
- 3. Set the park brake.
- 4. Place blocks under the front wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Place a drain pan that can hold a minimum of 2-quarts of oil under the transmission.



Level Plug viewed from in front of the right rear wheel

7. Remove the level plug then lift the side of the vehicle without the level plug and allow the oil to drain out.

Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in severe bodily injury.



- 8. Lower the vehicle and now lift the side of the vehicle with the level plug and add 11-ounces of oil (see illustration on preceding page).
- 9. Lower the vehicle, allow any excess oil to drain into the drain pan, and then reinstall the level plug.
- 10. Reconnect the main positive and negative cables at the batteries.
- 11. Remove blocks from behind the wheels.
- 12. Test drive the vehicle



MOTOR

Removal

- **NOTE:** In some vehicle configurations the transmission assembly will have to be removed to allow clearance to remove the motor. Refer to **Transmission** section for information on removing the transmission assembly from the vehicle.
 - **1.** Make sure the key-switch is in the "OFF" position, then remove the key.


- 2. Place the forward-reverse switch in the center "OFF" position.
- 3. Set the park brake.
- 4. Place blocks under the front wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Remove the motor wires from the motor.


HINT: Tag each wire with the number of the terminal it was removed from.

- 7. Remove the bolts holding the motor to the transmission housing (see illustration).
- 8. Slide the motor off of the transmission input shaft.

Installation

- 1. Remove the rubber bushing from inside of the motor armature coupling.
- 2. Thoroughly clean all grease from the transmission input shaft, rubber bushing and the motor armature coupling.
- 3. Install the rubber bushing back into the motor armature coupling.
- 4. Lightly grease the transmission input shaft only (see caution below).
- 5. Install the motor in reverse order.
- 6. Torque the motor mounting bolts to 6-8 ft-lbs.

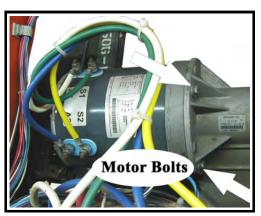

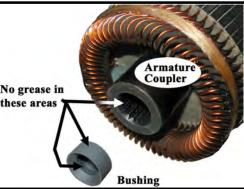

Do not apply grease to the armature coupler, rubber bushing or the end of the transmission input shaft. Grease applied to these areas may result in premature failure of the armature bearing.

REAR HUB WITH BRAKE DRUM

Removal and Installation

NOTE: Some vehicle configurations do not have a removable hub. The hub is an integral part of the rear axle. See the illustrations to the right to identify the hub on your vehicle.





Integral hub


Removable hub

- **1.** Make sure the key-switch is in the "OFF" position, then remove the key.
- 2. Place the forward-reverse switch in the center "OFF" position.
- 3. Set the park brake.
- 4. Place blocks under the front wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Remove the rear wheel. Refer to **Replace the Rear Tire/Wheel** section for information regarding removing the rear wheel.
- 7. Remove the cotter pin from the axle shaft.
- 8. Remove the hub retaining nut and remove the hub from the axle shaft.
- 9. Install in reverse order.
- 10. Lightly grease the axle shaft splines.



AWARNING

Too much grease on the axle splines could contaminate the braking surfaces resulting in loss of braking power. This could lead to severe bodily injury and/or property damage.

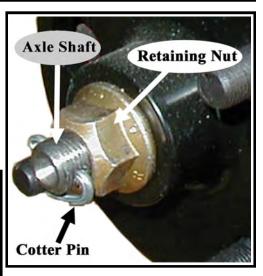

- 11. Tighten the axle hub retaining nut to 95-115 ft-lbs.
- 12. Install the wheel. Refer to **Replace the Rear Tire/Wheel** section for information regarding installing the rear wheel.
- 13. Reconnect the main positive and negative cables at the batteries, remove the blocks from the wheels, and test drive.



REAR AXLE

Your vehicle is configured with one of two types of rear hubs. One can be removed from the rear axle and the other is an integral part of the rear axle. The service of both of these axles is addressed in this section as follows:

The removable hub will be referred to as "Removable Hub." The non-removable hub will be referred to as "Non-Removable Hub."

Refer to the illustrations on the previous page to identify the type of hub on your vehicle.

NOTE: The tire/wheel assembly must be removed for these procedures. Refer to **Tires and Wheels** section for information on removing the tire and wheel assembly.


Remove and Install Axle - Removable Hub

- **1.** Make sure the key-switch is in the "OFF" position, then remove the key.
- 2. Place the forward-reverse switch in the center "OFF" position.

- 3. Set the park brake.
- 4. Place blocks under the front wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- Remove the rear wheel. Refer to *Replace the Rear Tire/Wheel* section for information regarding removing the rear wheel.
- 7. Remove the axle hub. Refer to **Rear Hub/Brake Drum** section for information on removing the hub.
- 8. Remove the outer snap ring from the axle housing.
- 9. Remove the axle from the transmission assembly.

HINT: Use a slide hammer threaded onto the end of the axle shaft.

- 10. Remove the inner snap ring.
- 11. Remove the axle seal from the axle housing.
- 12. Install the axle in reverse order using a new axle seal.
- 13. Refer to *Rear Hub/Brake Drum* section for information on installing the hub.
- 14. Reconnect the main positive and negative at the batteries, remove the blocks from the wheels, and test drive.

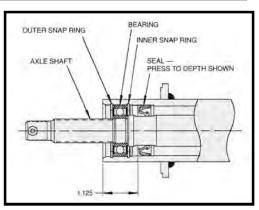

Remove and Install Axle - Non - Removable Hub

NOTE: The brake assembly is retained by the axle bearing and must be removed along with the axle assembly.

- **1.** Make sure the key-switch is in the "OFF" position, then remove the key.
- 2. Place the forward-reverse switch in the center "OFF" position.

AWARNING 3. Set the park brake.

- 4. Place blocks under the front wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Remove the rear wheel. Refer to **Replace the Rear Tire/Wheel** section for information regarding removing the rear wheel.
- 7. Remove the brake drum.
- 8. Remove the mechanical brake linkage from the brake arm.
- 9. If equipped with hydraulic brakes, disconnect the brake line from the wheel cylinder.
- 10. Remove the four bolts holding the axle/brake assembly to the axle housing.
- 11. Remove the axle/brake assembly from the transmission assembly.

HINT: Use a slide hammer threaded onto one of the wheel studs.

- 12. If the axle bearing is to be replaced, remove the bearing race from inside of the axle housing.
- 13. Remove the axle seal from the axle housing and discard.
- 14. Install in reverse order using a new axle seal.
- 15. If equipped with hydraulic brakes, bleed the brakes. Refer to **Brake Service-Bleed the Brakes** section for information on bleeding the brake system.
- 16. Reconnect the main positive and negative at the batteries, remove the blocks from the wheels, and test drive.





Replace the Axle Bearing

NOTE: The axle must be removed from the transmission for this procedure. Refer to **Remove and Install Axle** for information regarding removing the rear axle.

Removable Hub:

- 1. Remove the hub from the axle shaft. *Refer to Rear Hub/Brake Drum* for information regarding removing the hub.
- 2. Press the axle bearing off of the axle shaft and discard.
- 3. Press a new bearing onto the axle shaft.
- 4. If the axle is not to be immediately installed into a vehicle, pack the bearing with grease and wrap it in plastic to prevent corrosion.

Non-Removable Hub

1. Drill a 1/4" hole to a depth of approximately 3/4 the thickness of the retaining ring.

AWARNING

Do not drill all of the way through the retainer into the axle shaft. Drilling into the axle shaft will weaken the axle shaft and could cause the axle to fail resulting in severe bodily injury and/or property damage.



- 2. Use a chisel to split the retainer and remove the retainer from the axle shaft.
- 3. Press the bearing and brake assembly off of the axle shaft.





- 4. Press a new bearing/race assembly onto the axle shaft.
- If the axle is not to be immediately installed into a vehicle, pack the bearing with grease and wrap it in plastic to prevent corrosion.

TRANSMISSION


<u>Removal</u>

AWARNING


1. Make sure the key-switch is in the "OFF" position, then remove the key.

2. Place the forward-reverse switch in the center "OFF" position.

- 3. Set the park brake.
- 4. Place blocks under the front wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Remove the rear deck access plate.
- 7. Disconnect the motor wires from the motor.
- 8. Remove the clevis pins from the brake cables (left side shown).
- 9. Remove the brake cable from the mounting bracket.

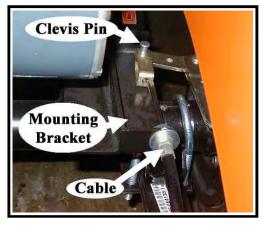

10. If equipped with hydraulic brakes, disconnect the brake line from the wheel cylinder.

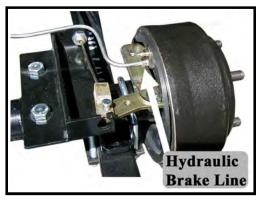

11. Support the rear of the vehicle with a lifting device but do not raise the rear wheels off of the ground.

Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in severe bodily injury.



12. Remove the four u-bolts holding the transmission to the left and right springs.



- 13. Remove the lower bolt from the left and right spring hangers.
- 14. Lift the rear of the vehicle high enough to roll the transmission out from under the vehicle.
- 15. Place the frame of the vehicle on jack stands.

Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in severe bodily injury.



Installation

- **1.** Make sure the key-switch is in the "OFF" position, then remove the key.
- 2. Place the forward-reverse switch in the center "OFF" position.
 - 3. Set the park brake.
 - 4. Place blocks under the front wheels to prevent vehicle movement.
 - 5. Disconnect the main positive and negative cables at the batteries.

6. Lift the rear of the vehicle high enough to roll the transmission under the vehicle.

Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in severe bodily injury. 7. Place the transmission on to the locating pins on each leaf spring.





8. Install the four u-bolts so that the u-bolt nuts are tight enough to hold the springs on the locating pins but not so tight as to keep the springs from moving.



- 9. Install the lower spring hanger bolts. Torque to 20 ft-lbs.
- 10. Tighten the u-bolt nuts.
- 11. Install the brake cable. Use a new cotter pin.
- 12. Adjust the brakes. Refer to the **Brake Service** section for information regarding adjusting the brakes.
- 13. Adjust the mechanical brake linkages. Refer to the **Brake Service** section for information regarding adjusting the brake linkages.



- 14. If equipped with hydraulic brakes, install the brake line and bleed the brakes. Refer to the **Brake Service** section for information regarding bleeding the brakes.
- 15. Connect the wires to the motor.
- 16. Reconnect the main positive and negative at the batteries, remove the blocks from the wheels, and test drive.


DIFFERENTIAL CASE

Disassemble

- 1. Remove the transmission from the vehicle. Refer to *Transmission-Remove* section for information on removing the transmission.
- 2. Thoroughly clean the transmission assembly before disassembly.
- 3. Remove the left and right axles from the transmission assembly. Refer to *Rear Axle* section for information on removing the axles.
- 4. Suspend the differential case over a drain pan that can hold a minimum of 2-quarts of oil.
- 5. Remove the differential case cover being careful not to bend or damage the case cover flange or the sealing surface of the differential case.



- 6. Remove the differential bearing caps and remove the differential assembly from the housing.
 - NOTE: The bearing caps are marked for identification. When the transmission is reassembled they must be installed in their original position.
- 7. Remove both bearings from the differential case.

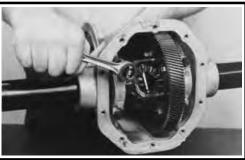





8. Remove the final drive gear from the differential housing.




  - 9. Punch or drill a small hole into the center of both of the intermediate shaft bore plugs.
- 10. Thread a sheet metal screw into each plug until the bore plug is forced out.





the transmission.

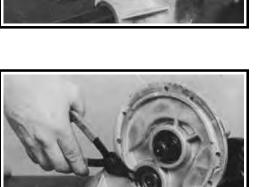








13. Remove the intermediate bearing with an ID bearing puller.




The shaft and gear assembly must be supported by hand during the next step. Failure to properly support the shaft and gear assembly could result in damage to the gear teeth.

14. While supporting the shaft and gear assembly, repeat steps #12 and #13 for the opposite side bearing and remove the intermediate shaft from the housing.

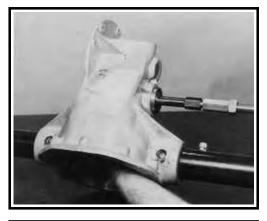


15. Remove the o-rings from each end of the intermediate shaft.

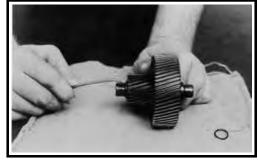

- 16. Remove the circlip from the input shaft.
- 17. Remove the input shaft from the housing.
- 18. Press the bearings off of the input shaft.




19. Remove the o-rings from both sides of the intermediate shaft bore and the input shaft bore and discard the o-rings.

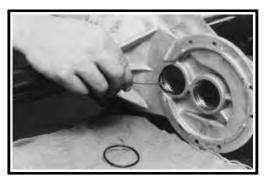


<u>Assemble</u>

- NOTE: When pressing bearings, do not press against or support the outer race as this will damage the bearing.
- NOTE: All snap rings should fit tightly into their grooves. If a snap ring is loose, then it must be replaced.
- NOTE: All internal components should fit easily together. Do not hit any shaft or component with a hard metal hammer or punch.
- NOTE: Pre-lube all bearings, seals and o-rings before assembly.
- 1. Thoroughly clean all components as well as the inside of the housing.
- 2. Press new bearings onto the input shaft and differential case.

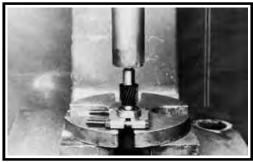

3. Insert new o-rings into both sides of the intermediate shaft bore, the input shaft bore and the intermediate shafts.

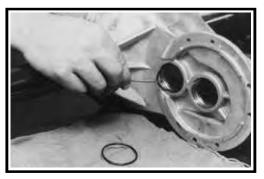



4. Install the input shaft into the housing and install the snap ring.




5. Insert the intermediate shaft into the housing and



ACAUTION

Use a hard wood dowel the same diameter as the bearing bore to drive the bearing into place. Do not drive against the inner race as this will damage the bearing.

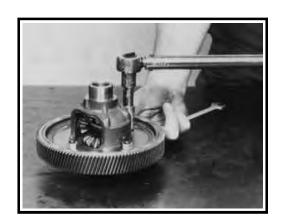

Suspension

TABLE OF CONTENTS

Replace the Rear Springs		2
Leaf (elliptical)		
Leaf (elliptical)	3	
Replace the Front Springs		3
Replace the Spring Bushings		
Replace the Shocks		
Front		





REPLACE THE REAR SPRINGS

Leaf (elliptical)

If a spring has failed or is fatigued, then it is recommended that both rear springs are replaced as a set.

- HINT : In most vehicles it will be easier if the springs are replaced one at a time.
 - **1.** Make sure the key-switch is in the "OFF" position, then remove the key.
- 2. Place the forward-reverse switch in the center "OFF" position.3. Set the park brake.
- AWARNING 3
 - 4. Place blocks under the front wheels to prevent vehicle movement.
 - 5. Disconnect the main positive and negative cables at the batteries.
 - 6. Raise the rear of the vehicle and support with jack stands.

Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in severe bodily injury.

- 7. Tie up or support the rear axle so it cannot fall out of the vehicle.
- 8. Remove the nuts from the u-bolts holding the spring to the axle tube.
- 9. Support the spring so that it cannot fall out of the vehicle.
- 10. Remove the lower bolt from the spring hanger.
- 11. Remove the spring bolt from the other end of the spring and remove the spring from the vehicle.
- 12. Inspect the spring bolts and spring hangers for signs of wear or damage. If any wear or damage is found, then they must be replaced.



Damaged or worn spring bolts or hangers could result in sudden failure of the suspension causing severe bodily injury or property damage.



Typical Spring hanger

- 13. Install the new spring in reverse order.
- 14. If the spring hanger bolts do not have a grease fitting, lube the spring bushings before installing the spring.
- 15. Torque the spring hanger bolts to 20 ft-lbs.
- 16. Lower the vehicle.
- 17. Reconnect the main positive and negative cables at the batteries.
- 18. Remove the blocks from behind the wheels.
- 19. Release the parking brake and test drive the vehicle

REPLACE THE FRONT SPRINGS

Leaf (elliptical)

If a spring has failed or is fatigued, then it is recommended that both front springs are replaced as a set.

HINT : In most vehicles it will be easier if the springs are replaced one at a time.

- 1. Make sure the key-switch is in the "OFF" position, then remove the kev.
- 2. Place the forward-reverse switch in the center "OFF" position.
 - 3. Set the park brake.
 - 4. Place blocks under the rear wheels to prevent vehicle movement.
 - 5. Disconnect the main positive and negative cables at the batteries.
 - 6. Raise the front of the vehicle and support with jack stands.

Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in severe bodily injury.

- 7. Tie up or support the front axle so it cannot fall out of the vehicle.
- 8. Unbolt the spring from the front axle beam.
- 9. Support the spring so that it cannot fall out of the vehicle.
- 10. Remove the lower bolt from the spring hanger.
- 11. Remove the spring bolt from the other end of the spring and remove the spring from the vehicle.
- 12. Inspect the spring bolts and spring hangers for signs of wear or damage. If any wear or damage is found, then they must be replaced.

Damaged or worn spring bolts or hangers could result in sudden failure of the suspension causing severe bodily injury or property damage.



- 13. Install the new spring in reverse order.
- 14. If the spring hanger bolts do not have a grease fitting, lube the spring bushings before installing the spring.
- 15. Torque the spring hanger bolts to 20 ft-lbs.
- 16. Lower the vehicle.
- 17. Reconnect the main positive and negative cables at the batteries.
- 18. Remove the blocks from behind the wheels.
- 19. Release the parking brake and test drive the vehicle.



REPLACE THE SPRING BUSHINGS

It is recommended that all front spring bushings are replaced as a set.

Your vehicle will be equipped with one of two types of spring bushings, internal and external (see illustration to the right):

- The internal bushing is a plastic insert that is pressed into the spring eye. There are one of these bushings for each spring eye.
- The external bushing consists of two plastic bushings on each end of the spring eye.
- Refer to the parts list to identify the bushings used in your vehicle.



1. Make sure the key-switch is in the "OFF" position, then remove the key.

2. Place the forward-reverse switch in the center "OFF" position.

AWARNING

3. Set the park brake.

- 4. Place blocks under the front/rear wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Raise the front or rear of the vehicle depending on which spring is to be removed and support with jack stands.

AWARNING

Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in severe bodily

- 7. Remove the spring from the vehicle. *NOTE:* Refer to **Replace the Front Springs** section for information regarding removing the front springs.
- 8. If the vehicle is equipped with spring hangers, remove the spring hanger bolt from the vehicles frame.
- 9. Remove the spring bushing(s):
 - For internal bushing, press the spring bushings out of the two spring eyes and from the mounting eye on the vehicles frame.
 - For external bushing, Remove the bushings from the spring eye.
- 10. Install the new bushings in reverse order.



REPLACE THE SHOCKS

Front

It is recommended to replace both front shocks as a set.

NOTE: On some vehicles it may be required to remove the front wheel to gain access to the shock mounting bolts. Refer to **Tires and Wheels** section for information regarding removing the front wheels.

1. Make sure the key-switch is in the "OFF" position, then remove the key.


2. Place the forward-reverse switch in the center "OFF" position.

- 3. Set the park brake.
- 4. Place blocks under the front wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Some vehicles may require that the wheels be lifted off of the ground and supported with jack stands to replace the shocks.



Always use a lifting strap, hoist, and jack stands, of adequate capacity to lift and support the vehicle. Failure to use lifting and support devices of rated load capacity may result in severe bodily

- 7. Remove the upper and lower shock bolts.
- 8. Remove the shock from the vehicle.
 - NOTE: If the shock that was removed is to be reinstalled:
 - A. Inspect the shaft where it enters the shock body for any signs of leakage. If any sign of leakage is seen, then the shock must be replaced.
 - B. Inspect the upper and lower shock bushings. If any signs of damage or wear are seen, then the shock must be replaced.
- 9. Install the shock in reverse order.
- 10. Lower the vehicle.
- 11. Reconnect the main positive and negative cables at the batteries.
- 12. Remove the blocks from behind the wheels.
- 13. Release the parking brake and test drive the vehicle.

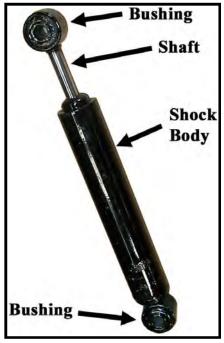


NNN TAYLOR



Tires and Wheels

TABLE OF CONTENTS

Tire Inflation	2
Tire Inspection	
Replace the Tire/Wheel	
Repair the Tire (pneumatic)	
Replace the Tire (pneumatic)	

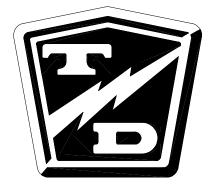



TIRE INFLATION

1. Make sure the key-switch is in the "OFF" position, then remove the key.

- 2. Place the forward-reverse switch in the center "OFF" position.
- 3. Set the park brake.
- 4. Place blocks under the front wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.

There are many tire options available with varying tire pressures. Refer to the side wall of your tire for information regarding the tire pressure for your tires.

The illustration to the right is an example of the side wall information on a tire.

Tire pressures must be checked when the tire is cold.



TIRE INSPECTION

- **1.** Make sure the key-switch is in the "OFF" position, then remove the key.
- 2. Place the forward-reverse switch in the center "OFF" position.

AWARNING 3. Set the park brake.

- 4. Place blocks under the front wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Check the tire pressure. Refer to *Tire Inflation* section for information on checking the tire pressure.
- 7. Inspect the tire tread depth. Minimum recommended tread depth is 1/16-inch. There are a series of tread depth wear indicators around the circumference of the tire. They will appear as 1/2-inch bands across the tread as the tire approaches its wear limit (see illustration to the right). Replace the tire if any tread depth indicator can be seen or any part of the tread depth is 1/16-inch or less. Refer to **Replace the Tire** section for information regarding replacing the tire.



8. Inspect for uneven tire wear on the front tires. Uneven tire wear could be a result of an improperly inflated tire or a misaligned or damaged front end.

NOTE: Refer to **Tire Inflation** section or **Steering Component Service** section for information on proper tire inflation or front end wheel alignment.

- 9. Inspect the inner and outer side walls for cracks. If any cracks are seen, then the tire should be replaced. Refer to *Replace the Tire* section for information regarding replacing the tire.
- 10. Inspect the valve stem for cracks. If any cracks are seen, then the valve stem should be replaced. It is also recommended that the valve stem be replaced whenever the tire is replaced. *NOTE:* Refer to **Replace the Tire** section for information regarding replacing the valve stem.
- 11. Inspect the tread and side walls for debris in the rubber that could lead to a puncture. If any debris is found it should be removed and the tire inspected for a leak.

REPLACE THE TIRE/WHEEL

- **1.** Make sure the key-switch is in the "OFF" position, then remove the key.
- 2. Place the forward-reverse switch in the center "OFF" position.

AWARNING


- 4. Place blocks under the front wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- 6. Raise the wheel to be replaced off of the ground and support with jack stands.
- 7. Remove the 4 or 5 wheel nuts and remove the wheel.

3. Set the park brake.

- 8. Install in reverse order.
- 9. Following the pattern shown on the following page, cross tighten the wheel nuts in two stages as follows:

1st stage to approximately 20 ft-lbs. 2nd stage to 80-90 ft-lbs.

- 10. Reconnect the main positive and negative cables at the batteries.
- 11. Lower the wheel to the ground.
- 12. Remove the blocks from behind the wheels.
- 13. Release the parking brake and test drive the vehicle.

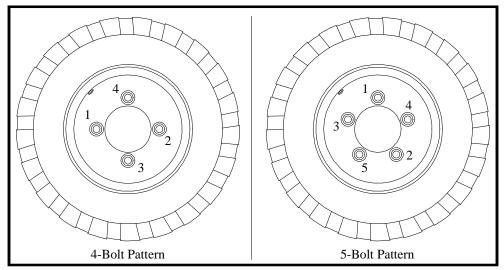

Pattern for tightening the wheel nuts

AWARNING

Re-torque all wheel nuts to their final value after 1-week (20-hours) of operation. Failure to re-torque the wheel nuts may result in the wheel coming off of the vehicle causing severe bodily injury and/or property damage.

REPAIR THE TIRE (PNEUMATIC)

Do not attempt to repair a tire with a damaged side wall or a slice in the tread. This type of repair could fail prematurely resulting in severe bodily injury and/or property damage.

NOTE: To properly repair a puncture, the tire must be removed from the wheel. Refer to **Replace the Tire** section for information on removing the tire from the wheel.

It is recommended to repair a tire with a combination vulcanized plug and internal patch.

Tire repairs should only be performed by personnel trained in tire repair.

The tire repair procedure will be unique to the type of repair equipment or repair components used. Refer to the instructions provided with your equipment or repair components.

REPLACE THE TIRE (PNEUMATIC)

NOTE; To replace the tire, the tire/wheel assembly must be removed from the vehicle. Refer to **Replace the Tire/Wheel** section for information on removing the tire/wheel assembly.

Explosion Hazard. Fully deflate the tire before attempting to remove the tire from the wheel. Do not over inflate the tire when seating the bead. Failure to deflate the tire or over inflating the tire to seat the bead may cause explosive failure of the tire resulting in severe bodily injury or death.

Tire replacement should only be performed by personnel trained in tire replacement.

The tire replacement procedure will be unique to the type of replacement equipment being used. Refer to the instructions provided with your equipment.

Always use a new valve stem when replacing a tire.

- 1. Remove the tire from the wheel.
- 2. Cut the old valve stem off of the wheel.
- 3. Remove the valve stem cap from the new valve stem.
- 4. Lubricate the valve stem with liquid soap.
- 5. Install a new valve stem using a valve stem tool.

NOTE: The valve stem tool is available at most auto repair shops.

- 6. Install the tire onto the wheel following the instructions provided with your tire replacement equipment.
- 7. Inflate the tire to the proper pressure and check for leaks.
- 8. Install the valve stem cap.

NNN TAYLOR



Battery Service

TABLE OF CONTENTS

Cleaning	2
Testing	
Watering	
Charging	
Replacing (6-volt batteries only)	
Moist Charge Batteries	
Storage and Returning to Service	10
Storage	10
Returning to Service	11





Provide ample ventilation in rooms where batteries are being charged. Failure to do so may result in severe bodily injury and/or property damage. Image: Battery electrolyte is poisonous and dangerous. It contains sulfuric acid. Avoid contact with skin eyes or clothing. Wear rubber gloves and safety glasses while servicing batteries. DO NOT INGEST! This may result in severe bodily injury. Image: A battery is a live electrical source. It cannot be disconnected or neutralized. Do not drop any tool or conductive object onto the battery. A conductive object that comes in contact with the battery terminals will initiate a short circuit of the battery. This could cause the battery to explode resulting in severe bodily injury and/or property damage. Image: Battery electrolyte will stain and corrode most surfaces. Immediately and thoroughly clean any surface outside of the battery that the battery electrolyte comes in contact with. Failure to clean may result in property damage. Image: 1. Make sure the key-switch is in the "OFF" position, then remove the key. Image: 2. Place the forward-reverse switch in the center "OFF" position. Image: 3. Set the park brake. Image: 4. Place blocks under the front wheels to prevent vehicle movement. Image: 5. Disconnect the main positive and negative cables at the batteries.	CLEANING	
AWARNING acid. Avoid contact with skin eyes or clothing. Wear rubber gloves and safety glasses while servicing batteries. DO NOT INGEST! This may result in severe bodily injury. Automatical acid. Avoid contact with skin eyes or clothing. Wear rubber gloves and safety glasses while servicing batteries. DO NOT INGEST! This may result in severe bodily injury. Automatical acid. Avoid contact with skin eyes or clothing. Wear rubber gloves and safety glasses while servicing batteries. DO NOT INGEST! This may result in severe bodily injury. Automatical acid. Avoid contact with skin eyes or clothing. Wear rubber gloves and safety glasses while servicing batteries. DO NOT INGEST! This may result in severe bodily injury. Automatical acid. Avoid contact with skin eyes or clothing. Wear rubber gloves and safety glasses while servicing batteries. DO NOT INGEST! This may result in severe bodily injury. A battery is a live electrical source. It cannot be disconnected or neutralized. Do not drop any tool or conductive object onto the battery. A conductive object that comes in contact with the battery terminals will initiate a short circuit of the battery. This could cause the battery to explode resulting in severe bodily injury and/or property damage. ACAUTION Battery electrolyte will stain and corrode most surfaces. Immediately and thoroughly clean any surface outside of the battery that the battery electrolyte comes in contact with. Failure to clean may result in property damage. AWARNING 1. Make sure the key-switch is in the "OFF" position, then remove the key. 2. Place the forward-reverse switch in the center "OFF" position. 3. Set the park brake.	& WARNING	at all times. Do not work with or charge battery in an area where open flames (including gas furnace or water heater pilots), sparks, cigarettes, or any other sources of combustion are present. Always provide ample ventilation in rooms where batteries are being charged. Failure to do so may result in severe bodily injury and/or property
AWARNING neutralized. Do not drop any tool or conductive object onto the battery. A conductive object that comes in contact with the battery terminals will initiate a short circuit of the battery. This could cause the battery to explode resulting in severe bodily injury and/or property damage. ACAUTION Battery electrolyte will stain and corrode most surfaces. Immediately and thoroughly clean any surface outside of the battery that the battery electrolyte comes in contact with. Failure to clean may result in property damage. Image: 1. Make sure the key-switch is in the "OFF" position, then remove the key. Image: 2. Place the forward-reverse switch in the center "OFF" position. Image: 3. Set the park brake. Image: 4. Place blocks under the front wheels to prevent vehicle movement. Image: 5. Disconnect the main positive and negative cables at the batteries.	& WARNING	acid. Avoid contact with skin eyes or clothing. Wear rubber gloves and safety glasses while servicing batteries. DO NOT INGEST! This
 ACAUTION and thoroughly clean any surface outside of the battery that the battery electrolyte comes in contact with. Failure to clean may result in property damage. ARRNING Place the forward-reverse switch is in the "OFF" position, then remove the key. Place the forward-reverse switch in the center "OFF" position. Set the park brake. Place blocks under the front wheels to prevent vehicle movement. Disconnect the main positive and negative cables at the batteries. 	& WARNING	neutralized. Do not drop any tool or conductive object onto the battery. A conductive object that comes in contact with the battery terminals will initiate a short circuit of the battery. This could cause the battery
 the key. 2. Place the forward-reverse switch in the center "OFF" position. 3. Set the park brake. 4. Place blocks under the front wheels to prevent vehicle movement. 5. Disconnect the main positive and negative cables at the batteries. 6. Dry dirt can be readily blown off with low-pressure air or brushed off.		and thoroughly clean any surface outside of the battery that the battery electrolyte comes in contact with. Failure to clean may result
	A WARNING	 the key. 2. Place the forward-reverse switch in the center "OFF" position. 3. Set the park brake. 4. Place blocks under the front wheels to prevent vehicle movement. 5. Disconnect the main positive and negative cables at the batteries.
7. Wetness or wet dirt on the batteries indicates battery acid. Using a nonmetallic brush with		

- 7. Wetness or wet dirt on the batteries indicates battery acid. Using a nonmetallic brush with flexible bristles, wash the batteries off with a strong solution of baking soda and hot water (1 lb. of soda to a gallon of water). Continue until all fizzing stops, which indicates that the acid has been neutralized. Then rinse thoroughly with clear water. DO NOT get any of the solution into the battery cells.
- 8. Reconnect the batteries, remove the blocks from the wheels and test drive.

TESTING

NOTE: A combination of the Load Test <u>and</u> Specific Gravity Test should be used to accurately determine the condition of the batteries.		
&WARNING	Explosive mixtures of Hydrogen gas are present within battery cells at all times. Do not work with or charge battery in an area where open flames (including gas furnace or water heater pilots), sparks, cigarettes, or any other sources of combustion are present. Always provide ample ventilation in rooms where batteries are being charged. Failure to do so may result in severe bodily injury and/or property damage.	
& WARNING	Battery electrolyte is poisonous and dangerous. It contains sulfuric acid. Avoid contact with skin eyes or clothing. Wear rubber gloves and safety glasses while servicing batteries. DO NOT INGEST! This may result in severe bodily injury.	
& WARNING	A battery is a live electrical source. It cannot be disconnected or neutralized. Do not drop any tool or conductive object onto the battery. A conductive object that comes in contact with the battery terminals will initiate a short circuit of the battery. This could cause the battery to explode resulting in severe bodily injury and/or property damage.	
	 Make sure the key-switch is in the "OFF" position, then remove the key. Place the forward-reverse switch in the center "OFF" position. Set the park brake. 	

Load Test (6-volt batteries only)

NOTE: The batteries must be fully charged before performing this test.

- 1. Clean the batteries. Refer to *Cleaning the Batteries* section for information on cleaning the batteries.
- 2. Load test each battery using a battery load test meter (available at most auto parts distributors). Follow the instructions provided with the test meter.
 - If any battery fails the load test, then it should be replaced.

NOTE: If the batteries are over one year old, it is recommended to replace them as a set.

• If all batteries fail the test you should check the charging system before replacing the batteries. Refer to **Charger Troubleshooting** section for information on checking the charging system.



Specific Gravity Test

NOTE: The batteries must be fully charged before performing this test.

The specific gravity of a cell is an indication of the actual state of charge of the cell. A fully charged cell should have a reading of 1275 to 1300 (see the illustration to the right). A discharged battery will read 1100. Ideally, all cells in a battery pack will have the same reading. Any cells in a battery pack that vary by more than 30-points may be an indication of a bad cell.

Clean the batteries. Refer to *Cleaning the Batteries* section for information on cleaning the batteries.

Using part number **77-200-00** hydrometer, check and record the specific gravity of each cell in the battery pack.

If, after charging, none of the cells exceed a hydrometer reading of 1250 then there may be a fault in the charging system. If the charging system checks OK then the batteries are no longer accepting a charge and should be replaced.

NOTE: Refer to **Charger Troubleshooting** for information on checking the charging system.

The highest reading will be the cell that is accepting the most charge. This reading will be used to gauge all other cells.

Compare the specific gravity readings to the highest reading, if the difference between any of the cells is more than 30-points, then that battery should be replaced.

NOTE: If the batteries are over one year old, it is recommended to replace them as a set.

Reconnect the batteries, remove the blocks from the wheels and test drive.



Typical Hydrometer Float

WATERING

NOT	E: The electrolyte level in a battery rises while charging and will be close to its highest level after the end of a charging cycle. It is recommended to fill the batteries at the end of a charging cycle. If the electrolyte is below the top of the battery plates then fill just enough to cover the plates and then top off when the charging cycle is complete.
& WARNING	Explosive mixtures of Hydrogen gas are present within battery cells at all times. Do not work with or charge battery in an area where open flames (including gas furnace or water heater pilots), sparks, cigarettes, or any other sources of combustion are present. Always provide ample ventilation in rooms where batteries are being charged. Failure to do so may result in severe bodily injury and/or property damage.
& WARNING	Battery electrolyte is poisonous and dangerous. It contains sulfuric acid. Avoid contact with skin eyes or clothing. Wear rubber gloves and safety glasses while servicing batteries. DO NOT INGEST! This may result in severe bodily injury.
& WARNING	A battery is a live electrical source. It cannot be disconnected or neutralized. Do not drop any tool or conductive object onto the battery. A conductive object that comes in contact with the battery terminals will initiate a short circuit of the battery. This could cause the battery to explode resulting in severe bodily injury and/or property damage.
& WARNING	 Make sure the key-switch is in the "OFF" position, then remove the key. Place the forward-reverse switch in the center "OFF" position. Set the park brake. Place blocks under the front wheels to prevent vehicle movement. Disconnect the main positive and negative cables at the batteries.
AWARNING	Do not overfill the batteries. Over filling the batteries may cause the batteries to boil over and result in severe bodily injury or property damage.




AWARNING

1. Make sure the key-switch is in the "OFF" position, then remove the key.

2. Place the forward-reverse switch in the center "OFF" position.

- 3. Set the park brake.
- 4. Place blocks under the front wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.
- Clean the batteries. Refer to *Cleaning the Batteries* section for information on cleaning the batteries.
- Check the electrolyte level in all battery cells. If low, fill to the correct level with distilled water using part number 77-201-00 battery filler, never add additional battery electrolyte to the batteries.
- 8. Reconnect the batteries, remove the blocks from the wheels and test drive.

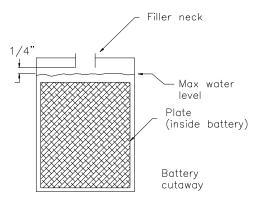

CHARGING

Refer to Charging Your Vehicle in section Safety Rules and Operating Instructions.

REPLACING (6-VOLT BATTERIES ONLY)

& WARNING	Explosive mixtures of Hydrogen gas are present within battery cells at all times. Do not work with or charge battery in an area where open flames (including gas furnace or water heater pilots), sparks, cigarettes, or any other sources of combustion are present. Always provide ample ventilation in rooms where batteries are being charged. Failure to do so may result in severe property damage and or serious
& WARNING	Battery electrolyte is poisonous and dangerous. It contains sulfuric acid. Avoid contact with skin eyes or clothing. Wear rubber gloves and safety glasses while servicing batteries. DO NOT INGEST! This may result in serious bodily injury.
& WARNING	A battery is a live electrical source. It cannot be disconnected or neutralized. Do not drop any tool or conductive object onto the battery. A conductive object that comes in contact with the battery terminals will initiate a short circuit of the battery. This could cause the battery to explode resulting in property damage and/or bodily injury.
A WARNING	 Make sure the key-switch is in the "OFF" position, then remove the key. Place the forward-reverse switch in the center "OFF" position. Set the park brake. Place blocks under the front wheels to prevent vehicle movement. Disconnect the main positive and negative cables at the batteries.

NOTE: If the batteries are over one year old, it is recommended to replace them as a set.

6. Thoroughly clean the batteries and battery compartment. Refer to *Cleaning* in this section for information regarding cleaning the batteries.

ACAUTION

Battery electrolyte will stain and corrode most surfaces. Immediately and thoroughly clean any surface outside of the battery that the battery electrolyte comes in contact with. Failure to clean may result in property damage.



- 7. Remove the battery hold downs.
- 8. Inspect the battery hold downs for corrosion. If any signs of corrosion are seen then the battery hold downs should be replaced.
- 9. Remove all battery jumpers from both posts of the battery or batteries being replaced.

NOTE: It is recommended to replace the battery jumpers when replacing the batteries.

10. Remove the batteries from the vehicle.

Do not leave cables on batteries that have been removed from the vehicle. Cables left on batteries could cause a short circuit resulting in battery explosion, severe bodily injury and/or property damage.

- 11. Inspect the battery compartment for signs of corrosion.
- 12. If minimal signs of corrosion are seen, then the damaged paint should be stripped off and the entire battery compartment prepped and repainted.
- 13. If there are excessive signs of corrosion, then it may be necessary to replace some of the frame members or completely rebuild the battery compartment.
- 14. Inspect the main positive and negative cables and terminals, charger cables and terminals and 12-volt tap wiring. If any of the terminals or wires show signs of corrosion, then they must be repaired or replaced.
- 15. Install the batteries in reverse order. Refer to the *Illustrated Parts List* for battery cable routing.
- 16. It is recommended to replace the battery terminal hardware when replacing the batteries.
- 17. Torque the terminal hardware to 7-8 ft.-lbs.
- 18. Tighten the hold downs so that the batteries are secure but not so tight as to deform the batteries.



When torquing battery hardware, use a backup wrench on the battery bolt and tighten the nut. Failure to use a backup wrench may damage the battery post.

19. Remove the blocks from the wheels and test drive.

Moist Charge Batteries

Explosive mixtures of Hydrogen gas are present within battery cells at all times. Do not work with or charge battery in an area where open flames (including gas furnace or water heater pilots), sparks, cigarettes, or any other sources of combustion are present. Always provide ample ventilation in rooms where batteries are being charged. Failure to do so may result in severe property damage and or serious

Battery electrolyte is poisonous and dangerous. It contains sulfuric acid. Avoid contact with skin eyes or clothing. Wear rubber gloves and safety glasses while servicing batteries. DO NOT INGEST! This may result in serious bodily injury.

A battery is a live electrical source. It cannot be disconnected or neutralized. Do not drop any tool or conductive object onto the battery. A conductive object that comes in contact with the battery terminals will initiate a short circuit of the battery. This could cause the battery to explode resulting in property damage and/or bodily injury.

Moist charged batteries are shipped without battery electrolyte. This allows for a much greater shelf life of the battery. Moist charged batteries must be filled with electrolyte and charged before putting into service. Battery electrolyte is a solution of acid and water that is formulated to be used in wet lead acid batteries and is available at most automotive parts distributors that carry batteries.

Do not operate or charge a vehicle equipped with moist charged batteries until the batteries have been filled with electrolyte and charged. Operating or charging moist charged batteries before filling and charging will damage the batteries resulting in premature failure of the batteries.


1. Make sure the key-switch is in the "OFF" position, then remove the key.

AWARNING

- 2. Place the forward-reverse switch in the center "OFF" position.
- 3. Set the park brake.
- 4. Place blocks under the front wheels to prevent vehicle movement.
- 5. Disconnect the main positive and negative cables at the batteries.

Maintenance, Service, and Repair

- 6. Fill all battery cells with electrolyte to the proper level.
- Thoroughly clean any spilled electrolyte from the batteries or the ground. Refer to *Cleaning the Batteries* for information on cleaning the batteries.
- 8. Reconnect the battery cables, connect the batteries to the charger and allow the charger to complete one charging cycle.
- 9. Remove the blocks from the wheels and test drive. The batteries are now ready to be put into service.

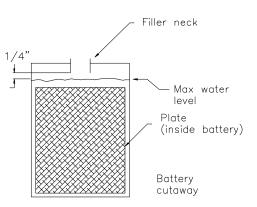



Battery electrolyte will stain and corrode most surfaces. Immediately and thoroughly clean any surface outside of the battery that the battery electrolyte comes in contact with. Failure to clean may result in property damage.

STORAGE AND RETURNING TO SERVICE

Storage

If the batteries are removed from the vehicle, do not place them directly on the ground, concrete or solid metal surface. It is recommended to store them on a wooden pallet or equivalent. Storing on the ground, concrete or solid metal surface will cause the batteries to discharge and may result in premature failure of the batteries.

Thoroughly clean the batteries and battery compartment. Refer to *Cleaning* in this section for information regarding cleaning the batteries.

Check the electrolyte level and charge the batteries. Refer to *Watering* in this section for information regarding checking the electrolyte level.

Store the vehicle or batteries in a cool, dry, well ventilated area.

If storing for more than one month, the batteries should be charged as follows:

Storage Temperature (F)	Charging Interval (months)
Over 60	1
Between 40 and 60	2
Below 40	6

Returning to Serv	<u>vice</u>
A WARNING	Explosive mixtures of Hydrogen gas are present within battery cells at all times. Do not work with or charge battery in an area where open flames (including gas furnace or water heater pilots), sparks, cigarettes, or any other sources of combustion are present. Always provide ample ventilation in rooms where batteries are being charged. Failure to do so may result in severe property damage and or serious
	Battery electrolyte is poisonous and dangerous. It contains sulfuric
A WARNING	acid. Avoid contact with skin eyes or clothing. Wear rubber gloves and safety glasses while servicing batteries. DO NOT INGEST! This may result in serious bodily injury.
A WARNING	A battery is a live electrical source. It cannot be disconnected or neutralized. Do not drop any tool or conductive object onto the battery. A conductive object that comes in contact with the battery terminals will initiate a short circuit of the battery. This could cause the battery to explode resulting in property damage and/or bodily injury.
	1. Make sure the key-switch is in the "OFF" position, then remove the key.
	2. Place the forward-reverse switch in the center "OFF" position.
	 Set the park brake. Place blocks under the front wheels to prevent vehicle movement.
	5. Disconnect the main positive and negative cables at the batteries.
	y clean the batteries and battery compartment. Refer to <i>Cleaning</i> in this section for n regarding cleaning the batteries.

Battery electrolyte will stain and corrode most surfaces. Immediately and thoroughly clean any surface outside of the battery that the battery electrolyte comes in contact with. Failure to clean may result in property damage.

- 7. Check the electrolyte level and charge the batteries. Refer to *Watering* in this section for information regarding checking the electrolyte level.
- 8. Test the batteries. Refer to *Testing* section for information on testing the batteries.
- 9. The batteries are now ready to be put back into service.

NNN TAYLOR



Table of Contents

Motor Controller

Remove/Install	2
Inspect	
Receptacles	2
Base Plate	
Terminal Ends	2
'R' Terminal	2
Repair/Programming	3
Programming	
Troubleshooting	3
Hardware Torque	





Motor Controller

REMOVE/INSTALL

NOTICE

Do not allow the wires to rotate while removing terminal hardware.

Internal electrical connection will be damaged if the terminal stud rotates.

NOTICE

Turn the start switch off BEFORE disconnecting the batteries. Disconnecting power from the controller while it is ON may corrupt the controller programming resulting in a fault 1.

It may be required to remove the control panel from the vehicle for this procedure.

<u>Remove</u>

- 1) Place the Forward/Reverse switch in the center "OFF" position (neutral).
- 2) Turn the Start switch OFF.
- 3) Set the park brake.
- 4) Place blocks under the front or rear wheels to prevent vehicle movement.
- 5) Disconnect the battery main positive and negative cables or disconnect the main battery plug.
- 6: While holding the wires so that they do not rotate, remove the terminal bolts.
- 7: Disconnect the logic connector.
- 8: Disconnect the can-bus connector.
- 9: Remove the four bolts holding the controller to the panel and remove the controller.
- Note: If a heat sink is installed, then these bolts may also hold the heat sink to the panel.

Install

- 1: Thoroughly clean the controller base, mounting plate, and heat sink.
- 2: Apply thermal transfer compound to the controller base and heat sink.
- 3: Install the controller to the mounting plate.
- 4: Attach the wires to the studs and torque per specification listed in the table at the end of this section.
- Note: DO NOT allow the wires to rotate while torquing the bolts (see notice above).
- 5: Install silicon dielectric grease (94-422-10, 5.3 ounce tube) into the two logic receptacles and reconnect the harnesses.
- 6: Reconnect the batteries and test drive.

INSPECT

Receptacles

The inside of each receptacle should be clean and free of any debris. Use aerosol electrical cleaner if required.

Base Plate

The base plate should be flat. If required, sand with 150 wet sandpaper to remove any raised areas.

Terminal Ends

The wire insulation at each terminal should be smooth and free of any sign of heat. Any indication of heat is a result of a loose connection at the terminal. This could have been a loose bolt or a faulty crimp. It is recommend to replace the cable terminal end.

Note: A loose bolt could result in damaging the terminal crimp.

<u>'R' Terminal</u>

Inspect the controller cover around the 'R' terminal. If the cover has melted around the stud, it is an indication that the vehicle was towed while the start switch was ON. The controller may be damaged due to the excessive current flowing through the 'R' terminal.



NOTICE

These motor controls are programmed to match the vehicle configuration.

DO NOT move a control to another vehicle unless the vehicle configurations are identical.

Any changes to the vehicle configuration may require reprogramming the controller.

Installing a controller that is not programmed correctly may result in damage to the controller or electrical system.

REPAIR/PROGRAMMING

NOTICE

The controller power base and logic are a matched set. DO NOT swap logics from one base to another as this may damage the logic or power base.

Repairs

There are no internally serviceable components in the motor speed controllers. If a controller is faulty then it must be replaced.

Note: Opening or disassembling a controller will void the controller warranty.

Programming

Taylor-Dunn does not support field modifications to the controller parameters.

Complete vehicle parameters are available by e-mail and can be uploaded to the controller using a laptop or PC with the PCpaK application and cable. Refer to the Tools section for part numbers.

If you have a special application that may require modified parameters, contact your local authorized Taylor-Dunn distributor to submit a request to the factory. Note: There may be a fee to created a custom parameter set.

Instructions for obtaining parameter sets and how to upload to the controller are included with the application.



TROUBLESHOOTING

Troubleshooting control system is not included in this manual.

All electrical troubleshooting information is included in a separate manual "Troubleshooting Electric Vehicles". part number M7-001-69.

This manual was provided on the original vehicle CD. A hard copy can be purchased from your authorized Taylor-Dunn distributor or can be downloaded from the Taylor-Dunn web site.





HARDWARE TORQUE

If hardware is not listed here, refer to standard torque values in the appendix.

Description	Inch Pounds	Newton Meters	
Terminal stud	38-44	4.29-4.97	

Notes:




The vehicle wiring diaram is too large to be legible when printed at this size. A full size diagram (22×16) is inculded on the CD in PDF format. You can access the diagram from a button on the CD menu.

The diagram #'s are:

B 2-10: SCH-00009 B 2-00: SCH-00010


Contents

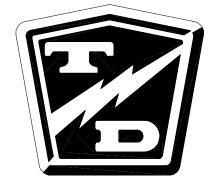

Wire Diagrams


T/

SCH-00010 01/10/2007

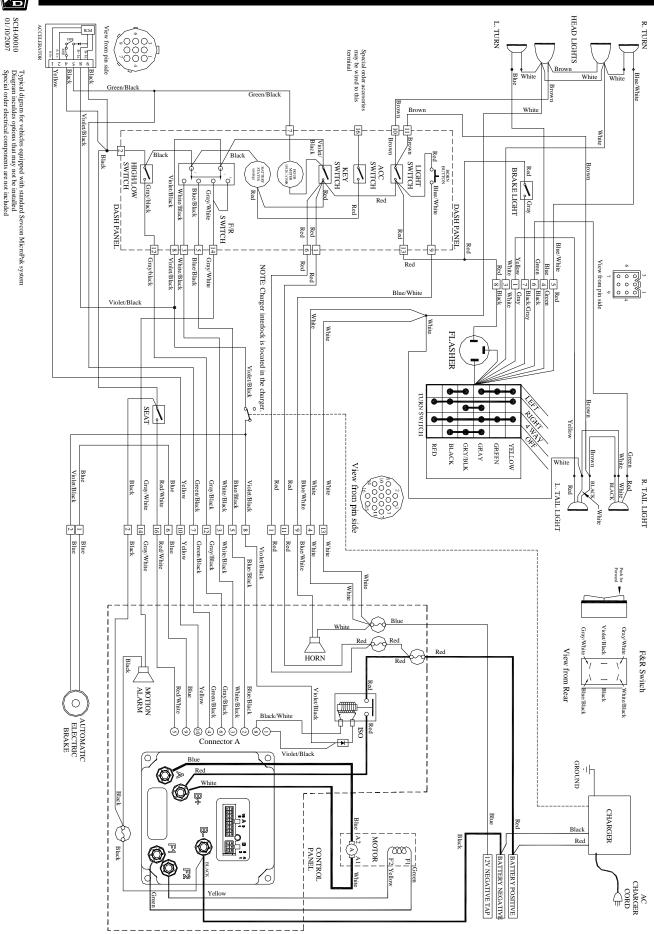

Model B 2-00

Wire Diagrams Page 2

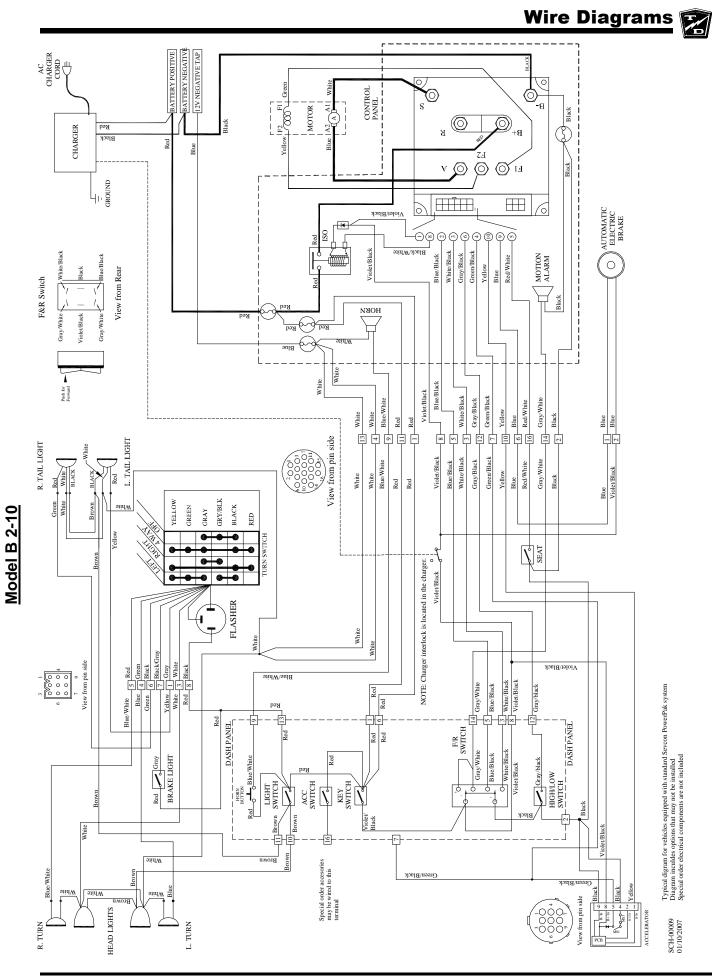

NNN TAYLOR



Illustrated Parts

TABLE OF CONTENTS


Front Axle	.2
Front Brakes	.4
Steering Linkage	.6
Steering Column	.8
Steering Gear	.10
Front Suspension	.10
Rear Suspension, B 2-10	.12
Rear Suspension, B 2-00	.12
Front Shocks Option	.14
Transmission, B 2-00	.16
Transmission Primary Gear Case, B 2-10	.18
Transmission Differential Case, B 2-10	.20
Rear Axle, B 2-10	.22
Rear Axle and Brakes, B 2-00	.22
Rear Brakes, B 2-10	.24
Motor	.26
Master Cylinder and Linkage	
Hydraulic Brake Lines	.30
Brake linkage (parking brake), B 2-10	.32
Brake linkage (parking brake), B 2-00	.34
Wheels and Tires	.36
Instrument Panel Up To Serial	
Number 179666	.38
Instrument Panel Starting Serial	
Number 179667	
Resetting the Smart View Display	
Speed Control Panel	.40

Chargers	41
Miscellaneous Electrical	
Batteries	
Seat Cushions, Lights, Deck and Frame	50
Decals	52
Fixed 2nd and 3rd Seat Option	54
Hitches	54
Cab and Cowl Windshield Frame Option	56
Foldaway 2nd Seat Option	58
Dome Light Option	58
Windshield Wiper Option	58
Cab Doors	60
Mirrors	62
Strobe Light	
Sun Tops	64
Automatic Driver Seat Brake, B 2-10	66
Optional Deckboards	68
Tool Box Doors Option	70
Rear Shocks (optional)	71
Stake Side Options	
Cargo Box Option	74
12" Side Panel Option	
Ambulance Deck and Top	76






Front Axle

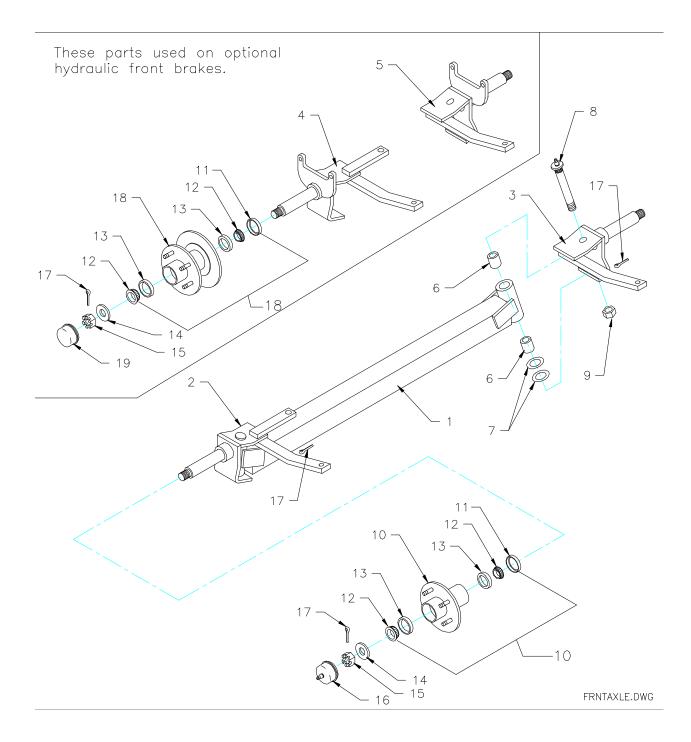


Item No.	Part No.	Axle Assembly, Front Description	Qty
1	15-210-00	Front Axle Beam	1
2	14-210-98	Steering Yoke, Left	1
3	14-210-99	Steering Yoke, Right	1
4	14-210-88	Steering Yoke, Hydraulic Disc, Left (Optional)	1
5	14-210-89	Steering Yoke, Hydraulic Disc, Right (Optional)	1
6	32-240-55	Bushing Metal Backed Teflon	4
7	97-180-55	Thrust Washer, Metal Backed Teflon, 5/8"	4
8	21-020-15	King Pin	2
9	88-189-81	Lock Nut 5/8" N/C	2
10	12-124-00	Hub, Wheel, 5 Stud (Includes # 11,12,13)	2
11	45-338-00	Grease Seal	2
12	80-017-00	1" ID Tapered Bearing	2
13	80-103-00	Race Tapered Bearing	2
14	88-228-61	Washer, 3/4" SAE	2
15	88-239-85	¾ NF Hex Slotted Nut	2
16	92-104-00	Dust Cap W/Grease Fitting	2
17	88-527-14	1/8 X 1-1/2 Steel Cotter Pin	4
18	12-158-10	Hub, Wheel, 5 Stud with Disc (Includes # 11,12,13)	2
19	92-104-01	Dust Cap	2



Front Brakes

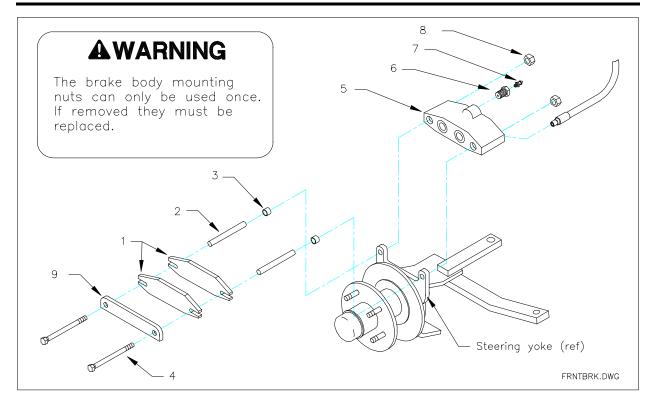

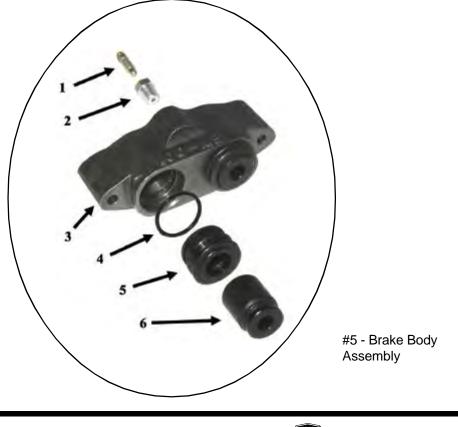


		FRONT BRAKES	
ITEM #	PART #	DESCRIPTION	QTY
1	41-348-70	Pad, Disc Brake	4
2	41-348-57	Spacer, Disc BrakePlate, Secondary, Hydraulic Disc	2
3	32-240-41	Bushing Mounting Bracket	4
4	88-067-21	Brake Body Bolt	4
5	41-350-70	Hydraulic Brake Body	2
6	99-588-01	Bleeder Screw Adapter	2
7	99-588-00	Bleeder Screw	2
8	88-069-82	1/4 NC Locknut Gr. 8 Do Not Reuse	4
9	41-350-51	Plate, Secondary, Hydraulic Disc	2

		Brake Body	
ITEM #	PART #	DESCRIPTION	QTY
1	99-588-00	Bleeder screw	2
2	99-588-01	Bleeder adapter	2
3	41-350-43	Brake body, left	1
3	41-350-44	Brake body, right	1
4	80-713-00	O-ring	4
5	41-350-09	Boot	4
6	41-350-10	Piston	4




Steering Linkage

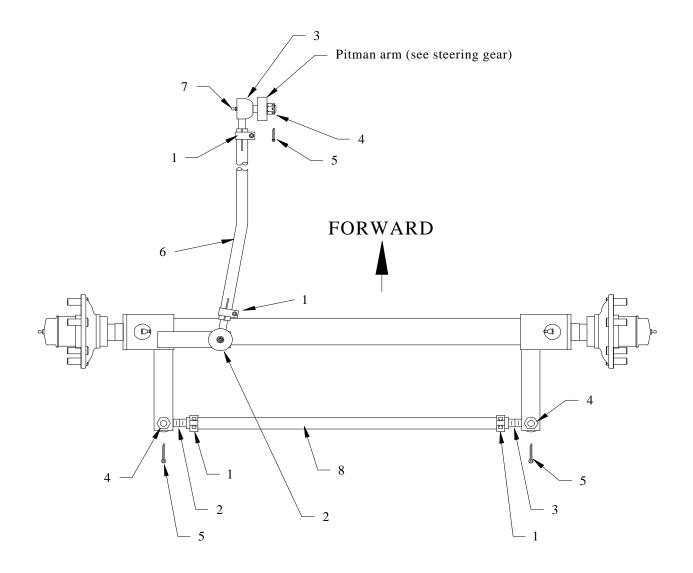

		Steering Linkage	
ITEM #	PART #	DESCRIPTION	QTY
1	86-510-00	Clamp	4
2	86-501-98	Ball joint, left	2
3	86-501-99	Ball joint, right	2
4	88-159-85	Hex castle nut	4
5	88-527-11	1/8 x 1 Cotter pin	4
6	18-057-11	Drag link	1
7	87-074-00	Grease fitting	4
8	18-041-00	Steering linkage	1




Steering Column

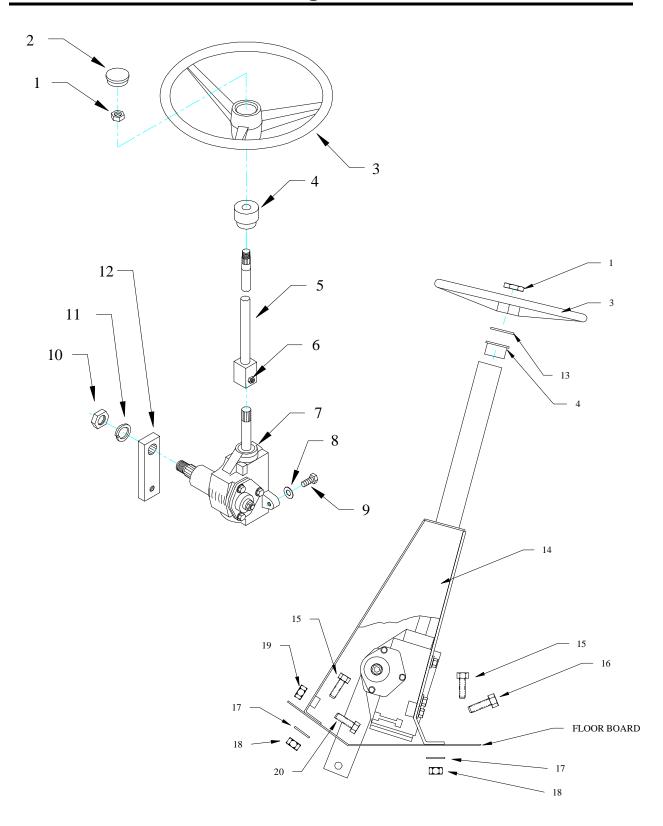


Steering Column			
ITEM #	PART #	DESCRIPTION	QTY
1	88-199-82	5/8NF Hex nut	1
2	19-011-25	Steering wheel cap	1
3	19-011-20	Steering wheel	1
4	80-400-10	Upper column bushing, used before April, 2002	1
4	32-248-10	Upper column bushing, used after April, 2002	1
5	20-031-63	Steering shaft (incle 6a and 6b)	1
6	88-081-14	5/16NF x 1-1/2 Hex bolt, grade 8 (Pinch bolt)	1
6a	88-089-84	5/16NF Hex locknut, grade 8 (Pinch bolt nut)	1
7	18-308-21	Steering gear assembly	1
8	88-128-62	7/16 Split lock washer	3
9	88-120-15	7/16NC x 1 Hex bolt	3
10	88-279-82	7/8NF Thin pattern hex nut	1
11	88-268-62	7/8 Split lock washer	1
12	18-111-30	Pitman arm	1
13	97-200-00	Dust washer	1
14	00-210-17	Stereing column, used before April, 2002	1
14	00-210-26	Stereing column, used after April, 2002	1
15	88-100-09	3/8NC x 3/4 Hex bolt	6
16	88-151-13	1/2NF x 1-1/4 Hex bolt, grade 5	1
17	88-108-60	3/8 Cut flat washer	6
18	88-109-81	3/8NC Lock nut	6
19	88-159-82	1/2NF Hex jam nut	2
20	88-151-16	1/2NF x 2 Hex bol, grade 5t	1



Steering Gear

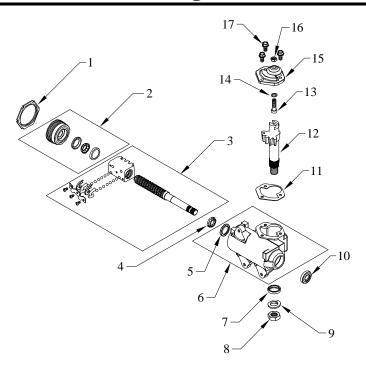

Front Suspension

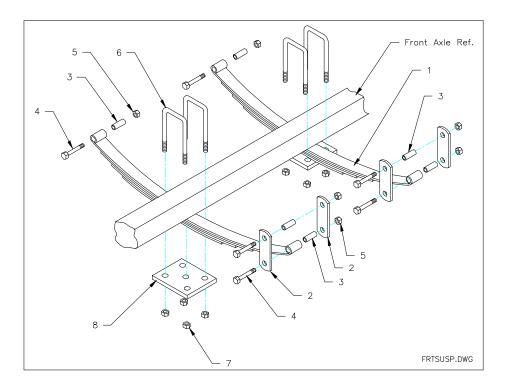


	Steering Gear		
ITEM #	PART #	DESCRIPTION	QTY
1	18-308-70	Locknut	1
2	18-308-71	Adjuster assembly	1
3	18-308-72	Worm assenbly	1
4	18-308-23	Upper worm bearing	1
5	18-308-22	Upper worm bearing race	1
6	18-308-77	Housing	1
7	18-308-78	Seal, pitman shaft	1
8	18-308-80	Nut, pitman shaft	1
9	18-308-81	Lock washer	1
10	18-308-79	Seal, input shaft	1
11	18-308-82	Gasket	1
12	18-308-76	Pitman shaft	1
13	18-308-75	Gear lash adjuster	1
14	18-308-85	Shim kit	1
15	18-308-84	Side cover	1
16	18-308-86	Jam nut	1
17	18-308-83	Bolt, side cover	3


		FRONT SUSPENSION	
ITEM #	PART #	DESCRIPTION	QTY
1	85-512-10	Leaf Spring	2
2	16-871-02	Spring Shackle	4
3	32-213-00	Bushing, 3/4" OD X 1.656" Long	6
4	96-248-00	Shackle Bolt 9/16" NF	6
5	88-169-82	Lock Nut, 9/16" NF, grade C	6
6	96-123-00	U-Bolt Length 2"	4
7	88-109-81	Lock Nut 3/8 NC	8
8	16-865-02	Spring Plate	2



Rear Suspension, B 2-10

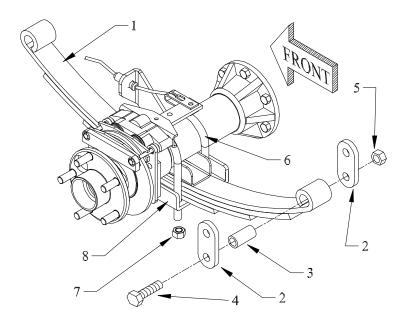

Rear Suspension, B 2-00

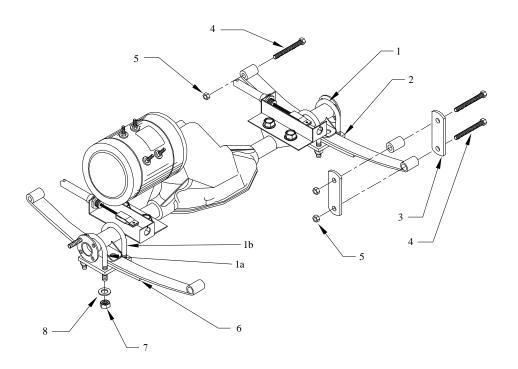


	Rear Suspension, B 2-10		
ITEM #	PART #	DESCRIPTION	QTY
1	85-513-10	Spring	2
2	16-871-02	Spring hanger	4
3	32-213-00	Spring bushing	6
4	96-248-00	Hex bolt	6
5	88-169-82	Hex nut	6
6	96-114-00	U-bolt	4
7	88-159-84	Hex nut	8
8	16-861-43	Spring plate, right	2
0	16-861-42	Spring plate, left	1

	Rear Suspension			
ITEM #	PART #	DESCRIPTION	QTY	
1a	96-123-54	U-bolt, bent	2	
1b	96-123-53	U-bolt	2	
2	16-865-02	Plate	2	
3	16-871-02	Hanger	4	
4	96-248-00	Bolt	6	
5	88-169-82	Nut	6	
6	85-513-05	Spring	2	
7	88-109-81	Nut	8	
8	88-108-60	Washer	8	




Front Shocks Option

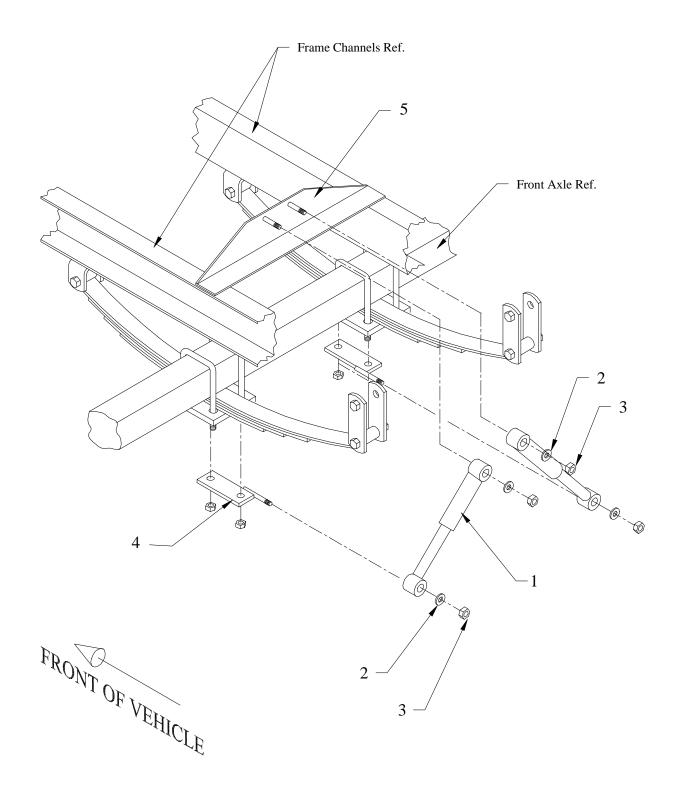

		Front Shocks	
ITEM #	PART #	DESCRIPTION	QTY
1	86-602-00	Shock	2
2	88-128-60	7/16 Flat washer	4
3	88-129-81	7/16NC Hex lock nut	4
4	86-602-13	Lower bracket	2
5	86-602-25	Upper bracket (bolt on replacement)	2




Transmission, B 2-00

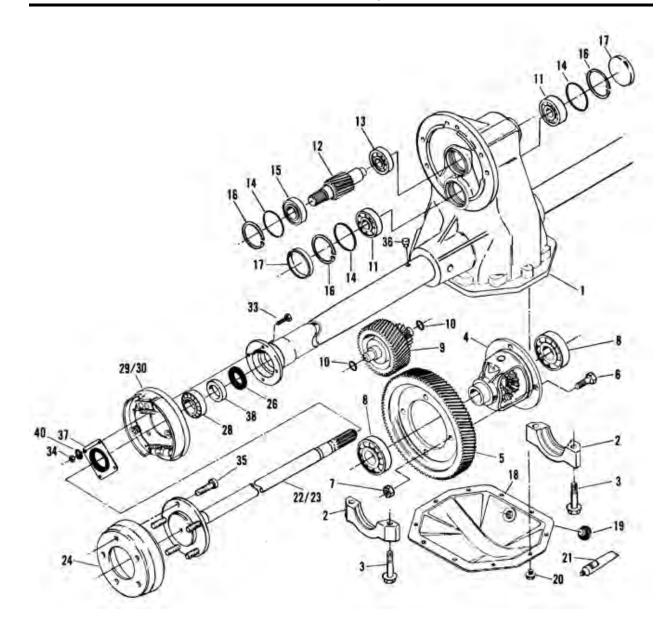

tem No.	Part No.	Transmission, Spec #012AJ309-1 Description	Qty
1	*	Housing	1
2		Bearing cap (included with #1)	2
3	96-330-10	Bolt	4
4	*	Carrier assembly	1
5	**	Final gear	1
6	*	Bolt	4
7	*	Nut	4
8	80-480-00	Bearing	2
9	**	Shaft and gear assembly	1
10	80-715-00	O-ring	2
11	66-610-35	Bearing	2
12	***	Input shaft	1
13	80-480-15	Bearing	1
14	80-715-10	O-ring	3
15	80-480-10	Bearing	1
16 Not	88-840-12 45-100-00	Snap ring Input shaft seal	3 1
Shown	43-100-00	input shalt seal	I
17	41-973-00	Plug	2
18	66-611-15	Cover	1
19	41-127-94	Plug	1
20	66-610-68	Screw	10
21	94-430-04	Sealer	-
22	-	See rear axle	
23	-	See rear axle	
24	-	See rear brakes	
26	45-303-00	Seal	2
28	80-505-10	Bearing	2
29	41-347-28	Complete brake assembly (left)	1
30	41-347-29	Complete brake assembly (right)	1
33	66-610-79	Screw	8
34	66-610-80	Nut	8
35	66-610-28	Wheel stud	10
36	-	Vent	-
37	45-303-10	Seal	2
38	32-509-10	Retaining ring	2
40	66-610-72	Washer	8
*	Not available at tin	ne or printing	
**	*	Gear kit (includes 5, 9, 12)	





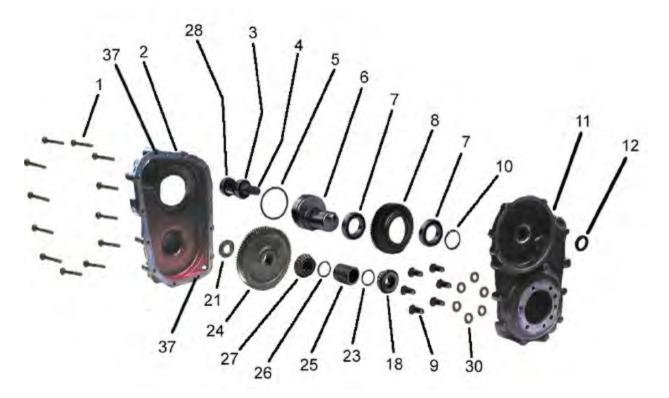


Note 1: Spacer 23 is available in increments of .05mm starting at 3.9mm. 3.9mm spacer is part number GT-3287213. Add 10 to the part number for every 0.05mm over 3.9. For example, if 4.55mm is needed: 4.55-3.9 = .65mm over, 0.65/.05 = 13, 13*10 = 130. Part number for 4.5mm spacer is 3287213+130 = 3287343.

		Transmission Gear Case	
ITEM #	PART #	DESCRIPTION	QTY
1	GT-71682	M8 x 60 bolt	12
2	GT-3287563	Gear case cover	1
3	GT-71259	Bearing	1
	GT-3287513	Input shaft, 30:1	0 or 1
	GT-3287523	Input shaft, 24:1	0 or 1
4	GT-3287533	Input shaft, 18:1	0 or 1
	GT-3287543	Input shaft, 12:1	0 or 1
5	GT-71982	O-ring	1
6	GT-3287503	Eccentric shaft	1
7	GT-72005	Bearing	2
8	GT-3287493	Idler gear	1
9	GT-70302	M10 x 30 Bolt	6
10	GT-71715	Snap ring	1
11	GT-3287553	Gear case housing	1
12	GT-72019	Seal	1
18	GT-71979	Bearing	1
21	GT-3273633	Pinion nut	1
23	See Note 1, previous page	Spacer	1
	GT-3287453	Output gear, 30:1	0 or 1
	GT-3287463	Output gear, 24:1	0 or 1
24	GT-3287473	Output gear, 18:1	0 or 1
	GT-3287483	Output gear, 12:1	0 or 1
	GT-328	Spacer, 46.100mm	1
	GT-328	Spacer, 46.100mm	0 or 1
25	GT-328	Spacer, 46.125mm	0 or 1
	GT-328	Spacer, 46.150mm	0 or 1
	GT-328	Spacer, 46.175mm	0 or 1
	GT-3287903	Shim, 0.100mm	0 or 1
	GT-3287883	Shim, 0.400mm	0 or 1
	GT-3287893	Shim, 0.500mm	0 or 1
26	GT-3287853	Shim, 0.600mm	0 or 1
	GT-3287863	Shim, 0.700mm	0 or 1
	GT-3287873	Shim, 0.800mm	0 or 1
27	GT-71068	Bearing	1
28	GT-72022	Bearing	1
30	GT-70299	10mm Washer	6
37	GT-3252633	Dowel pin	2





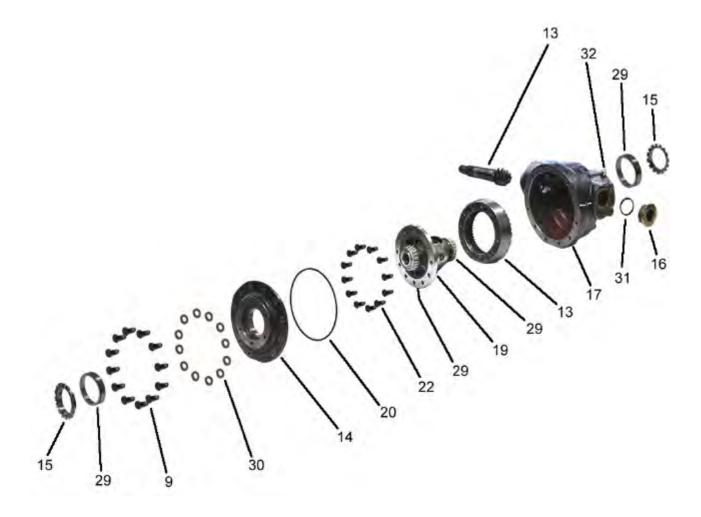


		Transmission Differential Case	
ITEM #	PART #	DESCRIPTION	QTY
9	GT-70302	M10 x 30 Bolt	12
13	GT-3287183	Ring and pinion gear set	1
14	GT-3297193	Differential case cover	1
15	GT-3287133	Adjusting ring	2
16	GT-70417	Fill/Level plug	1
17	GT-3287113	Differential housing	1
19	GT-3287143	Differential case	1
20	GT-72013	O-ring	1
22	GT-71896	M10 x 25 Bolt	12
29	GT-71978	Bearing and race	2
30	GT-70299	10mm Washer	12
31	GT-71881	Seal	1
32	GT-70052	Vent	1



Rear Axle, B 2-10



Rear Axle and Brakes, B 2-00

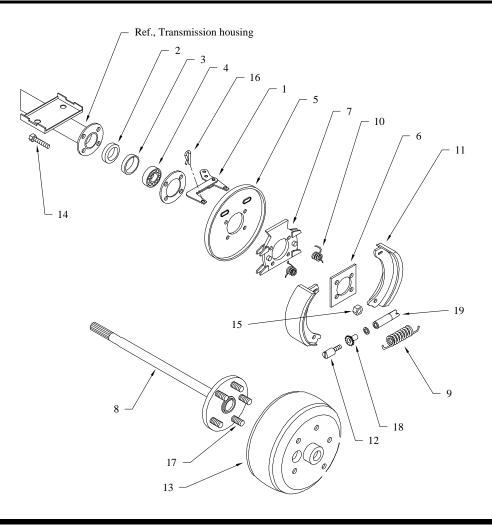

		Rear Axle, B 2-10	
Item No.	Part No.	Description	Qty
1	41-154-20	Axle shaft	2
2	80-505-20	Bearing	2
3	41-490-11	Disc brake rotor	2
4	41-172-21	Hub	2
5	88-268-63	Flat washer	2
6	88-268-30	7/8-14 x 1.5 Bolt, grade 5	2
7	96-329-10	Wheel stud	10
Not sho	NWD		
Not one	92-104-10	Hub cover	2
	41-290-44	Axle housing	2
	89-113-30	M12 x 1.75 x 30mm Hex bolt (axle housing to center sect	ion) 6
	89-113-60	M12 Split lock washer (axle housing to center section)	6
Rea	r Axle and Bra	kes, B 2-00 (Transmission, Spec #012AJ3	09-1)
Item No.	Part No.	Description	Qty
1	41-347-15	Actuator, park brake	2
2	45-303-00	Seal	2
3	32-509-10	Bearing retainer	2
4	80-505-10	Bearing/race assembly	2
5	41-347-00	Backing plate	-
6	45-303-10	Seal	2
7	41-347-36	Spider, includes wheel cyninder	2
8	41-171-10	Axle shaft (right)	1
	41-170-10	Axle shaft (left)	1
9	85-215-00	Spring, extension	2
10	85-411-00	Spring, red	2
	85-411-15	Spring, green	2
11 12	41-635-00	Brake shoe (set of 2 for 1 wheel)	2
12	41-347-30	Cap, adjuster Brake drum	2
-	41-516-00 *		8
14 15	*	Bolt, axle Nut, axle	o 8
16	41-347-34	Clip, retaining	2
17	*	Wheel stud	10
18		Star wheel	2
	41-3.47-31		2
19 *	41-347-33	Base, adjuster	۷
	Not available at time	e or printing	



Rear Brakes, B 2-10




Rear Brakes				
ITEM #	PART #	DESCRIPTION	QTY	
1	88-067-21	Hex bolt, grade 8	4	
2	41-350-51	Secondary plate	2	
3	41-348-70	Brake pad	4	
4	41-348-57	Spacer	4	
5	32-240-41	Bushing	4	
6	41-350-28	Mounting bracket	2	
7	96-327-10	Hex bolt with thread locking compund	8	
8	41-350-68	Brake body assembly	2	
9	88-840-11	Retaining ring	2	
10	See below	Brake bleeder	2	
11	32-220-03	Bushing	2	
12	41-350-56	Park brake pin	2	
13	41-350-12	Park brake lever bracket	2	
14	41-350-52	Clevis pin	2	
15	41-350-53	Brake arm	2	
Not shown	02-380-78	Extension, brake arm	2	
16	88-069-82	1/4NC locknut, grade 8	4	

		Brake Body	
ITEM #	PART #	DESCRIPTION	QTY
1	99-588-00	Bleeder screw	2
2	99-588-01	Bleeder adapter	2
3	41-350-43	Brake body, left	1
3	41-350-44	Brake body, right	1
4	80-713-00	O-ring	4
5	41-350-09	Boot	4
6	41-350-10	Piston	4





Motor

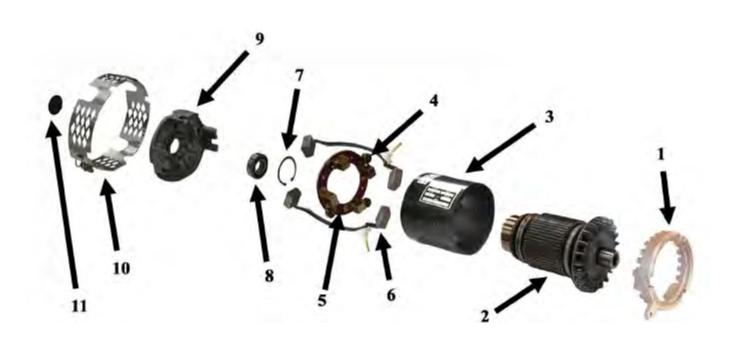

				Motors,	Motors, Separately Excited Field	Field		
					Motor Spec # Motor Part #	pec # 2art #		
ITEM #	DESCRIPTION	$\frac{\text{DV}1-4002}{70-054-40^{1}}$	XP1789 or DY24001 70-054-41	DV1-4003 70-057-40	XP-1786 or DD3-4004 70-052-40	203-21-4001 or XP1820A 70-072-41		
1	Front housing	70-421-10	70-421-10	70-421-10	*	*		
2	Armature	70-400-00	70-400-00	70-400-10	*	*		
3	Field assembly	70-209-30	*	70-209-40	*	*		
4	Brush spring	70-412-20	70-412-20	85-403-00	70-412-20	85-403-00		
5	Brush holder	70-170-00	70-170-00	70-173-00	70-170-00	70-173-00		
9	Brush pair	70-109-00	70-109-00	70-170-30	70-109-00	70-170-10		
7	Bearing retainer	70-417-00	70-417-00	70-417-00	70-417-00	*		
8	Bearing	80-212-00	80-212-00	80-212-00	80-212-00	*		
6	Rear housing	70-421-20	70-421-20	70-421-30	70-421-20	*		
10	Brush cover	70-421-00	70-421-00	70-421-40	70-421-00	*		
11	Dust cap	98-930-00	95-930-00	95-930-00	95-930-00	-		
Not shown	1-1/8" lg. grade 8 Mounting bolt	88-067-17	88-067-17	88-067-17	88-067-17			
	2" lg. Grade 8 mounting bolt	88-067-22	88-067-22	88-067-22	88-067-22	I		
*		Not available at time of printing	ne of printing					
Note 1:		The original motor The 70-054-40 mot have about a 15% r Please contact Tayl	provided under part number tor can be directly replaced v eduction in top speed. To tal lor-Dunn [®] Manufacturing foi	70-054-40 has be vith the 70-054-41 ke full advantage i r details on returni	The original motor provided under part number 70-054-40 has been discontinued. It has been replaced I The 70-054-40 motor can be directly replaced with the 70-054-41 motor. The 70-054-41 motor will per have about a 15% reduction in top speed. To take full advantage of the increased performance of the 70 Please contact Taylor-Dunn [®] Manufacturing for details on returning the controller for re-programming.	placed by 70-054-41. The 70-054-41 will perform with the original parame f the 70-054-41 motor, new parameter mming.	The original motor provided under part number 70-054-40 has been discontinued. It has been replaced by 70-054-41. The 70-054-41 motor has slightly more power & torque. The 70-054-40 motor can be directly replaced with the 70-054-41 motor. The 70-054-41 motor with the original parameters in the Sevcon [®] controller; however the vehicle will have about a 15% reduction in top speed. To take full advantage of the increased performance of the 70-054-41 motor, new parameters must be programmed into the Sevcon [®] controller. Please contact Taylor-Dunn [®] Manufacturing for details on returning the controller for re-programming.	le will er.

Master Cylinder and Linkage

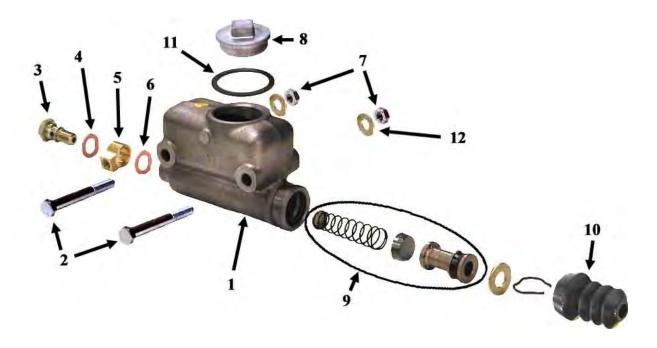


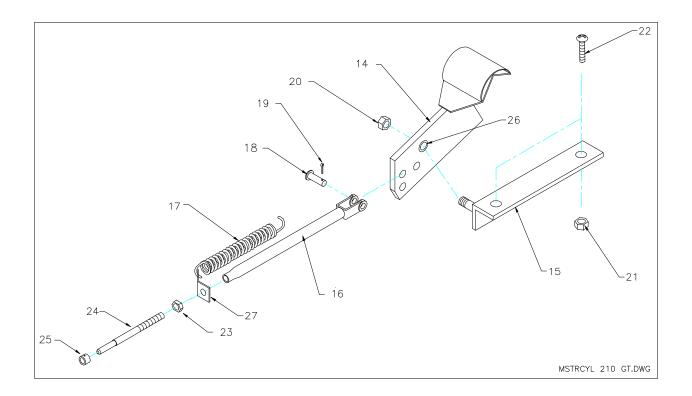


		Master Cylinder and Linkage	
ITEM #	PART #	DESCRIPTION	QTY
1	99-510-02	Master cylinder assembly	1
2	88-101-20	Hex bolt	2
3	See brake lines	Fitting	
4	See brake lines	Washer	
5	See brake lines	Fitting	
6	See brake lines	Washer	
7	88-109-81	Hex lock nut	2
8	99-510-52	Сар	1
9	99-510-61	Rebuild kit for 1" bore	1
10	99-510-51	Boot	1
11	99-510-53	Gasket	1
12	88-108-60	flat washer	2
13	-	-	1
14	05-210-97	Brake pedal	1
15	00-210-21	Mounting bracket	1
16	00-210-08	Master cylinder push rod1	1
17	85-233-00	Spring	1
18	96-772-00	Clevis pin	1
19	88-527-11	Cotter pin	1
20	88-109-81	Hex nut	1
21	88-069-81	Hex nut	2
22	88-065-09	Hex bolt	2
23	88-119-80	Hex nut	1
24	50-009-00	Master cylinder pushrod2	1
25	17-104-00	Collar	1
26	32-240-40	Bushing	1
27	06-210-03	Spring clip	1



Hydraulic Brake Lines

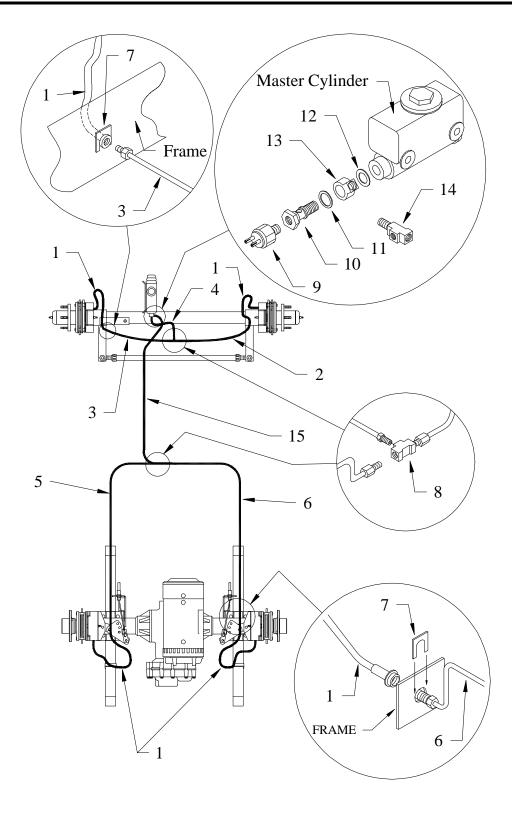


	Hydraulic Brake Lines					
ITEM #	PART #	DESCRIPTION	QTY			
1	99-580-20	Brake hose, B 2-10 front and rear, B 2-00 front	2 or 4			
1	99-580-10	Brake hose, B 2-00 rear	2			
2	99-603-53	Brake line, front right	1			
3	99-603-53	Brake line, front left	1			
4	99-603-54	Brake line, front	1			
5	99-605-55	Brake line, rear left	1			
6	99-605-56	Brake line, rear right	1			
7	99-576-00	Hose clip	4			
8	99-564-00	T-fitting	2			
9	71-110-00	Brake light switch	1			
10	99-578-00	Master cylinder fitting	1			
11	99-572-00	Copper washer	1			
12	99-571-00	Copper washer	2			
13	99-566-00	Banjo fitting	1			
14	99-559-00	T-fitting (front brake only)	1			
15	99-607-51	Brake line, rear				

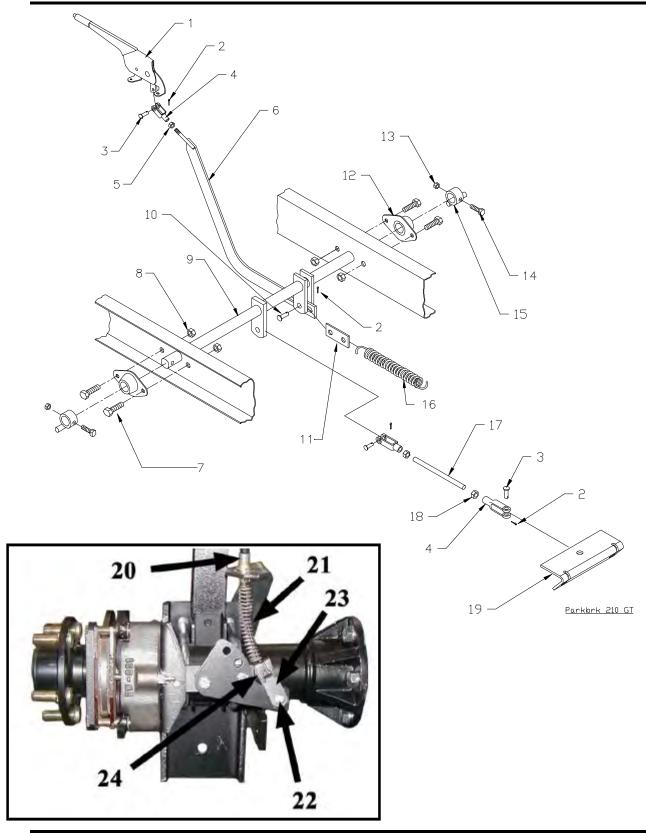

Brake linkage (parking brake), B 2-10

PARK BRAKE LINKAGE				
ITEM #	PART #	DESCRIPTION	QTY	
1	51-344-80	Park Brake	1	
2	88-517-09	Cotter Pin	4	
3	96-773-00	Clevis Pin, 5/16	3	
4	96-763-00	Clevis	3	
5	88-089-80	5/16 Hex Nut	2	
6	05-210-86	Hand Brake Bar	1	
7	88-100-09	3/8 X 3/4 NC Bolt	4	
8	88-109-81	3/8 NC Hex Lock Nut	4	
9	06-210-11	Brake Cross Shaft	1	
10	96-772-00	Clevis Pin, 3/8	1	
11	02-210-72	Bracket, Return Spring	1	
12	80-410-20	Bolt Flange Brake Shaft	2	
13	88-069-81	1/4 NC Lock Nut	2	
14	88-060-14	1/4 X 1-1/2" NC Bolt	2	
15	00-210-05	Brake Rod Rotor	2	
16	85-295-00	Return Spring	1	
17	50-002-01	Threaded Brake Rod	1	
18	88-099-80	5/16 Hex Nut	2	
19	01-204-32	Brake Equalizer	1	
20	96-826-12	Park brake cable	2	
21	85-125-00	Spring	2	
22	96-773-00	Clevis pin	2	
22	88-517-11	Cotter pin	2	
23	96-826-09	Cable lock	2	
24	96-754-00	Clevis	2	
Not	41-350-72	Support, brake arm	1	
Shown	41-350-73	Trim, brake arm Support	1	



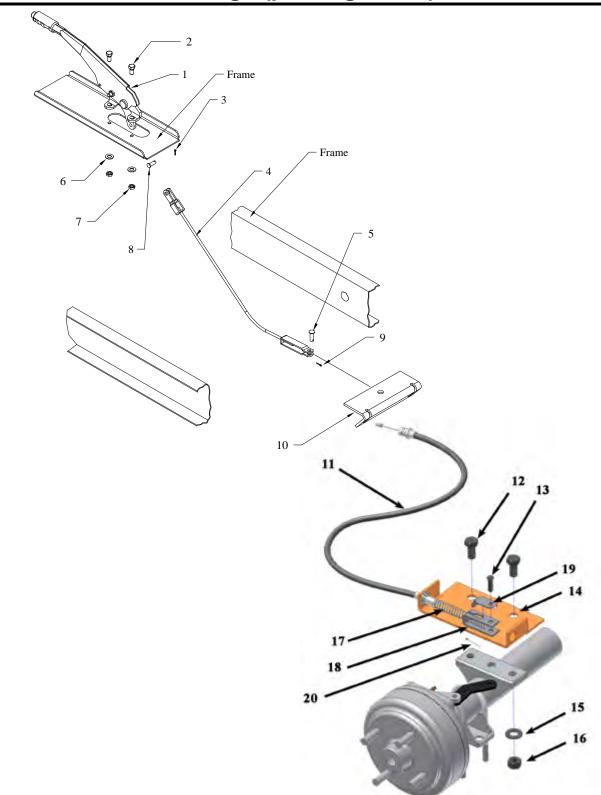


Brake linkage (parking brake), B 2-00

	Brake Linkage, B 2-00				
ITEM #	PART #	DESCRIPTION	QTY		
1	51-344-80	park brake handle	1		
2	88-080-11	Bolt	2		
3	88-517-09	Cotter pin	1		
4	96-813-00	Cable	1		
5	96-772-00	Clevis pin	1		
6	88-088-61	Washer	2		
7	88-089-81	Nut	2		
8	96-772-00	Clevis pin	1		
9	88-517-09	Cotter pin	1		
10	01-204-32	Equilzer	1		
11	96-826-12	Cable	2		
12	88-140-11	Bolt	4		
13	96-773-00	Clevis pin	2		
14	01-200-49	Cable mount	2		
15	88-148-61	Flat washer	4		
16	88-149-81	Lock nut	4		
17	85-125-00	Spring, cable	2		
18	96-754-00	Clevis	2		
19	96-826-09	Cable lock	2		
20	88-527-11	Cotter pin	2		




Wheels and Tires

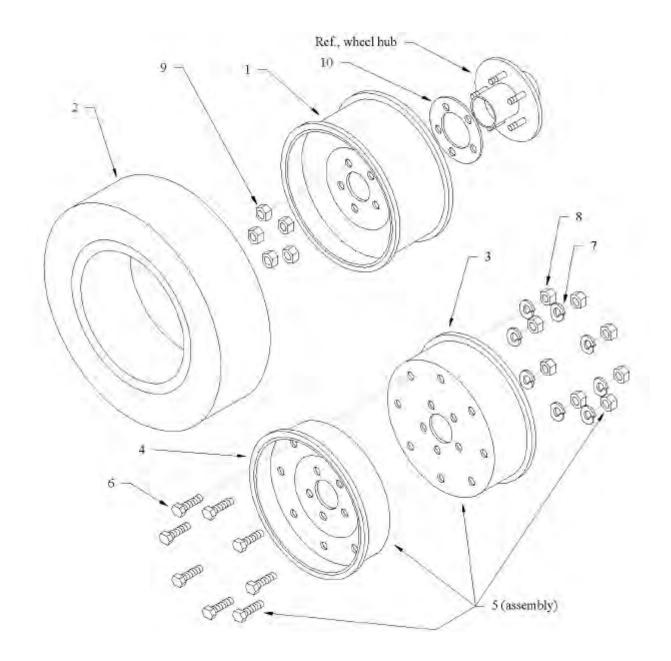


		Wheels and Tires
ITEM #	PART #	DESCRIPTION
1	Wheels	
	12-012-00	5 x 8" Tubeless
	12-020-00	8.5 x 8 Tubeless
	12-050-00	12-1/8 Diameter Cast Iron
2	Tires	
	10-075-00	4.80 x 8 LR B Pneumatic
	10-076-00	4.80 x 8 LR C Pneumatic
	10-081-00	5.70 x 8 LR B Pneumatic
	10-082-00	5.70 x 8 Extra Grip
	10-083-00	5.70 x 8 LR C
	10-093-00	8.50 x 8 LR B
	10-091-10	8.50 x 8 Knobby
	10-092-00	8.50 x 8 LR C
	10-086-00	5.00 x 8 Man-Toterswith lugs (soft solid)
	10-264-00	20 x 8 x 10 LR E
	10-250-00	16 x 4 x 12 Solid rubber
	Split Rim Wheels	
3	12-041-12	Inner Wheel (2.5 bead)
4	12-041-13	Outer Wheel (2.5 bead)
5	12-041-00	Wheel Assembly, 2.5 bead width (includes #3, #4, #6, #7, #8)
3a	12-042-12	Inner Wheel (12-bolt)
4a	12-042-13	Outer Wheel (12-bolt)
5a	12-042-00	Wheel Assembly, 3.75 bead width (includes #3a, #4a, #6, #7, #8
6	88-110-09	3/8 x 3/4-NF Hex Bolt, grade 5
7	88-109-62	3/8 Split Lock Washer
8	88-119-80	3/8-NF Hex Nut
9	97-236-00	Wheel Nut
Not Shown	13-989-00	Valve stem, tubless tire only
Not Shown	11-041-00	8.50 x 8 Tube
Not Shown	11-040-00	5.70 x 8 Tube
	11-030-00	4.80 x 8 Tube
	Tire and Wheel Assemblie	
	13-734-00	4.80 x 8 LR B Pneumatic
	13-734-11	4.80 x 8 LR B Split Rim Pneumatic
	13-739-10	4.80 x 8 LR C Split Rim Pneumatic
	13-952-10	16 x 4 x 12 Solid Rubber, Cast Iron Wheel
	13-742-00	5.70 x 8 LR B Pneumatic
	13-742-40	5.70 x 8 Man-Toter
	13-742-11	5.70 x 8 Split Rim
	13-746-10	8.50 x 8 Pneumatic
	13-746-15	20 x 8 x 10 8-ply

Instrument Panel Up To Serial Number 179666

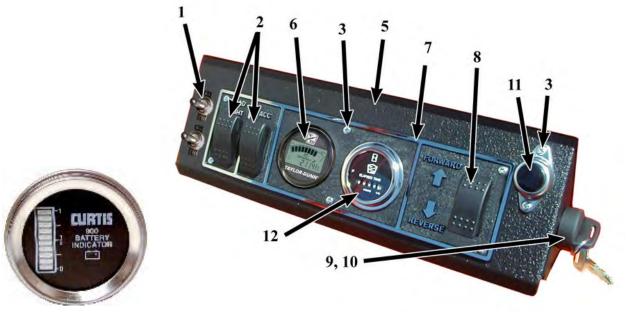

#6- Battery Gauge, Bargraph

Instrument Panel Starting Serial Number 179667

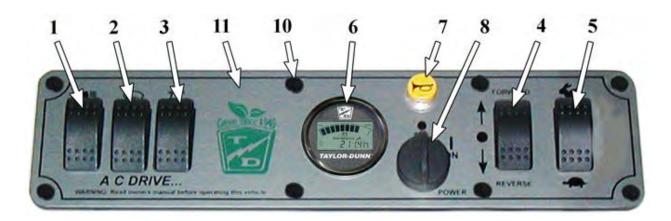

Resetting the Smart View Display

The meter should only be reset after the preventative maintenance has been performed. Taylor-Dunn[®] part number 62-027-40 Hand set (available with instructions as part number 62-027-61) must be used to reset the meter. Refer to the handset instructions (D0-100-08) for information on the procedure to reset the display.

		Instrument panel (up to 179666)	
Item No.	Part No.	Description	Qty
1	71-100-00	Auxiliary switches	0, 1, 2
2	71-039-11	Auxiliary switches	0, 1, 2
3	88-817-07	Screw	6
4	-	-	-
5	01-200-09	Console	1
6	74-010-00	Smart View gauge (shoen)	0, 1
	74-009-48	Battery Gauge, bar graph	0, 1
7	94-304-13	Dash panel	1
8	71-039-02	Forward/reverse switch	1
9	71-120-10	Key Switch	1
10	71-119-99	Spacer, key switch	1
11	71-501-00	Horn Switch	1
12	74-000-00	Hour meter	0, 1

Instrument panel (up to 179667)				
Item No.	Part No.	Description	Qty	
1	71-039-11	Light switch	1	
2	71-039-11	Wiper switch	0, 1	
3	71-039-11	Strobe switch	0, 1	
4	71-039-02	Forward/reverse switch	1	
5	71-039-11	High/low speed switch	0, 1	
6	74-010-00	Smart View gauge (shoen)	1	
7	71-102-15	Horn switch	1	
8	71-120-10	Key Switch	1	
	71-119-99	Spacer, key switch	1	
9	-	-	-	
10	88-607-06	Rivit, ppush in	8	

NOTE: If your vehicle was not originally equipped with the Smart View display, then the Sevcon speed control must be reprogrammed before the display will function.


If you have the Smart View display and wish to have the maintenance feature turned on, then the Sevcon speed control must be reprogrammed.

To reprogram the Sevcon speed control, the speed control must be returned to the factory. Contact your local Taylor-Dunn[®] distributor for more information.

The Smart View Display will only work with the Sevcon control system.



Speed Control Panel

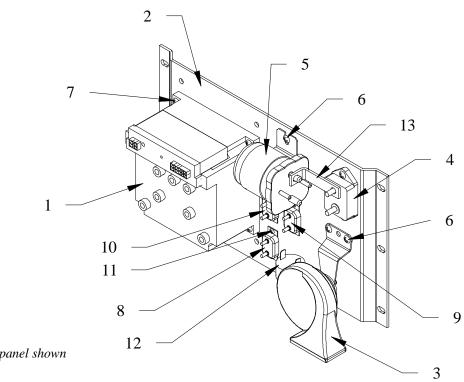

B 2-10 panel show

	Speed Control Panel				
ITEM #	PART #	DESCRIPTION	QTY		
1	62-400-05*	Speed controller, PowerrPak B 2-10	1		
1	62-400-31	Speed controller, MicroPak B 2-00	1		
2	01-200-07	Mounting panel	1		
3	73-004-20	Horn	1		
4	79-844-00	Main circuit breaker	1		
5	72-501-42	ISO solenoid	1		
6	88-838-06	#14 x 1/2 Sheet metal screw	4		
7	88-060-09	1/4NC x $3/4$ Hex bolt	4		
8	79-840-00	10 Amp circuit breaker	1		
9	79-840-20	20 Amp circuit breaker	1		
10	79-840-20	20 Amp circuit breaker	1		
11	88-818-06	#8 x 1/2 Sheet metal screw	8		
12	73-005-01	Reverse/Motion alarm	1		
13	61-838-43	Buss bar	1		
Not shown	69-068-55	Resistor (across #5 power terminals)	1		

* - Replacement control must be factory programmed. Supply serial number of vehicle when ordering. Apply 94-427-21 heat sink paste prior to installation.

Charger	36v Built In	48v Built In	36v Portable	48v Portable		
Signet HB (115/230 vac)	79-303-40	79-309-40	N/A	N/A		
Signet HBS (115/230 vac)	79-303-41	79-309-42	N/A	N/A		
Lester Lestronic II (115 vac)	79-303-15	79-303-25	79-305-20	79-309-50		
Lester X-Series (115 vac)	79-303-36	79-303-48	79-303-37	N/A		
Lester Summit	79-306-37	79-309-46	79-306-39	N/A		
Delta Q QuiQ	79-306-32	79-309-49	79-306-36	79-306-48		

Chargers (flooded batteries)

Chargers (sealed batteries)

Charger	36v Built In	48v Built In	36v Portable	48v Portable
Signet HB (115/230 vac)	K4G-CH-003	N/A	N/A	N/A
Signet HBS (115/230 vac)	79-303-42	79-303-43	N/A	N/A
Lester Lestronic II (115 vac)	N/A	N/A	N/A	N/A
Lester X-Series (115 vac)	N/A	N/A	N/A	N/A
Lester Summit	N/A	N/A	N/A	N/A
Delta Q QuiQ	79-306-31	79-309-47	N/A	N/A

- Note: There are no user serviceable components inside the Signet, Summit, or Delta Q chargers.
- Note: The charger AC cord is an integral part of the Signet chargers. When replacing the charger, do not cut and splice the AC cord. Cutting the AC cord will void the charger warranty. The harness connectors and AC plug are not included with the Signet chargers.
- Note: The Signet model HBS series charger replaces all previous Signet models.

Description	Part number
AC Plug, 115v	76-200-00
Knife Connector	75-320-51
Timer, Lestronic II 36v	79-805-67
Timer, Lestronic II 48v	79-805-68
Capacitor, Lestronic II	79-902-00
Diode, Lestronic II (25A)	79-749-13
Fuse, Lestronic II (25A)	79-831-00
Interlock Relay, Lestronic II 115/36v	79-809-60
Interlock Relay, Lestronic II 115/48v	79-809-50
Interlock Relay, Lestronic II 230/36v	79-306-23

Charger Parts



















Miscellaneous Electrical


Miscellaneous Wire Harness Clamps






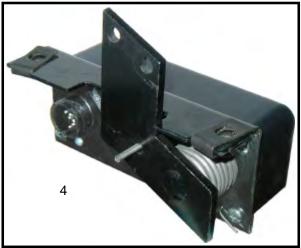

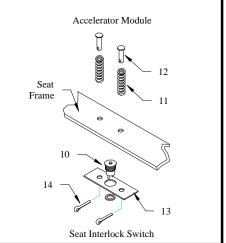

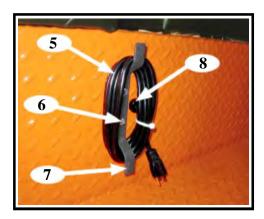


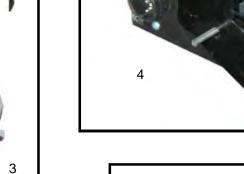

		Miscellaneous Electrical	
ITEM #	PART #	DESCRIPTION	QTY
	75-152-03	Chassie Control Harness	1
	75-152-46	Power Harness	1
	75-152-47	Control Panel Harness	1
	75-152-04	Dash Harness	1
Not Shown	75-152-90	Smart view gauge cable	1
	98-599-15	Plastic grommet for 1.75 hole	
	98-599-20	Plastic Grommet for 2.5 hole	
		Harness for Pole Mounted Strobe Light	1
	75-152-06	Potratble Charger Harness	1
	JF3-86181-00-00	Portable Charger Receptacle	1
2	96-650-01	Wire Harness Clip, stick on	
3	96-642-00	Wire ahmess Clip, push mount	
4	62-033-48	Accelerator Module	1
5	79-575-25	AC Cord (Built in charger)	1
	88-565-06	1/4NC x 1/2 Phillips truss head screw	2
6	88-068-61	1/4 SAE flat washer	2
	88-069-81	1/4NC lock nut	2
7	79-511-00	AC cord holder	1
8	79-530-00	Bushing	1
9			
10	71-102-10	Seat interlock Switch	1
11	85-030-00	Spring	2
12	96-773-00	Clevis Pin	2
13	02-610-18	Mounting Plate	1
14	88-527-11	Cotter Pin	2
15	96-640-00	Clamp, 3/16 Push Mount	
	96-629-80 (not shown)	Clamp, Rubber Lined 3/16 ID	
	96-630-00 (not shown	Clamp, Rubber Lined 5/8 ID	1
	96-630-50 (not shown	Clamp, Rubber Lined 5/8 ID (.265 mounting hole)	
16	96-631-00 (not shown	Clamp, Rubber Lined 3/4 ID	
	96-631-10 (shown)	Clamp, Rubber Lined 1.0 ID	
	96-631-15 (not shown	Clamp, Rubber Lined 1-1/2 ID	1
	96-624-00	Clamp, 1/4 Jiffy Clip	
17	96-625-00 (not shown)	Clamp, 5/16 Jiffy Clip	
18	96-626-00	Clamp, 7/8 Jiffy Clip	
19			
20	74-009-02	Digital Battery Status Meter, 36 volt	
21	74-018-00	PMT/C Maintenance Hour Meter	
22			




Batteries

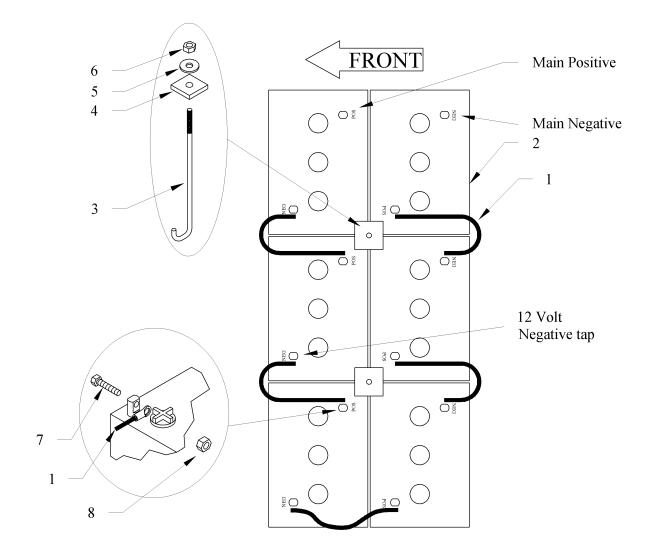

Batteries				
Item No.	Part No.	Description	Qty	
1		Battery Jumper	5 or 7	
2	77-043-00	210AH, T-605		
	77-042-00	225AH, T-105		
	77-047-00	260AH, T-145		
3	50-243-10	Battery rod	3	
4	50-250-00	Battery hold down	3	
5	88-088-66	Flat washer, tin/lead plated	3	
6	88-069-81	1/2NC Nylon lock nut	3	
7	88-081-12	5/16NC x 1 Hex bolt, stainless steel	12	
8	88-089-80	5/16NC Hex nut, stainless stell	12	
Not Sho	own			
	01-534-43	Left side battery locator	1	
	76-020-15	Housing, B+ connector, Starting S/N 198443	2	
	76-020-16	Terminal, B+ housing connector, Starting S/N 198443	2	

Battery layout for 48 volt system

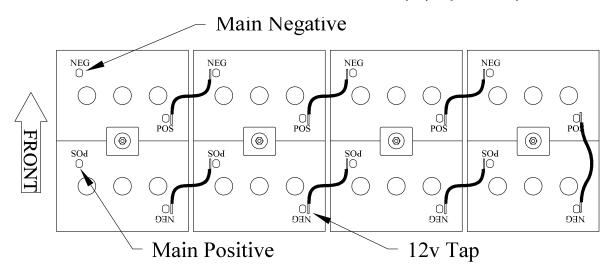





Seat Cushions, Lights, Deck and Frame


	Seat C	ushions, Deck and Frame (standard)	
ITEM #	PART #	DESCRIPTION	QTY
1	90-444-00	Deckboard	1
	00-210-14	Deck rail, Left	1
2	00-210-14	Deck rail, right	1
	00-210-18	Deck rail, rear	1
3	90-179-00	Seat back cushion	1
4	00-210-04	Seat back bulkhead	1
5	90-174-00	Passenger seat cushion	1
6	90-172-00	Driver seat cushion	1
7	See instrument panel	Console	1
	00-610-00	Front cowl, diamond plate	1
8	00-610-08	Front cowl, smooth	1
0	See Cab and Cowl Windshield Frame Option	Front cowl with windshield cutout	1
9	00-210-22	Headlight cover	1
10	00-210-25	Wire harness cover	1
11	94-050-11	Right headlight assembly	1
12	94-201-10	"TAYLOR-DUNN" name plate	1
13	94-050-10	Left headlight assembly	1
	72-082-01	Replacement headlight bulb	2
	72-072-11	Replacement headlight socket	
	94-050-04	Retainer for #11and 13	
	94-201-11	Retainer for #12	
18	72-025-00	Taillight	2
19	72-025-51	Taillight grommet	2
	71-141-22	Turn signal switch	1
Not shown	71-900-05	Flasher	1
INOU SHOWN	72-082-10	Front turn signal bulb	2
	72-082-20	Front turn signal socket	2




Decals



Front Inside Cowl

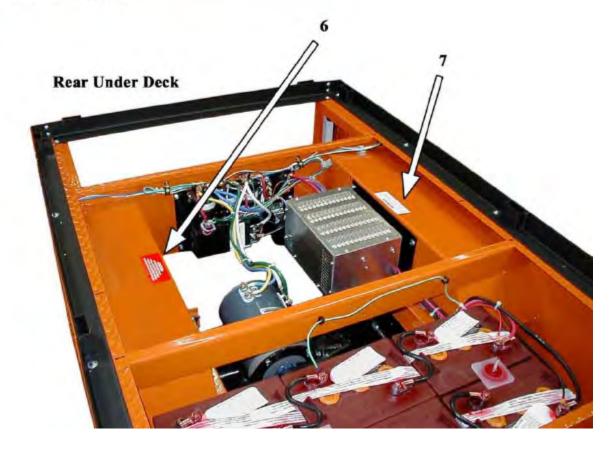

	Decals				
ITEM #	PART #	DESCRIPTION	QTY		
1	94-384-14	"When leaving the vehicle"	1		
2	94-309-00	Apply hand brake	1		
3	94-384-01	"Not a motor vehicle"	1		
4	94-301-42	Arms and legs inside	1		
5	94-313-20	General safety warning	1		
6	94-319-00	Battery disconnect	1		
7	94-313-00	Battery warning	1		
Not al anno	94-301-41	DOT 3 brake fluid	1		
Not shown	94-384-17	Do not spray wash	1		

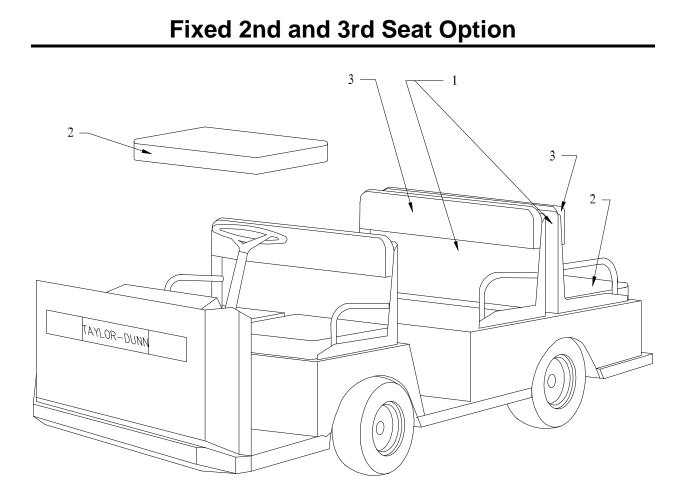


Hitches





	Fixed 2nd Seat Option				
ITEM #	PART #	DESCRIPTION	QTY		
1	02-680-39	Seat bulkhead	2		
2	90-175-00	Seat cushion	2		
3	90-179-00	Backrest	2		
	88-065-09	1/4NC x 3/4 Hex bolt for mounting #1	10		
Not Shown	88-068-60	1/4 Cut washer	20		
Not Shown	88-069-81	1/4NC Lock nut for mounting #1	10		
	88-867-09	#14 x 3/4 screw for mounting #3	16		

	Hitches			
ITEM #	PART #	DESCRIPTION	QTY	
	97-804-01	Pintle hitch		
	97-808-00	Automatic coupling hitch		
	97-811-00	1-7/8" Ball hitch		
	97-805-00	Mounting bracket for 1-7/8" ball		
	97-821-00	2" Ball hitch		
	97-807-00	Mounting bracket for 2" ball		
	97-806-00	Pin and Clevis hitch		
	97-835-00	Upper hitch mounting plate (all hitches)	1	
	97-835-10	Lower hitch mounting plate (all hitches)	1	
	88-140-11	1/2NC x 1 Hex bolt for mounting bracket	2	
	88-140-14	1/2NC x 1-1/2 Hitch mounting bolt	4	
	88-148-62	1/2NC Hex nut	6	
	88-148-62	1/2 Split lock washer	6	

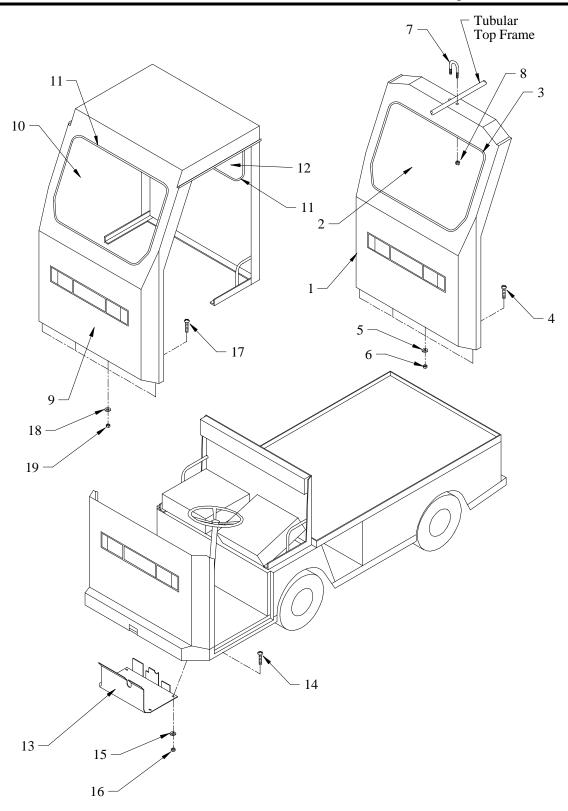

Cab and Cowl Windshield Frame Option

	Cab and Cowl Windshield Frame Option			
ITEM #	PART #	DESCRIPTION	QTY	
1	91-010-77	Cowl and windshield frame	1	
2	90-852-30	Windshield	1	
3	98-310-000	Window gasket (by the foot)		
4	88-102-15	3/8NC x 1-3/4 Carriage bolt	4	
5	88-108-60	3/8 Cut flat washer	4	
6	88-109-87	3/8NC KEPS nut	4	
7	96-124-00	U-bolt	1	
8	88-069-83	1/4NC Acorn nut	2	
9	91-012-00	Cab	1	
10	Same as #2	-	-	
11	Same as #3	-	-	
12	90-850-10	Rear window	1	
13	05-210-87	Floor pan	1	
14	88-065-09	1/4NC x 3/4 Truss head screw	4	
15	88-068-61	1/4 SAE Flat washer	4	
16	88-069-81	1/4NC Hex locknut	4	
17	Same as #4	-	-	
18	Same as #5	-	-	
19	Same as #6	-	-	




Windshield Wiper Option

Illustration not available

Dome Light Option

Illustration not available

Foldaway 2nd Seat Option

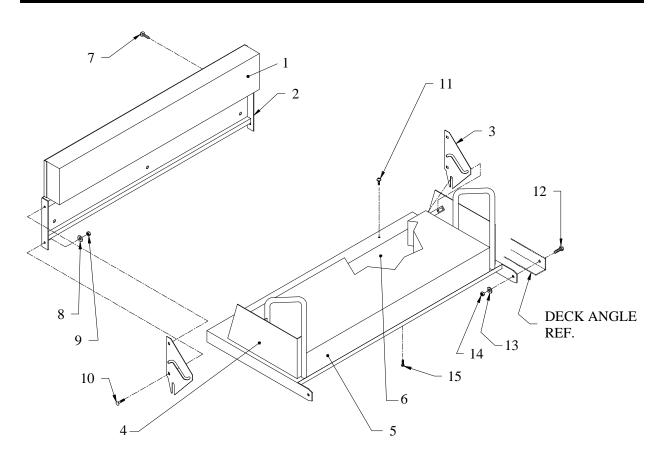


	Windshield Wiper				
ITEM #	PART #	DESCRIPTION	QTY		
	74-050-00	Wiper motor	1		
	74-051-00	Wiper arm	1		
	74-052-00	Wiper blade	1		
	75-152-09	Wiring harness	1		
	98-615-00	Motor insulating grommet, 3/4 ID	1		
	98-615-00	Motor insulationg grommet, 5/8 ID	1		

	Dome Light				
ITEM #	PART #	DESCRIPTION	QTY		
	72-015-00	Dome light	1		
	75-105-25	Harness	1		


		Foldaway 2nd Seat Option	
ITEM #	PART #	DESCRIPTION	QTY
1	90-179-00	Seat backrest	1
2	00-210-95	Seat back weldment	1
3	00-210-97	Pivot plate	2
4	00-210-94	Seat base weldment	1
5	90-178-00	Seat cushion	1
6	See deck options		
7	88-837-11	#14 x 1 Screw	8
8	88-088-62	5/16 Split lock washer	4
9	88-089-80	5/16NC Hex nut, stainless steel	4
10	88-082-11	5/16NC x 1 Carriage bolt	4
11	88-065-09	1/4NC x 5/16 T-nut	3
11	88-069-88	1/4NC x 3/4 Truss head screw	3
12	88-100-11	3/8NC x 1 Hex bolt	2
13	88-108-61	3/8 SAE flat washer	2
14	88-109-81	3/8NC Hex lock nut	2
15	88-837-14	#14 x 1-1/2 Screw	6



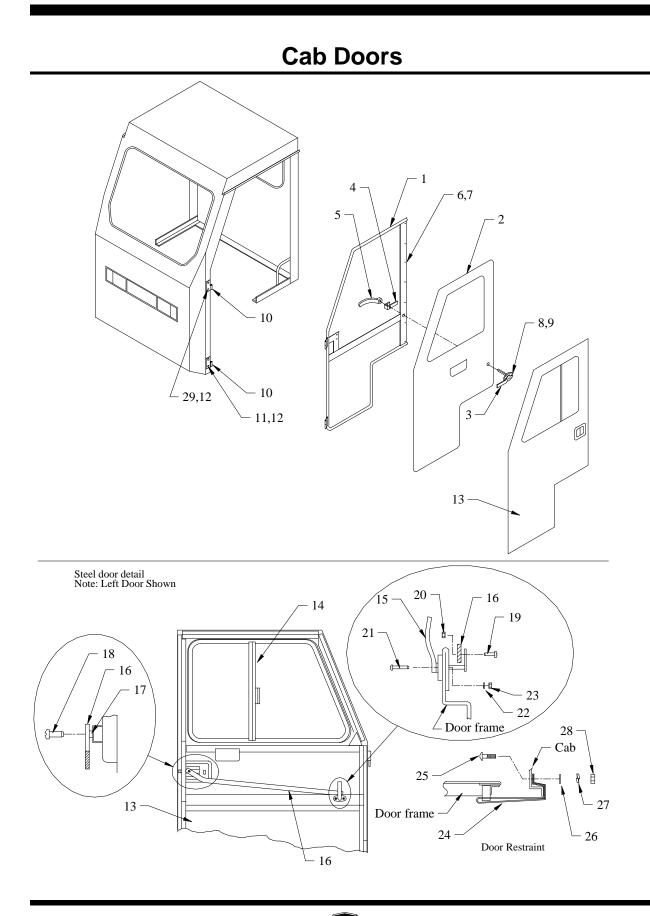

Cab Doors			
ITEM #	PART #	DESCRIPTION	QTY
	90-923-98	Door frame, left	1
1	90-923-99	Door frame, right	1
	90-924-98	Naugahyde door cover, left	1
2	90-924-99	Naugahyde door cover, right	1
3	97-315-53	Outer handle	2
4	97-315-51	Door latch	1
5	97-315-54	Inner handle	1
6	97-303-03	Snap fastener	14
7	88-727-06	Pop rivet for #6	14
8	88-825-08	8-32 x 5/8 Truss head machine screw	4
9	88-029-86	8-32 Hex lock nut	4
10	91-814-10	Hing, left	2
10	91-814-11	Hinge right	2
11	88-082-11	5/16NC x 1 Carraige bolt	4
12	88-089-81	5/16NC Hex locknut	8
12	91-011-31	Steel door, left, unpainted	1
13	91-011-32	Steel door, right, unpainted	1
14	90-853-10	Left window assembly	1
14	90-853-11	Right window assembly	1
15	97-315-58	Inner Handle	2
16	91-012-12	Latch linkage	2
17	16-510-00	Spacer	2
18	88-065-06	1/4NC x 1/2 Truss head bolt	2
19	88-045-08	10-32 x 5/8 Truss head machine screw	2
20	88-049-86	10-32 Hex locknut	2
21	88-025-08	8-32 x 5/8 Truss head machine screw	4
22	88-048-62	#10 Split lock washer	4
23	88-029-80	8-32 Hex nut	4
24	91-012-45	Door restraint	2
25	88-082-11	5/16NC x 1 Carraige bolt	2
26	88-088-60	5/16 Cut flat washer	2
27	88-088-62	5/16 Split lock washer	2
28	88-089-83	5/16NC Acorn nut	2
29	88-082-09	5/16NC x 5/8 Carraige bolt	4
Not shown	98-454-00	Weather seal for steel doors (by the foot)	27


Mirrors Strobe Light

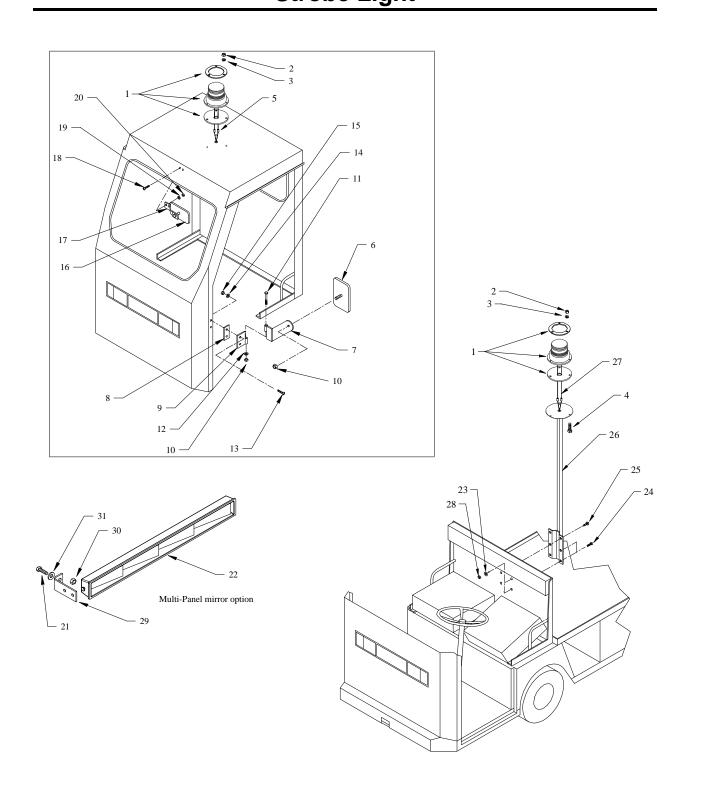

Mirrors and Strobe Light			
ITEM #	PART #	DESCRIPTION	QTY
1	72-023-20	Strobe light	1
2	88-029-80	8-32 Hex nut	3
3	88-028-62	#8 Split lock washer	3
4	88-025-06	8-32 x 1/2 Truss head machine screw	3
5	75-152-10	Harness for cab	1
6	92-201-00	Mirror	2
-	92-202-13	Mounting bracket, right	1
7	92-202-12	Mounting bracket, left	1
8	92-202-15	Spacer	2
	91-814-16	Mounting bracket, left	1
9	91-814-17	Mounting bracket, right	1
10	88-069-81	1/4NC Hex lock nut	4
11	88-060-22	1/4NC x 3-1/2 Hex bolt	2
12	88-068-61	1/4 SAE Flat washer	2
13	88-065-09	1/4NC x 3/4 Truss head bolt	4
14	88-068-62	1/4 Split lock washer	4
15	88-069-87	1/4NC Acorn nut	4
16	92-206-00	Mirror	1
17	00-210-70	Mounting bracket	1
18	88-065-09	1/4NC x 3/4 Hax bolt	2
19	88-068-61	1/4 SAE Flat washer	2
20	88-069-81	1/4NC Hex lock nut	2
21	88-065-09	1/4NC x 3/4 Truss head bolt	4
22	92-207-00	Mirror	1
23	88-068-62	Split lock 1washer	4
24	88-065-08	1/4NC x 5/8 Truss head bolt	4
25	-	Seat mounting screw	-
26	72-023-30	Pole	1
27	75-152-108	Harness for pole	1
28	88-069-83	Acorn nut	4
29	91-810-00	Mounting bracket	2
30	88-069-81	1/4NC Hex lock nut	4
31	88-069-60	1/4 Cut washer	4
Not shown	98-603-00	3/8 ID harness insulating grommet	1




Sun Tops

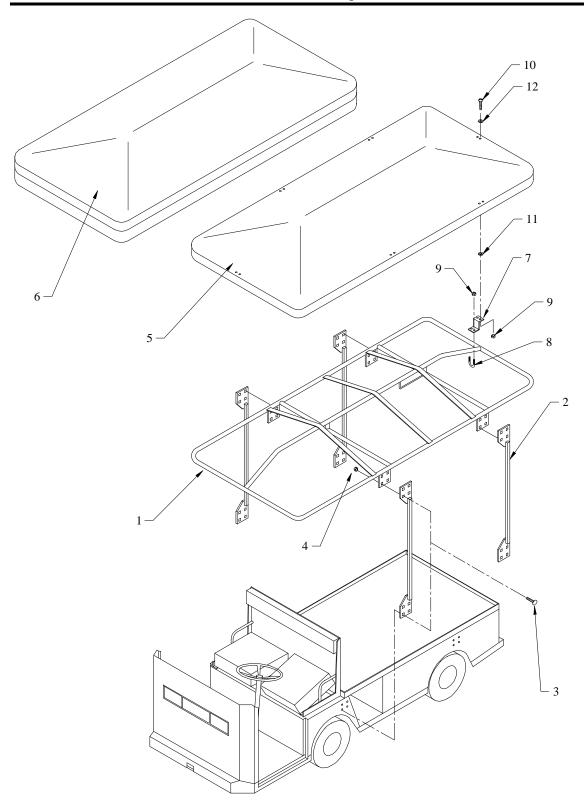

	Sun Tops			
ITEM #	PART #	DESCRIPTION	QTY	
	91-028-20	Top frame, standard	1	
1	K1-103-79	Top frame, ambulance	1	
	91-028-24	Mounting pole, standard	4	
2	91-028-24	Mounting pole, ambulance	3	
	K1-177-60	Mounting pile, ambulance	1	
Not shown	K1-123-09	Ambulance mountin pole spacer	0-4 as needed	
3	88-102-11	3/8NC x 1 Carraige bolt	32	
4	88-109-81	3/8NC Hax lock nut	32	
5	91-151-00	Fiberglass top	1	
6	91-101-00	Surry top	1	
7	91-028-25	Mounting bracket	6	
8	96-124-00	U-bolt	1	
9	88-069-81	1/4NC Hex lock nut	12	
10	88-065-09	1/4NC x 3/4 Truss head bolt	12	
11	97-176-00	Neoprene washer	12	
12	88-068-60	1/4 Cut fplat washer	12	
Not shown	94-035-01	Trim for #5 (by the foot)	30	





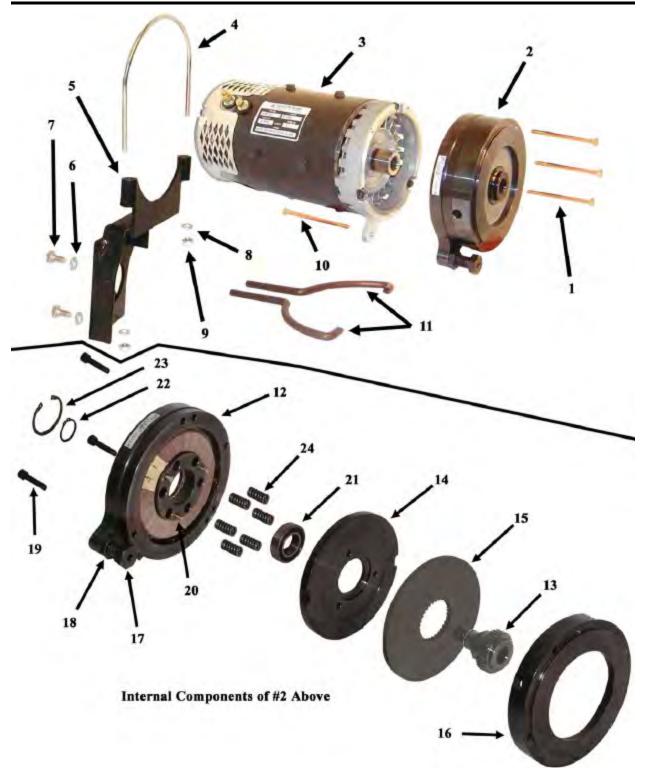

ITEM #	PART #	DESCRIPTION	OTY
1	88-067-29	Bolt,1/4 X 4-1/4" NC, Grade 8	3
2	41-355-00	Automatic Electric Brake Unit	1
3	See Motor	Motor (Typical)	1
4	96-114-10	U-Bolt, 5/16" NF, Motor Support	1
5	70-456-10	Motor, Support Bracket	1
6	88-128-62	Lockwasher, 7/16"	2
7	89-111-27	Bolt, 10m X 1.5 X 20 Hex Head	2
8	88-088-62	Lockwasher, 5/16"	2
9	88-099-80	Nut, 5/16" NF	2
10	88-067-29	Bolt, 1/4 X 4-1/4" NC, Grade 8	1
11	96-500-04	Tool, Electric Brake, Manual Release	2
12	*	Magnet and Coil Sub Assembly	1
13	*	Hub	1
14	*	Armature	1
15	*	Friction Plate	1
16	*	Mounting Plate	1
17	*	Hex Head Bolt Spacer	1
18	*	Locknut	1
19	*	Screw, Socket Head Cap	3
20	*	Dowel Pin	3
21	*	Ball Bearing, Deep Groove	1
22	*	External Circlip	1
23	*	Internal Circlip	1
24	*	Coil Compression Spring	6
Not Shown	75-152-30	Wiring Harness	1




Optional Deckboards

Illustration not available

		Deckboard Options	
ITEM #	PART #	DESCRIPTION	QTY
	-	2-Piece Deck option	
	00-210-23	Center deck support angle	1
	88-607-09	Rivet	16
	90-440-46	Steel deck cover, 38-1/2 long	1
	90-440-47	Steel deck cover, 36-5/8 long	1
	90-444-20	Deck board, 38-1/2 long	1
	90-444-30	Deck board, 36-5/8 long	1
	Uses standard deck rails, see	e Seat Cushions, Lights, Deck and Frame	
		Cargo Box	
	00-210-23	Center deck support angle	1
	90-471-00	Deck board, front	1
	90-472-00	Deck board, rear	1
	•	Fixed 2nd seat	
	00-210-23	Center deck support angle	1
	00-210-45	Left deck rail	1
	00-210-46	Right deck rail	1
	90-444-20	Deck board, 38-1/2 long	1
		Foldaway 2nd seat	
	03-210-18	Rear deck reail	1
	03-210-40	Right deck rail	1
	03-210-41	Left deck rail	1
	90-440-36	Front deck board	1
	90-440-37	Rear deck board	1
	Di	amond Plate Steel Overlay for Foldaway 2nd Seat	
	Use same deck board and ra	ils as foldaway 2nd seat above	
	90-440-48	Steel deck, front	1
	90-440-49	Steel deck, rear	1
	88-607-09	Rivet	13
		6-Passenger Fixed Seat Option	
	02-210-32	Center deck board	1



Tool Box Doors Option

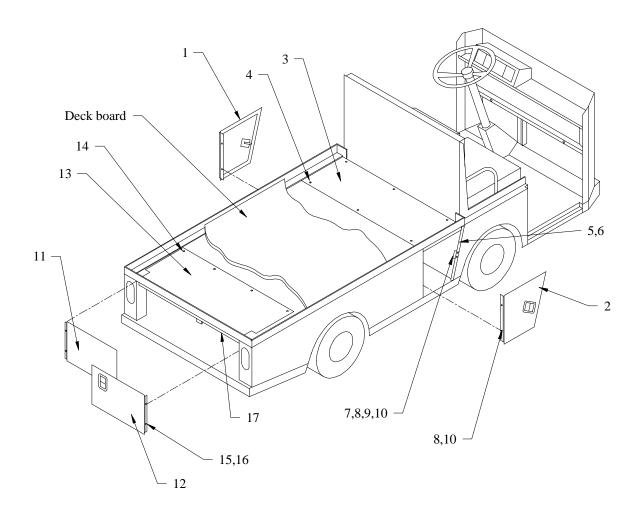

	Tool Box Doors		
ITEM #	PART #	DESCRIPTION	QTY
1	02-210-12	Left side door	1
2	02-210-13	Right side door	1
3	02-210-15	Front top	1
4	88-737-08	Pop rivet	6
5	02-210-14	Front door stop	2
6	88-837-09	#14 x 3/4 Sheet metal screw	6
7	02-210-16	Door catch	2
8	88-065-08	1/4NC x 5/8 Truss head screw	16
9	88-068-61	1/4 SAE Flat washer	4
10	88-067-87	1/4NC KEPS nut	16
11	02-210-21	Rear left door	1
12	02-210-64	Rear right door	1
13	02-210-62	Rear top	1
14	Same as #4	-	4
15	88-065-09	1/4NC x 3/4 Truss head bolt	3
16	Same as #10	-	3
Not shown	98-451-11	Door weather striping (by the foot)	


Rear Shocks (optional)

Illustration is not Available

Rear Shocks			
ITEM #	PART #	DESCRIPTION	QTY
	86-602-00	Shock	2
	86-602-16	Lower mount, left B 2-10	1
	86-602-17	Lower mount, right B 2-10	1
	88-128-60	7/16 Flat washer	4
	88-129-81	7/16NC Hex lock nut	4




Stake Side Options

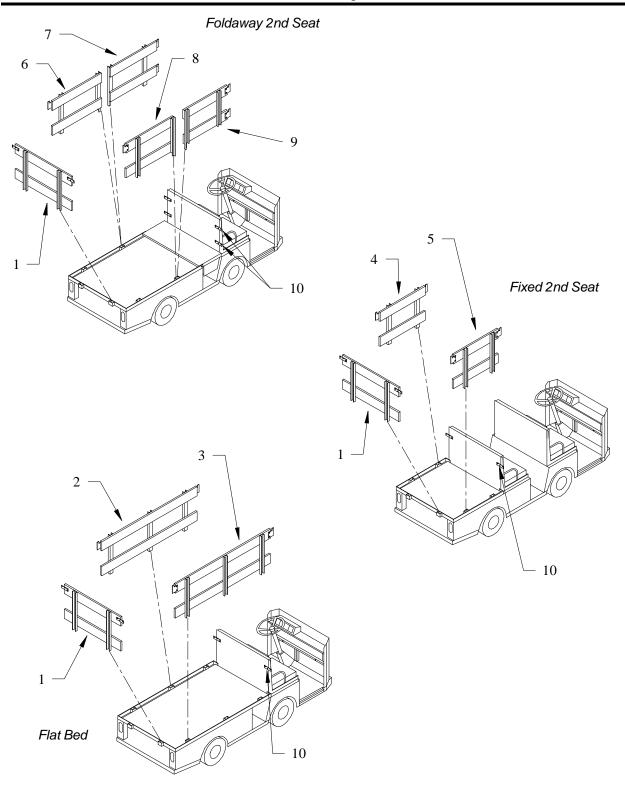


	Stake Sides				
ITEM #	PART #	DESCRIPTION	QTY		
1	90-545-01	End gate			
2	90-545-02	Left side, standard			
3	90-545-02	Right side, standard			
4	90-545-03	Left side, fixed 2nd seat			
5	90-545-04	Right side, fixed 2nd seat			
6	90-545-14	Left side rear, foldaway 2nd seat			
7	90-545-12	Left side front, foldaway 2nd seat			
8	90-545-15	Right side rear, foldawy 2nd seat			
9	90-545-13	Right side front, foldaway 2nd seat			
10	90-540-00	Gate hook			



Cargo Box Option

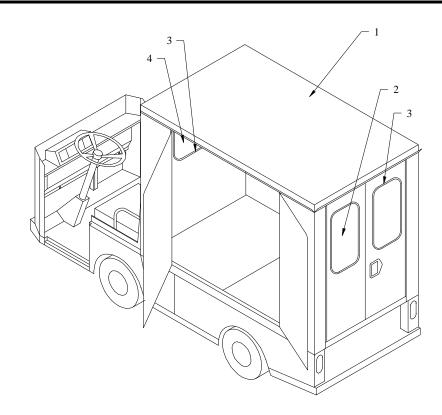

12" Side Panel Option

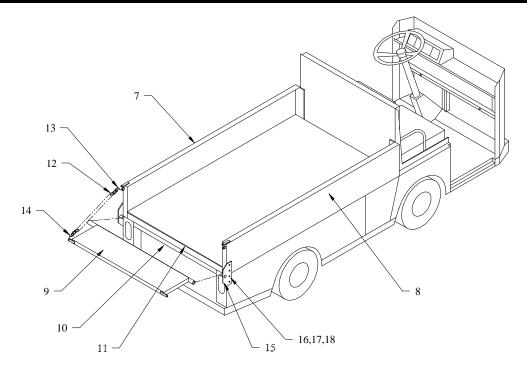


Cargo Box			
ITEM #	PART #	DESCRIPTION	QTY
1	91-333-02	Cargo box	1
2	90-851-00	Rear window	2
3	98-310-00	Window gasket (by the foot)	
4	90-850-10	Front window	1
Not shown	94-320-10	Load height limit decal	1

12" Side Panels			
ITEM #	PART #	DESCRIPTION	QTY
1	-	-	-
2	-	-	-
3	-	-	-
4	-	-	-
5	-	-	-
6	-	-	-
7	00-210-38	Left panel	1
8	00-210-37	Right panel	1
9	00-210-58	Tail gate	1
10	00-210-78	Lower rear deck angle	1
11	00-210-77	Top rear deck angle	1
12	30-550-55	Tail gate chain	2
13	30-551-00	S-hook	2
14	30-551-10	Tail gate hook	2
15	00-210-39	Tail gate pivot	2



Ambulance Deck and Top

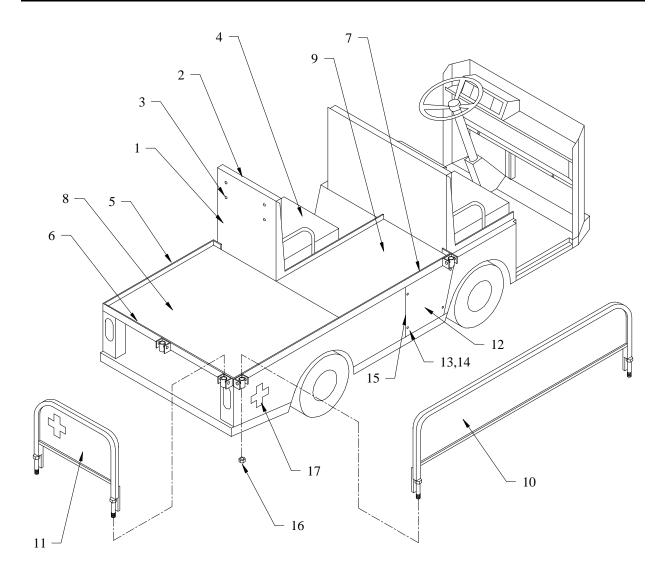

Ambulance Deck			
ITEM #	PART #	DESCRIPTION	QTY
1	00-210-51	Seat frame (un painted)	1
2	90-000-00	Seat backrest cushion	1
3	88-837-11	#14 x 1 Screw	4
4	90-191-00	Seat chshion	1
5	00-610-07	Left side deck rail	1
6	00-610-06	Rear deck rail	1
7	00-610-05	Right side deck rail	1
0	90-440-72	Rear deck board, galvanized	1
8	90-440-70	Front deck board, galvanized	1
9	K1-111-22	Rear deck board, white laminate	1
9	K1-111-21	Front deck board, white laminate	1
10	00-201-77	Right side drop rail	1
11	00-201-78	Rear drop rail	1
12	00-210-53	Right side panel	1
13	88-065-08	1/4NC x 5/8 Truss head bolt	4
14	88-069-87	1/4NC KEPS Hex nut	4
15	98-451-20	Foam tape (by the foort)	2.5
16	88-149-81	1/2NC Hex lock nut	4
17	94-324-00	Red Cross emblem	4


D N N TAYLOR



Contents

Appendix A: Special Tools2 Appendix B: Suggested Torque)
Limits for Standard Hardware	3
Hardware Identification3	5
Standard Head Markings 3	
Hex Bolts	
Other Bolts	
Hex Nuts 4	
Hex Lock Nuts (stover) 4	
Other Nuts 4	
Suggested Torque Values (non-critical hardware) 5	
Appendix C: Brake Lining	
Handling Precautions7	,



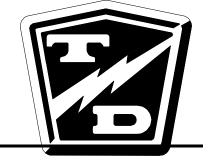



APPENDIX A: SPECIAL TOOLS

DESCRIPTION	<u>PURPOSE</u>	PART NUMBER
Test Light	Used for testing electrical circuits. Powered by the truck batteries, switchable for 12, 24, 36, and 48 volts.	62-027-00
Accelerator Test Harness	Used to test the solid state accellerator module part number series 62–033–XX.	62-027-31
Sevcon® Handset Analyzer (read only)	Used to test the Sevcon® control systems and reset the Smart View display maintenance meter (includes instructions).	62-027-61
Sevcon® Handset Analyzer with Speed Adjust Capability	Same as 62–027–61 (above) plus allows a limited range of speed adjustment.	62-027-62
Disc Brake Boot Installation Tool	Used to install the rubber boot on all disc brake bodies.	41-350-13
Pin Removing Tool	Used to remove pins and sockets from AMP connectors.	75-440-55
Pin Removing Tool	Used to remove pins and sockets from MOLEX connectors.	75-442-55
Hydrometer	meter Used to check the specific gravity of battery electrolyte.	
attery Filler Used to safely add water to batteries.		77-201-00

APPENDIX B: SUGGESTED TORQUE LIMITS FOR STANDARD HARDWARE

HARDWARE IDENTIFICATION

Standard Head Markings

 
NOTE: Torque value used should be for lowest grade of hardware used. If a grade 2 nut is used on a grade 8 bolt, use grade 2 torque value.

NOTE: Toque values specified are for clean dry threads.


Hex Bolts




S.A.E. Grade 2



S.A.E. Grade 8

 

S.A.E. Grade 5

 



Carriage Bolt, grade 2 (unless marked as above)

Other Bolts


Truss Head, grade 2

Appendixes Appendix B Page 3



Hex Nuts


Nuts with no markings are to be treated as S.A.E. Grade 2

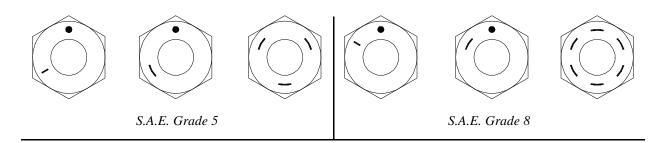

Hex Lock Nuts (stover)

Lock nuts use a letter to indicate the grade of the nut. Grade A' locknuts would be the equivelent of Grade '2' hex nuts, Grade 'B' as Grade '5' and Grade 'C' as Grade '8'.

NOTE: Nuts with no markings are to be treated as S.A.E. Grade A

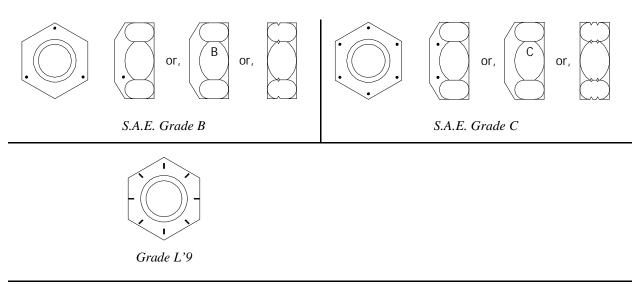

Other Nuts

Other nuts used by Taylor-Dunn[®] should be treated as S.A.E. grade A

Suggested Torque Values (non-critical hardware)

Diameter and TPI	Grade 2 Tightening Torque (ft-lb)	Grade 5 Tightening Torque (ft-lb)	Grade 8 Tightening Torque (ft-lb)	L'9 Tightening Torque (ft-lb)
1/4-20	4-7	7-10	10-14	11
1/4-28	5-8	8-12	11-16	12
5/16-18	9-14	14-21	20-29	22
5/16-24	10-15	15-23	22-33	25
3/8-16	16-24	25-37	35-52	40
3/8-24	18-27	28-42	40-59	45
7/16-14	26-38	40-59	56-84	65
7/16-20	29-43	44-66	62-93	70
1/2-13	39-59	60-90	85-128	95
1/2-20	44-66	68-102	96-144	110
9/16-12	56-84	87-131	123-184	140
9/16-18	63-94	97-146	137-206	160
5/8-11	78-117	120-180	170-254	195
5/8-18	88-132	136-204	192-288	225
3/4-10	138-207	213-319	301-451	350
3/4-16	154-231	238-357	336-504	390
7/8-9	222-334	344-515	485-728	565
7/8-14	245-367	379-568	534-802	625
1-8	333-500	515-773	727-1091	850
1-14	373-560	577-866	815-1222	930
1.125-7	472-708	635-953	1030-1545	1700
1.125-12	530-794	713-1069	1156-1733	1850
1.25-7	666-999	896-1344	1454-2180	2950
1.25-12	738-1107	993-1489	1610-2414	3330



Suggested Torque Values (critical hardware)

Torque Table

		Torque Range		
Group	Description	Ft-Lbs	In-Lbs	Nm
Brakes				
	Brake bolt (disc brake body)	11 - 11	132 - 132	15 - 15
	Brake line tube nut fittings	12 - 13	144 - 156	16.3 - 17.7
	Brake spider bolts (Dana 160mm hyd brakes)	25 - 35	300 - 420	34 - 47.6
	Brake spider bolts (Dana 160mm mech brakes)	15 - 19	180 - 228	20.4 - 25.8
	Brake spider bolts (Dana 7x1-3/4 brakes)	16 - 20	192 - 240	21.8 - 27.2
Electrical -				
	Battery terminals	8 - 9	96 - 108	10.9 - 12.2
Front Axle				
	Front spindle nut	-	-	-
	Note: Refer to maintenance section in the serve	ice manual		
	King pin	-	-	-
-	Note: Refer to maintenance section in the serve			
Rear Axle/	Transmission			
	3rd member Gear case cover (GT drive)	45 - 50	540 - 600	61.2 - 68
	Axle bolt (GT drive)	275 - 275	3300 - 3300	374 - 374
	Axle hub nut (Dana)	95 - 115	1140 - 1380	129.2 - 156.4
	Axle tube to center section (Dana F-N-R)	25 - 35	300 - 420	34 - 47.6
	Carrier cap bolts (Dana)	100 - 120	1200 - 1440	136 - 163.2
	Differential Cover plate (Dana H12)	18 - 25	216 - 300	24.5 - 34
	Drain plug (Dana H12)	25 - 40	300 - 480	34 - 54.4
	Drain plug (GT drive)	21 - 25	252 - 300	28.6 - 34
	Gear case to 3rd member (GT drive)	18 - 20	216 - 240	24.5 - 27.2
	Motor mounting (GT/Dana)	6.5 - 7	78 - 84	8.8 - 9.5
	Pinion nut (F2/F3)	175 - 175	2100 - 2100	238 - 238
	Pinion nut (GT drive)	154 - 169	1848 - 2028	209.4 - 229.8
	Ring gear (Dana)	35 - 45	420 - 540	47.6 - 61.2
	Wheel lug nut	75 - 90	900 - 1080	102 - 122.4
Steering				
	Ball joint clamp	28 - 32	336 - 384	38.1 - 43.5
	Ball joint nut	40 - 45	480 - 540	54.4 - 61.2
	Pitman nut (18-308-21 steering gear)	75 - 100	900 - 1200	102 - 136
	Pitman nut (18-308-25 steering gear)	181 - 217	2172 - 2604	246.2 - 295.1
	Rod end nut	20 - 25	240 - 300	27.2 - 34
	Steering shaft pinch bolt	24 - 26	288 - 312	32.6 - 35.4
	Steering wheel nut (18-308-21 steering gear)	28 - 32	336 - 384	38.1 - 43.5
	Steering wheel nut (18-308-25 steering gear)	72 - 86	864 - 1032	97.9 - 117
Suspension				
	Leaf spring hangers	_	_	_

Leaf spring hangers

Note: Refer to maintenance section in the service manual

APPENDIX C: BRAKE LINING HANDLING PRECAUTIONS

Taylor-Dunn does not currently supply asbestos fiber-brake pads/ shoes with any vehicle. However, there is the possibility that the original brake pads/shoes were replaced with aftermarket pads/shoes containing asbestos. Since this possibility does exist, the brake pads/ shoes should be handled as if they do contain asbestos.


Never use compressed air or dry brush to clean the brake assemblies. Use an OSHA approved vacuum cleaner or any alternate method approved by OSHA to minimize the hazard caused by airborne asbestos fibers and brake dust.

Do not grind, sand, break, or chisel the brake pads/shoes, as this will cause unnecessary dust, possibly releasing asbestos fibers in the air.

Always wear protective clothing and a respirator when working on the brake pads/shoes or their associated components.

Inhaled asbestos fibers have been found to cause cancer and respiratory diseases.

Do not drive the vehicle if any worn or broken part is detected in any part of the brake system. The cause of the damage must be repaired immediately.

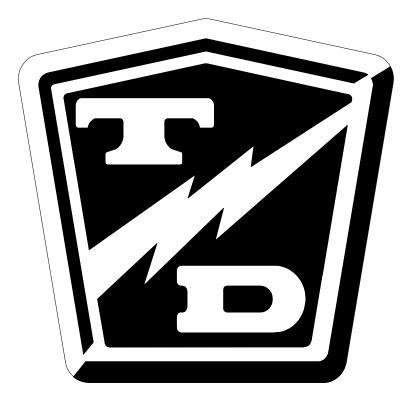

Taylor-Dunn[®] Mfg. 2114 W. Ball Rd. Anaheim, CA 92804 (800)-688-8680 (714) 956-4040 (FAX) (714) 956-0504

Mailing Address: P.O. Box 4240 Anaheim, California 92803

Visit our Website: www.taylor-dunn.com