

**Club Car**

®

**1999/2000**  
**ILLUSTRATED**  
**PARTS LIST**



**TOURALL, RESORT VILLAGER,  
TRANS-PORTER/TRANS-SENDER**

MANUAL NUMBER 102067403  
EDITION CODE 0300C1008B



# USING THE ILLUSTRATED PARTS LIST

## ⚠ WARNING

- THIS MANUAL IS TO BE USED ONLY FOR IDENTIFICATION AND ORDERING OF SERVICE PARTS. BE SURE TO READ AND USE THE MAINTENANCE AND SERVICE MANUAL BEFORE ATTEMPTING ANY VEHICLE REPAIRS.

This manual covers all 1999/2000 Transportation vehicles.

The manual is divided into 16 sections. Sections 1 through 5 pertain to both gasoline and electric vehicles, sections 6 through 11 pertain to gasoline vehicles only, sections 12 through 15 pertain to electric vehicles only, and section 16 pertains to tools that are used on Club Car products. Note that there are two or three flags on the outside edge of each page. The first flag contains the section number of which that page is a part. The other flag (or flags) contains either the letter G or E, signifying that the page pertains to either the gasoline or electric vehicle only, or to both the gasoline and electric vehicles.

Use the Table of Contents to find the sections and pages that contain the parts and assemblies you seek. The Table of Contents lists section titles and numbers, and under them, the individual page titles and numbers to be found in that section. Unless a page title specifies a particular vehicle(s), the page applies to all Transportation vehicles.

Typically, there is a two-page spread for each individual page title in the Table of Contents (however, some titles require several spreads). On the left-hand page is an illustration showing the parts in their relative positions; the parts are each tagged with an item number in a balloon. The right-hand page is the parts list page, and gives the page title at the top, then the item numbers (corresponding to the numbers on the illustration), part descriptions, and quantity of parts used. Some item numbers have more than one part number because several models and/or configurations of a component are represented together on one spread.

Note that a part description may be indented. This indentation corresponds to a parts assembly level indicated by the numbers 1, 2, 3, and 4 at the top left corner of the parts description area of the parts list page. A part that is indented to *level 2* is a component of the *level 1* part (assembly) that it is listed under. A *level 3* part is a component of the *level 2* part that it is listed under, and a *level 4* part is a component of the *level 3* part preceding it. In each case, the part quantity given for a level 2, 3, or 4 part is *the quantity used per next higher level assembly of which it is a component*. A part that is not indented is a *level 1* part. This means that the quantity given is the quantity used per the portion of the vehicle illustrated on that particular spread.



P. O. Box 204658  
Augusta, Georgia 30917-4658 USA

Telephone 706-863-3000

Service Parts Fax 706-855-7413

[www.clubcar.com](http://www.clubcar.com)

© 2000, CLUB CAR, INC.

All rights reserved.

This manual effective July 27, 1998



# CONTENTS

## BODY AND TRIM

## SECTION

1

FRONT BODY .....	1-3
REAR BODY AND FENDER—TOURALL .....	1-5
FRONT SEAT BOTTOM AND ARMRESTS—TOURALL .....	1-7
SEAT BACKS, REAR SEAT BOTTOM AND SUPPORT STRUCTURE—TOURALL .....	1-9
REAR FOOTREST AND HANDRAILS—TOURALL .....	1-11
CENTER BODY AND TRIM—RESORT VILLAGER .....	1-13
REAR BODY AND FENDER—RESORT VILLAGER .....	1-15
SEATS AND SUPPORT STRUCTURES—RESORT VILLAGER .....	1-17
FIRST SEAT AND SUPPORT STRUCTURE—TRANS-PORTER/TRANS-SENDER .....	1-19
SECOND SEAT AND SUPPORT STRUCTURE—TRANS-PORTER/TRANS-SENDER .....	1-21
THIRD SEAT AND COMPONENTS—TRANS-SENDER .....	1-23
REAR FOOTREST AND HANDRAILS—TRANS-SENDER .....	1-25
REAR BODY TRIM—TRANS-PORTER/TRANS-SENDER .....	1-27
REAR CARGO BED—TRANS-PORTER .....	1-29
STAKE-SIDES — TRANS-PORTER .....	1-31

## WHEELS AND TIRES

## SECTION

2

WHEELS AND TIRES .....	2-3
------------------------	-----

## DECALS

## SECTION

3

DECALS—TOURALL .....	3-3
DECALS—TOURALL, CONTINUED .....	3-5
DECALS—RESORT VILLAGER .....	3-7
DECALS—RESORT VILLAGER, CONTINUED .....	3-9
DECALS—TRANS-PORTER/TRANS-SENDER .....	3-11
DECALS—TRANS-PORTER/TRANS-SENDER, CONTINUED .....	3-13
DECALS—TRANS-PORTER/TRANS-SENDER, CONTINUED .....	3-15

## BRAKES, PEDAL, AND CABLE ASSEMBLIES

## SECTION

4

REAR BRAKE ASSEMBLY, SELF-ADJUSTING—TOURALL .....	4-3
REAR BRAKE ASSEMBLY, MANUALLY ADJUSTED—RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER .....	4-5
BRAKE PEDAL AND CABLE ASSEMBLY—TOURALL .....	4-7
BRAKE PEDAL AND CABLE ASSEMBLY—RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER .....	4-9
FRONT BRAKE ASSEMBLY—RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER .....	4-11
ACCELERATOR PEDAL ASSEMBLY—ELECTRIC TOURALL AND ALL GASOLINE VEHICLES .....	4-13
ACCELERATOR PEDAL ASSEMBLY—ELECTRIC RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER .....	4-15

## STEERING, FRONT AND REAR SUSPENSION

## SECTION

5

STEERING COLUMN .....	5-3
STEERING GEAR ASSEMBLY .....	5-5
FRONT SUSPENSION, UPPER—TOURALL .....	5-7
FRONT SUSPENSION, LOWER—TOURALL .....	5-9
FRONT SUSPENSION, UPPER—RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER .....	5-11

# CONTENTS

## STEERING, FRONT AND REAR SUSPENSION, CONTINUED:

FRONT SUSPENSION, LOWER– RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER .....	5-13
REAR SUSPENSION–TOURALL .....	5-15
REAR SUSPENSION– RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER .....	5-17
STABILIZER BAR–GASOLINE RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER .....	5-19

## ELECTRICAL SYSTEM– GASOLINE VEHICLE

## SECTION

**6**

FORWARD/REVERSE SHIFTER ASSEMBLY– GASOLINE VEHICLE .....	6-3
WIRING–GASOLINE TOURALL .....	6-5
ELECTRICAL COMPONENT BOX, GASOLINE VEHICLE– TOURALL .....	6-7
ELECTRICAL COMPONENTS, FRONT BODY– GASOLINE TOURALL .....	6-9
WIRING–GASOLINE RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER .....	6-11
ELECTRICAL COMPONENT BOX, GASOLINE VEHICLE– RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER .....	6-13
ELECTRICAL COMPONENTS, FRONT BODY–GASOLINE RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER .....	6-15
CONTROLS AND GAUGES–GASOLINE RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER .....	6-17
ELECTRICAL COMPONENTS, REAR BODY–GASOLINE RESORT VILLAGER .....	6-19
ELECTRICAL COMPONENTS, REAR BODY–GASOLINE TRANS-PORTER/ TRANS-SENDER .....	6-21
STARTER/GENERATOR ASSEMBLY .....	6-23
STARTER/GENERATOR MOUNTING .....	6-25
BATTERY–GASOLINE VEHICLE .....	6-27

## ENGINE

## SECTION

**7**

FE290 ENGINE– SHROUDS AND BRACKETS .....	7-3
FE290 ENGINE– IGNITION COMPONENTS AND FLYWHEEL .....	7-5
FE290 ENGINE– OIL CIRCULATION .....	7-7
FE290 ENGINE– CYLINDER HEAD .....	7-9
FE290 ENGINE– CRANKCASE, CAMSHAFT AND OIL SENSOR .....	7-11
FE290 ENGINE– CRANKCASE AND CRANKSHAFT .....	7-13
FE350 ENGINE– SHROUDS AND BRACKETS .....	7-15
FE350 ENGINE– IGNITION COMPONENTS AND FLYWHEEL .....	7-17
FE350 ENGINE– OIL CIRCULATION .....	7-19
FE350 ENGINE– CYLINDER HEAD .....	7-21
FE350 ENGINE– CRANKCASE, CAMSHAFT AND OIL SENSOR .....	7-23
FE350 ENGINE– CRANKCASE AND CRANKSHAFT .....	7-25
ENGINE MOUNTING .....	7-27

## FUEL, INTAKE, AND GOVERNOR SYSTEMS

## SECTION

**8**

FUEL SYSTEM .....	8-3
CARBURETOR ASSEMBLY, FE290 ENGINE– TOURALL .....	8-5
CARBURETOR ASSEMBLY, FE350 ENGINE– RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER .....	8-7
CARBURETOR INSTALLATION .....	8-9
GOVERNOR AND ACCELERATOR CABLES .....	8-11
INTAKE DUCT, CHOKE, AND AIR BOX ASSEMBLY– TOURALL .....	8-13

# CONTENTS

INTAKE DUCT, CHOKE, AND AIR BOX ASSEMBLY— RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER .....	8-15
---	------

## **EXHAUST SYSTEM** SECTION **9**

EXHAUST SYSTEM, FE290— TOURALL .....	9-3
EXHAUST SYSTEM, FE350— RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER .....	9-5

## **TORQUE CONVERTER** SECTION **10**

DRIVE CLUTCH .....	10-3
DRIVEN CLUTCH .....	10-5

## **UNITIZED TRANSAXLE— GASOLINE VEHICLE** SECTION **11**

UNITIZED TRANSAXLE, GASOLINE VEHICLE— .....	11-3
F&R TRANSMISSION AND GEAR REDUCTION .....	11-5
DIFFERENTIAL AND AXLES .....	11-7

## **ELECTRICAL SYSTEM— ELECTRIC VEHICLE** SECTION **12**

FORWARD/REVERSE SWITCH— POWERDRIVE ELECTRIC VEHICLE .....	12-3
MULTI-STEP POTENTIOMETER— TOURALL POWERDRIVE ELECTRIC VEHICLE .....	12-5
WIRING— TOURALL POWERDRIVE ELECTRIC VEHICLE .....	12-7
ELECTRICAL COMPONENTS, FRONT BODY— TOURALL POWERDRIVE ELECTRIC VEHICLE .....	12-9
BATTERIES, CHARGER RECEPTACLE— TOURALL POWERDRIVE ELECTRIC VEHICLE .....	12-11
COMPUTER, CONTROLLER, AND SOLENOID— TOURALL POWERDRIVE ELECTRIC VEHICLE .....	12-13
CONTINUOUSLY VARIABLE POTENTIOMETER— RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER	12-15
WIRING— RESORT VILLAGER POWERDRIVE ELECTRIC VEHICLE .....	12-17
ELECTRICAL COMPONENTS, FRONT BODY— RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER ....	12-19
SWITCHES AND GAUGES— RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER .....	12-21
COMPUTER, CONTROLLER, AND SOLENOID— RESORT VILLAGER POWERDRIVE ELECTRIC VEHICLE	12-23
ELECTRICAL COMPONENTS, CENTER BODY— RESORT VILLAGER POWERDRIVE ELECTRIC VEHICLE	12-25
ELECTRICAL COMPONENTS, REAR BODY— RESORT VILLAGER POWERDRIVE ELECTRIC VEHICLE ....	12-27
WIRING— TRANS-PORTER/TRANS-SENDER ELECTRIC VEHICLES .....	12-29
ELECTRICAL COMPONENTS, CENTER BODY— TRANS-PORTER/TRANS-SENDER ELECTRIC VEHICLES	12-31
ELECTRICAL COMPONENTS, CENTER BODY— TRANS-PORTER/TRANS-SENDER	
ELECTRIC VEHICLES, CONTINUED .....	12-33
ELECTRICAL COMPONENTS, REAR BODY— TRANS-PORTER/TRANS-SENDER ELECTRIC VEHICLES ....	12-35

## **BATTERY CHARGER** SECTION **13**

POWERDRIVE BATTERY CHARGER, DOMESTIC—TOURALL AND RESORT VILLAGER .....	13-3
POWERDRIVE BATTERY CHARGER, EXPORT—TOURALL AND RESORT VILLAGER .....	13-5
POWERDRIVE BATTERY CHARGER, EUROPEAN—TOURALL AND RESORT VILLAGER .....	13-7
ONBOARD POWERDRIVE BATTERY CHARGER, DOMESTIC—TRANS-PORTER/TRANS-SENDER .....	13-9
ONBOARD POWERDRIVE BATTERY CHARGER, EXPORT—TRANS-PORTER/TRANS-SENDER .....	13-11

# CONTENTS

---

<b>ELECTRIC MOTOR</b>	<b>SECTION</b>	<b>14</b>
MOTOR-POWERDRIVE ELECTRIC VEHICLE .....	14-3	
<b>TRANSAXLE- ELECTRIC VEHICLE</b>	<b>SECTION</b>	<b>15</b>
TRANSAXLE, TYPE G- POWERDRIVE ELECTRIC VEHICLE .....	15-3	
<b>MAINTENANCE AND SERVICE TOOLS</b>	<b>SECTION</b>	<b>16</b>
MAINTENANCE AND SERVICE TOOLS .....	16-3	
MAINTENANCE AND SERVICE TOOLS, CONTINUED .....	16-5	
<b>INDEX</b>	<b>SECTION</b>	<b>i</b>

# BODY AND TRIM


---

1

G

E

**1**  
**G**  
**E**

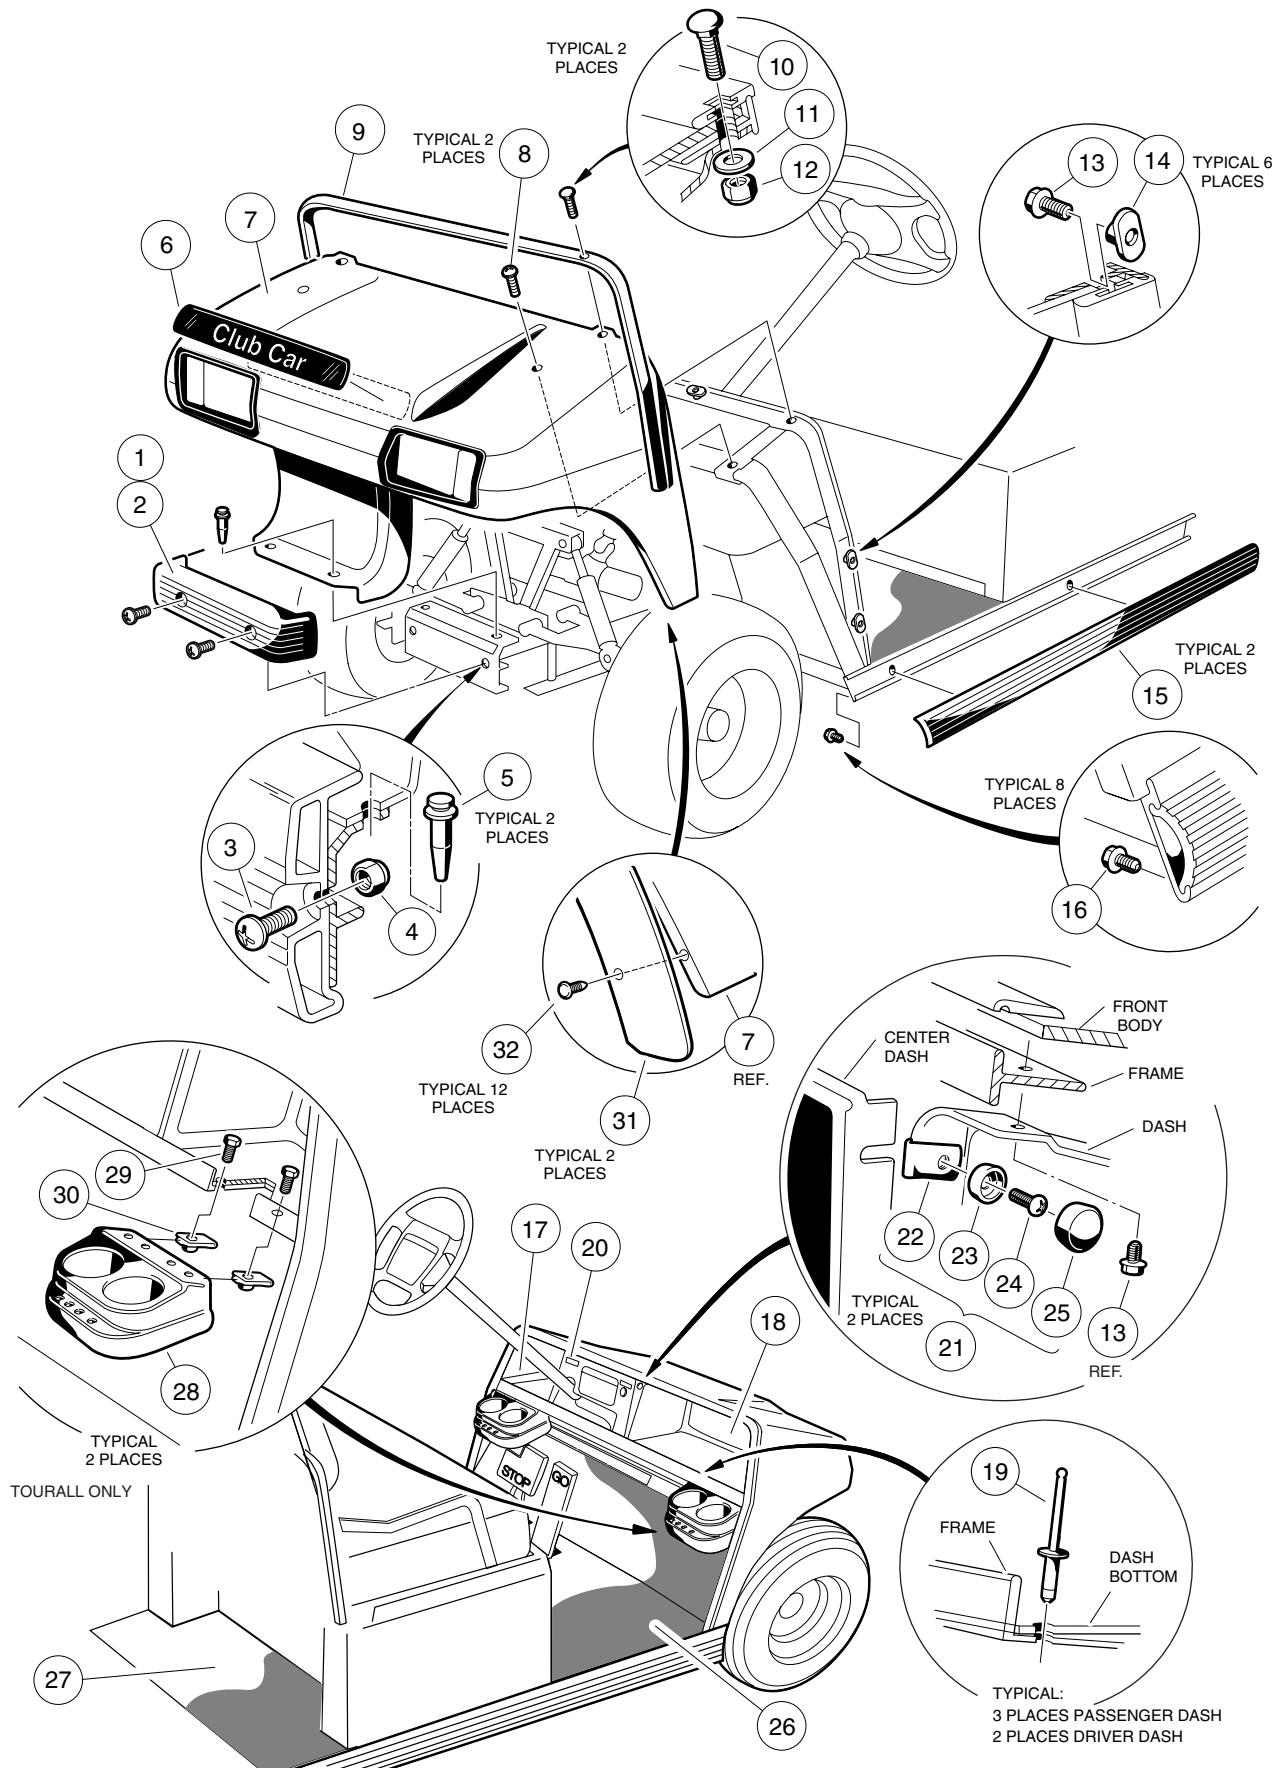

# FRONT BODY


ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	1017080	KIT, FRONT BUMPER (INCLUDES ITEMS 2 - 5) .....	1	1
2	1016868	BUMPER, FRONT .....	1	1
3	7251	SCREW, PHILLIPS TRUSS HEAD, 5/16 - 18 x 1 .....	2	2
4	7473	NUT, NYLON LOCK, 5/16 - 18 .....	2	2
5	1016967	RIVET, BLIND PUSH TYPE .....	2	2
6	101670201	NAMEPLATE, CLUB CAR (SILVER) .....	1	1
6	1014198	NAMEPLATE, CLUB CAR (GOLD) (RESORT VILLAGER ONLY) .....	1	1
7	101692504	BODY, FRONT - GRAY (TOURALL ONLY) .....	1	1
7	101693901	BODY, FRONT WITH HEADLIGHT OPENING (BEIGE) .....	1	1
7	101693902	BODY, FRONT WITH HEADLIGHT OPENING (WHITE) .....	1	1
7	101693904	BODY, FRONT WITH HEADLIGHT OPENING (GRAY ) .....	1	1
7	101692508	BODY, FRONT WITH HEADLIGHT OPENING (PACIFIC BLUE) .....	1	1
7	101693909	BODY, FRONT WITH HEADLIGHT OPENING (DARK GREEN) .....	1	1
7	101693911	BODY, FRONT WITH HEADLIGHT OPENING (CLASSIC BLUE) .....	1	1
7	101693912	BODY, FRONT WITH HEADLIGHT OPENING (BURGUNDY) .....	1	1
8	7251	SCREW, PHILLIPS TRUSS HEAD, 5/16 - 18 x 1 .....	2	2
9	1011014	TRIM, FRONT BODY .....	1	1
10	1010435	SCREW, ROUND-HEAD SQUARE-NECK, 5/16 - 18 x 1 .....	2	2
11	1241	WASHER, FLAT, 5/16 .....	2	2
12	7473	NUT, NYLON LOCK, 5/16 - 18 .....	2	2
13	1011017	SCREW, FLANGE LOCK, #8 - 32 x 3/8 .....	6	6
14	1011394	NUT, SLAB BASE "T" (PACKAGE OF 4 PIECES) .....	1	1
15	101347501	TRIM, SIDE BUMPER GUARD (TOURALL ONLY) .....	2	2
15	101347503	TRIM, SIDE BUMPER GUARD (RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER) .....	2	2
16	1012047	SCREW, SELF-TAPPING, #8 - 32 x 3/8 .....	8	8
17	1013344	COMPONENT, DASH, DRIVER SIDE (BLACK ) .....	1	1
18	1013343	COMPONENT, DASH, PASSENGER SIDE (BLACK) .....	1	1
19	7973	RIVET, ALUMINUM POP, 3/16 .....	5	5
20	101660404	PANEL, CENTER DASH .....	1	1
21	1014645	KIT, SNAP WASHER (BLACK) (INCLUDES ITEMS 22 - 25) .....	2	2
22	N/A	NUT, SPEED, #10 - 32 .....	1	1
23	N/A	WASHER, CUP, #10 .....	1	1
24	N/A	SCREW, SHEET METAL, #10 x 3/4 .....	1	1
25	N/A	COVER, SCREW HEAD .....	1	1
26	1015032	MAT, FLOOR, FRONT .....	1	1
27	1017289	MAT, FLOOR, REAR (RESORT VILLAGER ONLY) .....	1	1
27	1016718	MAT, FLOOR, REAR (TRANS-PORTER/TRANS-SENDER ONLY) .....	1	1
28	101708301	KIT, DRINK HOLDER (INCLUDES ITEMS 29 AND 30) (TOURALL ONLY) .....	2	2
29	7847	SCREW, HEX HEAD CAP, 1/4 - 20 x 3/4 .....	2	2
30	1016952	U-NUT, 1/4 - 20 .....	2	2
31	101870401	FENDER (VEHICLES WITH 4-WHEEL BRAKES) .....	2	2
32	1010434	BARREL, PLASTIC (VEHICLES WITH 4-WHEEL BRAKES) .....	12	12

1

G

E

**1**  
**G**  
**E**

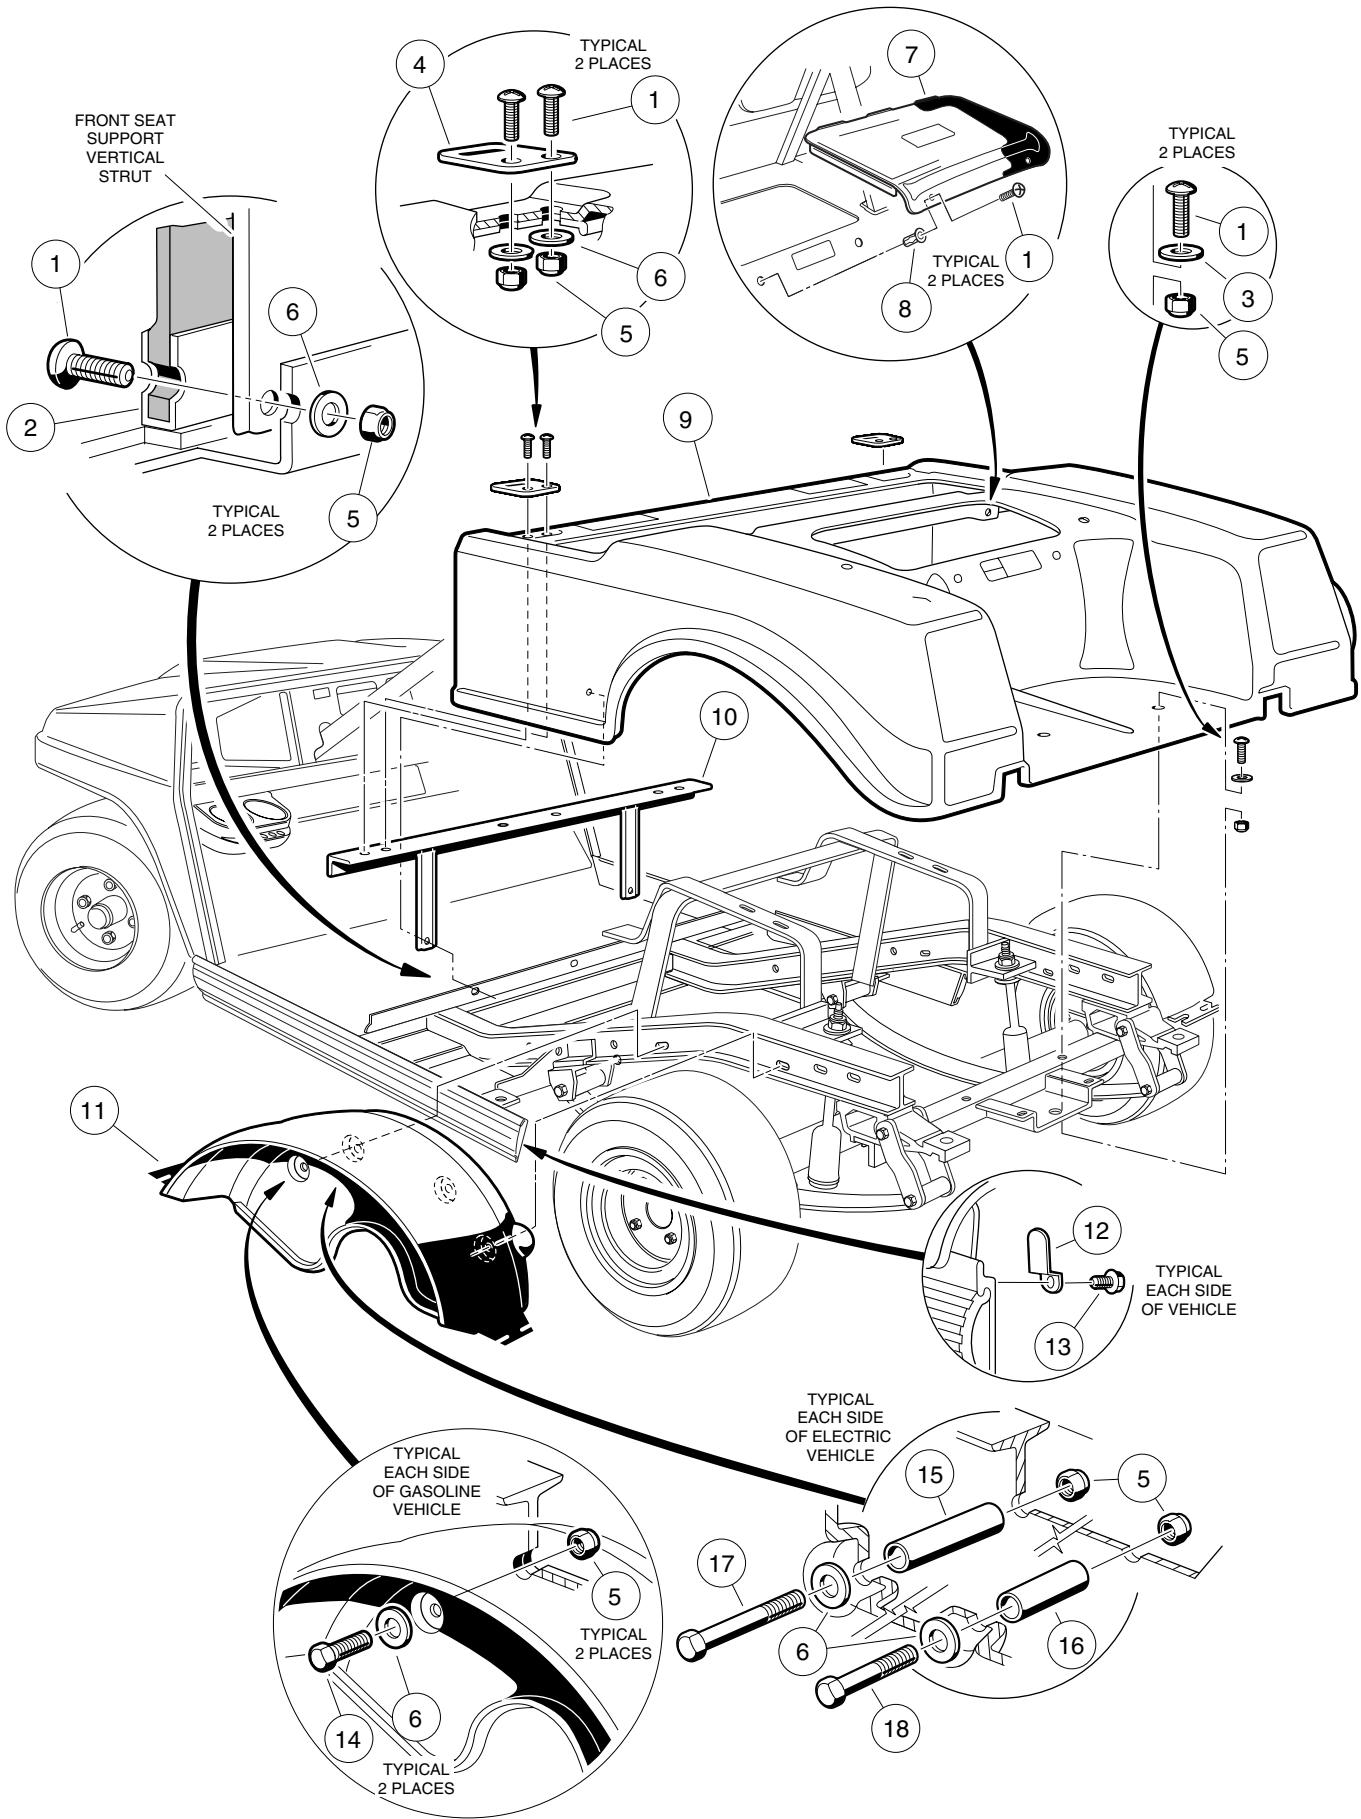

# REAR BODY AND FENDER— TOURALL


ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	8251	SCREW, PHILLIPS HEAD, 1/4 - 20 x 1 .....	10	10
2	101904101	PLATE, BODY KICK .....	1	1
3	1014306	WASHER, FLAT, TYPE B, 1/4 .....	2	2
4	1012412	PLATE, BODY HINGE .....	2	2
5	8233	NUT, NYLON LOCK, 1/4 - 20 .....	12	12
6	332	WASHER, FLAT, 1/4 .....	10	10
7	1013032	DOOR, ACCESS - BLACK .....	1	1
8	1015525	NUT, BLIND, 1/4 - 20 .....	2	2
9	101692604	BODY - GRAY .....	1	1
10	1017141	SUPPORT, FRONT BODY .....	1	1
11	1017936	FENDER, INNER .....	2	2
12	1017748	CLIP, BODY KEEPER .....	2	2
13	1012047	SCREW, SELF-TAPPING, #8 - 32 x 3/8 .....	2	2
14	304	SCREW, HEX HEAD CAP, 1/4 - 20 x 1 .....	4	
15	1017814	SPACER, 1-7/8 .....		2
16	1017815	SPACER, 1/2 .....		2
17	1012159	SCREW, HEX HEAD CAP, 1/4 - 20 x 2-3/4 .....		2
18	7479	SCREW, HEX HEAD CAP, 1/4 - 20 x 1-1/4 .....		2

1

G


E

**1  
G  
E**

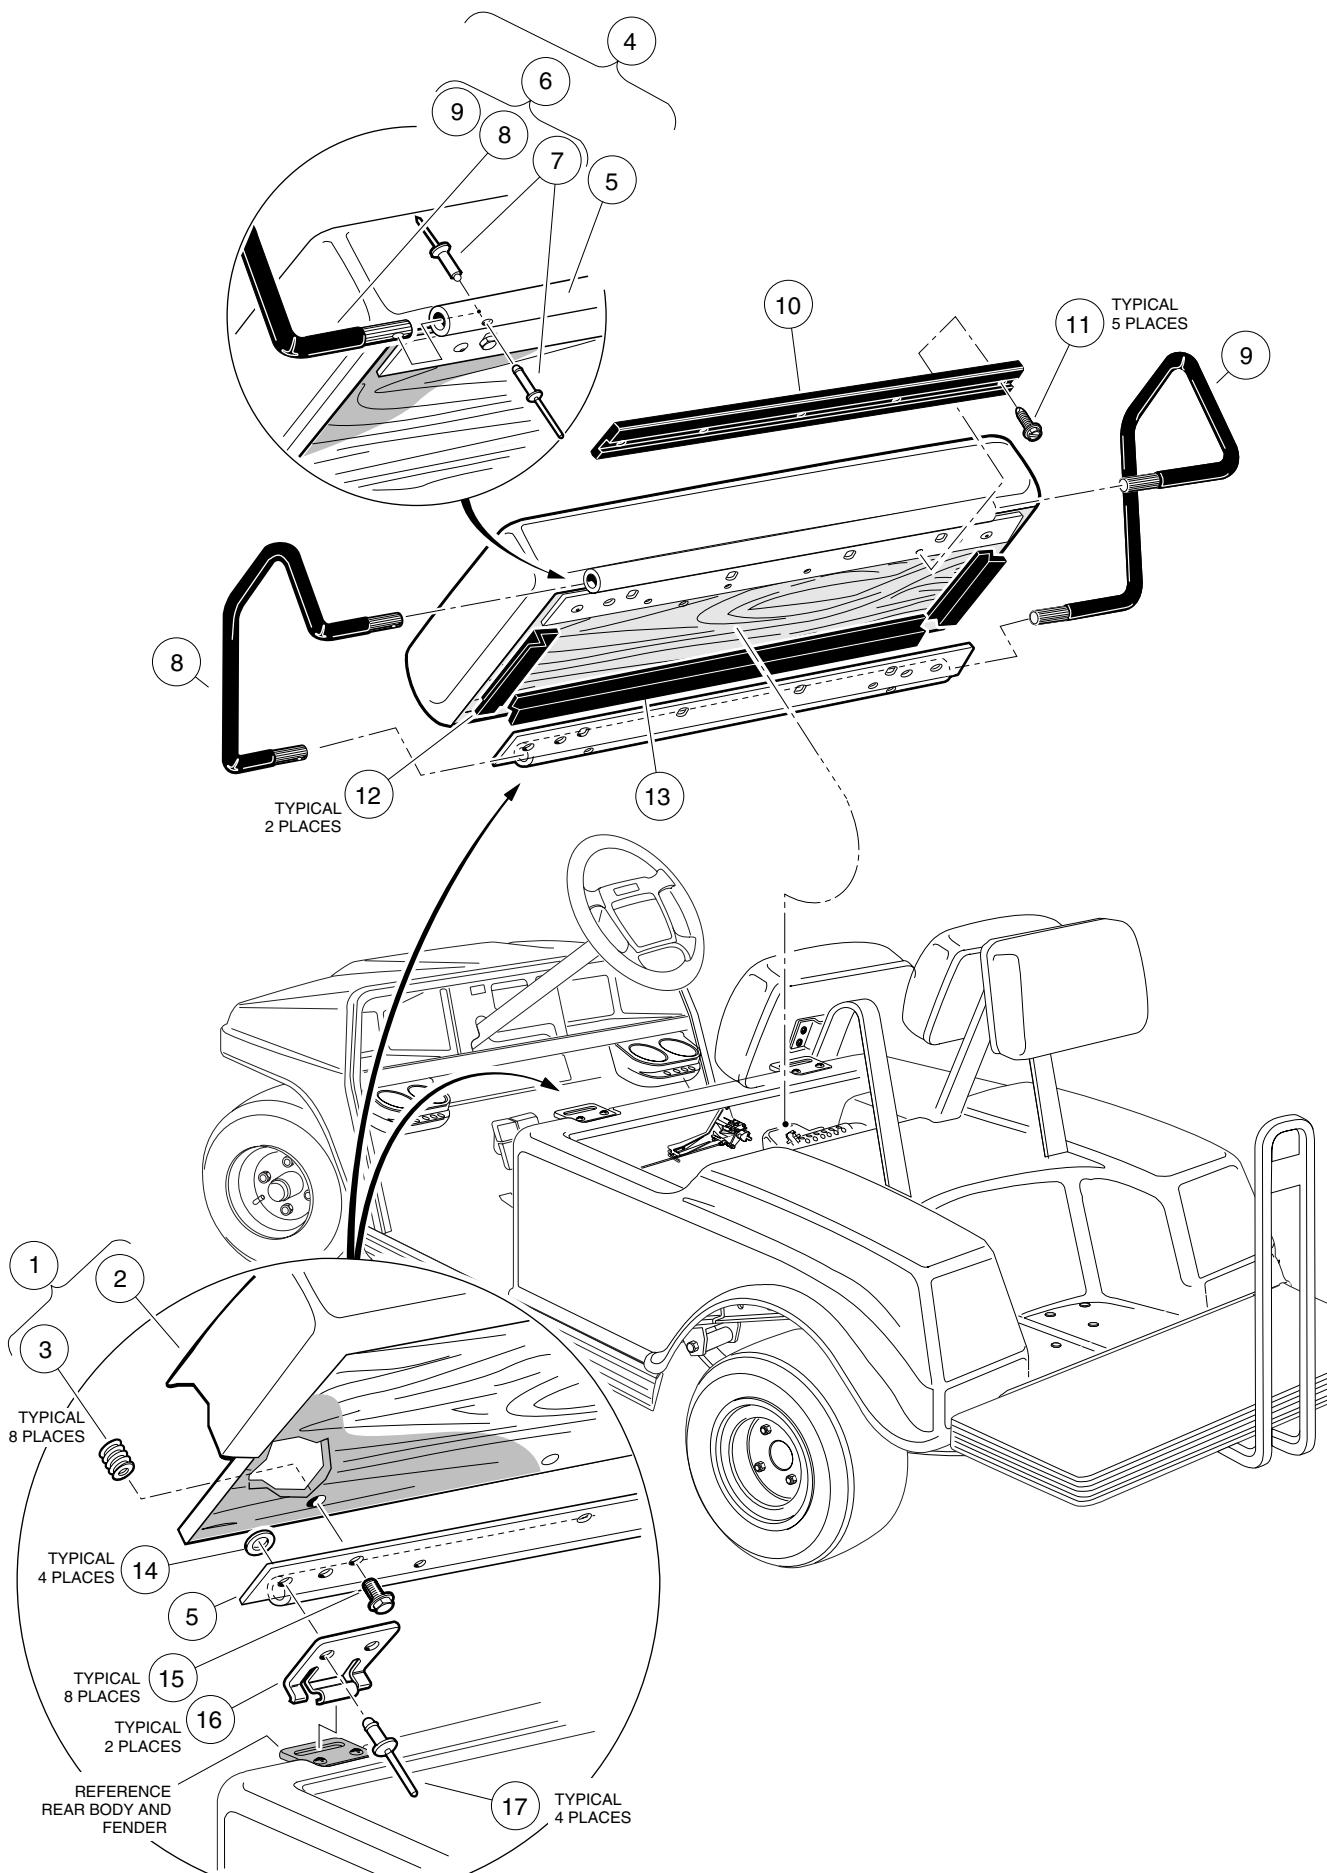

# FRONT SEAT BOTTOM AND ARMRESTS— TOURALL


ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	
		1 2 3 4			<b>1</b>
1	101564805	ASSEMBLY, SEAT BOTTOM - WHITE (INCLUDES ITEMS 2 AND 3) .....	1	1	<b>G</b>
1	101564807	ASSEMBLY, SEAT BOTTOM - GRAY (INCLUDES ITEMS 2 AND 3) .....	1	1	
1	101564808	ASSEMBLY, SEAT BOTTOM - BLACK (INCLUDES ITEMS 2 AND 3) .....	1	1	<b>E</b>
2	101562702	COVER, VINYL SEAT BOTTOM - WHITE .....	1	1	
2	101562704	COVER, VINYL SEAT BOTTOM - BLACK .....	1	1	
2	101562710	COVER, VINYL SEAT BOTTOM - GRAY .....	1	1	
3	1010543	INSERT, WOOD .....	8	8	
4	1015670	ASSEMBLY, SEAT SUPPORT AND ARMREST (INCLUDES ITEMS 5 - 9) .....	1	1	
5	1015625	BRACKET, SEAT SUPPORT .....	2	2	
6	101951101	KIT, ARMREST (INCLUDES ITEMS 7 - 9) .....	1	1	
7	101880901	RIVET, MATING, 3/16 .....	8	8	
8	N/A	ASSEMBLY, ARMREST, DRIVER SIDE .....	1	1	
9	N/A	ASSEMBLY, ARMREST, PASSENGER SIDE .....	1	1	
10	1012597	BUMPER, SEAT .....	1	1	
11	1017384	SCREW, WASHER HEAD TAP, #12 .....	5	5	
12	1012656	GASKET, SEAT-SHORT (GASOLINE VEHICLE ONLY) .....	2		
13	1012657	GASKET, SEAT-LONG (GASOLINE VEHICLE ONLY) .....	1		
14	101881701	WASHER, FLAT, STAINLESS STEEL, #8 .....	4	4	
15	101954301	SCREW, HEX HEAD CAP (WITH ADHESIVE PATCH), 1/4 - 20 x 3/4 .....	8	8	
16	1011652	PLATE, SEAT HINGE, STAINLESS STEEL .....	2	2	
17	101880901	RIVET, POP, STAINLESS STEEL, 3/16 .....	4	4	

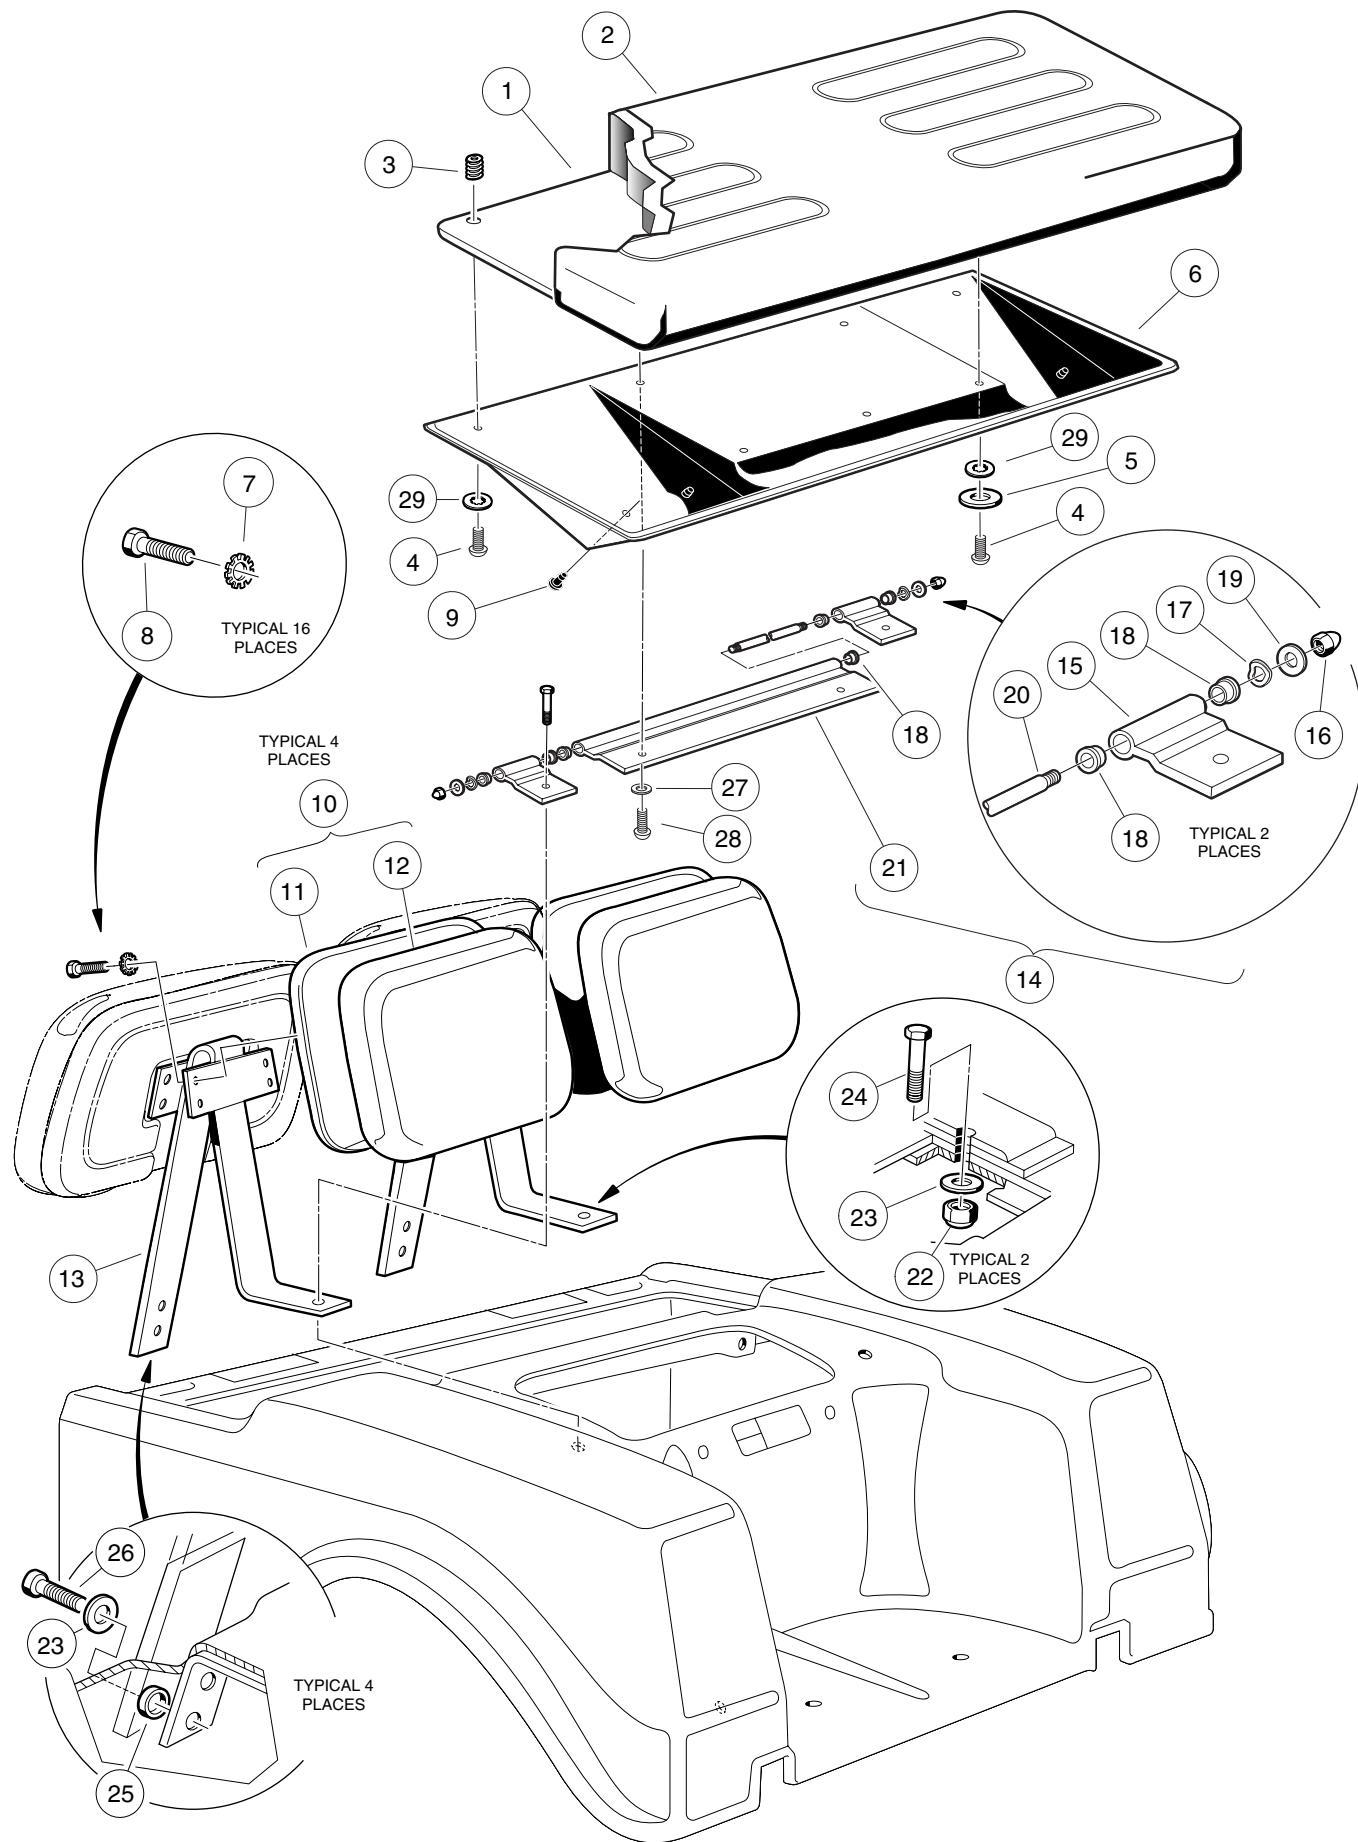**1****G****E**

# SEAT BACKS, REAR SEAT BOTTOM AND SUPPORT STRUCTURE—TOURALL

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	
		1 2 3 4			1
1	101564805	ASSEMBLY, SEAT BOTTOM - WHITE (INCLUDES ITEMS 2 AND 3) .....	1	1	G
1	101564807	ASSEMBLY, SEAT BOTTOM - GRAY (INCLUDES ITEMS 2 AND 3) .....	1	1	
1	101564808	ASSEMBLY, SEAT BOTTOM - BLACK (INCLUDES ITEMS 2 AND 3) .....	1	1	E
2	101562702	COVER, VINYL SEAT BOTTOM - WHITE .....	1	1	
2	101562704	COVER, VINYL SEAT BOTTOM - BLACK .....	1	1	
2	101562710	COVER, VINYL SEAT BOTTOM - GRAY .....	1	1	
3	1010543	INSERT, WOOD .....	7	7	
4	8251	SCREW, PHILLIPS TRUSS HEAD, 1/4 - 20 x 1 .....	5	5	
5	1011578	WASHER, FLAT, 5/16 .....	3	3	
6	1011210	SUPPORT, SEAT .....	1	1	
7	101946201	WASHER, EXTERNAL TOOTH LOCK, 1/4 .....	16	16	
8	7847	SCREW, HEX HEAD CAP, 1/4 - 20 x 3/4 .....	16	16	
9	1011389	BUMPER, RUBBER (PACKAGE OF 5) .....	1	1	
10	101565202	ASSEMBLY, SEAT BACK, THIN - WHITE (INCLUDES ITEMS 11 AND 12) .....	4	4	
10	101565205	ASSEMBLY, SEAT BACK, THIN - BLACK (INCLUDES ITEMS 11 AND 12) .....	4	4	
10	101565206	ASSEMBLY, SEAT BACK, THIN - GRAY (INCLUDES ITEMS 11 AND 12) .....	4	4	
11	1013335	CAP, SEAT BACK - BLACK .....	1	1	
12	101562602	COVER, VINYL SEAT BACK - WHITE .....	1	1	
12	101562604	COVER, VINYL SEAT BACK - BLACK .....	1	1	
12	101562605	COVER, VINYL SEAT BACK - GRAY .....	1	1	
13	1011182	SUPPORT, SEAT BACK .....	2	2	
14	1011219	ASSEMBLY, HINGE (INCLUDES ITEMS 15 - 21) .....	1	1	
15	1011221	HINGE, SHORT .....	2	2	
16	1015091	NUT, CENTERLOCK CAP, 1/4 - 20 x 1/4 .....	2	2	
17	1010695	WASHER, CURVED SPRING, 1/4 .....	2	2	
18	8028	BUSHING, NYLON .....	6	6	
19	332	WASHER, FLAT, 1/4 .....	2	2	
20	1011222	PIN, HINGE, LONG .....	1	1	
21	1011220	HINGE, LONG .....	1	1	
22	7473	NUT, NYLON LOCK, 5/16 - 18 .....	2	2	
23	1241	WASHER, FLAT, 5/16 .....	6	6	
24	1010577	SCREW, HEX HEAD CAP, 5/16 - 18 x 1-1/2 .....	2	2	
25	1017774	SPACER, BODY .....	4	4	
26	101910401	SCREW, THREAD-FORMING, 5/16 - 18 x 1-1/4 .....	4	4	
27	1014007	WASHER, LOCK, 1/4 .....	2	2	
28	1016916	SCREW, HEX HEAD CAP, WITH NYLON PATCH, 1/4 - 20 x 1-1/2 .....	2	2	
29	8304	WASHER, INTERNAL TOOTH LOCK, 1/4 .....	5	5	


**1**  
**G**  
**E**

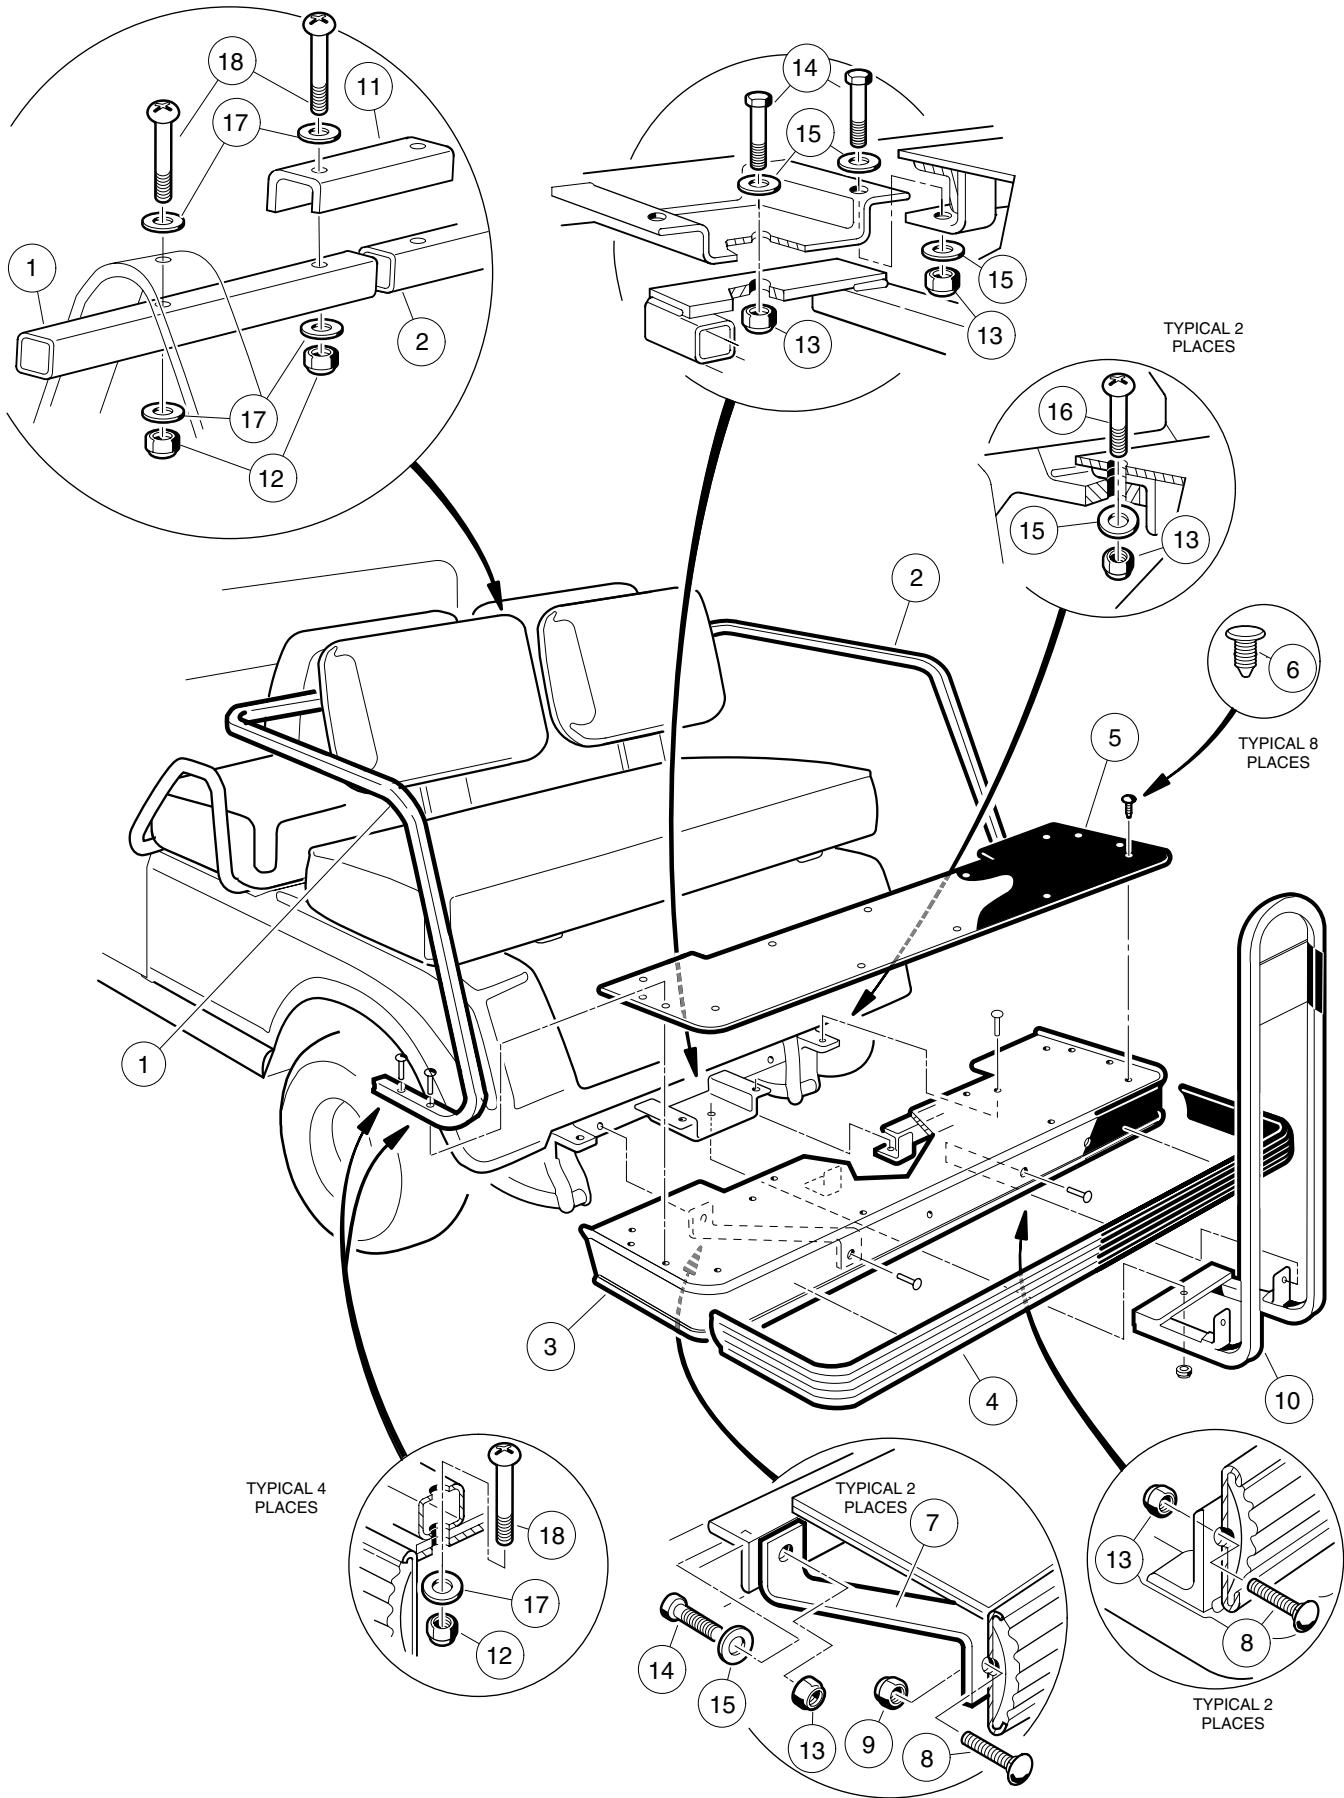

# REAR FOOTREST AND HANDRAILS—TOURALL

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	
		1 2 3 4			1
1	101841202	ARMREST, REAR SEAT, DRIVER SIDE .....	1	1	G
2	101841201	ARMREST, REAR SEAT, PASSENGER SIDE .....	1	1	E
3	101841101	ASSEMBLY, REAR FOOTREST (INCLUDES ITEMS 4 - 9) .....	1	1	
4	101347505	GUARD, BUMPER .....	1	1	
5	101840901	MAT, FOOTREST .....	1	1	
6	1010434	FASTENER, PLASTIC BARREL .....	8	8	
7	1016668	BAR, CONNECTING .....	2	2	
8	1010435	SCREW, ROUND-HEAD SQUARE-NECK, 5/16 - 18 x 1 .....	4	4	
9	7473	NUT, NYLON LOCK, 5/16 - 18 .....	2	2	
10	1016842	HANDRAIL, REAR SEAT .....	1	1	
11	101841301	BRACKET, ARMREST .....	1	1	
12	8233	NUT, NYLON LOCK, 1/4 - 20 .....	8	8	
13	7473	NUT, NYLON LOCK, 5/16 - 18 .....	9	9	
14	1218	SCREW, HEX HEAD CAP, 5/16 - 18 x 1-1/4 .....	5	5	
15	1241	WASHER, FLAT, 5/16 .....	9	9	
16	7410	SCREW, TRUSS HEAD, 5/16 - 18 x 1-1/4 .....	2	2	
17	332	WASHER, FLAT, 1/4 .....	8	8	
18	1011988	SCREW, PHILLIPS TRUSS HEAD, 1/4 - 20 x 2 .....	8	8	

**1**  
**G**  
**E**

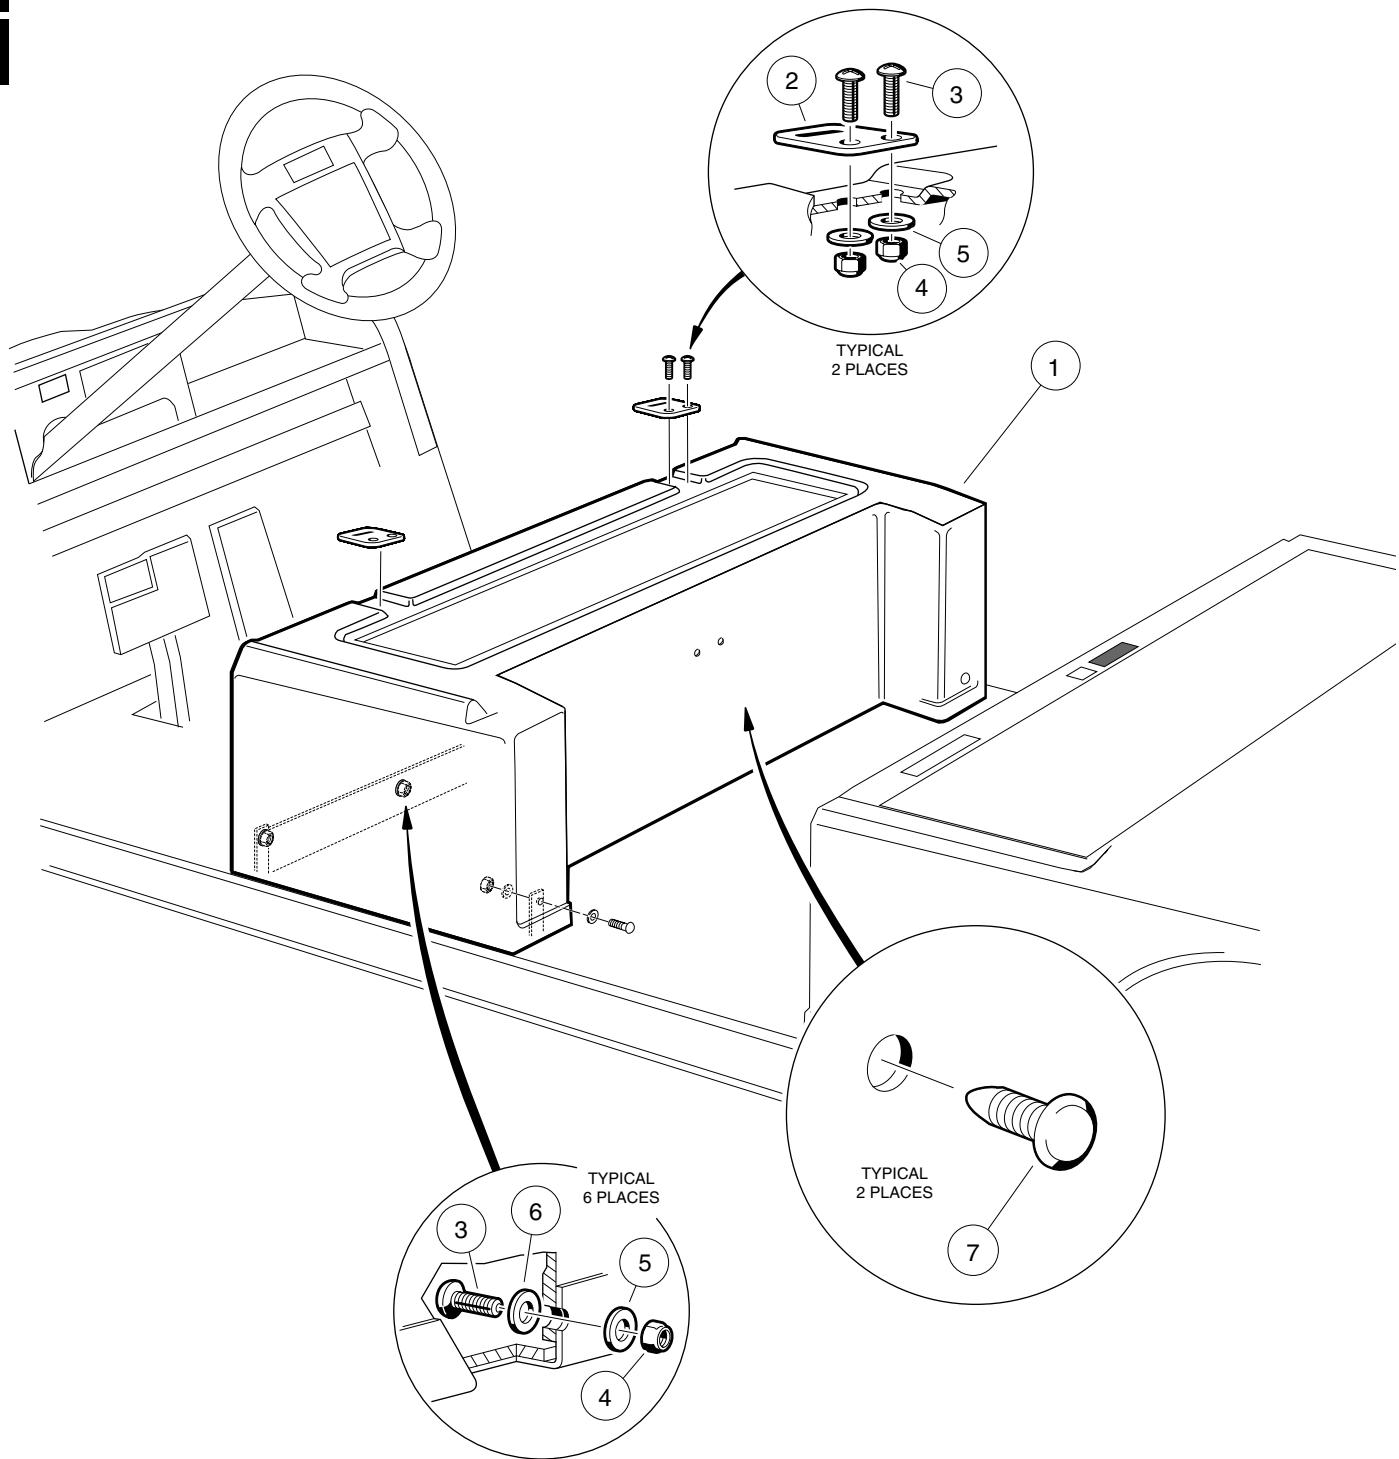

# CENTER BODY AND TRIM—RESORT VILLAGER


ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	101731601	BODY, CENTER - BEIGE .....	1	1
1	101731602	BODY, CENTER - WHITE .....	1	1
1	101731604	BODY, CENTER - GRAY .....	1	1
1	101731608	BODY, CENTER - PACIFIC BLUE .....	1	1
1	101731609	BODY, CENTER - DARK GREEN .....	1	1
1	101731611	BODY, CENTER - CLASSIC BLUE .....	1	1
1	101731612	BODY, CENTER - BURGUNDY .....	1	1
2	1012412	PLATE, SEAT HINGE .....	2	2
3	8251	SCREW, PHILLIPS TRUSS HEAD, 1/4 - 20 x 1 .....	10	10
4	8233	NUT, NYLON LOCK, 1/4 - 20 .....	10	10
5	332	WASHER, FLAT, 1/4 .....	10	10
6	1012581	WASHER, NYLON CUP, 1/4 .....	6	6
7	1010434	BARREL, PLASTIC .....	2	2

1

G

E

**1**  
**G**  
**E**

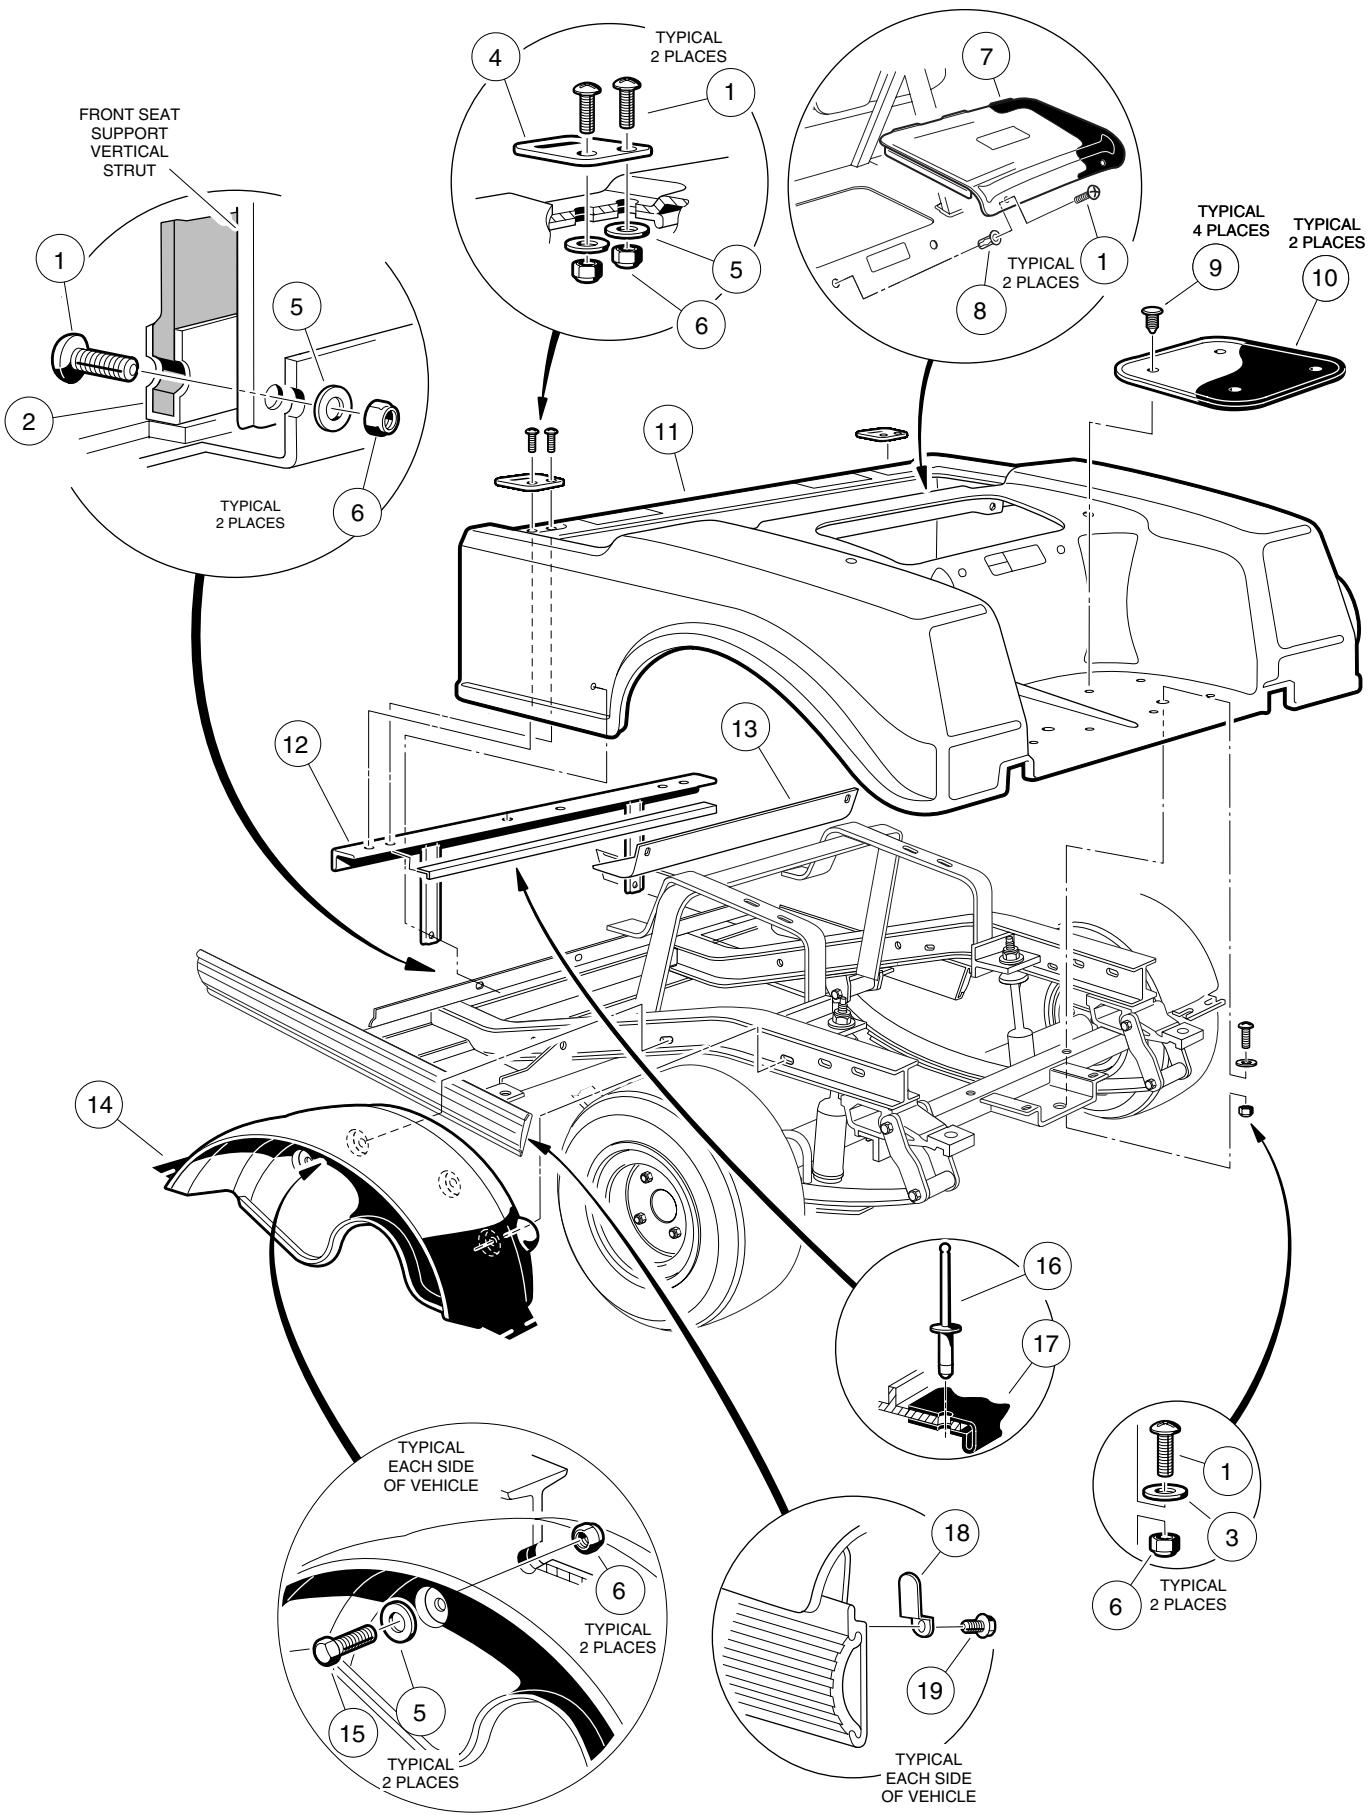

# REAR BODY AND FENDER—RESORT VILLAGER


ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	8251	SCREW, PHILLIPS TRUSS HEAD, 1/4 - 20 x 1 .....	10	10
2	101904101	PLATE, BODY KICK .....	1	1
3	1014306	WASHER, FLAT, TYPE B, 1/4 .....	2	2
4	1012412	PLATE, BODY HINGE .....	2	2
5	332	WASHER, FLAT, 1/4 .....	10	10
6	8233	NUT, NYLON LOCK, 1/4 - 20 .....	12	12
7	1013032	DOOR, ACCESS - BLACK .....	1	1
8	1015525	NUT, BLIND, 1/4 - 20 .....	2	2
9	1010434	BARREL, PLASTIC .....	8	8
10	1014392	MAT, BAG REST .....	2	2
11	101728701	BODY - BEIGE .....	1	1
11	101728702	BODY - WHITE .....	1	1
11	101728704	BODY - GRAY .....	1	1
11	101728708	BODY - PACIFIC BLUE .....	1	1
11	101728709	BODY - DARK GREEN .....	1	1
11	101728711	BODY - CLASSIC BLUE .....	1	1
11	101728712	BODY - BURGUNDY .....	1	1
12	1017141	SUPPORT, FRONT BODY .....	1	1
13	101806901	SHIELD, HEAT (GASOLINE VEHICLES ONLY) .....	1	
14	1017936	FENDER, INNER .....	2	2
15	7847	SCREW, HEX WASHER HEAD, 1/4 - 20 x 3/4 .....	4	4
16	1013357	RIVET, POP (ELECTRIC VEHICLE ONLY) .....		2
17	101837001	INSULATOR, BATTERY (ELECTRIC VEHICLE ONLY) .....		1
18	1017748	CLIP, BODY KEEPER .....	2	2
19	1012047	SCREW, SELF-TAPPING, #8 - 32 x 3/8 .....	2	2

1

G

E

**1**  
**G**  
**E**

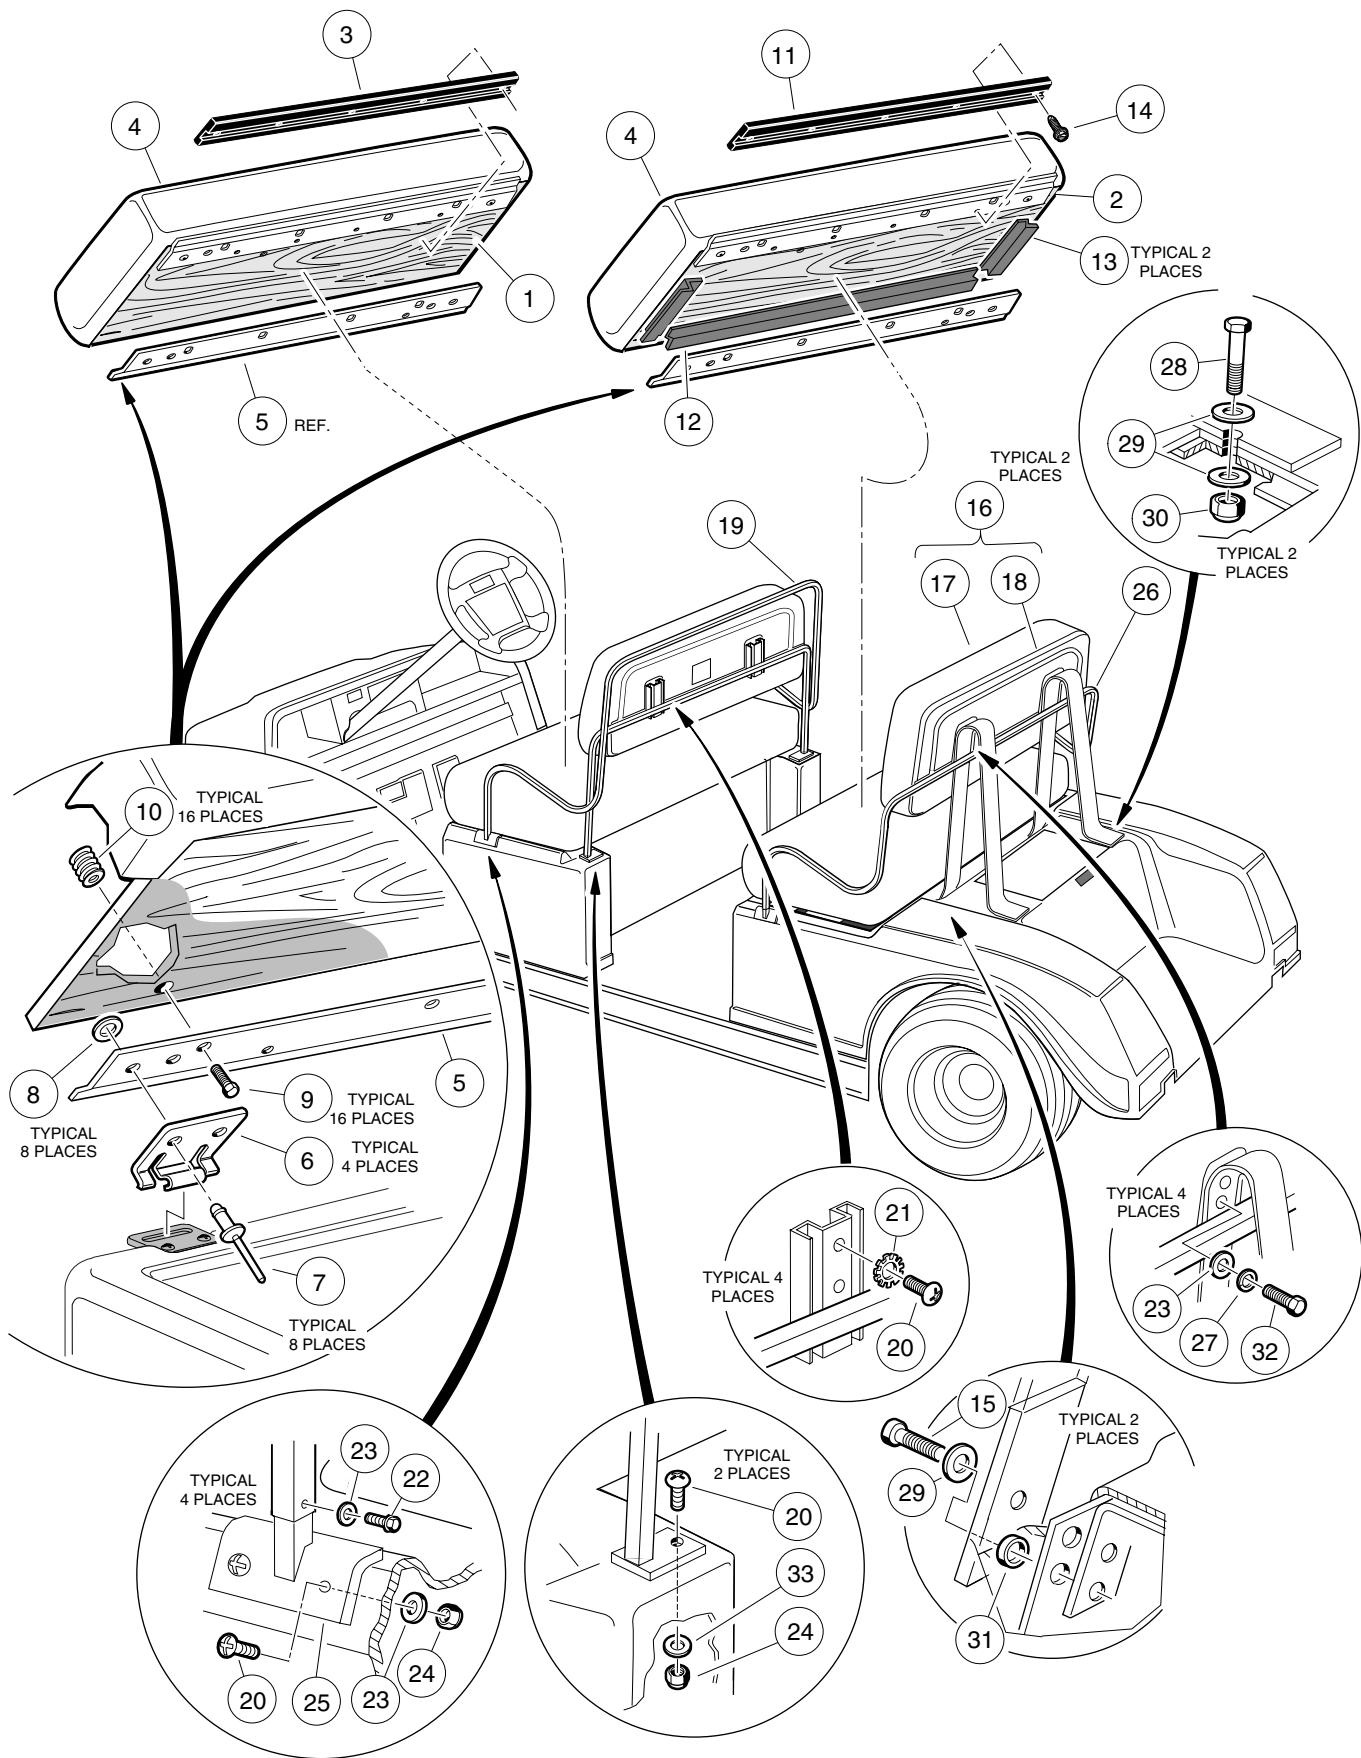

# SEATS AND SUPPORT STRUCTURES— RESORT VILLAGER


ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	101728201	ASSEMBLY, FIRST SEAT BOTTOM - WHITE (INCLUDES ITEMS 3 - 10) .....	1	1
1	101728203	ASSEMBLY, FIRST SEAT BOTTOM - BUFF (INCLUDES ITEMS 3 - 10) .....	1	1
1	101728210	ASSEMBLY, FIRST SEAT BOTTOM - BLACK (INCLUDES ITEMS 3 - 10) .....	1	1
1	101728213	ASSEMBLY, FIRST SEAT BOTTOM - GRAY (INCLUDES ITEMS 3 - 10) .....	1	1
2	101728202	ASSEMBLY, SECOND SEAT BOTTOM - WHITE (INCLUDES ITEMS 4 - 14) .....	1	1
2	101728204	ASSEMBLY, SECOND SEAT BOTTOM - BUFF (INCLUDES ITEMS 4 - 14) .....	1	1
2	101728211	ASSEMBLY, SECOND SEAT BOTTOM - BLACK (INCLUDES ITEMS 4 - 14) .....	1	1
2	101728214	ASSEMBLY, SECOND SEAT BOTTOM - GRAY (INCLUDES ITEMS 4 - 14) .....	1	1
3	1013312	BUMPER, SEAT - LONG (FIRST SEAT ONLY) .....	1	1
4	101562701	COVER, VINYL SEAT BOTTOM - BUFF .....	1	1
4	101562702	COVER, VINYL SEAT BOTTOM - WHITE .....	1	1
4	101562704	COVER, VINYL SEAT BOTTOM - BLACK .....	1	1
4	101562710	COVER, VINYL SEAT BOTTOM - GRAY .....	1	1
5	1017695	BRACKET, SEAT SUPPORT .....	2	2
6	1011652	PLATE, SEAT HINGE .....	2	2
7	101880901	RIVET, POP, STAINLESS STEEL, 3/16 .....	4	4
8	101881701	WASHER, FLAT, STAINLESS STEEL, #8 .....	4	4
9	101954301	SCREW, HEX HEAD CAP (WITH ADHESIVE PATCH), 1/4 - 20 x 3/4 .....	8	8
10	1010543	INSERT, WOOD .....	8	8
11	1012597	BUMPER, SEAT (SECOND SEAT ONLY) .....	1	1
12	1012657	GASKET, SEAT-LONG (SECOND SEAT ONLY) .....	1	1
13	1012656	GASKET, SEAT-SHORT (SECOND SEAT ONLY) .....	2	2
14	1017384	SCREW, WASHER HEAD TAP, #12 (SECOND SEAT ONLY) .....	5	5
15	101910401	SCREW, THREAD-FORMING, 5/16 - 18 x 1-1/4 .....	4	4
16	101677701	ASSEMBLY, SEAT BACK - WHITE (INCLUDES ITEMS 17 AND 18) .....	2	2
16	101677702	ASSEMBLY, SEAT BACK - BLACK (INCLUDES ITEMS 17 AND 18) .....	2	2
16	101677703	ASSEMBLY, SEAT BACK - BUFF (INCLUDES ITEMS 17 AND 18) .....	2	2
16	101677705	ASSEMBLY, SEAT BACK - GRAY (INCLUDES ITEMS 17 AND 18) .....	2	2
17	101675501	COVER, VINYL SEAT BACK - BUFF .....	2	2
17	101675502	COVER, VINYL SEAT BACK - WHITE .....	2	2
17	101675504	COVER, VINYL SEAT BACK - BLACK .....	2	2
17	101675506	COVER, VINYL SEAT BACK - GRAY .....	2	2
18	1016751	CAP, SEAT BACK - BLACK .....	2	2
19	1017259	WELDMENT, FRONT ARMREST .....	1	1
20	1015902	SCREW, PHILLIPS TRUSS HEAD, 1/4 - 20 x 1-1/4 .....	14	14
21	101946201	WASHER, EXTERNAL TOOTH LOCK, 1/4 .....	4	4
22	1012285	SCREW, THREAD ROLLING, 1/4 - 20 x 5/8 .....	4	4
23	332	WASHER, FLAT, 1/4 .....	16	16
24	8233	NUT, NYLON LOCK, 1/4 - 20 .....	10	10
25	1017310	WELDMENT, ARMREST MOUNTING .....	4	4
26	101799201	WELDMENT, REAR ARMREST .....	1	1
27	451	WASHER, LOCK, 1/4 .....	4	4
28	1218	SCREW, HEX HEAD CAP, 5/16 - 18 x 1-1/4 .....	2	2
29	1241	WASHER, FLAT, 5/16 .....	8	8
30	7473	NUT, NYLON LOCK, 5/16 - 18 .....	2	2
31	1017774	SPACER, BODY .....	4	4
32	101954301	SCREW, HEX HEAD CAP, 1/4 - 20 x 3/4 .....	4	4
33	1014306	WASHER, FLAT, TYPE B, 1/4 .....	2	2

1

G

E


**1**  
**G**  
**E**

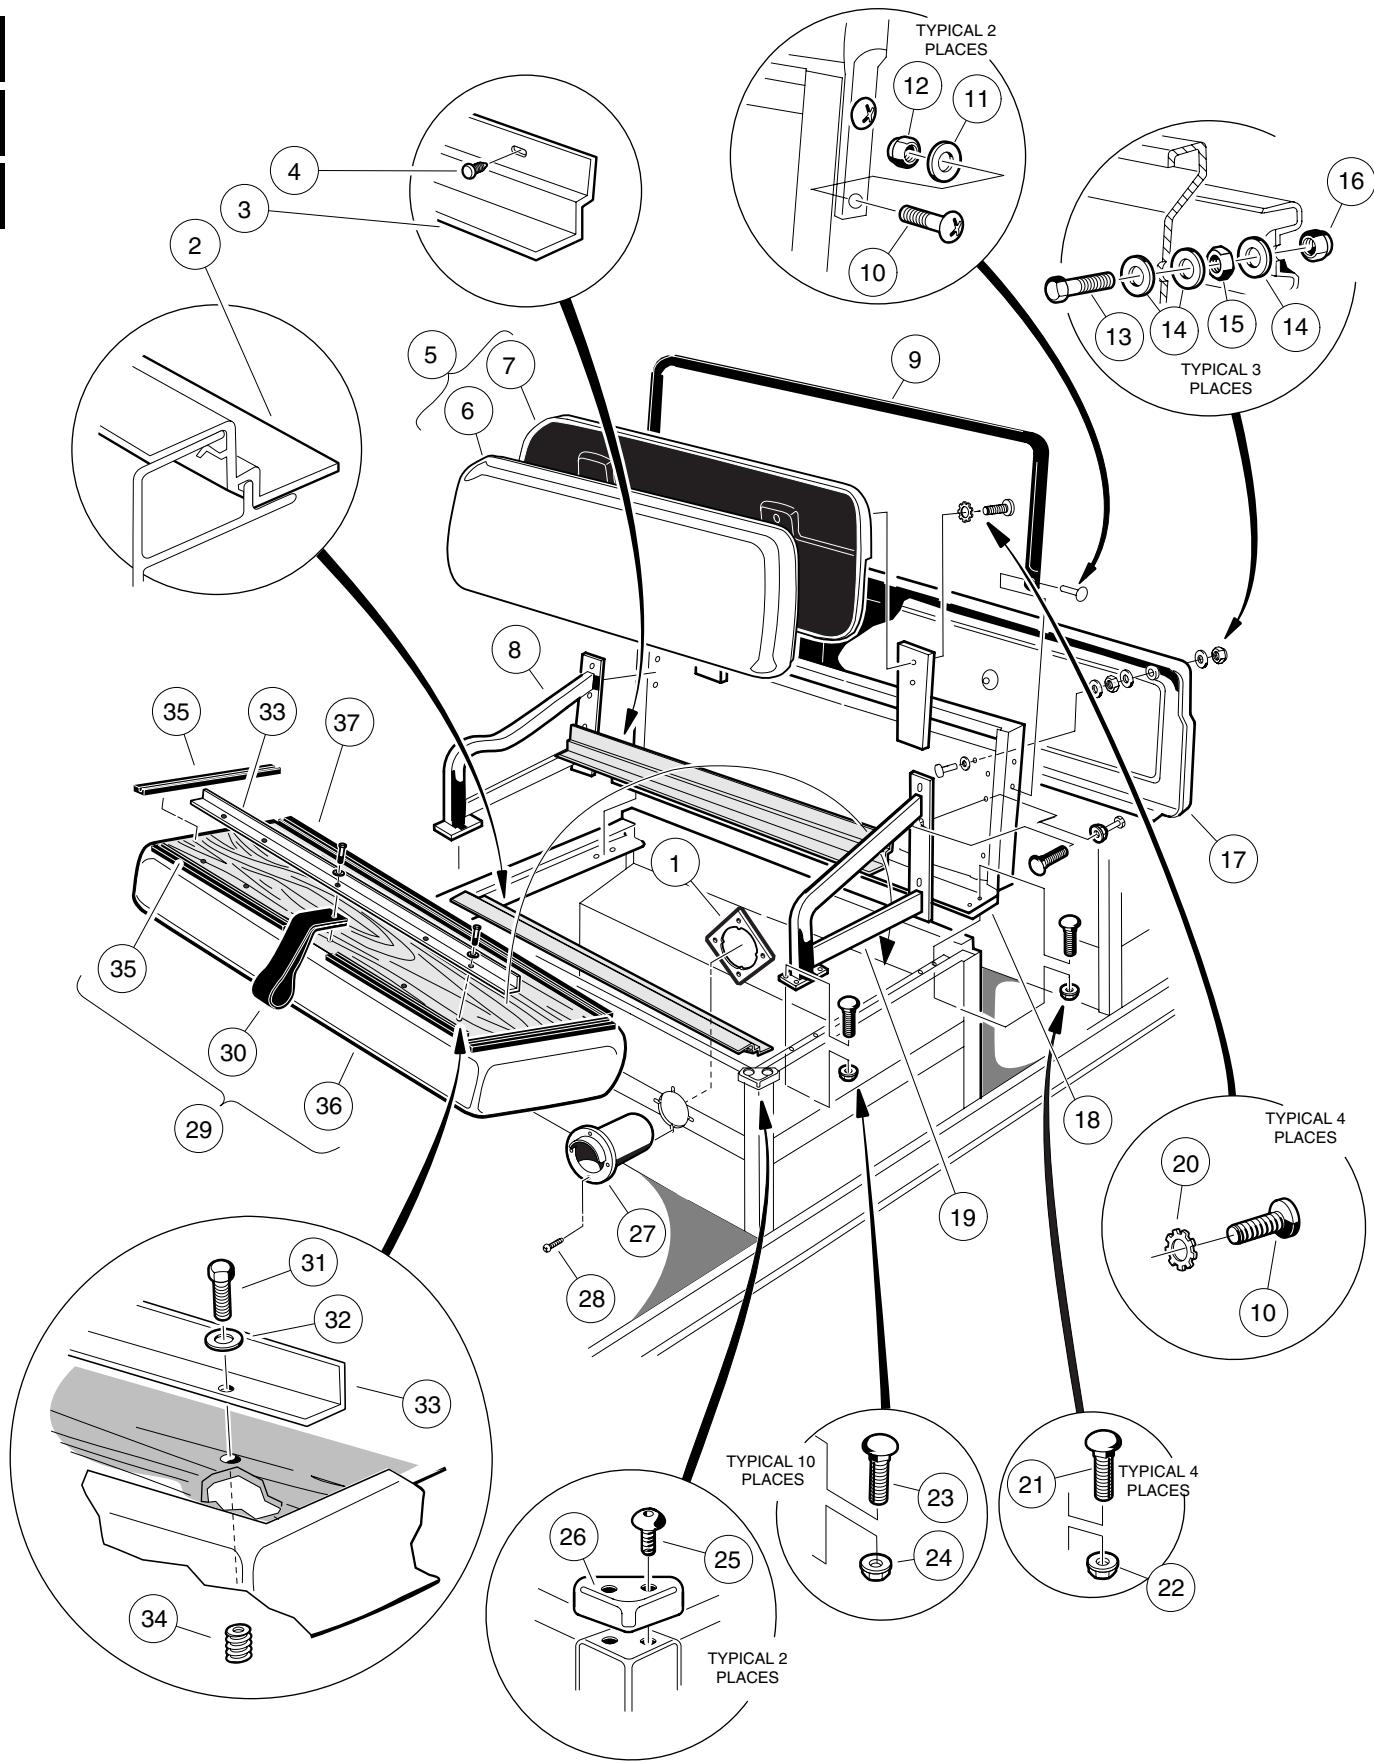

# FIRST SEAT AND SUPPORT STRUCTURE— TRANS-PORTER/TRANS-SENDER

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	
		1 2 3 4			1
1	101801001	PLATE, RECEPTACLE BACKING (ELECTRIC VEHICLE ONLY) .....		1	G
2	101964001	TRIM, SEAT BOTTOM, FRONT .....	1	1	E
3	101963901	TRIM, SEAT BOTTOM, REAR .....	1	1	
4	1010434	BARREL, PLASTIC .....	5	5	
5	101677701	ASSEMBLY, SEAT BACK - WHITE (INCLUDES ITEMS 6 AND 7) .....	1	1	
5	101677702	ASSEMBLY, SEAT BACK - BLACK (INCLUDES ITEMS 6 AND 7) .....	1	1	
5	101677705	ASSEMBLY, SEAT BACK - GRAY (INCLUDES ITEMS 6 AND 7) .....	1	1	
6	101675502	COVER, VINYL SEAT BACK - WHITE .....	1	1	
6	101675504	COVER, VINYL SEAT BACK - BLACK .....	1	1	
6	101675506	COVER, VINYL SEAT BACK - GRAY .....	1	1	
7	1016751	CAP, SEAT BACK .....	1	1	
8	101888501	ASSEMBLY, PASSENGER ARMREST .....	1	1	
9	1016670	HANDRAIL .....	1	1	
10	8251	SCREW, PHILLIPS TRUSS HEAD, 1/4 - 20 x 1 .....	8	8	
11	332	WASHER, FLAT, 1/4 .....	4	4	
12	8233	NUT, NYLON LOCK, 1/4 - 20 .....	4	4	
13	1010934	SCREW, HEX HEAD CAP, 5/16 - 18 x 1 .....	3	3	
14	1241	WASHER, FLAT, 5/16 .....	9	9	
15	1242	NUT, HEX, 5/16 - 18 .....	3	3	
16	7473	NUT, NYLON LOCK, 5/16 - 18 .....	3	3	
17	1016970	COVER, SEAT BACK SUPPORT .....	1	1	
18	1016723	ASSEMBLY, SEAT SUPPORT PANEL .....	1	1	
19	101888502	ARMREST, DRIVER .....	1	1	
20	101946201	WASHER, EXTERNAL TOOTH LOCK, 1/4 .....	4	4	
21	101963301	SCREW, ROUND-HEAD SQUARE-NECK, 5/16 - 18 x 3/4 .....	4	4	
22	101963401	NUT, FLANGE, 5/16 - 18 .....	4	4	
23	101958601	SCREW, ROUND-HEAD SQUARE-NECK, 1/4 - 20 x 3/4 .....	10	10	
24	101835601	NUT, FLANGE, 1/4 - 20 .....	10	10	
25	1014321	SCREW, TORX TRUSS HEAD, #10 - 24 x 3/8 .....	4	4	
26	1014387	CAP, CORNER .....	2	2	
27	1016673	HOUSING, CORD (ELECTRIC VEHICLE ONLY) .....		1	
28	8796	SCREW, PHILLIPS HEAD, #7 - 19 x 3/4 (ELECTRIC VEHICLE ONLY) .....		4	
29	101564502	ASSEMBLY, SEAT BOTTOM - WHITE (INCLUDES ITEMS 30 - 37) .....	1	1	
29	101564503	ASSEMBLY, SEAT BOTTOM - BLACK (INCLUDES ITEMS 30 - 37) .....	1	1	
29	101564505	ASSEMBLY, SEAT BOTTOM - GRAY (INCLUDES ITEMS 30 - 37) .....	1	1	
30	1013309	STRAP, SEAT BOTTOM .....	1	1	
31	101954301	SCREW, HEX HEAD CAP (WITH ADHESIVE PATCH), 1/4 - 20 x 3/4 .....	5	5	
32	332	WASHER, FLAT, 1/4 .....	9	9	
33	101894303	STIFFENER, SEAT .....	1	1	
34	1010543	INSERT, WOOD .....	5	5	
35	1013311	BUMPER, SEAT, SHORT .....	4	4	
36	101562702	COVER, VINYL SEAT BOTTOM - WHITE .....	1	1	
36	101562704	COVER, VINYL SEAT BOTTOM - BLACK .....	1	1	
36	101562710	COVER, VINYL SEAT BOTTOM - GRAY .....	1	1	
37	1013312	BUMPER, SEAT, LONG .....	1	1	

**1**  
**G**  
**E**

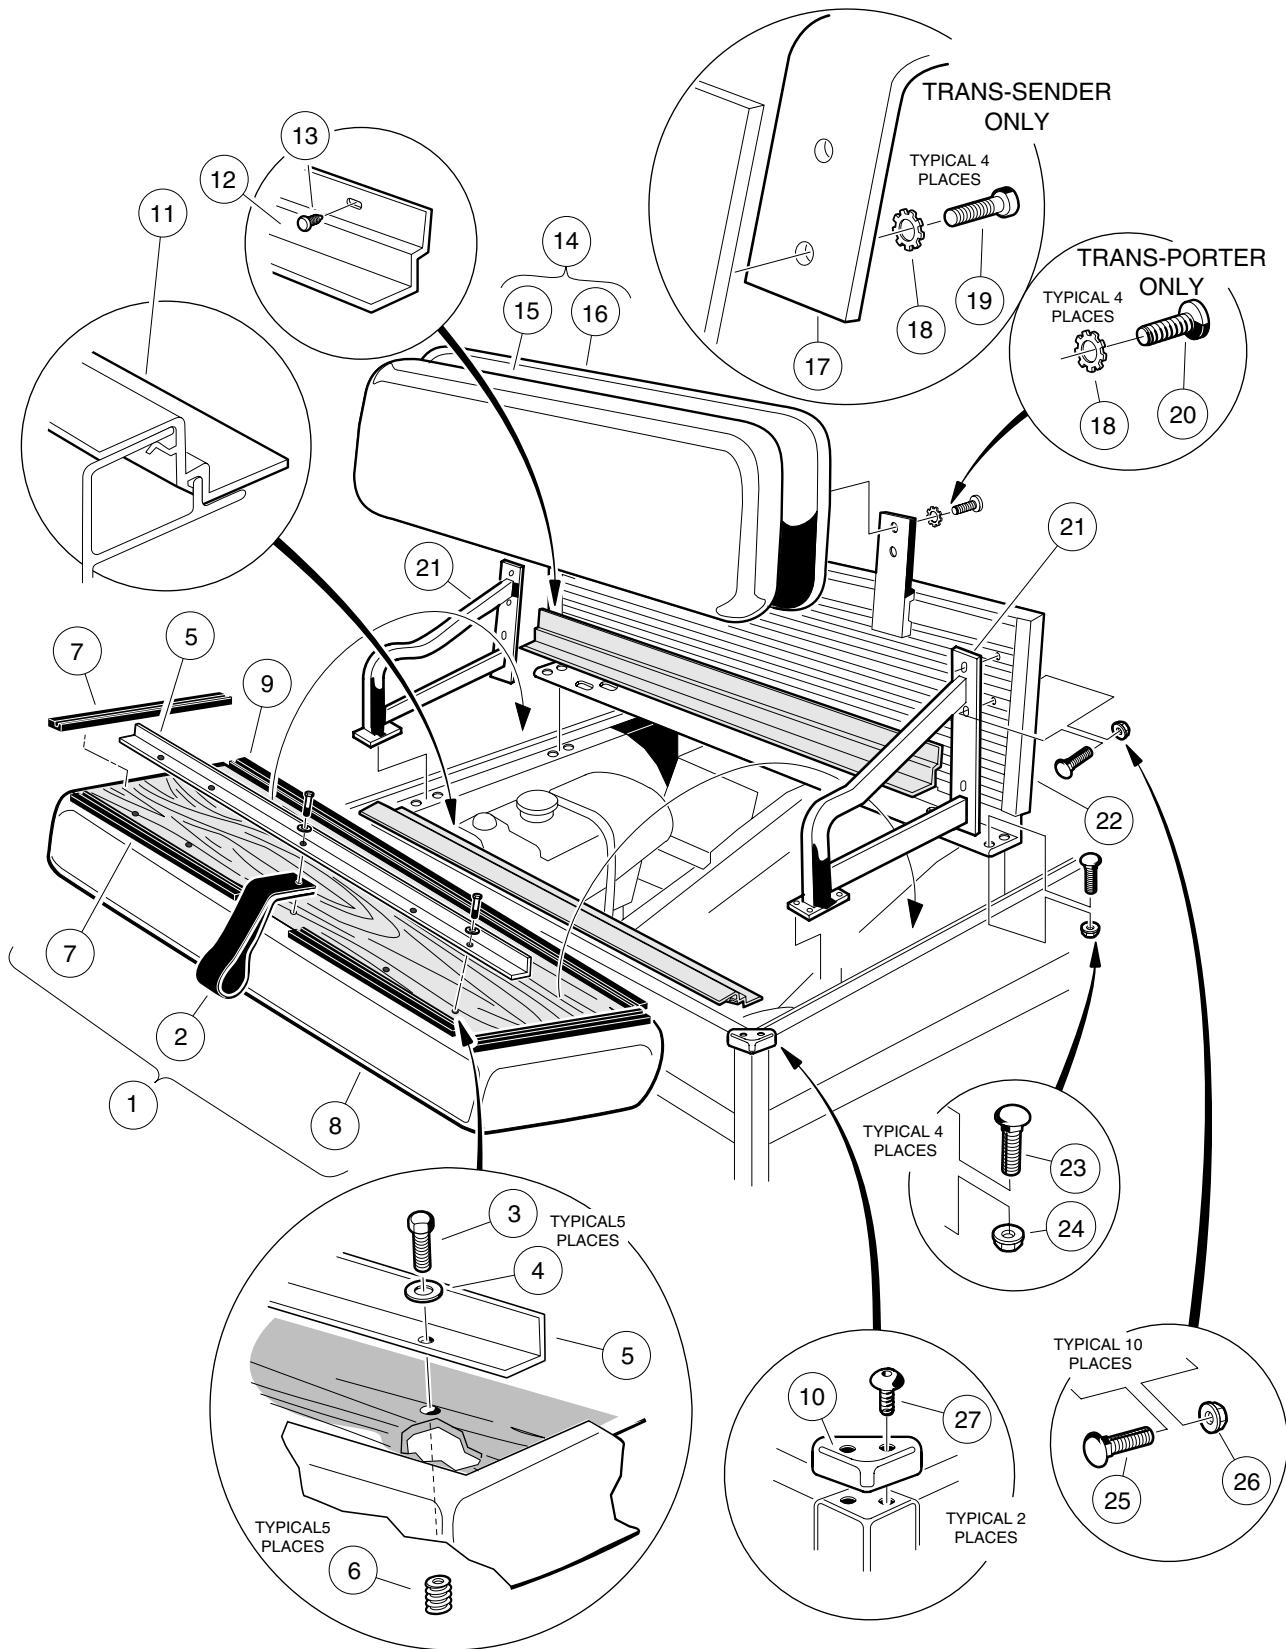

# SECOND SEAT AND SUPPORT STRUCTURE— TRANS-PORTER/TRANS-SENDER


ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	101564502	ASSEMBLY, SEAT BOTTOM - WHITE (INCLUDES ITEMS 2 - 9) .....	1	1
1	101564503	ASSEMBLY, SEAT BOTTOM - BLACK (INCLUDES ITEMS 2 - 9) .....	1	1
1	101564505	ASSEMBLY, SEAT BOTTOM - GRAY (INCLUDES ITEMS 2 - 9) .....	1	1
2	1013309	STRAP, SEAT BOTTOM .....	1	1
3	101954301	SCREW, HEX HEAD CAP (WITH ADHESIVE PATCH), 1/4 - 20 x 3/4 .....	5	5
4	332	WASHER, FLAT, 1/4 .....	5	5
5	101894303	STIFFENER, SEAT .....	1	1
6	1010543	INSERT, WOOD .....	5	5
7	1013311	BUMPER, SEAT-SHORT .....	4	4
8	101562702	COVER, VINYL SEAT BOTTOM - WHITE .....	1	1
8	101562704	COVER, VINYL SEAT BOTTOM - BLACK .....	1	1
8	101562710	COVER, VINYL SEAT BOTTOM - GRAY .....	1	1
9	1013312	BUMPER, SEAT, LONG .....	1	1
10	1014387	CAP, CORNER .....	2	2
11	101964001	TRIM, SEAT BOTTOM, FRONT .....	1	1
12	101963901	TRIM, SEAT BOTTOM, REAR .....	1	1
13	1010434	BARREL, PLASTIC .....	5	5
14	101677701	ASSEMBLY, SEAT BACK - WHITE (INCLUDES ITEMS 15 AND 16) .....	1	1
14	101677702	ASSEMBLY, SEAT BACK - BLACK (INCLUDES ITEMS 15 AND 16) .....	1	1
14	101677705	ASSEMBLY, SEAT BACK - GRAY (INCLUDES ITEMS 15 AND 16) .....	1	1
15	101675502	COVER, VINYL SEAT BACK - WHITE .....	1	1
15	101675504	COVER, VINYL SEAT BACK - BLACK .....	1	1
15	101675506	COVER, VINYL SEAT BACK - GRAY .....	1	1
16	1016751	CAP, SEAT BACK .....	1	1
17	1016839	MOUNT, SEAT BACK BRACKET (TRANS-SENDER ONLY) .....	2	2
18	101946201	WASHER, EXTERNAL TOOTH LOCK, 1/4 .....	4	4
19	7479	SCREW, HEX HEAD CAP, 1/4 - 20 x 1-1/4 (TRANS-SENDER ONLY) .....	4	4
20	8251	SCREW, PHILLIPS TRUSS HEAD, 1/4 - 20 x 1 (TRANS-PORTER ONLY) .....	4	4
21	101888501	ASSEMBLY, ARMREST, PASSENGER (TRANS-PORTER ONLY) .....	2	2
22	1016723	ASSEMBLY, SEAT SUPPORT PANEL .....	1	1
23	101963301	SCREW, ROUND-HEAD SQUARE-NECK, 5/16 - 18 x 3/4 .....	4	4
24	101963401	NUT, FLANGE, 5/16 - 18 .....	4	4
25	101958601	SCREW, ROUND-HEAD SQUARE-NECK, 1/4 - 20 x 3/4 (TRANS-PORTER ONLY)	10	10
26	101835601	NUT, FLANGE, 1/4 - 20 (TRANS-PORTER ONLY) .....	10	10
27	1014321	SCREW, TORX TRUSS HEAD, #10 - 24 x 3/8 .....	4	4

1

G

E

**1**  
**G**  
**E**

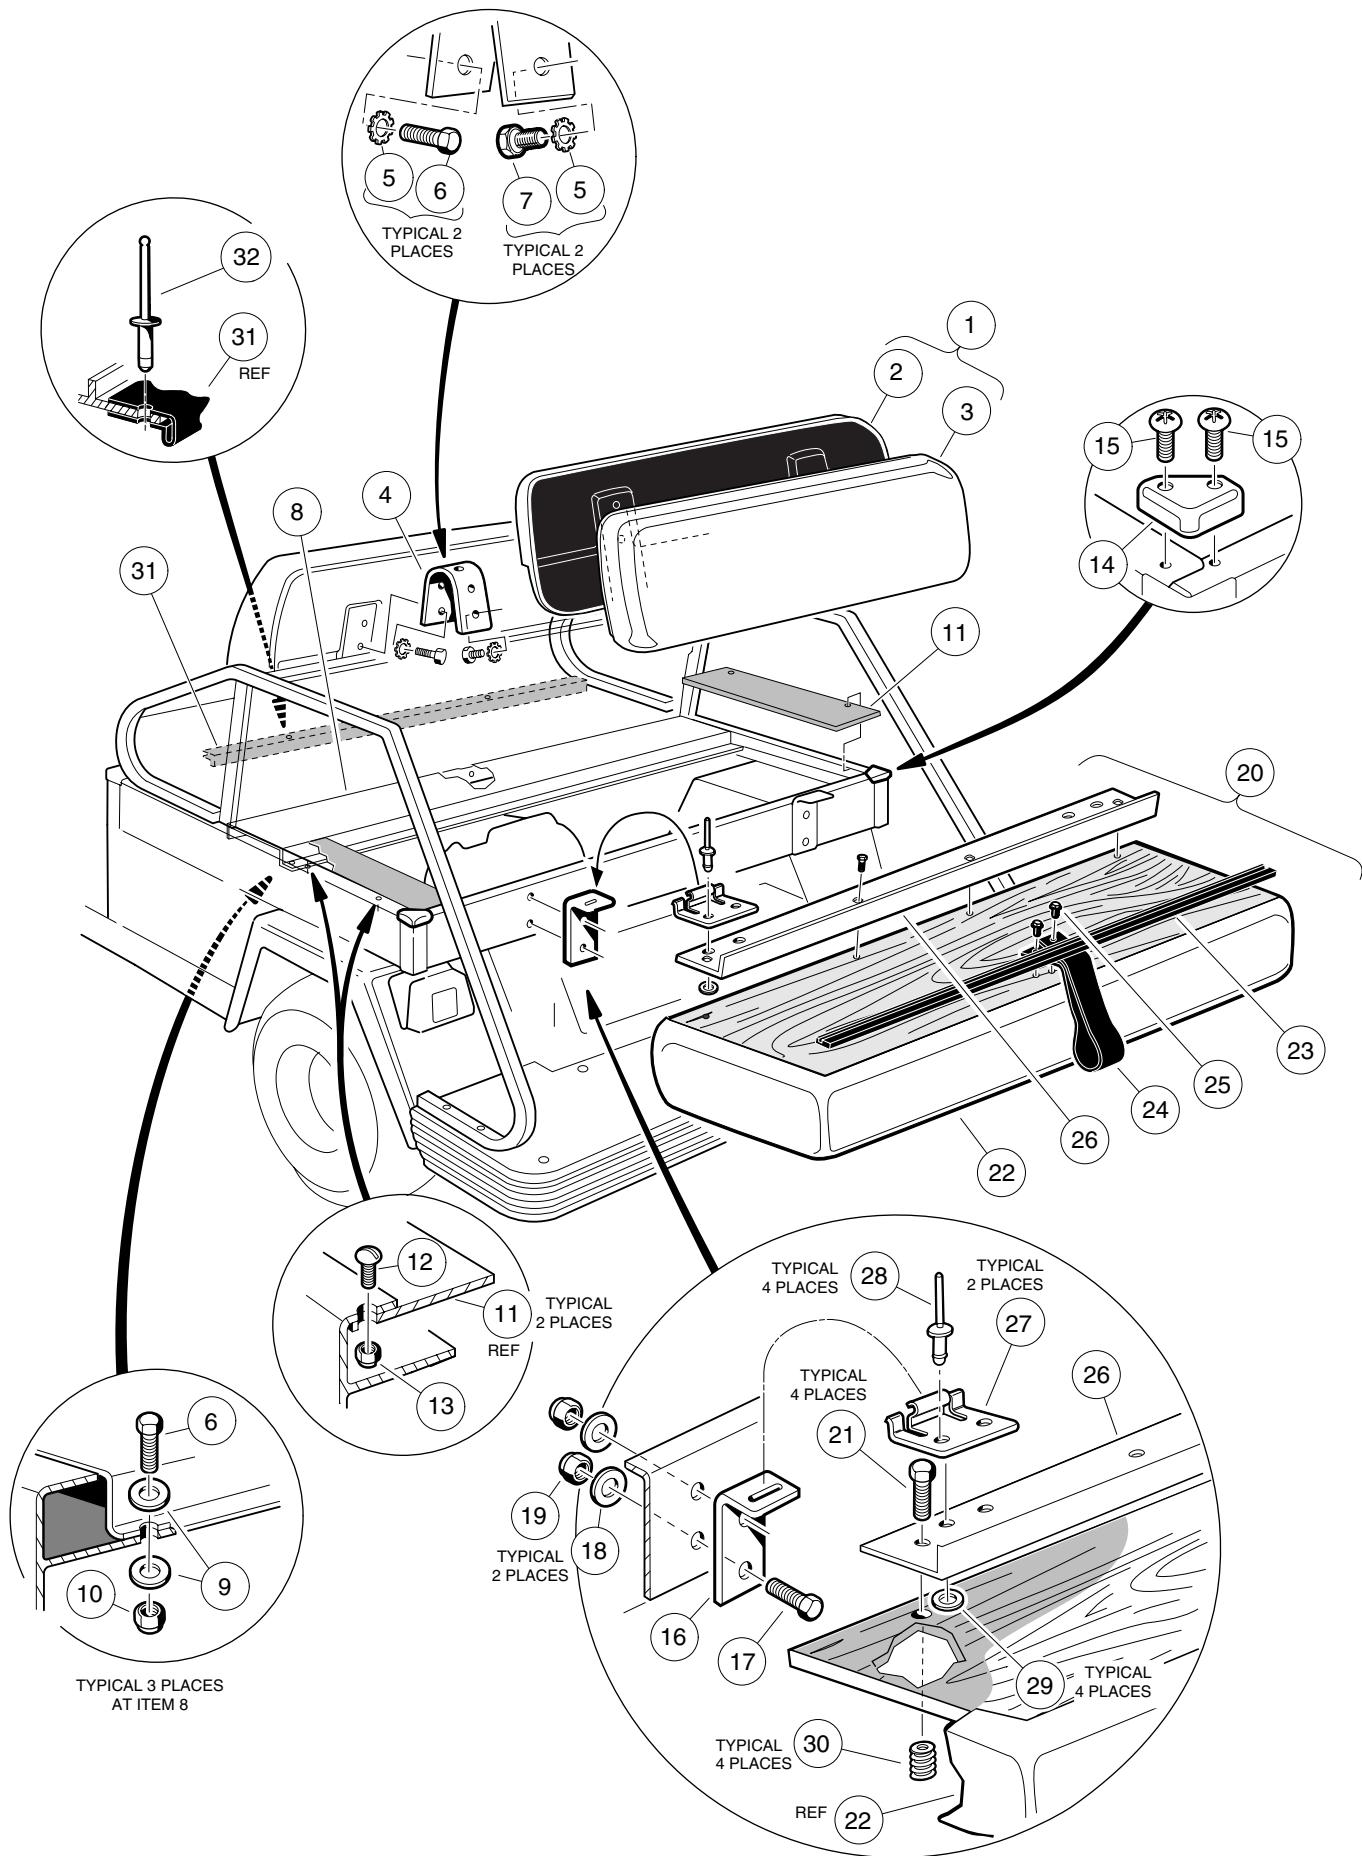


# THIRD SEAT AND COMPONENTS— TRANS-SENDER

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	101677701	ASSEMBLY, SEAT BACK - WHITE (INCLUDES ITEMS 2 AND 3) .....	1	1
1	101677702	ASSEMBLY, SEAT BACK - BLACK (INCLUDES ITEMS 2 AND 3) .....	1	1
1	101677705	ASSEMBLY, SEAT BACK - GRAY (INCLUDES ITEMS 2 AND 3) .....	1	1
2	1016751	CAP, SEAT BACK .....	1	1
3	101675502	COVER, VINYL SEAT BACK - WHITE .....	1	1
3	101675504	COVER, VINYL SEAT BACK - BLACK .....	1	1
3	101675505	COVER, VINYL SEAT BACK - GRAY .....	1	1
4	1016839	BRACKET, SEAT BACK MOUNTING .....	2	2
5	101946201	WASHER, EXTERNAL TOOTH LOCK, 1/4 .....	8	8
6	7847	SCREW, HEX HEAD CAP, 1/4 - 20 x 3/4 .....	7	7
7	7479	SCREW, HEX HEAD CAP, 1/4 - 20 x 1-1/4 .....	4	4
8	1016816	SUPPORT, REAR SEAT .....	1	1
9	332	WASHER, FLAT, 1/4 .....	6	6
10	8233	NUT, NYLON LOCK, 1/4 - 20 .....	3	3
11	1016930	PANEL, REAR SEAT FRAME .....	2	2
12	1013169	SCREW, ROUND HEAD SLOTTED MACHINE, #10 - 32 x 1/2 .....	4	4
13	1013061	NUT, NYLON LOCK, #10 - 32 .....	4	4
14	1014387	CAP, CORNER .....	2	2
15	1014321	SCREW, TORX TRUSS HEAD, #10 - 24 x 3/8 .....	4	4
16	1016819	HINGE, SEAT .....	2	2
17	8861	SCREW, HEX HEAD CAP, 3/8 - 16 x 1-3/4 .....	4	4
18	1011990	WASHER, FLAT, 3/8 .....	4	4
19	8754	NUT, NYLON LOCK, 3/8 - 16 .....	4	4
20	101684102	ASSEMBLY, SEAT BOTTOM, WHITE (INCLUDES ITEMS 21 - 30) .....	1	1
20	101684103	ASSEMBLY, SEAT BOTTOM, BLACK (INCLUDES ITEMS 21 - 30) .....	1	1
20	101684105	ASSEMBLY, SEAT BOTTOM, GRAY (INCLUDES ITEMS 21 - 30) .....	1	1
21	101954301	SCREW, HEX HEAD CAP (WITH ADHESIVE PATCH), 1/4 - 20 x 3/4 .....	4	4
22	101562702	COVER, VINYL SEAT BOTTOM - WHITE .....	1	1
22	101562704	COVER, VINYL SEAT BOTTOM - BLACK .....	1	1
22	101562710	COVER, VINYL SEAT BOTTOM - GRAY .....	1	1
23	1013312	BUMPER, LONG SEAT .....	1	1
24	1013309	STRAP, SEAT BOTTOM .....	1	1
25	1010545	SCREW, HEX WASHER HEAD, 1/4 - 14 x 3/4 .....	2	2
26	1016824	ANGLE, SEAT HINGE .....	1	1
27	1011652	PLATE, SEAT HINGE .....	2	2
28	101880901	RIVET, POP, STAINLESS STEEL, 3/16 .....	4	4
29	101881701	WASHER, FLAT, STAINLESS STEEL, #8 .....	4	4
30	1010543	INSERT, WOOD .....	4	4
31	101837001	INSULATOR, BATTERY (ELECTRIC VEHICLE ONLY) .....		1
32	1013357	RIVET, POP (ELECTRIC VEHICLE ONLY) .....		2

1

G


E

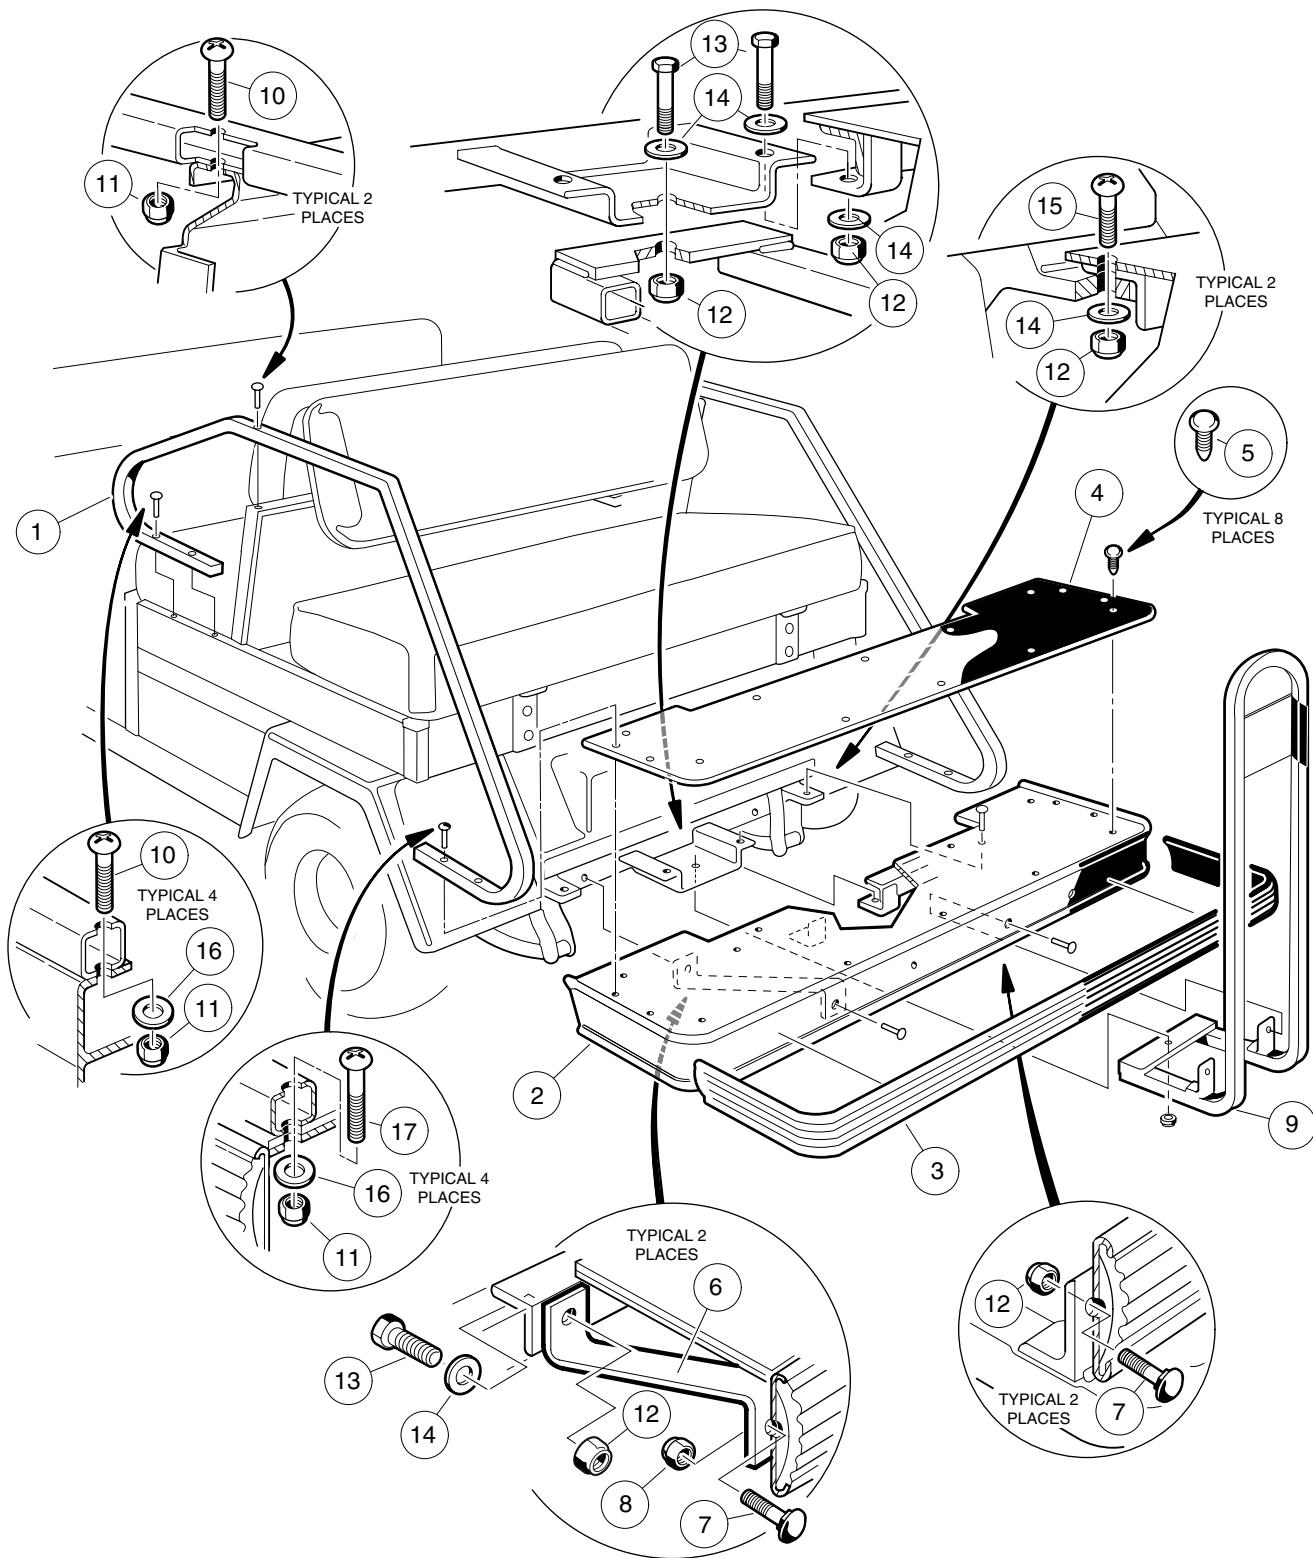**1****G****E**

# REAR FOOTREST AND HANDRAILS— TRANS-SENDER

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	
		1 2 3 4			1
1	101846301	ARMREST, REAR SEAT .....	2	2	G
2	1016843	ASSEMBLY, REAR FOOTREST (INCLUDES ITEMS 3 - 8) .....	1	1	E
3	101347505	GUARD, BUMPER .....	1	1	
4	1016838	MAT, FOOTREST .....	1	1	
5	1010434	FASTENER, PLASTIC BARREL .....	8	8	
6	1016668	BAR, CONNECTING .....	2	2	
7	1010435	SCREW, ROUND-HEAD SQUARE-NECK, 5/16 - 18 x 1 .....	4	4	
8	7473	NUT, NYLON LOCK, 5/16 - 18 .....	2	2	
9	1016842	HANDRAIL, REAR SEAT .....	1	1	
10	8418	SCREW, PHILLIPS TRUSS HEAD, 1/4 - 20 x 1-1/2 .....	6	6	
11	8233	NUT, NYLON LOCK, 1/4 - 20 .....	10	10	
12	7473	NUT, NYLON LOCK, 5/16 - 18 .....	9	9	
13	1218	SCREW, HEX HEAD CAP, 5/16 - 18 x 1-1/4 .....	5	5	
14	1241	WASHER, FLAT, 5/16 .....	9	9	
15	7410	SCREW, PHILLIPS TRUSS HEAD, 5/16 - 18 x 1-1/4 .....	2	2	
16	332	WASHER, FLAT, 1/4 .....	8	8	
17	1011988	SCREW, PHILLIPS TRUSS HEAD, 1/4 - 20 x 2 .....	4	4	

**1**  
**G**  
**E**

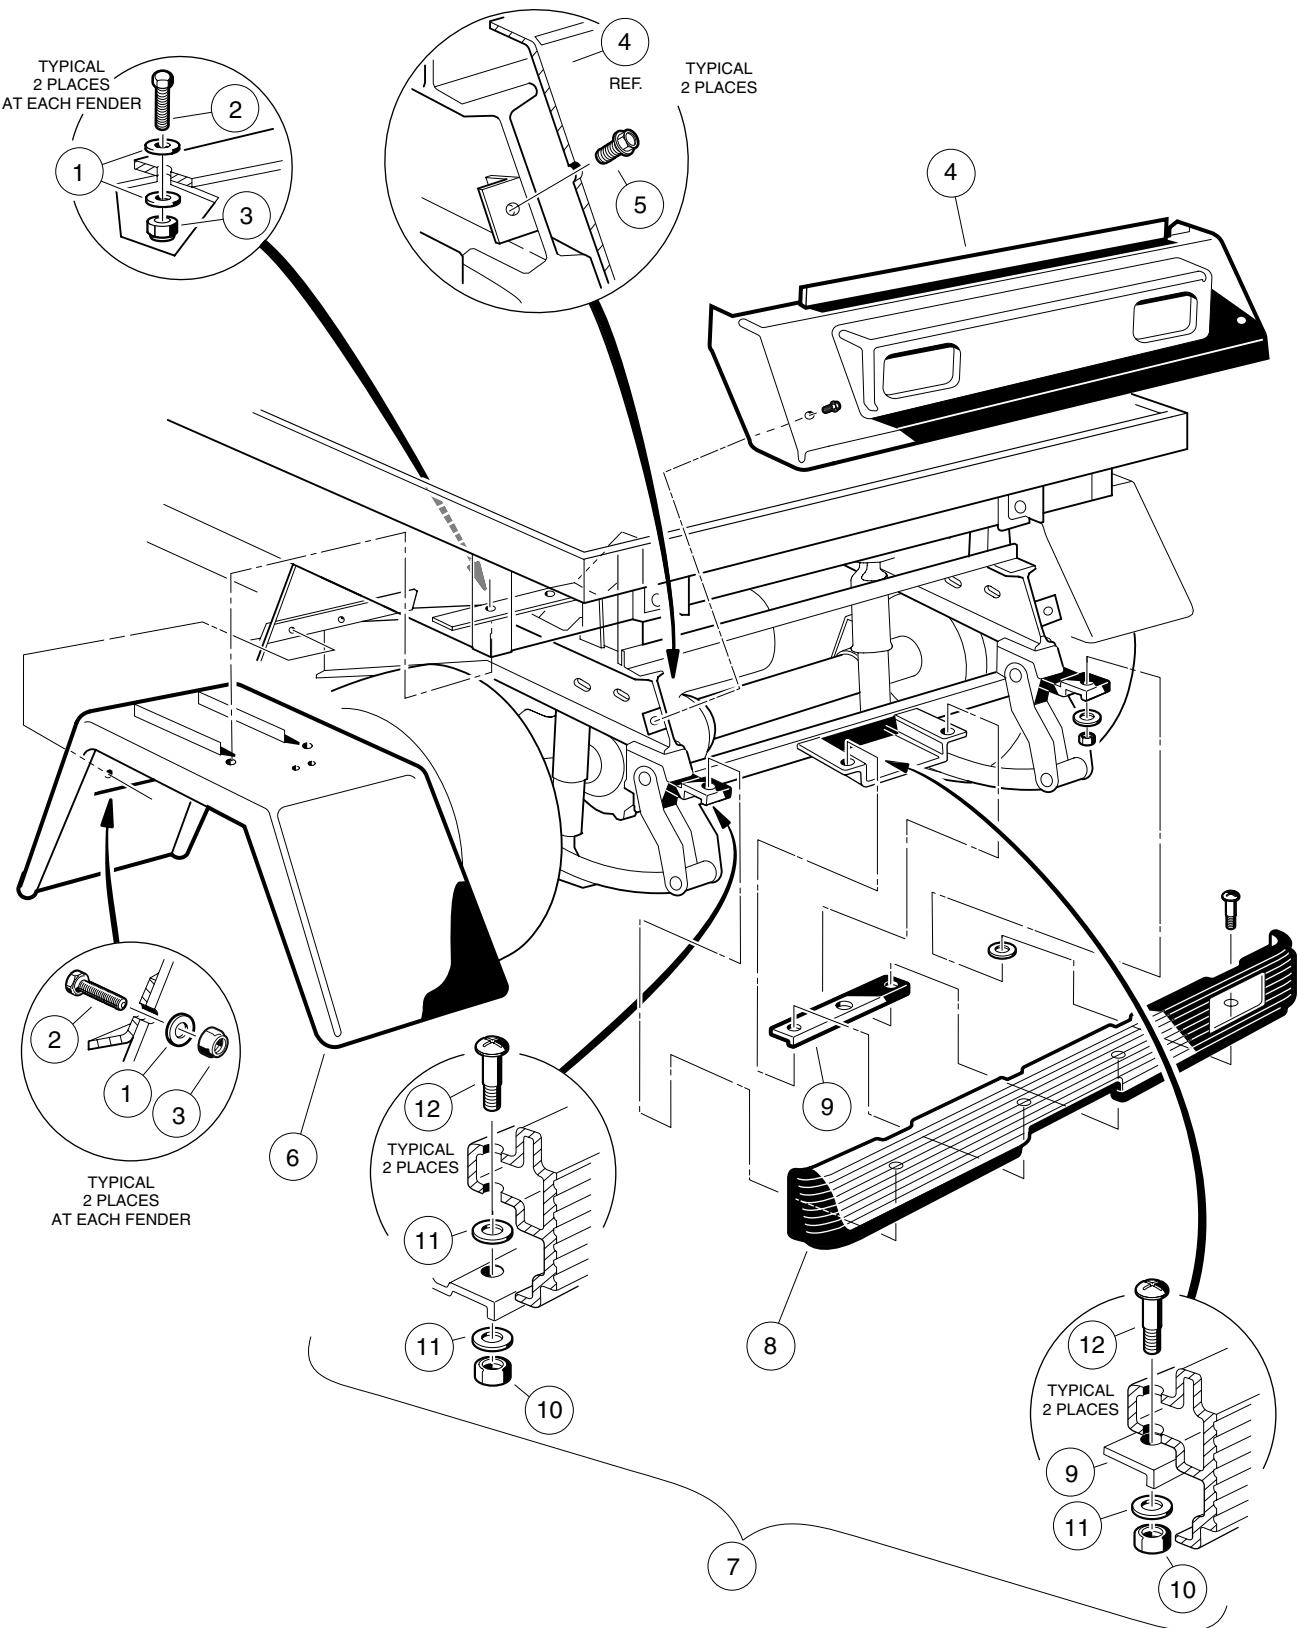

**REAR BODY TRIM—  
TRANS-PORTER/TRANS-SENDER**


ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	1014306	WASHER, FLAT, 1/4 .....	12	12
2	304	SCREW, HEX HEAD CAP, 1/4 - 20 x 1 .....	8	8
3	8233	NUT, NYLON LOCK, 1/4 - 20 .....	8	8
4	1015530	TAILSKIRT .....	1	1
5	1012285	SCREW, THREAD-ROLLING, 1/4 - 20 x 5/8 .....	2	2
6	1016679	FENDER, REAR .....	2	2
7	1017079	KIT, REAR BUMPER (INCLUDES ITEMS 8 - 12) (TRANS-PORTER ONLY) .....	1	1
8	1016379	BUMPER, REAR .....	1	1
9	1016875	PLATE, MOUNTING, LONG .....	1	1
10	7473	NUT, NYLON LOCK, 5/16 - 18 .....	4	4
11	1011697	WASHER, FLAT, 5/16 .....	6	6
12	1016876	BOLT, PHILLIPS TRUSS HEAD SHOULDER, 3/8 - 18 x 2 .....	4	4

1

G

E

**1  
G  
E**

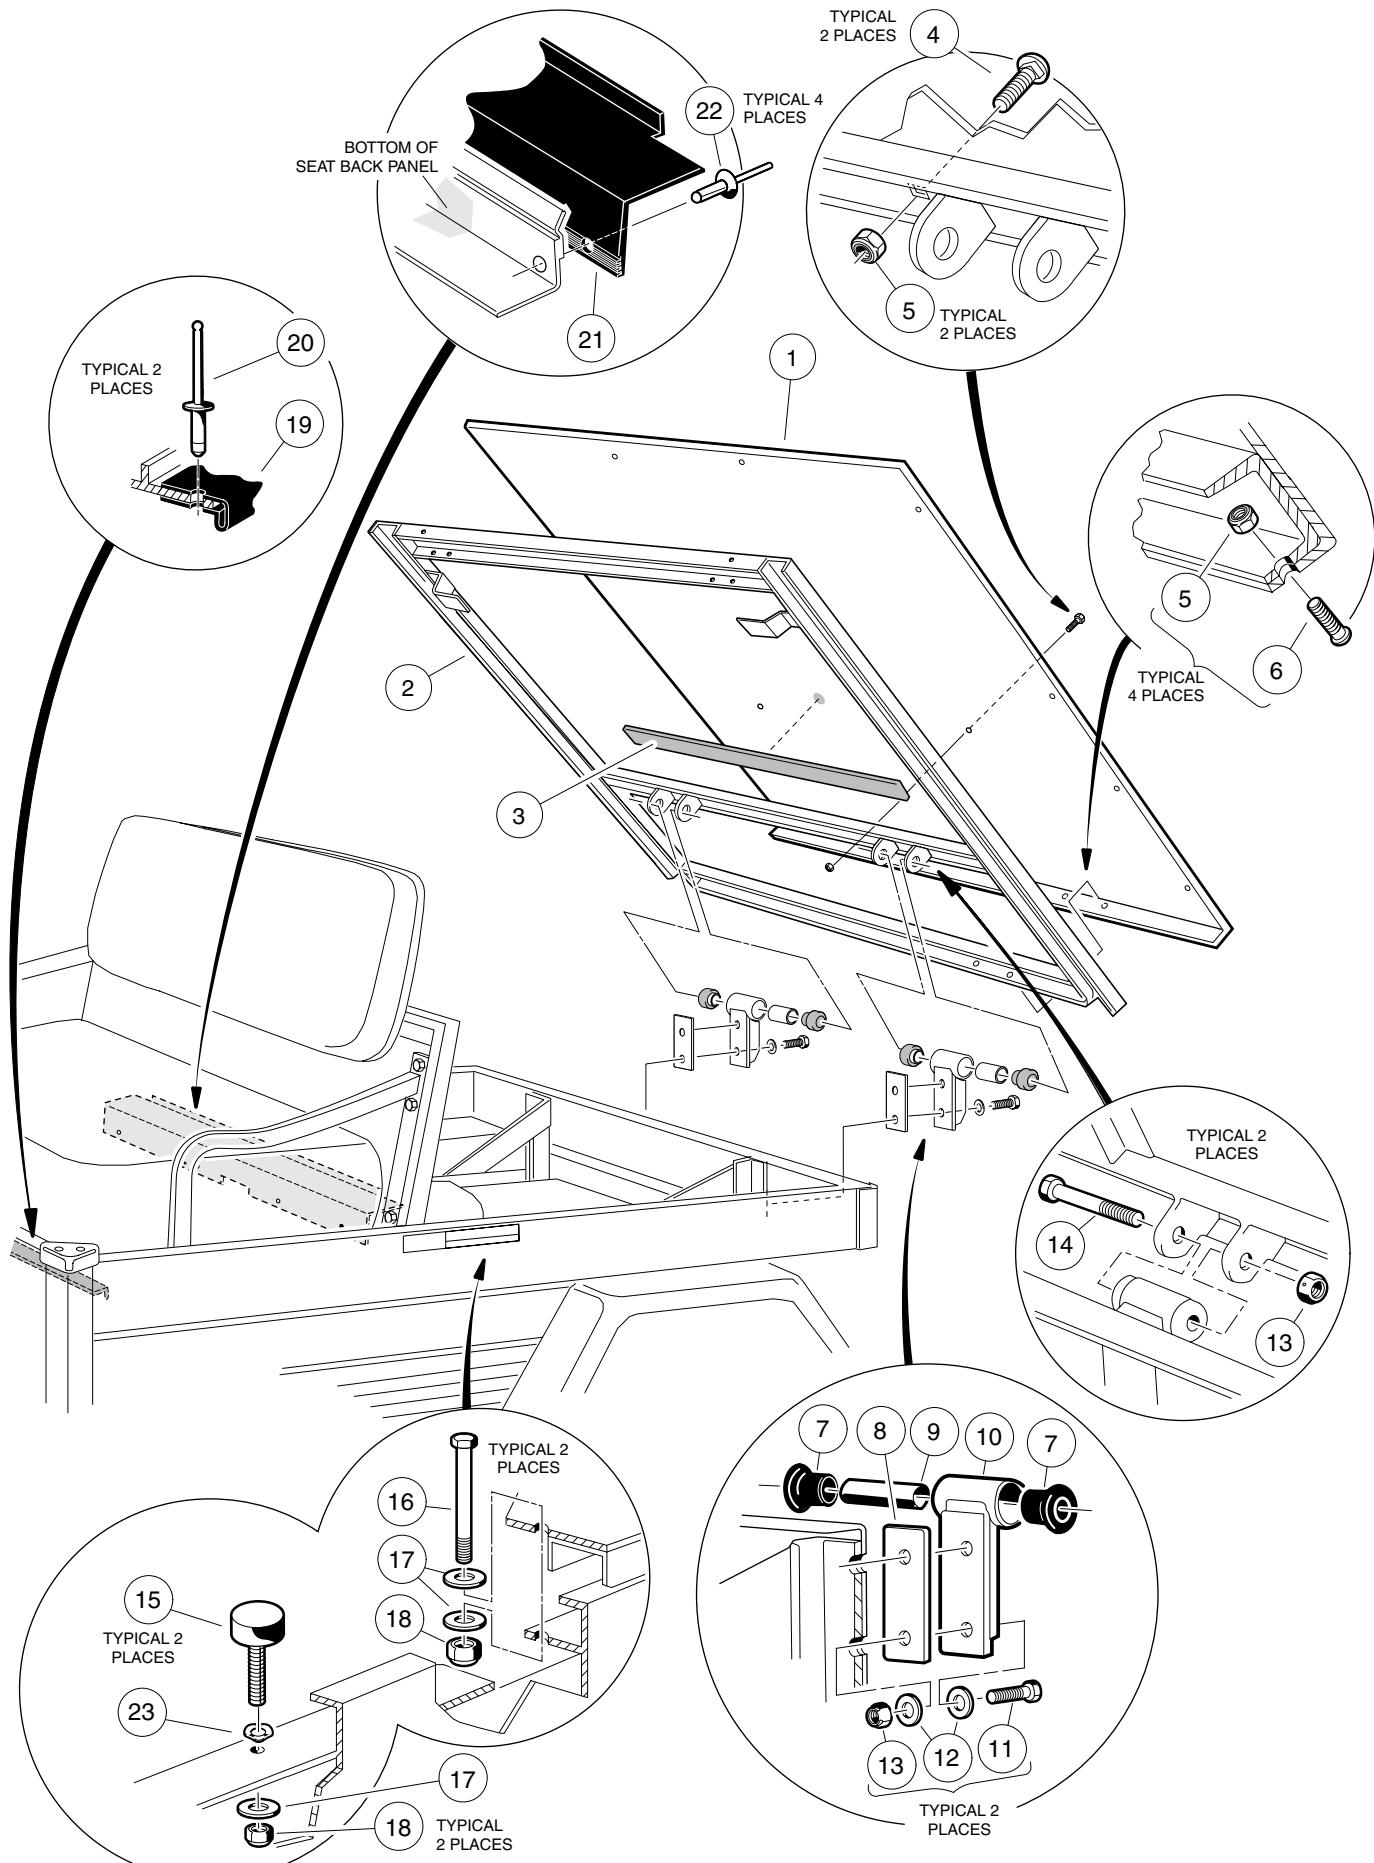

# REAR CARGO BED—TRANS-PORTER


ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	1016724	ASSEMBLY, TILT BED (INCLUDES ITEMS 2 - 6) .....	1	1
2	N/A	WELDMENT, TILT BED .....	1	1
3	1014471	INSULATION .....	A/R	A/R
4	1010435	SCREW, ROUND-HEAD SQUARE-NECK, 5/16 - 18 x 1 .....	2	2
5	7473	NUT, NYLON LOCK, 5/16 - 18 .....	6	6
6	1015399	SCREW, TORX TRUSS HEAD, 5/16 - 18 x 3/4 .....	4	4
7	1015583	BUSHING, URETHANE .....	4	4
8	1015507	SHIM, TILT BED PIVOT .....	A/R	A/R
9	1012303	BUSHING, STEEL .....	2	2
10	1015356	WELDMENT, TILT BED HINGE .....	2	2
11	705	SCREW, HEX HEAD CAP, 3/8 - 16 x 1-1/4 .....	4	4
12	1011990	WASHER, FLAT, 3/8 .....	8	8
13	8754	NUT, NYLON LOCK, 3/8 - 16 .....	6	6
14	8755	SCREW, HEX HEAD CAP, 3/8 - 16 x 3-3/8 .....	2	2
15	1010878	BUMPER, RUBBER .....	2	2
16	1013872	SCREW, HEX HEAD CAP, 1/4 - 20 x 4 .....	2	2
17	332	WASHER, FLAT, 1/4 .....	6	6
18	8233	NUT, NYLON LOCK, 1/4 - 20 .....	4	4
19	101837001	INSULATOR, BATTERY (ELECTRIC VEHICLE ONLY) .....		1
20	1013357	RIVET, ALUMINUM POP, 5/32 (ELECTRIC VEHICLE ONLY) .....		2
21	1017976	SEAL, BED .....	1	1
22	7532	RIVET, POP, 3/16 .....	4	4
23	1016201	WASHER, WAVE .....	2	2

1

G

E

**1**  
**G**  
**E**

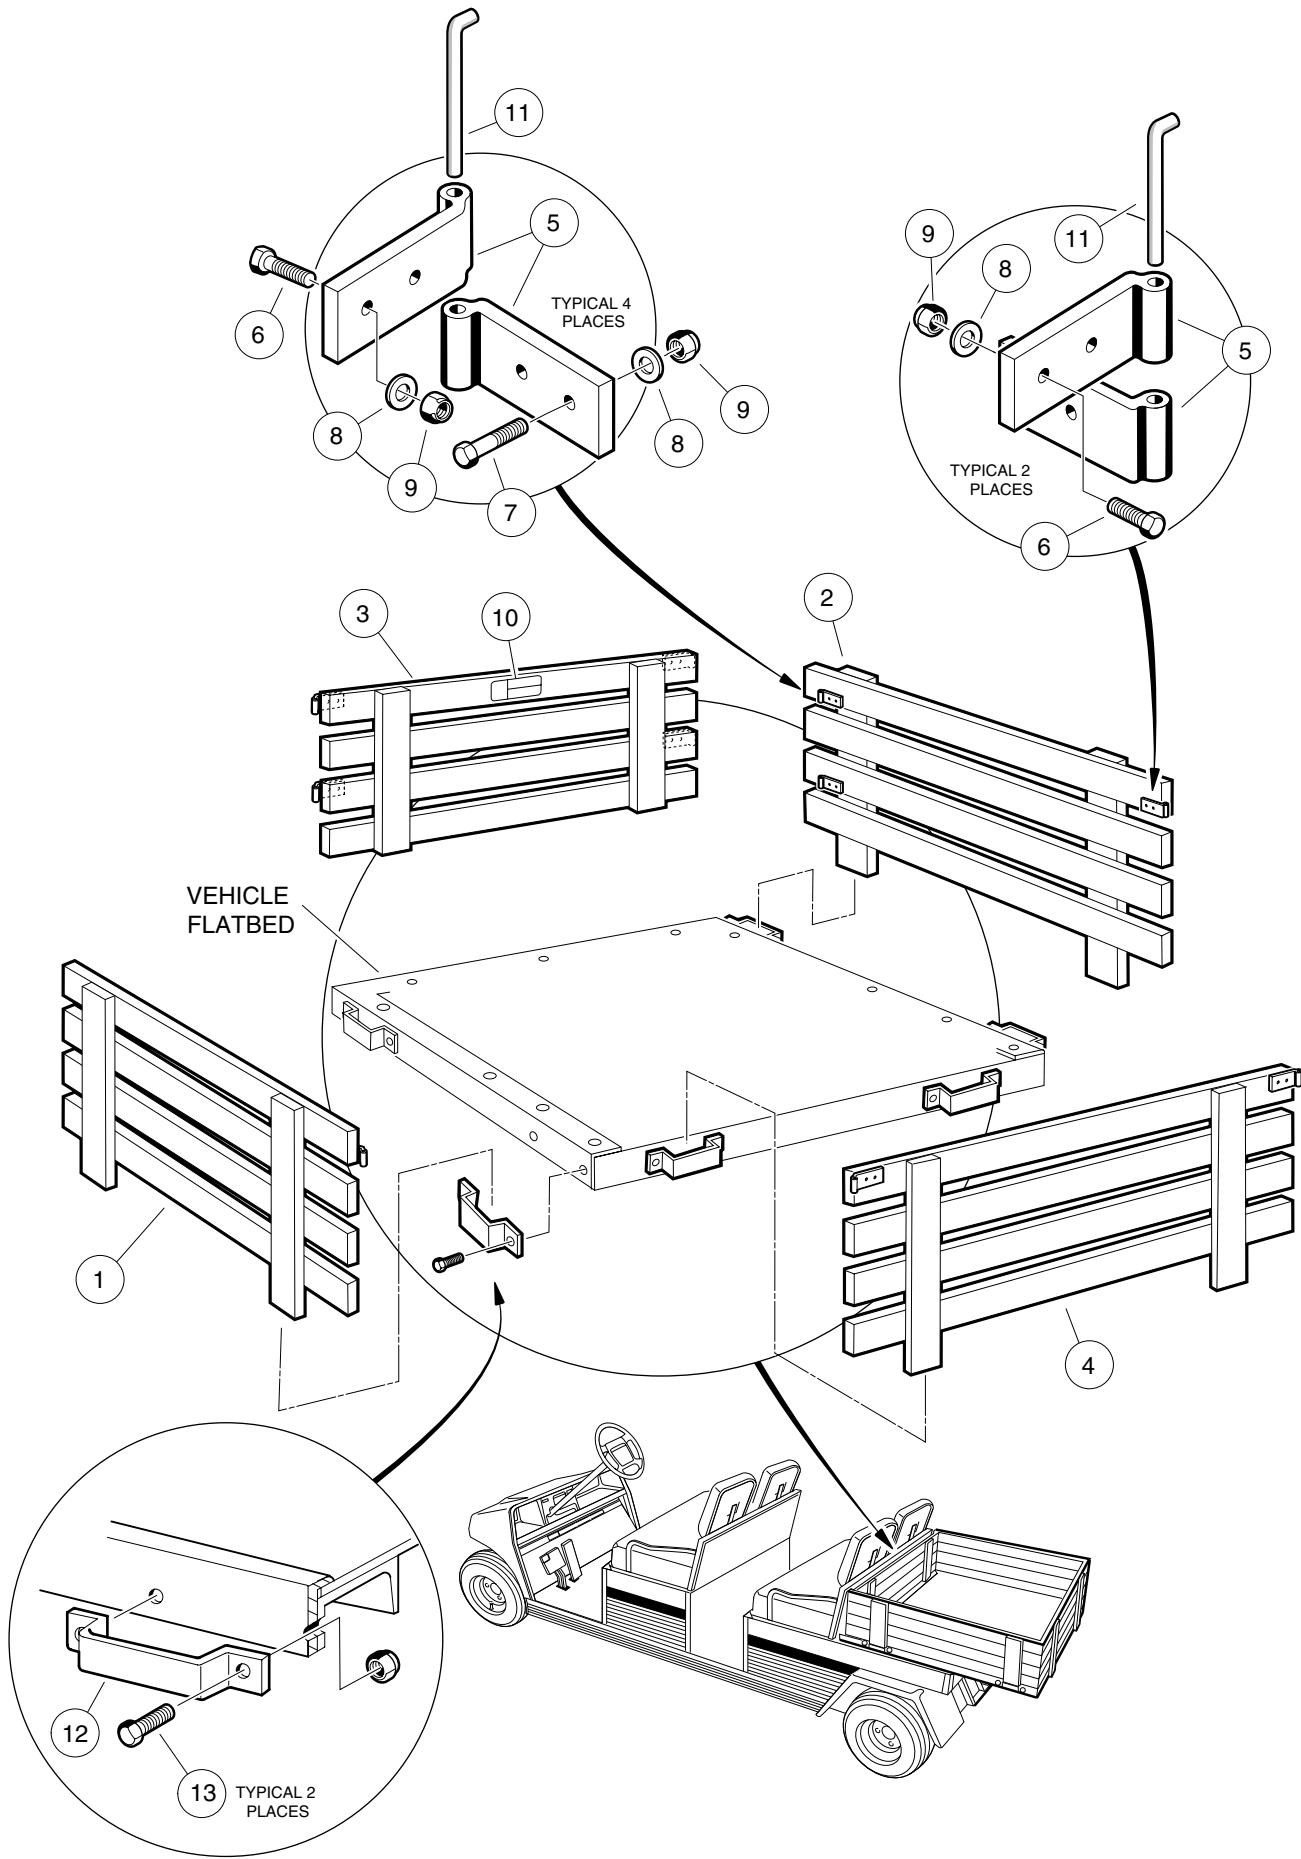

# STAKE-SIDES — TRANS-PORTER

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	1015660	KIT, STAKE SIDE (INCLUDES ITEMS 1 - 13) .....	1	1
2	N/A	STAKE SIDE ASSEMBLY, DRIVER SIDE (INCLUDES ITEMS 5 - 9) .....	1	1
3	N/A	STAKE SIDE ASSEMBLY, PASSENGER SIDE (INCLUDES ITEMS 5 - 9).....	1	1
4	N/A	STAKE SIDE ASSEMBLY, FRONT (INCLUDES ITEMS 5 - 9).....	1	1
5	1015654	HINGE, STAKE SIDE .....	12	12
6	0007479	SCREW, HEX HEAD CAP, 1/4 - 20 x 1 1/4 .....	18	18
7	0007311	SCREW, HEX HEAD CAP, 1/4 - 20 x 2 .....	6	6
8	0000332	WASHER, FLAT, 1/4 .....	24	24
9	0001108	NUT, DIMPED LOCK, 1/4 - 20 .....	24	24
10	1015539	DECAL, BED LOAD .....	1	1
11	1015656	PIN, STAKE SIDE HINGE .....	6	6
12	1016077	BRACKET, STAKE SIDE .....	5	5
13	1010934	SCREW, HEX HEAD CAP, 5/16 - 18 x 1 .....	10	10

1

G

E





# WHEELS AND TIRES

---


2

G

E

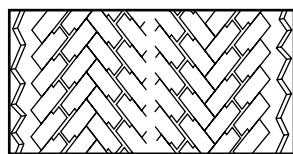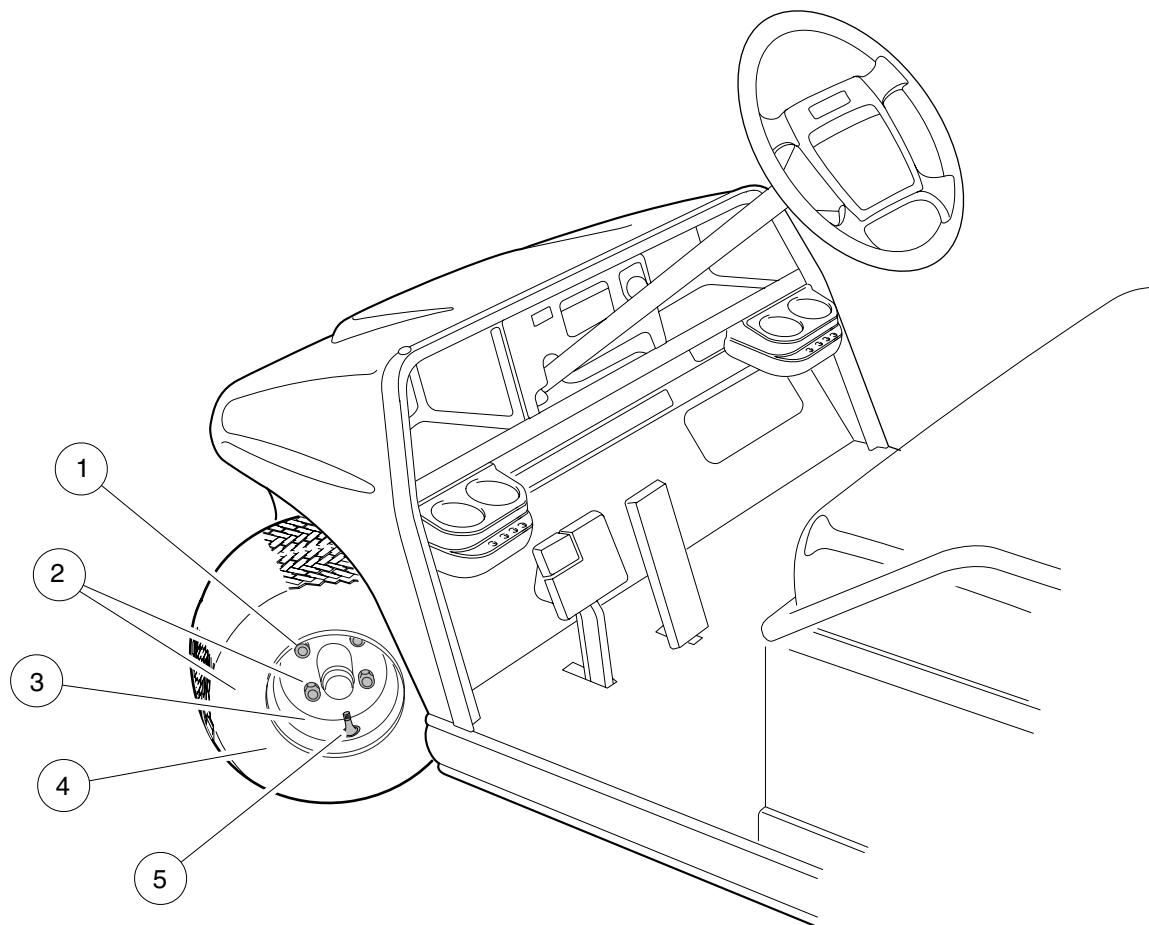**2****G****E**

PREMIUM  
TREAD

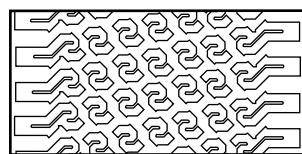

EXTRA  
TRACTION

# WHEELS AND TIRES

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	1010984	NUT, LUG .....	16	16
2	101651402	ASSEMBLY, WHEEL (WHITE) AND TIRE, PREMIUM TREAD, 4-PLY RATED (18 x 8.50 - 8) (TOURALL ONLY) .....	2	2
2	101570506	ASSEMBLY, WHEEL (BEIGE) AND TIRE, PREMIUM TREAD, 6-PLY RATED (18 x 8.50 - 8) (RESORT VILLAGER ONLY) .....	2	2
2	101570507	ASSEMBLY, WHEEL (BEIGE) AND TIRE, EXTRA TRACTION, 6-PLY RATED (18 x 8.50 - 8) (RESORT VILLAGER ONLY) .....	2	2
2	101570509	ASSEMBLY, WHEEL (BEIGE) AND TIRE, EXTRA TRACTION, 6-PLY RATED (18 x 6.50 - 8) (RESORT VILLAGER ONLY) .....	2	2
2	101651406	ASSEMBLY, WHEEL (WHITE) AND TIRE, PREMIUM TREAD, 6-PLY RATED (18 x 8.50 - 8) .....	2	2
2	101651407	ASSEMBLY, WHEEL (WHITE) AND TIRE, EXTRA TRACTION, 6-PLY RATED (18 x 8.50 - 8) .....	2	2
2	101651409	ASSEMBLY, WHEEL (WHITE) AND TIRE, PREMIUM TREAD, 6-PLY RATED (18.5 x 6.50 - 8) (RESORT VILLAGER ONLY) .....	2	2
3	1015707	WHEEL RIM, BEIGE (8 INCHES WIDE) .....	4	4
3	1014771	WHEEL RIM, WHITE (8 INCHES WIDE) .....	4	4
3	101918401	WHEEL RIM, BEIGE (6 INCHES WIDE) FRONT ONLY (RESORT VILLAGER ONLY) .....	2	2
3	101918402	WHEEL RIM, WHITE (6 INCHES WIDE) FRONT ONLY (RESORT VILLAGER ONLY) .....	2	2
4	101567202	TIRE, UNMOUNTED, PREMIUM TREAD, 4-PLY RATED (18 x 8.50 - 8) (TOURALL ONLY) .....	2	2
4	101737002	TIRE, UNMOUNTED, PREMIUM TREAD, 6-PLY RATED (18 x 8.50 - 8) .....	2	2
4	101769302	TIRE, UNMOUNTED, EXTRA TRACTION, 6-PLY RATED (18 x 8.50 - 8) .....	2	2
4	101884901	TIRE, UNMOUNTED, PREMIUM TREAD, 6-PLY RATED (18 x 6.50 - 8) .....	2	2
5	7310	STEM, VALVE .....	4	4

2

G

E



---

# DECALS

3

G

E

**3****G****E**

### OPERATING INSTRUCTIONS

- Read Owner's Manual and safety warnings located on dash panel prior to driving.
  - Study and understand controls.
  - Make sure wheels are turned in desired direction.
  - Turn key to "ON" position and be sure nothing is in your path.
  - While vehicle is stopped, select direction by placing shift lever or switch in desired position:  
F – Forward N – Neutral R – Reverse (Buzzer will sound)
  - Vehicle will start moving when accelerator pedal is depressed.
  - Slowly depress accelerator pedal to increase speed. Park brake will release when accelerator pedal is depressed.
  - To stop, release accelerator pedal and depress brake pedal.
  - After stopping, firmly depress park brake until it locks.
  - Place forward and reverse switch in neutral position.
- Turn key "OFF" and remove key when not in use.

CCI 1016216-01

### WARNING

- READ AND FOLLOW THESE WARNINGS AND THE OPERATING INSTRUCTIONS BEFORE USING VEHICLE. FAILURE TO DO SO CAN CAUSE SEVERE INJURY OR DEATH.
- Operation from driver side by authorized persons only and only in designated areas - not on public roads.
  - DO NOT start vehicle until all occupants (two (2) per seat maximum) are seated.
  - Remain seated with entire body inside vehicle and hold on to seat handle or handrail at all times.
  - Drive slowly in turns and straight up and down slopes.
  - Never stand in front of or behind vehicle.
  - DO NOT operate while under the influence of alcohol or drugs.
  - DO NOT leave children unattended on vehicle at any time.

CCI 1019606-01

### DRIVER / PASSENGER WARNING DECAL

#### OPERATING INSTRUCTIONS DECAL

1

2

#### KEY SWITCH DECAL

#### PASSENGER WARNING DECAL


### WARNING

Failure to follow these instructions can cause severe injury or death.

- Remain seated with entire body inside vehicle and hold on to seat handle or handrail at all times.
- No more than two persons per seat.
- Do not leave children unattended on vehicle at anytime.
- Never stand in front of or behind vehicle.

CCI 1017057-01



#### INGERSOLL-RAND DECAL (ON BODY PANEL)

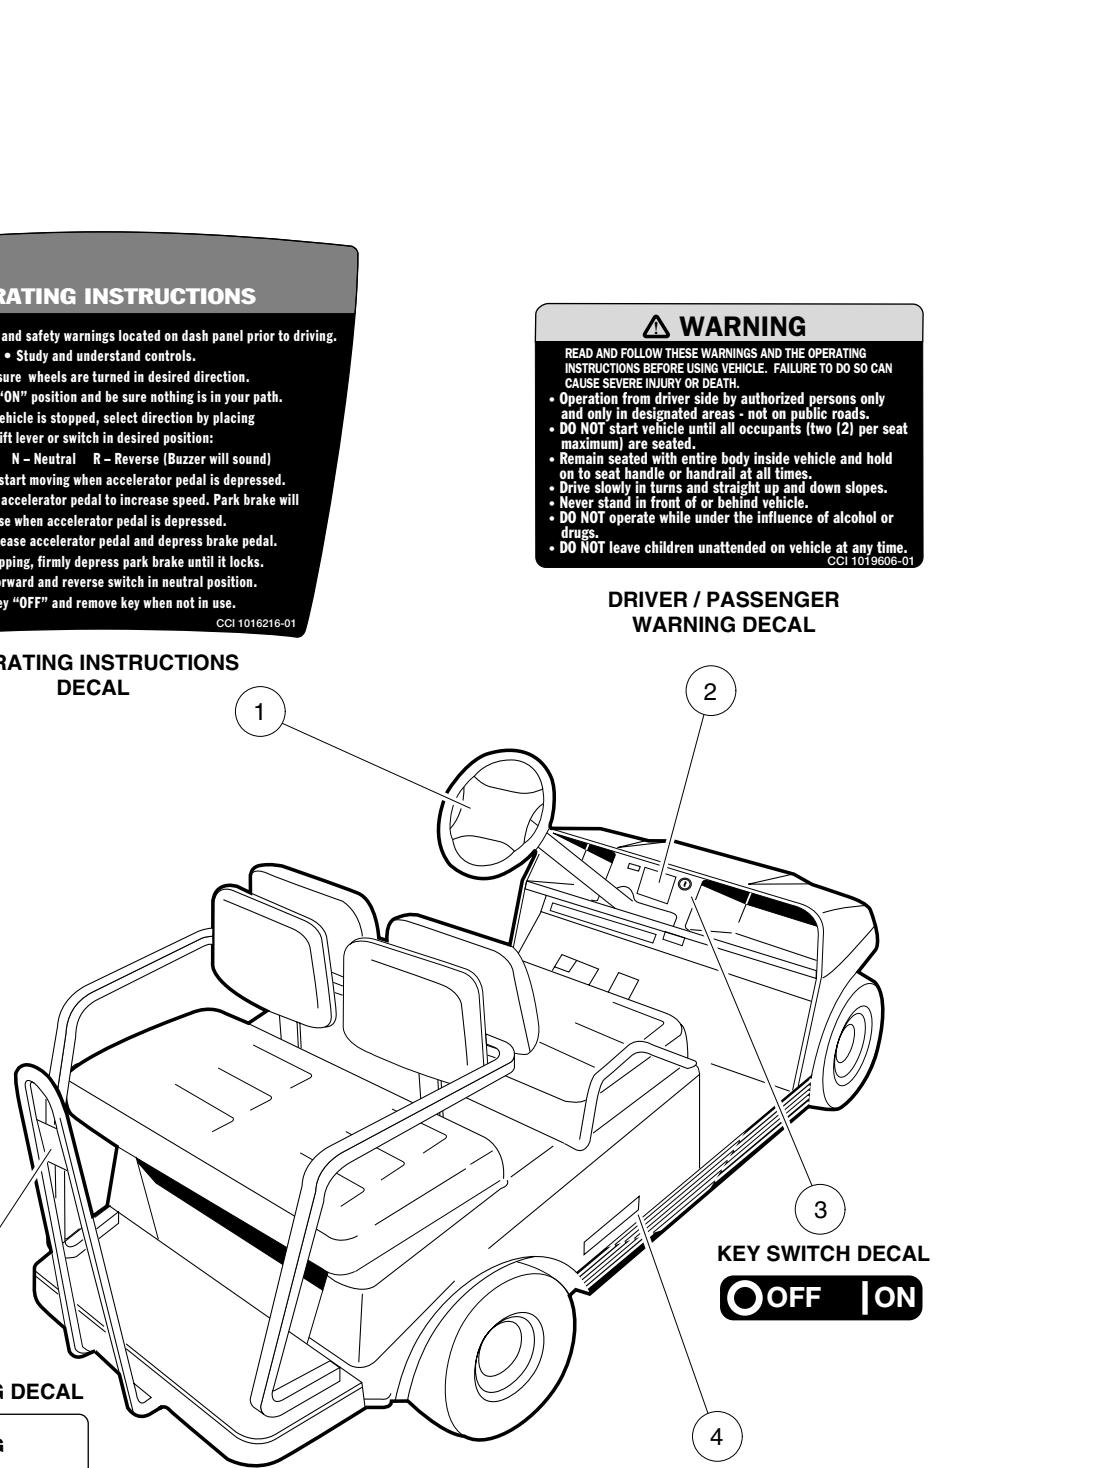

## DECALS—TOURALL

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	
		1 2 3 4			<b>3</b>
1	101621601	DECAL, OPERATING INSTRUCTIONS .....	1	1	<b>G</b>
2	101960601	DECAL, DRIVER/PASSENGER WARNING .....	1	1	
3	101825101	DECAL, KEY SWITCH .....	1	1	
4	101921901	DECAL, INGERSOLL-RAND .....	2	2	
5	101705701	DECAL, PASSENGER WARNING .....	1	1	<b>E</b>


**3**  
**G**  
**E**

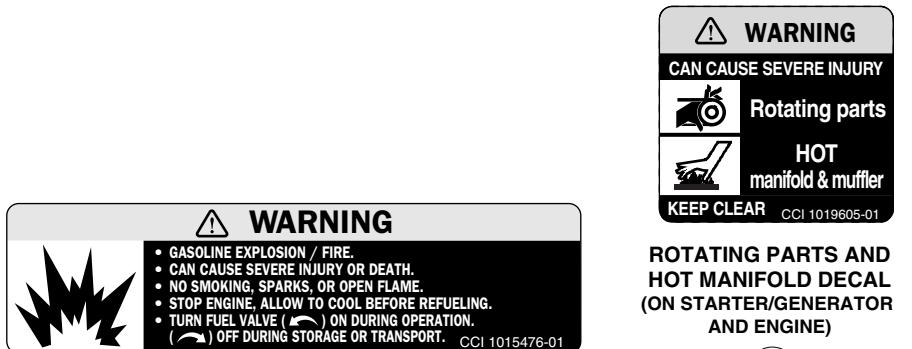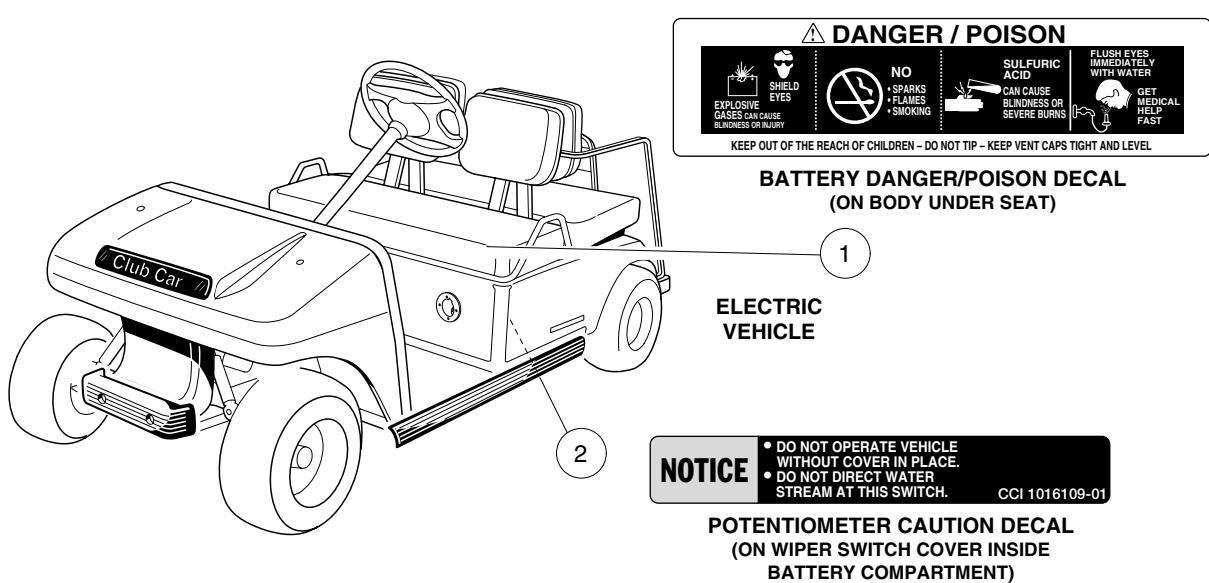

**GASOLINE WARNING DECAL  
(ON VEHICLE FRAME NEAR FUEL TANK)**



**ROTATING PARTS AND HOT MANIFOLD DECAL  
(ON STARTER/GENERATOR AND ENGINE)**

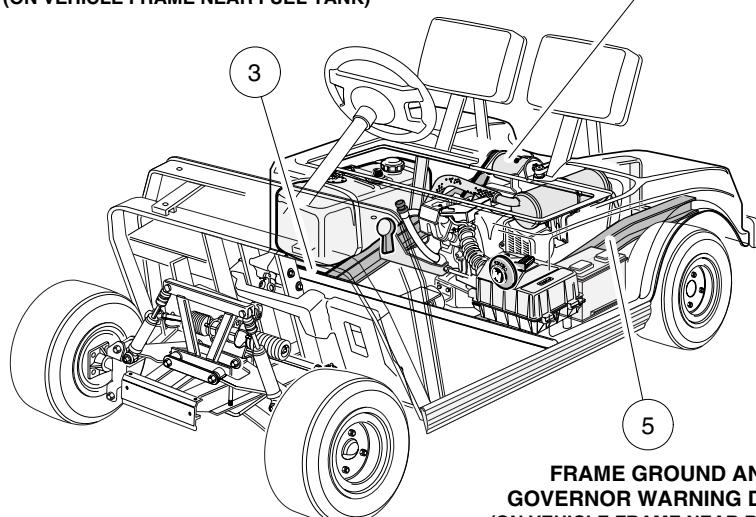

**GASOLINE VEHICLE**

# DECALS—TOURALL, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	1013677	DECAL, BATTERY DANGER .....		1
2	101610901	DECAL, POTENTIOMETER CAUTION .....		1
3	101547601	DECAL, GASOLINE WARNING .....	1	
4	101960501	DECAL, ROTATING PARTS AND HOT MANIFOLD WARNING .....	2	
5	101915201	DECAL, FRAME GROUND AND GOVERNOR WARNING.....	1	

3

G

E

**3  
G  
E**

**KEY SWITCH DECAL  
GASOLINE VEHICLE**



**KEY SWITCH DECAL  
ELECTRIC VEHICLE**



**OPERATING INSTRUCTIONS**

- Read Owner's Manual and safety warnings located on dash panel prior to driving.
- Study and understand controls.
- To start engine:
  - Place shift lever in "N"- Neutral position.
  - Depress brake pedal.
  - Turn key switch to "START" position and release.
- To operate vehicle:
  - Make sure wheels are turned in desired direction.
  - Be sure nothing is in your path.
  - While vehicle is stopped, select vehicle direction by placing shift lever or switch in desired position.  
F – Forward N – Neutral R – Reverse (Buzzer will sound)
  - Park brake will release when accelerator pedal is pushed.
  - Slowly push accelerator pedal to increase speed.
  - Accelerator pedal must be released to shift vehicle to neutral.
- To stop vehicle:
  - Release accelerator pedal and push brake pedal.
  - After stopping, firmly push park brake until it locks.
  - Turn key to "OFF" position, remove key and place shift lever in straight up neutral position when not in use.

CCI 1016932-01

**OPERATING INSTRUCTIONS**

- Read Owner's Manual and safety warnings located on dash panel prior to driving.
- Study and understand controls.
- Make sure wheels are turned in desired direction.
- Turn key to "ON" position and be sure nothing is in your path.
- While vehicle is stopped, select direction by placing shift lever or switch in desired position:  
F – Forward N – Neutral R – Reverse (Buzzer will sound)
- Vehicle will start moving when accelerator pedal is depressed.
- Slowly depress accelerator pedal to increase speed. Park brake will release when accelerator pedal is depressed.
- To stop, release accelerator pedal and depress brake pedal.
- After stopping, firmly depress park brake until it locks.
- Place forward and reverse switch in neutral position.  
Turn key "OFF" and remove key when not in use.


CCI 1016216-01

**OPERATING INSTRUCTIONS  
DECAL**

2

**OPERATING INSTRUCTIONS  
DECAL**

3

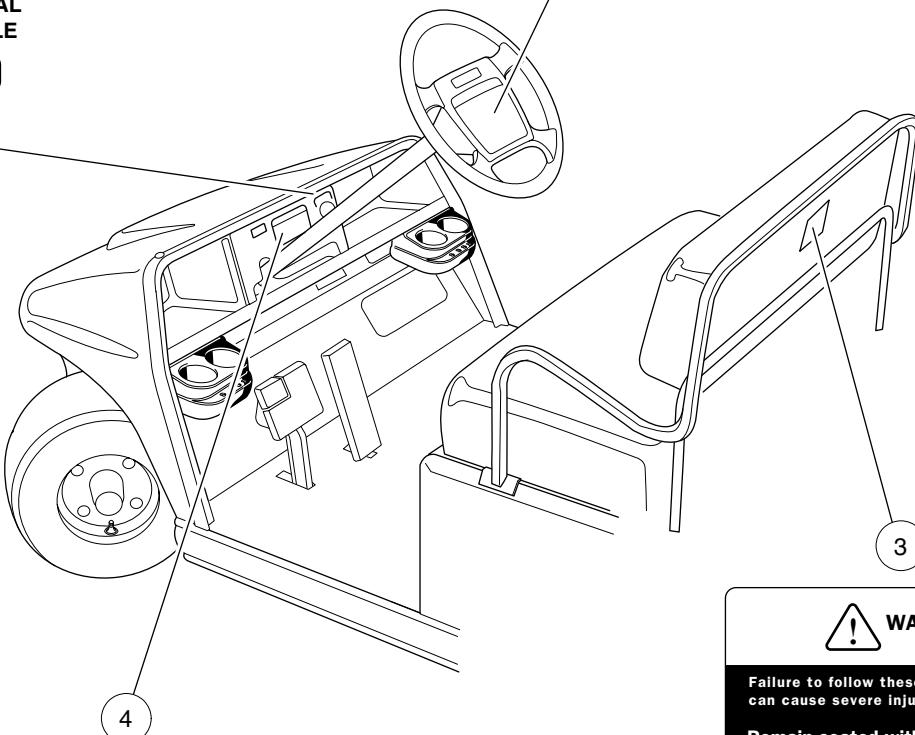

**DRIVER / PASSENGER  
WARNING DECAL**

**⚠ WARNING**

READ AND FOLLOW THESE WARNINGS AND THE OPERATING INSTRUCTIONS BEFORE USING VEHICLE. FAILURE TO DO SO CAN CAUSE SEVERE INJURY OR DEATH.

- Operation from driver side by authorized persons only and only in designated areas - not on public roads.
- DO NOT start vehicle until all occupants (two (2) per seat maximum) are seated.
- Remain seated with entire body inside vehicle and hold on to seat handle or handrail at all times.
- Drive slowly in turns and straight up and down slopes.
- Never stand in front of or behind vehicle.
- DO NOT operate while under the influence of alcohol or drugs.
- DO NOT leave children unattended on vehicle at any time.

CCI 1019606-01

**⚠ WARNING**

Failure to follow these instructions can cause severe injury or death.

- Remain seated with entire body inside vehicle and hold on to seat handle or handrail at all times.
- No more than two persons per seat.
- Do not leave children unattended on vehicle at anytime.
- Never stand in front of or behind vehicle.

CCI 1017057-01

**PASSENGER  
WARNING DECAL**

# DECALS—RESORT VILLAGER

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	101825102	DECAL, KEY SWITCH (GASOLINE VEHICLE) .....	1	
1	101825101	DECAL, KEY SWITCH (ELECTRIC VEHICLE) .....		1
2	101693201	DECAL, OPERATING INSTRUCTIONS (GASOLINE VEHICLE) .....	1	
2	101621601	DECAL, OPERATING INSTRUCTIONS (ELECTRIC VEHICLE) .....		1
3	101705701	DECAL, PASSENGER WARNING .....	1	1
4	101960601	DECAL, DRIVER/PASSENGER WARNING .....	1	1

3

G


E

**3  
G  
E**



BATTERY DANGER/POISON DECAL  
(ON BODY UNDER SEAT)

ELECTRIC VEHICLE

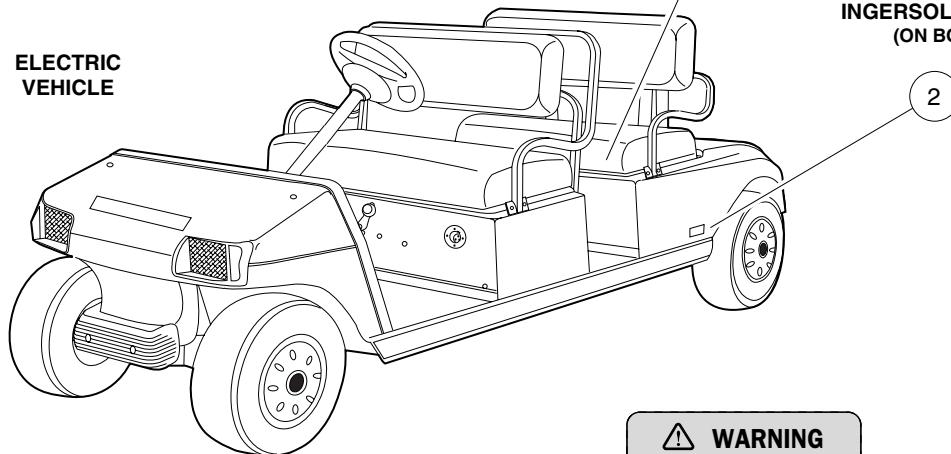


**INGERSOLL-RAND**

INGERSOLL-RAND DECAL  
(ON BODY PANEL)



GASOLINE WARNING DECAL  
(ON VEHICLE FRAME NEAR FUEL TANK)


GASOLINE VEHICLE

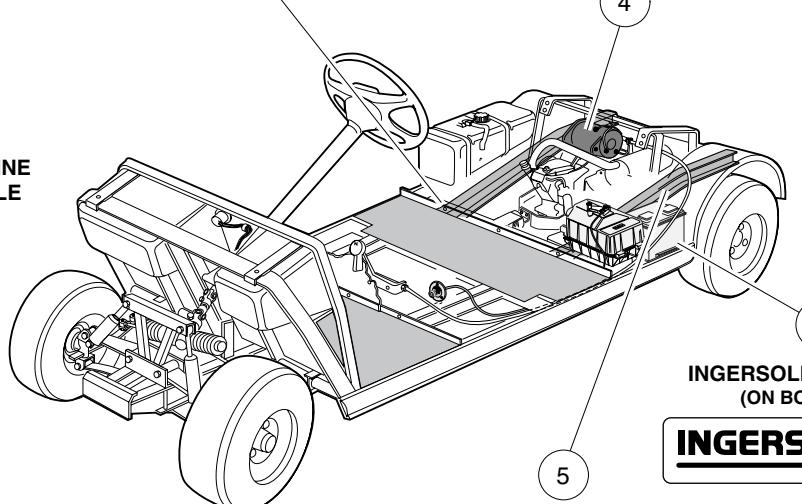

**INGERSOLL-RAND**

INGERSOLL-RAND DECAL  
(ON BODY PANEL)

5



**DECALS—**  
**RESORT VILLAGER, CONTINUED**

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	1013677	DECAL, BATTERY DANGER .....		1
2	101921901	DECAL, INGERSOLL-RAND .....	2	2
3	101547601	DECAL, GASOLINE WARNING .....	1	
4	101960501	DECAL, ROTATING PARTS AND HOT MANIFOLD WARNING.....	2	
5	101915201	DECAL, FRAME GROUND AND GOVERNOR WARNING .....	1	

**3**

**G**

**E**

**3  
G  
E**

## OPERATING INSTRUCTIONS DECAL

### OPERATING INSTRUCTIONS

- Read Owner's Manual and safety warnings located on dash panel prior to driving.
- Study and understand controls.
- To start engine:
  - Place shift lever in "N" - Neutral position.
  - Depress brake pedal.
  - Turn key switch to "START" position and release.
- To operate vehicle:
  - Make sure wheels are turned in desired direction.
  - Be sure nothing is in your path.
  - While vehicle is stopped, select vehicle direction by placing shift lever or switch in desired position.
  - F - Forward    N - Neutral    R - Reverse (Buzzer will sound)
  - Park brake will release when accelerator pedal is pushed.
  - Slowly push accelerator pedal to increase speed.
  - Accelerator pedal must be released to shift vehicle to neutral.
- To stop vehicle:
  - Release accelerator pedal and push brake pedal.
  - After stopping, firmly push park brake until it locks.
  - Turn key to "OFF" position, remove key and place shift lever in straight up neutral position when not in use.

CCI 1016932-01

### GASOLINE VEHICLE

### KEY SWITCH DECAL



### GASOLINE VEHICLE

### OFF | ON

### ELECTRIC VEHICLE




### OPERATING INSTRUCTIONS

- Read Owner's Manual and safety warnings located on dash panel prior to driving.
- Study and understand controls.
- Make sure wheels are turned in desired direction.
- Turn key to "ON" position and be sure nothing is in your path.
- While vehicle is stopped, select direction by placing shift lever or switch in desired position:
- F - Forward    N - Neutral    R - Reverse (Buzzer will sound)
- Vehicle will start moving when accelerator pedal is depressed.
- Slowly depress accelerator pedal to increase speed. Park brake will release when accelerator pedal is depressed.
- To stop, release accelerator pedal and depress brake pedal.
- After stopping, firmly depress park brake until it locks.
- Place forward and reverse switch in neutral position.
- Turn key "OFF" and remove key when not in use.

CCI 1016216-01

### ELECTRIC VEHICLE

### DRIVER/PASSENGER WARNING DECAL

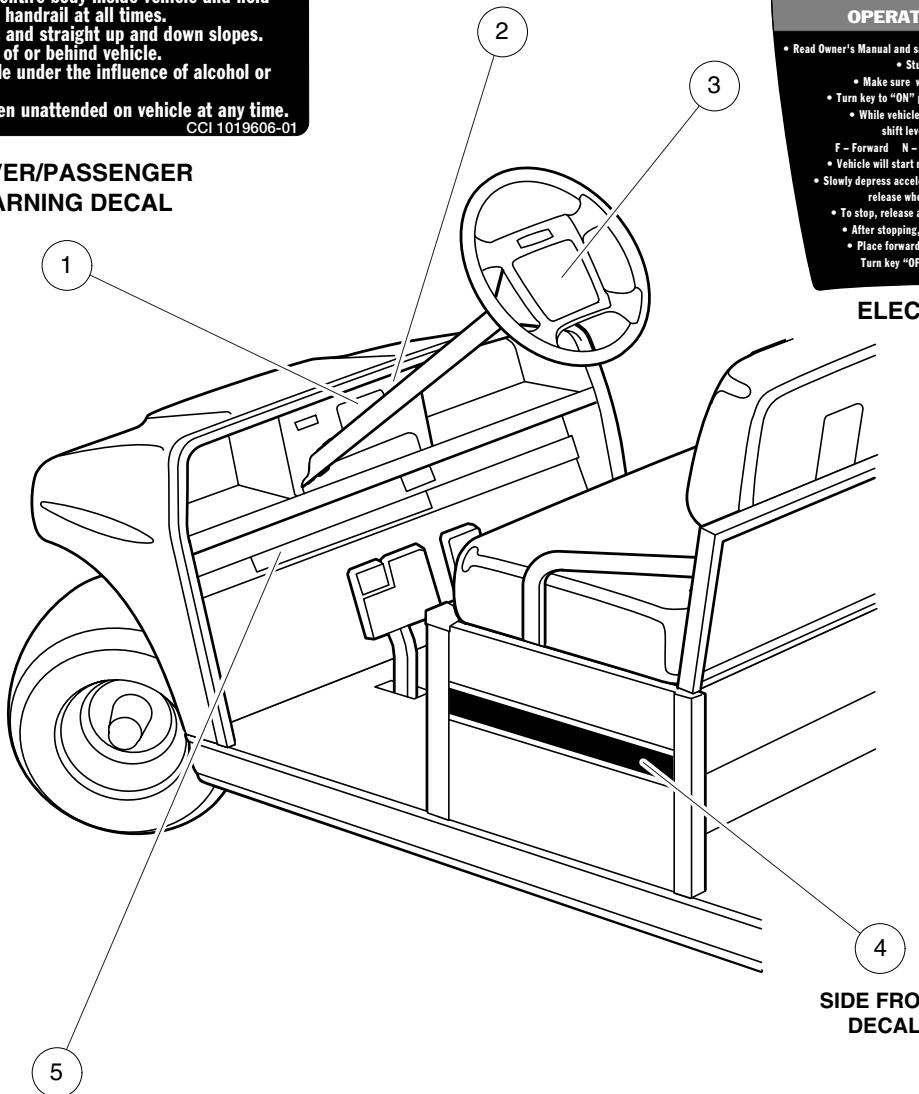

### VEHICLE LOADING DECAL

#### VEHICLE LOADING

Read Owner's Manual and warnings on dash.

- Vehicle rated capacity - 1500 lbs. on level surface only. Weight to include passengers, cargo bed load, and gross trailer weight. See Owner's Manual.
- Maximum cargo load CARRYALL VI - 1000 lbs., TRANSPORTER - 300 LBS. Weight to include cargo bed load and gross trailer weight.
- Maximum trailer hitch tongue weight - 150 lbs.

- Cargo should be evenly spread over the floor of the cargo bed as far forward as possible and secured.
- For vehicle stability, when fully loaded, drive slowly and avoid stopping on or backing down steep hills.
- Avoid top heavy loads. See Owner's Manual.
- When driving on uneven terrain or down steep hills, reduce speed and load.

CCI 1019600-01

**DECALS—**  
**TRANS-PORTER/TRANS-SENDER**

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	101960601	DECAL, DRIVER/PASSENGER WARNING .....	1	1
2	101825102	DECAL, KEY SWITCH (GASOLINE VEHICLE ONLY) .....	1	
2	101825101	DECAL, KEY SWITCH (ELECTRIC VEHICLE ONLY) .....		1
3	101693201	DECAL, OPERATING INSTRUCTIONS (GASOLINE VEHICLE ONLY) .....	1	
3	101621601	DECAL, OPERATING INSTRUCTIONS (ELECTRIC VEHICLE ONLY) .....		1
4	1016757	DECAL, SIDE FRONT .....	2	2
5	101960001	DECAL, VEHICLE LOADING .....	1	1

**3**

**G**

**E**

**3**  
**G**  
**E**

### NOTICE

Do not operate vehicle without this cover properly installed.  
See vehicle Maintenance and Service Manual before servicing.

CCI 1019315-01


ELECTRICAL COMPONENT  
COVER CAUTION DECAL  
(ON COVER)

ELECTRICAL COMPONENT  
MOUNTING PLATE NOTICE

**NOTICE** DO NOT USE AS GROUND

CCI 1019646-01

(ON PLATE)

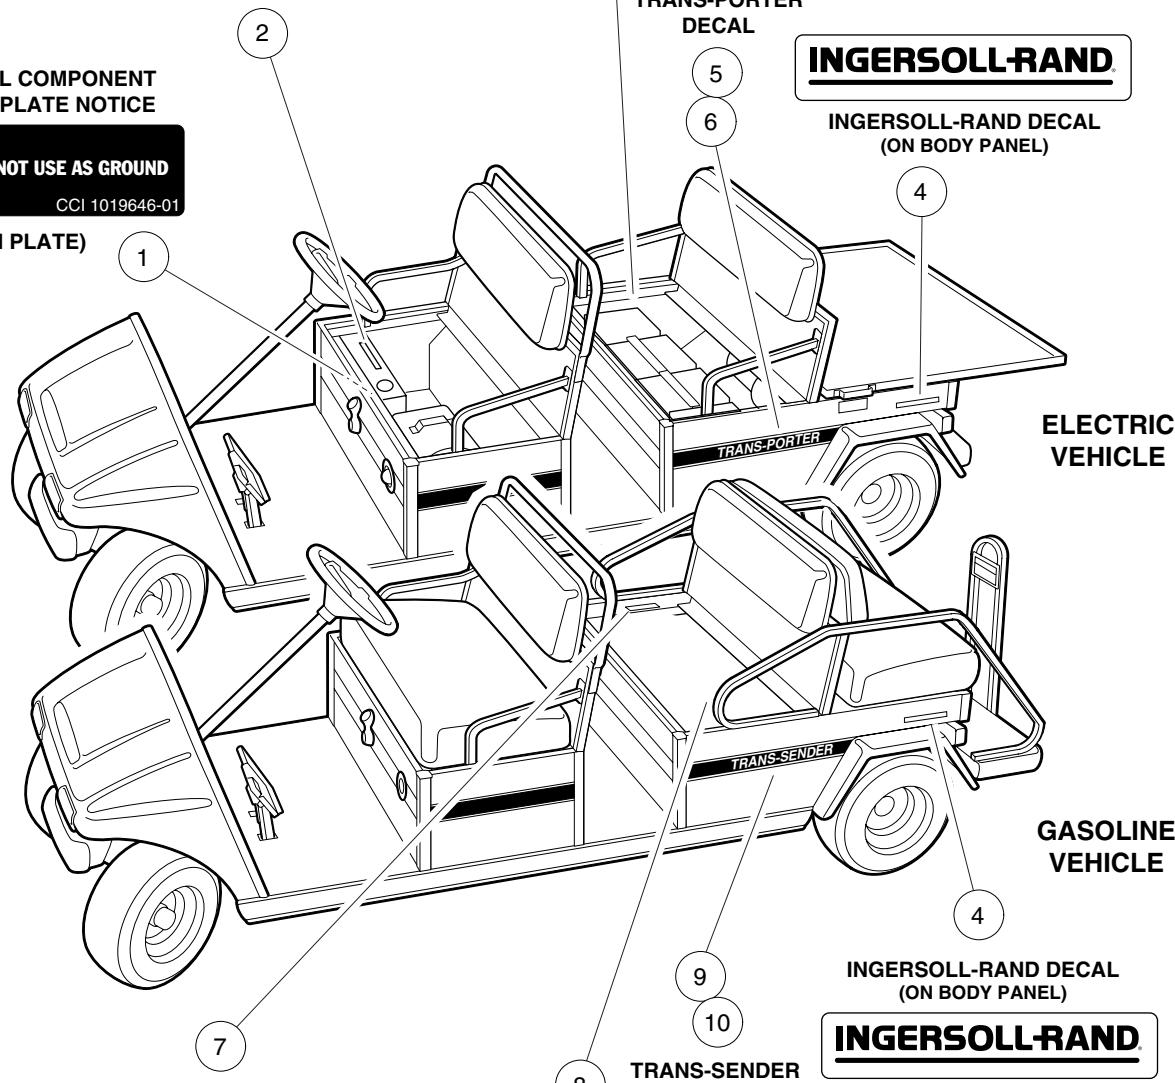

### WARNING



- GASOLINE EXPLOSION / FIRE.
- CAN CAUSE SEVERE INJURY OR DEATH.
- NO SMOKING, SPARKS, OR OPEN FLAME.
- STOP ENGINE, ALLOW TO COOL BEFORE REFUELING.
- TURN FUEL VALVE ( ) ON DURING OPERATION.
- ( ) OFF DURING STORAGE OR TRANSPORT.

CCI 1015476-01

GASOLINE WARNING DECAL  
(ON VEHICLE FRAME NEAR FUEL TANK)

### WARNING

- CAN CAUSE SEVERE INJURY
- Rotating parts
- HOT manifold & muffler

KEEP CLEAR CCI 1019605-01

ROTATING PARTS AND  
HOT MANIFOLD & MUFFLER DECAL  
(ON STARTER/GENERATOR  
AND ENGINE)

**DECALS—**  
**TRANS-PORTER/TRANS-SENDER, CONTINUED**

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	101964601	DECAL, NO GROUND .....		1
2	101931501	DECAL, COMPONENT COVER CAUTION .....		1
3	1013677	DECAL, BATTERY DANGER .....		1
4	101921901	DECAL, INGERSOLL-RAND .....	2	2
5	101672501	DECAL, TRANS-PORTER (PASSENGER SIDE).....	1	1
6	101672502	DECAL, TRANS-PORTER (DRIVER SIDE) .....	1	1
7	101547601	DECAL, GASOLINE WARNING .....	1	
8	101960501	DECAL, ROTATING PARTS AND HOT MANIFOLD WARNING .....	1	
9	101672601	DECAL, TRANS-SENDER (PASSENGER SIDE).....	1	1
10	101672602	DECAL, TRANS-SENDER (DRIVER SIDE) .....	1	1


3

G


E

**3  
G  
E**


**BED BOLT  
WARNING DECAL**



**BED LOAD  
WARNING DECAL**




**ELECTRIC  
VEHICLE**

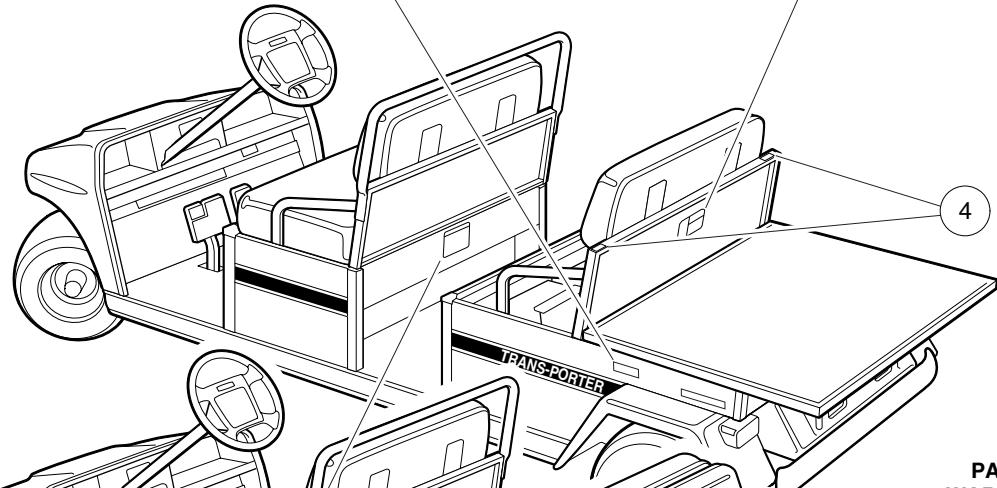

**CRUSH AREA  
DECAL**

**GASOLINE  
VEHICLE**

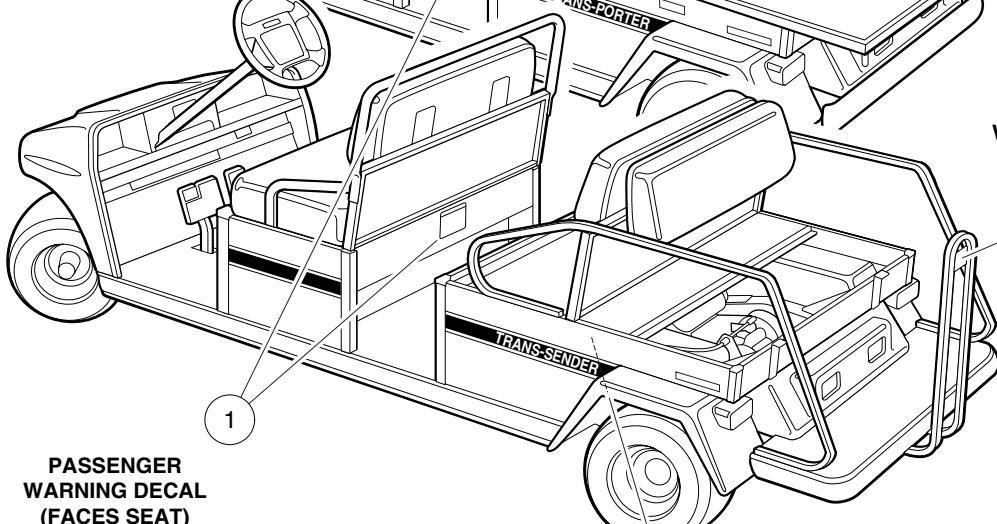

**PASSENGER  
WARNING DECAL  
(FACES SEAT)**

**PASSENGER  
WARNING DECAL  
(FACES SEAT)**



- Remain seated with entire body inside vehicle and hold on to seat handle or handrail at all times.
- No more than two persons per seat.
- Do not leave children unattended on vehicle at anytime.
- Never stand in front of or behind vehicle.

**FRAME GROUND AND  
GOVERNOR WARNING DECAL  
(ON VEHICLE FRAME NEAR BATTERY)**



**DECALS—**  
**TRANS-PORTER/TRANS-SENDER, CONTINUED**

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	101705701	DECAL, PASSENGER WARNING (QUANTITY 1 FOR TRANS-PORTER) .....	2	2
2	101707801	DECAL, BED BOLT WARNING (TRANS-PORTER ONLY) .....	1	1
3	101553901	DECAL, BED LOAD WARNING (TRANS-PORTER ONLY) .....	1	1
4	101609401	DECAL, CRUSH AREA (TRANS-PORTER ONLY) .....	2	2
5	101915201	DECAL, FRAME GROUND AND GOVERNOR WARNING .....	1	

**3**

**G**

**E**




# **BRAKES, PEDAL, AND CABLE ASSEMBLIES**

---

**4**

**G**

**E**

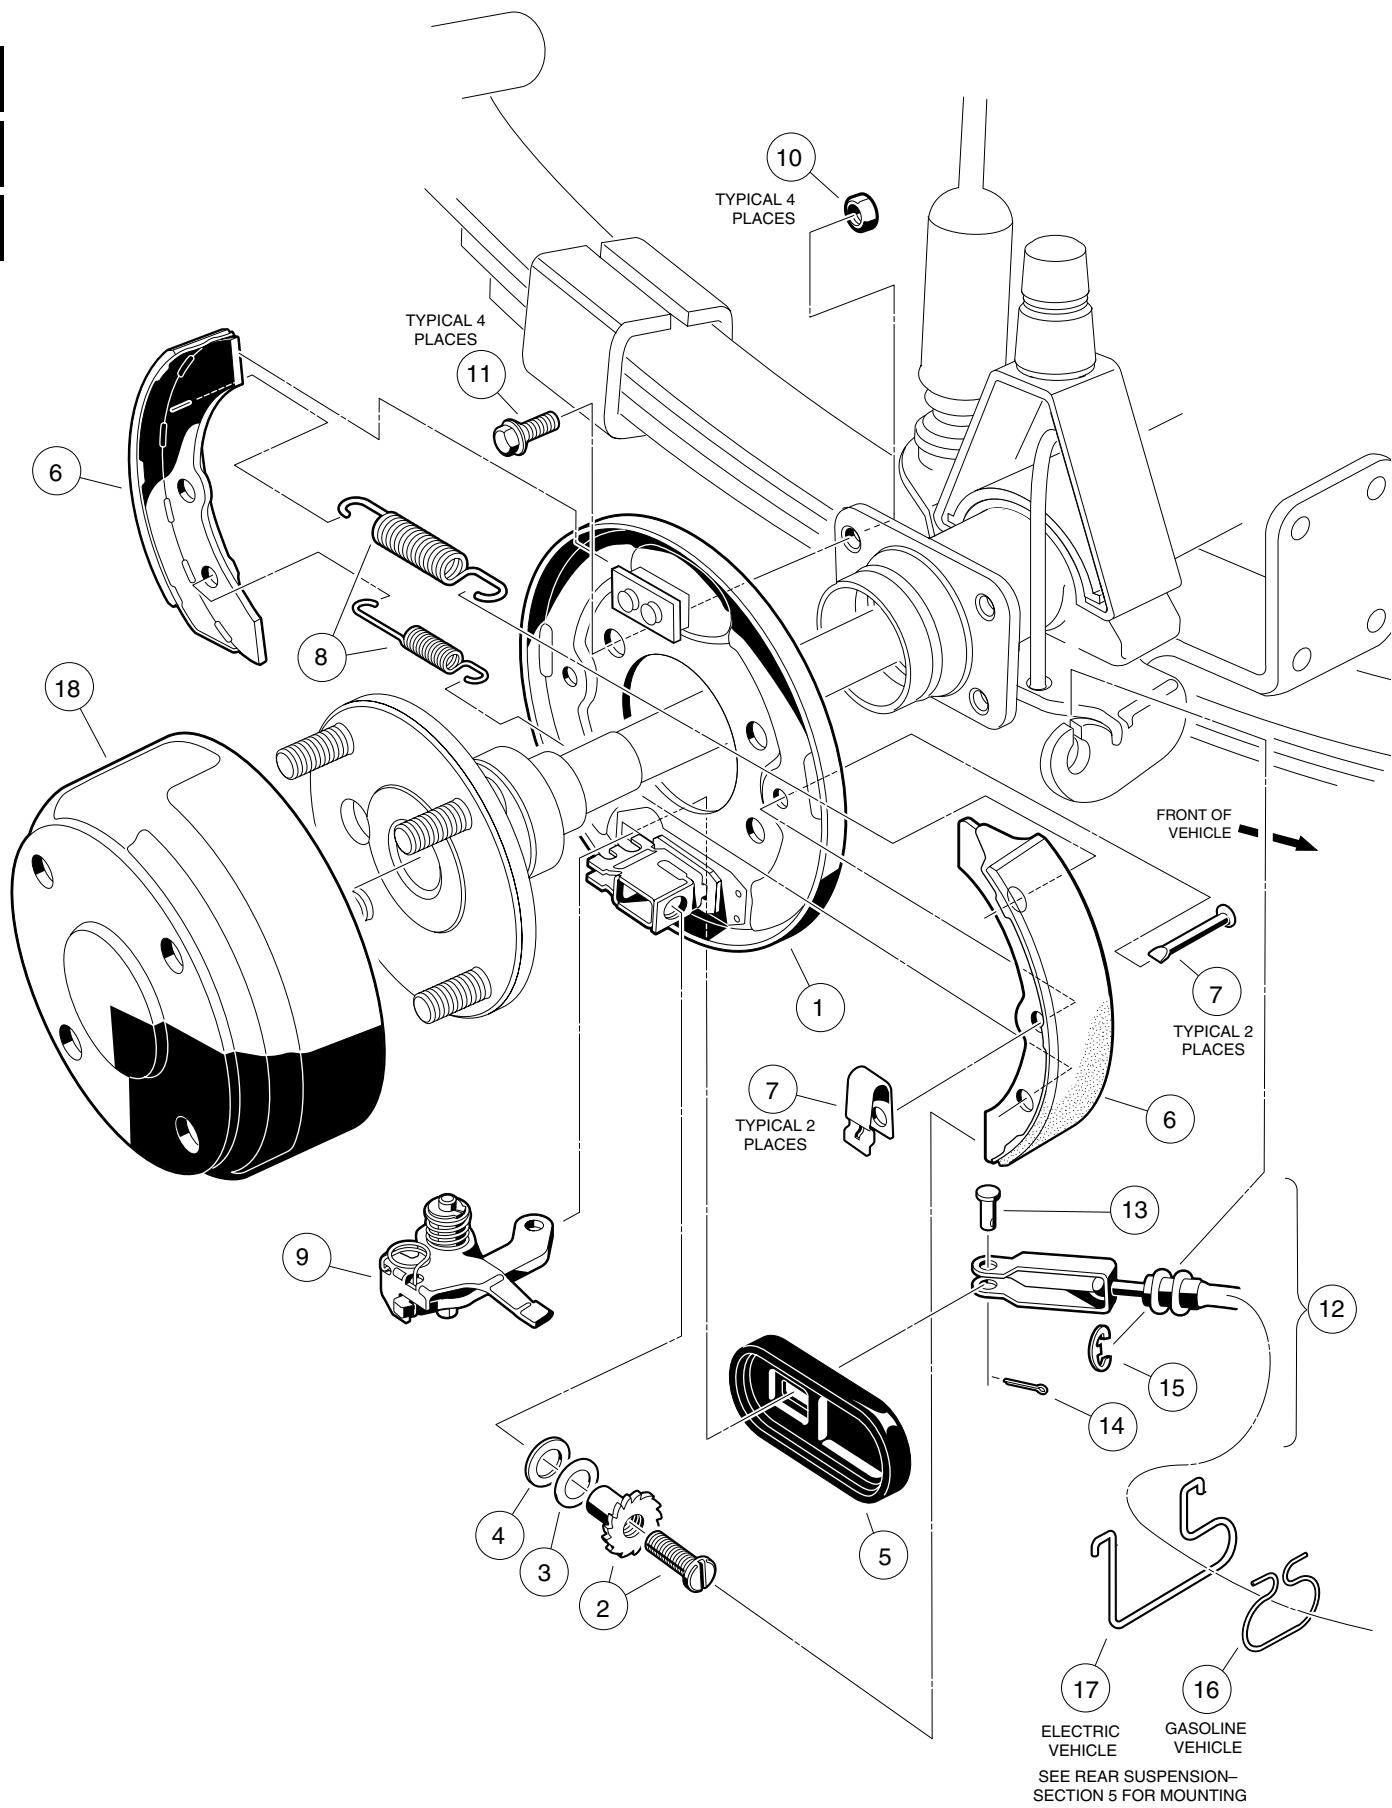**4****G****E**


# REAR BRAKE ASSEMBLY, SELF-ADJUSTING— TOURALL

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
	101823301	CLUSTER, BRAKE, PASSENGER SIDE (INCLUDES ITEMS 1 - 9) .....	1	1
	101823302	CLUSTER, BRAKE, DRIVER SIDE (INCLUDES ITEMS 1 - 9) .....	1	1
1	101824001	ASSEMBLY, BACKING PLATE, PASSENGER SIDE (INCLUDES ITEMS 2, 3 AND 4) .....	1	1
1	101824002	ASSEMBLY, BACKING PLATE, DRIVER SIDE (INCLUDES ITEMS 2, 3 AND 4) ..	1	1
2	101816501	MECHANISM, ADJUSTING, PASSENGER SIDE .....	1	1
2	101816502	MECHANISM, ADJUSTING, DRIVER SIDE .....	1	1
3	101823901	WASHER .....	1	1
4	101823801	WASHER, PLATE .....	1	1
5	1010850	COVER, DUST .....	1	1
6	101823201	PACKAGE, BRAKE SHOE (FOUR PIECES) .....	1	1
7	1011466	KIT, SHOE RETAINER (FOUR PIECES) .....	1	1
8	101816301	PACKAGE, BRAKE SPRING (FOUR PIECES) .....	1	1
9	101815501	ASSEMBLY, LEVER, PASSENGER SIDE .....	1	1
9	101815502	ASSEMBLY, LEVER, DRIVER SIDE .....	1	1
10	1013924	NUT, HEX HEAD LOCK, GRADE 8, 5/16 - 24 .....	8	8
11	1014153	BOLT, BRAKE CLUSTER MOUNTING, GRADE 8, 5/16 - 24 x 7/8 .....	8	8
12	1011403	KIT, BRAKE CABLE (FOR VEHICLES WITH SERIAL NUMBERS LOWER THAN 9907-746860 —EQUALIZER DESIGN SHOWN IN DETAIL A ON PAGE 4-6) (INCLUDES ITEMS 13-15) .....	2	2
12	102022101	KIT, BRAKE CABLE (FOR VEHICLES WITH SERIAL NUMBER 9907-746860 AND GREATER—EQUALIZER DESIGN SHOWN IN DETAIL B ON PAGE 4-6) (INCLUDES ONE EACH OF ITEMS 13 AND 14 AND TWO EACH OF ITEM 15) .....	2	2
13	1010829	PIN, CLEVIS, 5/16 .....	2	2
14	1035	PIN, COTTER, 3/32 x 1 .....	2	2
15	1011779	E-CLIP, 1/2 .....	2	2
16	101900801	HANGER, BRAKE CABLE (GASOLINE VEHICLE ONLY) .....	2	
17	1013207	HANGER, BRAKE CABLE (ELECTRIC VEHICLE ONLY) .....		2
18	101791101	DRUM, BRAKE .....	2	2

4

G

E

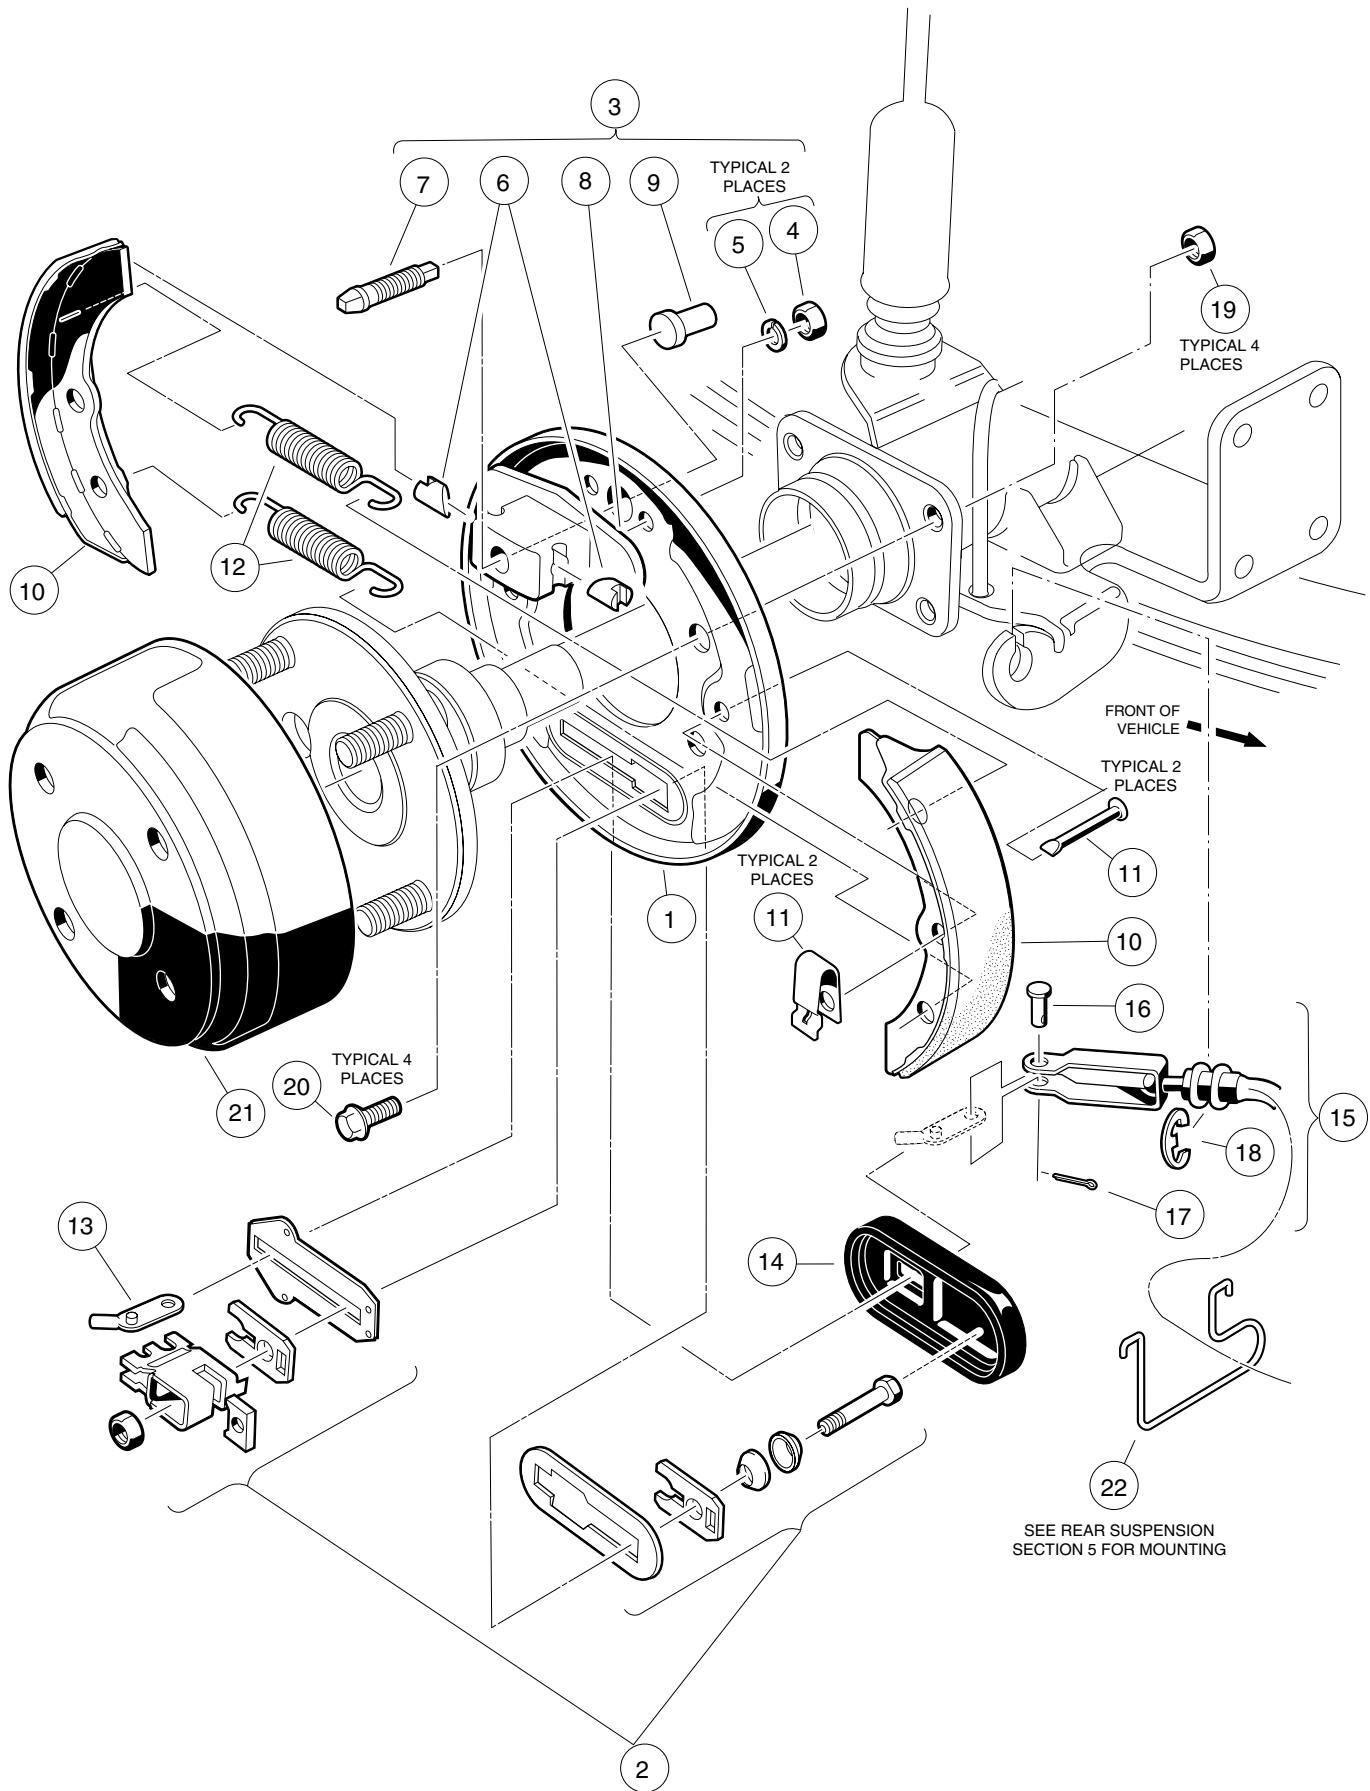**4****G****E**

# REAR BRAKE ASSEMBLY, MANUALLY ADJUSTED— RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
	1016573	CLUSTER, BRAKE, PASSENGER SIDE, WITHOUT BRAKE DRUM (INCLUDES ITEMS 1 - 14) .....	1	1
	1016557	CLUSTER, BRAKE, DRIVER SIDE, WITHOUT BRAKE DRUM (INCLUDES ITEMS 1 - 14) .....	1	1
1	1011494	PLATE, BACKING, DRIVER SIDE .....	1	1
1	1011154	PLATE, BACKING, PASSENGER SIDE .....	1	1
2	1011465	KIT, BRAKE ACTUATOR .....	1	1
3	1011467	KIT, ANCHOR BODY (INCLUDES ITEMS 4 - 9) .....	1	1
4	1011114	NUT, M6 x 1 .....	2	2
5	451	WASHER, LOCK, 1/4 .....	2	2
6	N/A	PISTON, ANCHOR .....	2	2
7	N/A	BOLT, ADJUSTMENT .....	1	1
8	N/A	BODY, ANCHOR .....	1	1
9	1011303	CAP, ADJUSTMENT BOLT .....	1	1
10	101146302	PACKAGE, BRAKE SHOE (FOUR PIECES) .....	1	1
11	1011466	KIT, SHOE RETAINER (FOUR PIECES) .....	1	1
12	1011464	PACKAGE, BRAKE SPRING (FOUR PIECES) .....	1	1
13	N/A	ARM, BRAKE LEVER .....	1	1
14	1010850	COVER, DUST .....	1	1
15	1011403	KIT, BRAKE CABLE (FOR VEHICLES WITH SERIAL NUMBERS LOWER THAN 9907-746860 —EQUALIZER DESIGN SHOWN IN DETAIL A ON PAGE 4-8) (INCLUDES ITEMS 16 - 18) .....	2	2
15	102166901	KIT, BRAKE CABLE (FOR VEHICLES WITH SERIAL NUMBER 9907-746860 AND GREATER—EQUALIZER DESIGN SHOWN IN DETAIL B ON PAGE 4-8) (INCLUDES TWO EACH OF ITEMS 16 AND 17 AND FOUR EACH OF ITEM 18) ...	1	1
16	1010829	PIN, CLEVIS, 5/16 .....	2	2
17	1035	PIN, COTTER, 3/32 x 1 .....	2	2
18	1011779	E-CLIP, 1/2 .....	4	4
19	1013924	NUT, CONE LOCK, GRADE 8, 5/16 - 24 .....	8	8
20	1014153	BOLT, BRAKE CLUSTER MOUNTING, GRADE 8, 5/16 - 24 x 7/8 .....	8	8
21	101791101	DRUM, BRAKE .....	2	2
22	1013207	HANGER, BRAKE CABLE .....	2	2

4


G

E

4

G

E

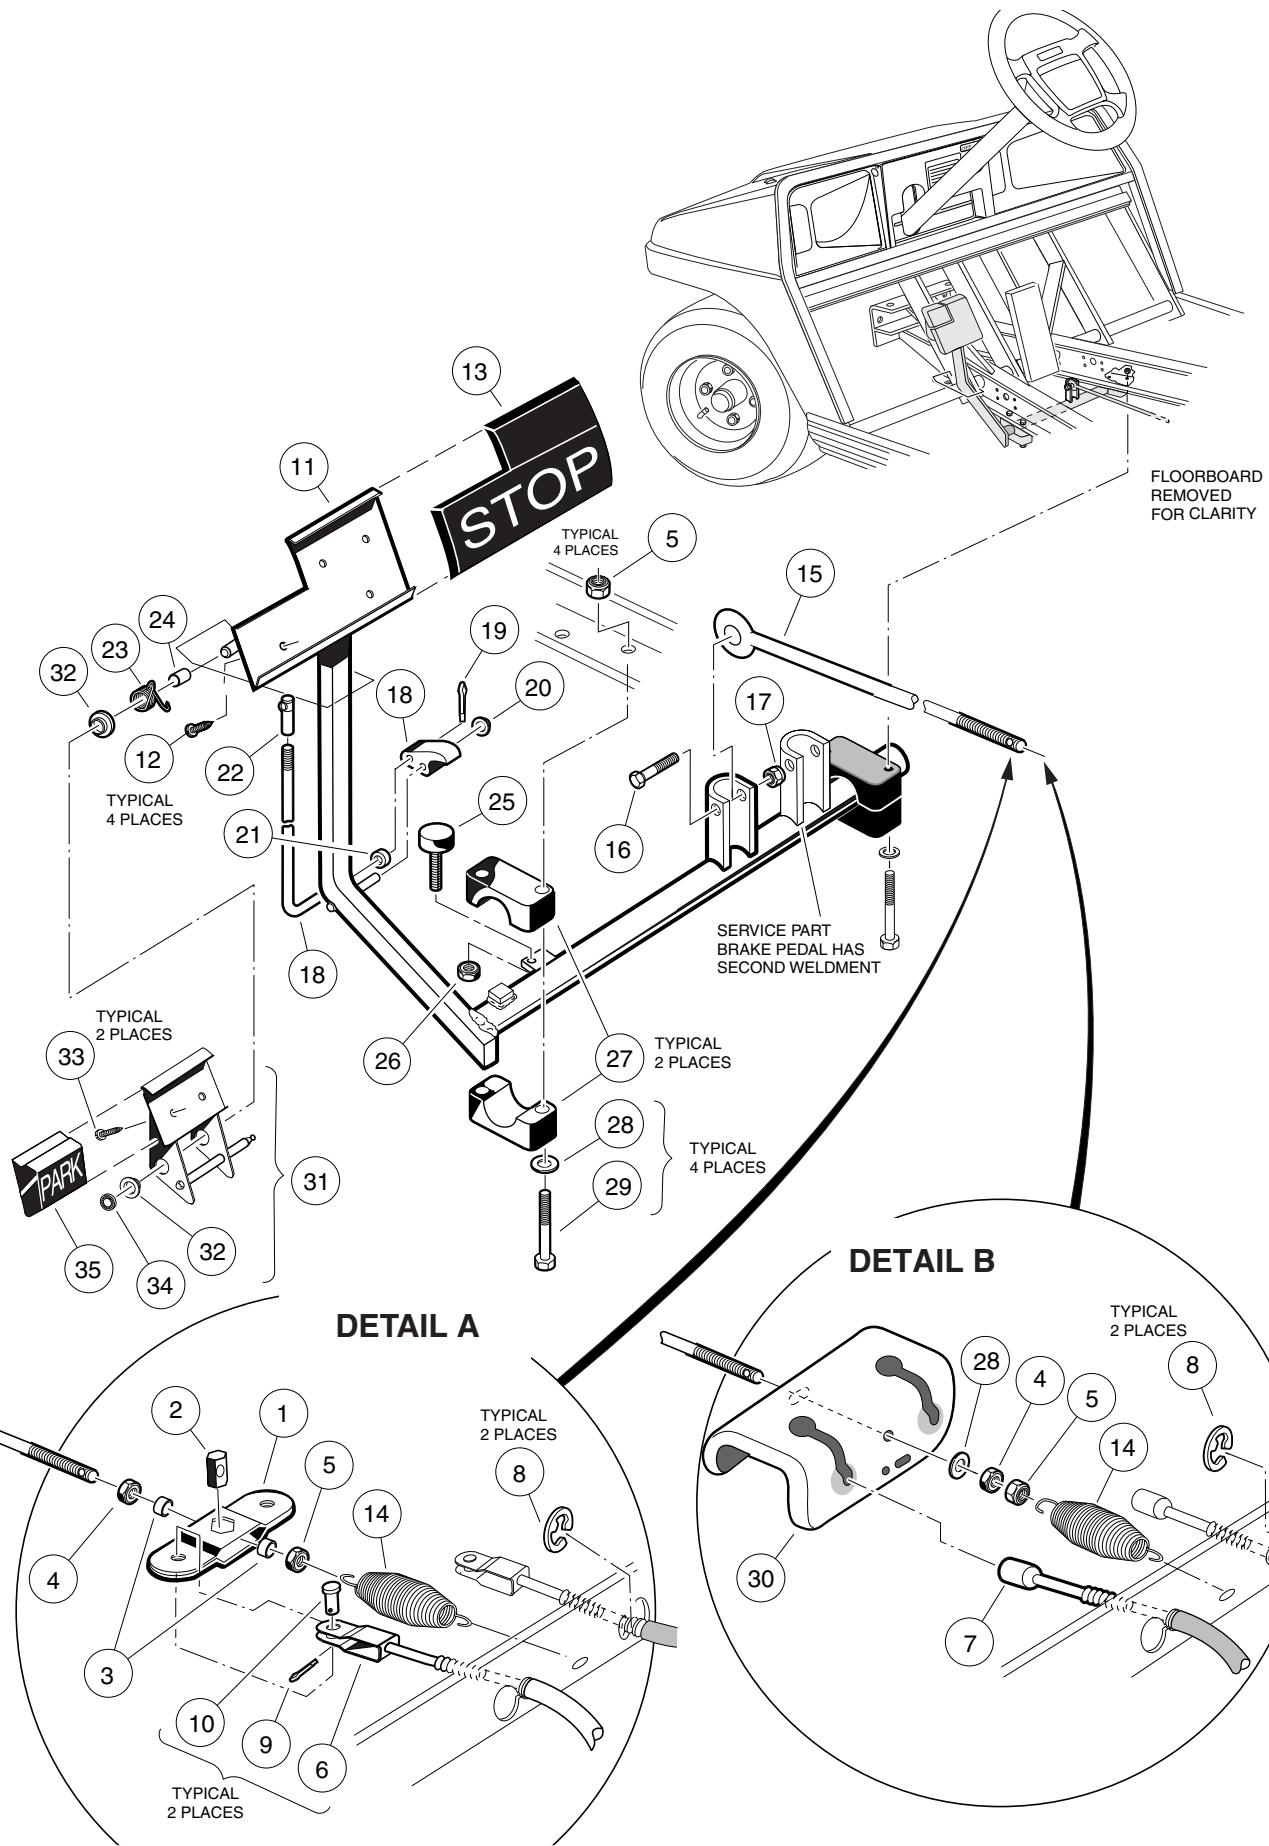

# BRAKE PEDAL AND CABLE ASSEMBLY— TOURALL

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	101990801	KIT, EQUALIZER AND PIVOT LIMITER (INCLUDES ITEM 2) .....	1	1
2	N/A	PIN, EQUALIZER PIVOT .....	1	1
3	101865301	SPACER, EQUALIZER .....	2	2
4	1242	NUT, HEX, 5/16 - 18 .....	1	1
5	7473	NUT, NYLON LOCK, 5/16 - 18 .....	5	5
6	1011403	KIT, BRAKE CABLE (FOR VEHICLES WITH SERIAL NUMBERS LOWER THAN 9907-746860 —EQUALIZER DESIGN SHOWN IN DETAIL A) (INCLUDES ITEMS 8 - 10) .....	2	2
7	102022101	KIT, BRAKE CABLE (FOR VEHICLES WITH SERIAL NUMBER 9907-746860 AND GREATER—EQUALIZER DESIGN SHOWN IN DETAIL B) (INCLUDES 2 EACH OF ITEM 8 AND ONE EACH OF ITEMS 9 AND 10) .....	2	2
8	1011779	E-CLIP, 1/2 .....	2	2
9	1035	PIN, COTTER, 3/32 x 1 .....	2	2
10	1010829	PIN, CLEVIS, 5/16 .....	2	2
11	101878201	KIT, BRAKE PEDAL (INCLUDES ITEMS 12 AND 13) .....	1	1
12	7716	SCREW, SLOTTED HEX WASHER HEAD, #10 - 16 x 1/2 .....	4	4
13	1013869	PAD, BRAKE PEDAL .....	1	1
14	1013531	SPRING, BRAKE RETURN .....	1	1
15	101953101	ROD, EQUALIZER .....	1	1
16	101953001	BOLT, HEX HEAD SHOULDER, 3/8 x 1 .....	1	1
17	7473	NUT, NYLON LOCK, 5/16 - 18 .....	1	1
	101187702	KIT, PARK BRAKE LATCH (INCLUDES ITEMS 18 - 22, AND ITEM 25 ON PAGE 4-13 OR 4-15) .....	1	1
18	N/A	ROD AND PAWL .....	1	1
19	1017029	PIN, COTTER, 7/64 x 1/2 .....	1	1
20	1010877	NUT, PUSH, 5/16 .....	1	1
21	1010805	SLEEVE, PARK BRAKE ROD .....	1	1
22	1010932	JOINT, BALL, 1/4 - 28 .....	1	1
23	1010933	SPRING, PARK BRAKE TORSION .....	1	1
24	1010927	SPACER, PARK BRAKE .....	1	1
25	1010878	BUMPER, RUBBER .....	1	1
26	1028	NUT, HEX, 1/4 - 20 .....	1	1
27	1011402	PACKAGE, BRAKE MOUNTING BLOCK (CONTAINS UPPER AND LOWER FOR LEFT AND RIGHT SIDES) .....	1	1
28	1241	WASHER, FLAT, 5/16 .....	5	5
29	1010921	SCREW, HEX HEAD CAP, 5/16 - 18 x 2-1/2 .....	4	4
30	101990801	EQUALIZER (FOR VEHICLES WITH EQUALIZER DESIGN SHOWN IN DETAIL B ) .....	1	1
31	1011418	KIT, PARK BRAKE PEDAL (INCLUDES ITEMS 32 - 35) .....	1	1
32	1032	BUSHING, NYLON .....	2	2
33	7716	SCREW, SLOTTED HEX WASHER HEAD, #10 - 16 x 1/2 .....	2	2
34	1013876	NUT, PUSH, 3/8 .....	1	1
35	1013870	PAD, PARK BRAKE .....	1	1

4





G

E

4

G

E

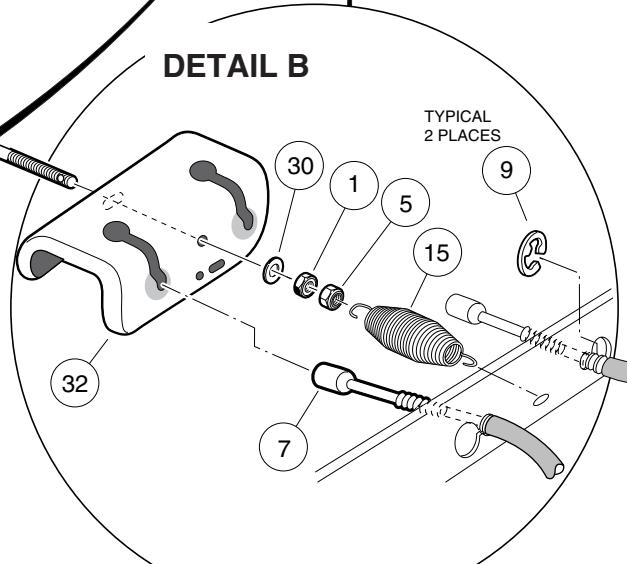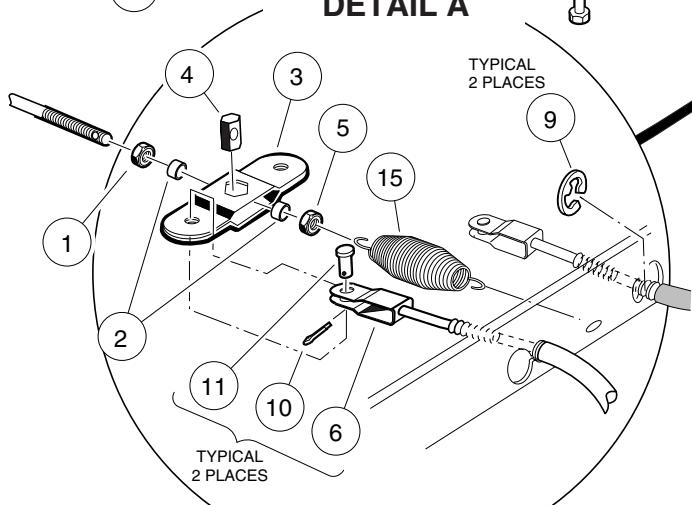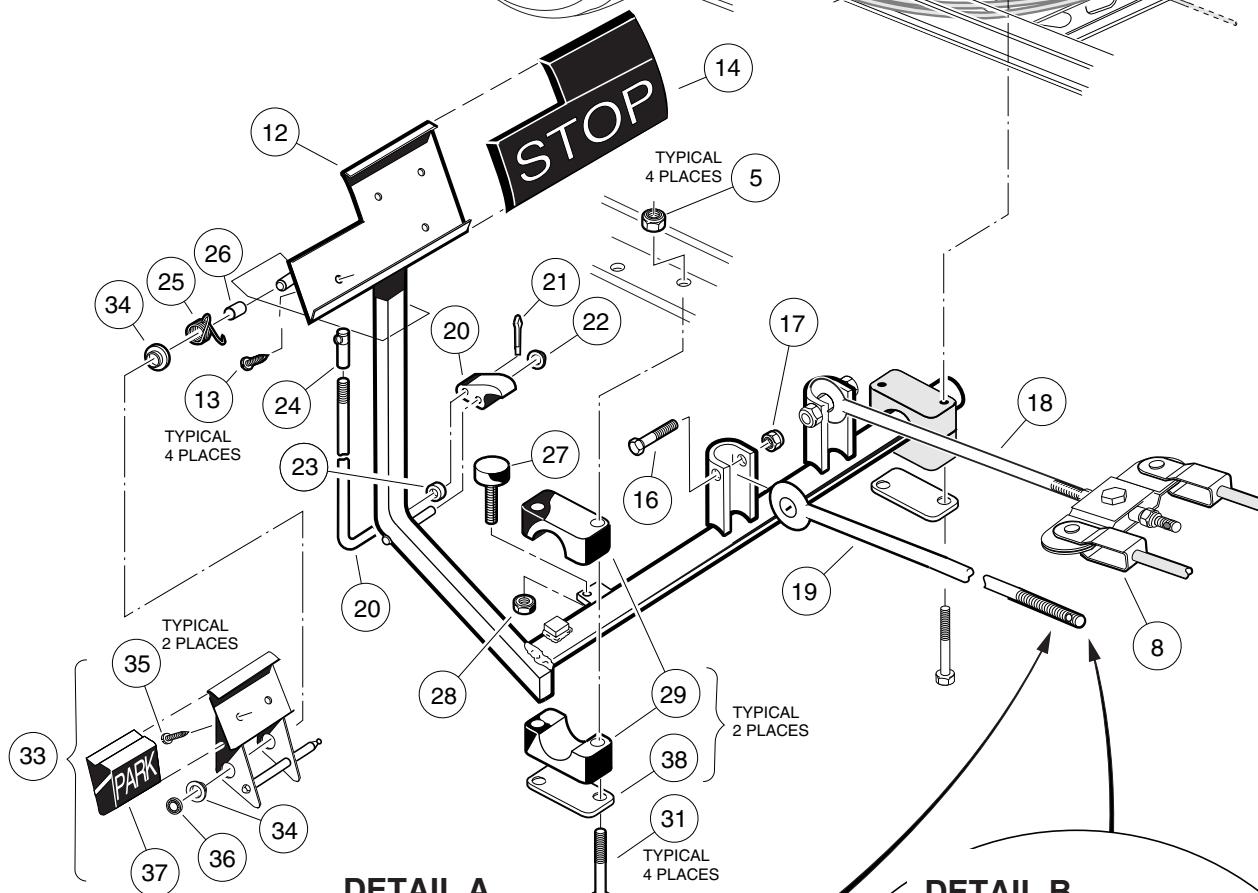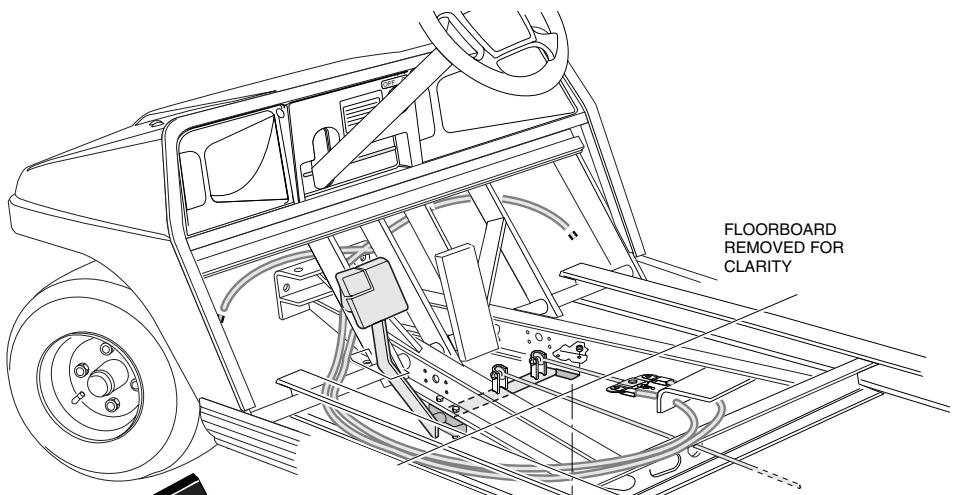

# BRAKE PEDAL AND CABLE ASSEMBLY— RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	1242	NUT, HEX, 5/16 - 18 .....	1	1
2	101865301	SPACER, EQUALIZER .....	2	2
3	1017211	KIT, EQUALIZER AND PIVOT LIMITER (INCLUDES ITEM 4) .....	1	1
4	N/A	PIN, EQUALIZER PIVOT .....	1	1
5	7473	NUT, NYLON LOCK, 5/16 - 18 .....	5	5
6	1011403	KIT, BRAKE CABLE, REAR (FOR VEHICLES WITH SERIAL NUMBERS LOWER THAN 9907-746860 —EQUALIZER DESIGN SHOWN IN DETAIL A ) (INCLUDES FOUR EACH OF ITEM 9 AND TWO EACH OF ITEMS 10 AND 11) .....	1	1
7	102166901	KIT, BRAKE CABLE, REAR (FOR VEHICLES WITH SERIAL NUMBERS 9907-746860 AND GREATER—EQUALIZER DESIGN SHOWN IN DETAIL B ) (INCLUDES TWO EACH OF ITEM 9 AND ONE EACH OF ITEMS 10 AND 11) .....	1	1
8	101874601	KIT, BRAKE CABLE, FRONT (INCLUDES ITEMS 9 - 11) .....	1	1
9	1011779	E-CLIP, 1/2 .....	4	4
10	1035	PIN, COTTER, 3/32 x 1 .....	4	4
11	1010829	PIN, CLEVIS, 5/16 .....	4	4
12	101878201	KIT, BRAKE PEDAL (INCLUDES ITEMS 13 AND 14) .....	1	1
13	7716	SCREW, SLOTTED HEX WASHER HEAD, #10 - 16 x 1/2 .....	4	4
14	1013869	PAD, BRAKE PEDAL .....	1	1
15	1013531	SPRING, BRAKE RETURN .....	1	1
16	101953001	BOLT, HEX HEAD SHOULDER, 3/8 x 1 .....	2	2
17	7473	NUT, NYLON LOCK, 5/16 - 18 .....	2	2
18	101953101	ROD, EQUALIZER, FRONT .....	1	1
19	101953103	ROD, EQUALIZER, REAR .....	1	1
	101187702	KIT, PARK BRAKE LATCH (INCLUDES ITEMS 20 - 24 AND ITEM 25 ON PAGE 4-13 OR 4-15) .....	1	1
20	N/A	ROD AND PAWL .....	1	1
21	1017029	PIN, COTTER, 7/64 x 1/2 .....	1	1
22	1010877	NUT, PUSH, 5/16 .....	1	1
23	1010805	SLEEVE, PARK BRAKE ROD .....	1	1
24	1010932	JOINT, BALL, 1/4 - 28 .....	1	1
25	1010933	SPRING, PARK BRAKE TORSION .....	1	1
26	1010927	SPACER, PARK BRAKE .....	1	1
27	1010878	BUMPER, RUBBER .....	1	1
28	1028	NUT, HEX, 1/4 - 20 .....	1	1
29	1011402	PACKAGE, BRAKE MOUNTING BLOCK (CONTAINS UPPER AND LOWER FOR LEFT AND RIGHT SIDES) .....	1	1
30	1241	WASHER, FLAT, 5/16 .....	1	1
31	1010921	SCREW, HEX HEAD CAP, 5/16 - 18 x 2-1/2 .....	4	4
32	101990801	EQUALIZER (FOR VEHICLES WITH EQUALIZER DESIGN SHOWN IN DETAIL B ) .....	1	1
33	1011418	KIT, PARK BRAKE PEDAL (INCLUDES ITEMS 34 - 37) .....	1	1
34	1032	BUSHING, NYLON .....	2	2
35	7716	SCREW, SLOTTED HEX WASHER HEAD, #10 - 16 x 1/2 .....	2	2
36	1013876	NUT, PUSH, 3/8 .....	1	1
37	1013870	PAD, PARK BRAKE .....	1	1
38	101976301	PLATE, RETAINER .....	2	2

4


G

E

4

G

E

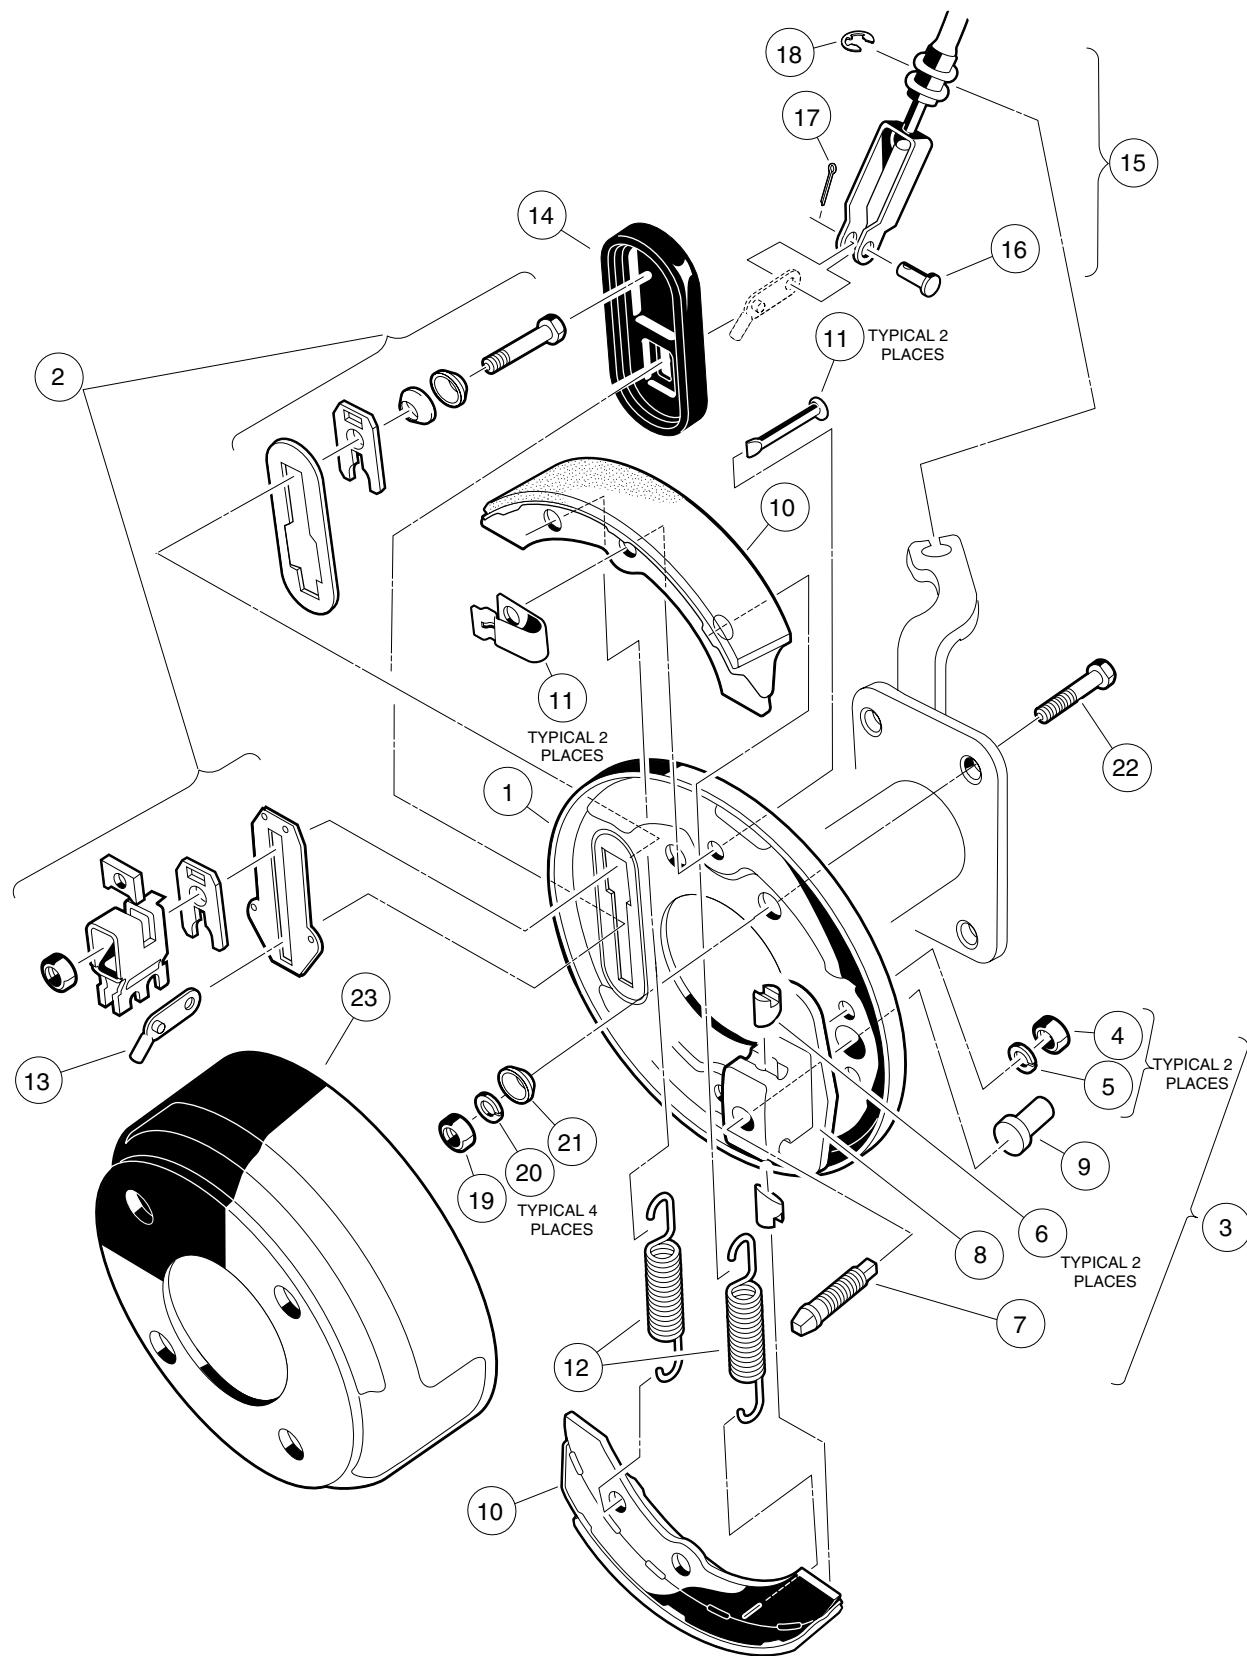

# FRONT BRAKE ASSEMBLY— RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER

**4**

**G**


**E**

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
	1016573	CLUSTER, BRAKE, PASSENGER SIDE, WITHOUT BRAKE DRUM (INCLUDES ITEMS 1 - 14) .....	1	1
	1016557	CLUSTER, BRAKE, DRIVER SIDE, WITHOUT BRAKE DRUM (INCLUDES ITEMS 1 - 14) .....	1	1
1	1011154	PLATE, BACKING, PASSENGER SIDE .....	1	1
1	1011494	PLATE, BACKING, DRIVER SIDE .....	1	1
2	1011465	KIT, BRAKE ACTUATOR .....	1	1
3	1011467	KIT, ANCHOR BODY (INCLUDES ITEMS 4 - 9) .....	1	1
4	1011114	NUT, M6 x 1 .....	2	2
5	451	WASHER, LOCK, 1/4 .....	2	2
6	N/A	PISTON, ANCHOR .....	2	2
7	N/A	BOLT, ADJUSTMENT .....	1	1
8	N/A	BODY, ANCHOR .....	1	1
9	1011303	CAP, ADJUSTMENT BOLT .....	1	1
10	101146302	PACKAGE, BRAKE SHOE (FOUR PIECES) .....	1	1
11	1011466	KIT, SHOE RETAINER (FOUR PIECES) .....	1	1
12	1011464	PACKAGE, BRAKE SPRING (FOUR PIECES) .....	1	1
13	N/A	ARM, BRAKE LEVER .....	1	1
14	1010850	COVER, DUST .....	1	1
15	101874601	KIT, BRAKE CABLE, FRONT (INCLUDES ITEMS 16, 17 AND 18) .....	1	1
16	1010829	PIN, CLEVIS, 5/16 .....	4	4
17	1035	PIN, COTTER, 3/32 x 1 .....	4	4
18	1011779	E-CLIP, 1/2 .....	4	4
19	101872701	NUT, HEX, 5/16 - 24 .....	8	8
20	7174	WASHER, LOCK, 5/16 x 24 .....	8	8
21	101869001	WASHER, CONE, 5/16 .....	8	8
22	1017232	SCREW, HEX HEAD CAP, 5/16 - 24 x 1 .....	8	8
23	1011137	DRUM, BRAKE .....	2	2
		NOTE: SEE PAGE 5-11 FOR FRONT BRAKE CABLE CLAMP AND BRACKET.		

4

G

E

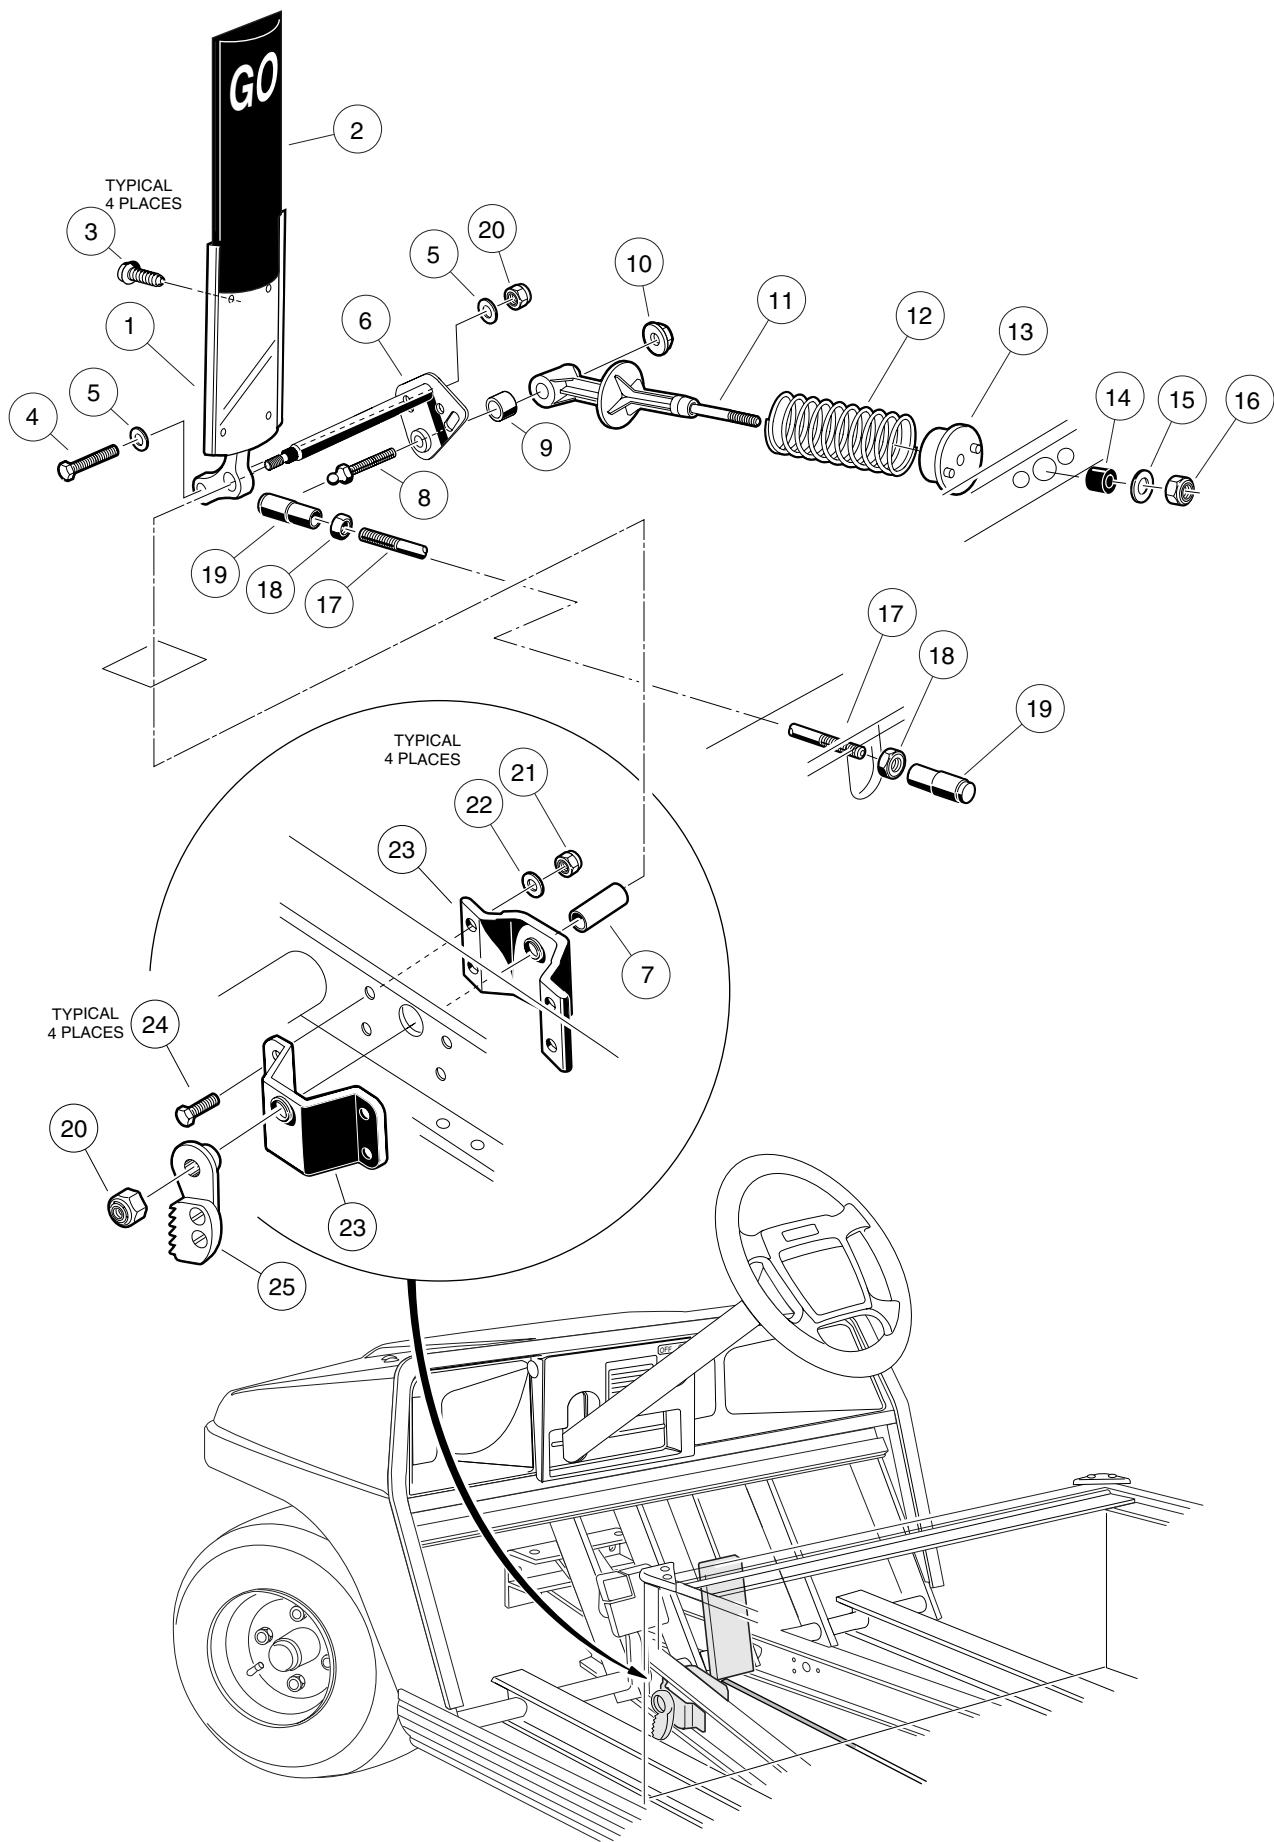


# ACCELERATOR PEDAL ASSEMBLY— ELECTRIC TOURALL AND ALL GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	1017696	SUB-ASSEMBLY, ACCELERATOR PEDAL (INCLUDES ITEMS 2 AND 3) .....	1	1
2	1013871	PAD, ACCELERATOR PEDAL .....	1	1
3	7716	SCREW, SLOTTED HEX WASHER HEAD, #10 - 16 x 1/2 .....	4	4
4	1624	SCREW, HEX HEAD CAP, 3/8 - 16 x 1-1/2 .....	1	1
5	334	WASHER, FLAT, 3/8 .....	2	2
6	102026001	KIT, ACCELERATOR PIVOT ROD (INCLUDES ITEM 7) .....	1	1
7	1011700	SPACER .....	1	1
8	101818801	STUD, BALL .....	1	1
9	1017424	BEARING, PIVOT SUPPORT .....	1	1
10	101966901	NUT, FLANGE, 1/4 - 28 .....	1	1
11	101817401	RETAINER, SPRING .....	1	1
12	101796201	SPRING, RETURN .....	1	1
13	1017378	CUP, SPRING .....	1	1
14	1017380	BUMPER, RETURN SPRING .....	1	1
15	1241	WASHER, FLAT, 5/16 .....	1	1
16	7473	NUT, NYLON LOCK, 5/16 - 18 .....	1	1
17	101871901	(ASSEMBLY, ACCELERATOR ROD (ELECTRIC TOURALL ONLY) (INCLUDES ITEMS 18 AND 19) .....	1	
17	101912401	ASSEMBLY, ACCELERATOR ROD (GASOLINE TOURALL ONLY) (INCLUDES ITEMS 18 AND 19) .....	1	
17	101674702	ASSEMBLY, ACCELERATOR ROD (GASOLINE RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER ONLY) (INCLUDES ITEMS 18 AND 19) .....	1	
18	1011084	NUT, UNF HEX JAM, 1/4 - 28 .....	2	2
19	1011734	JOINT, SPRING-LOADED BALL .....	2	2
20	8754	NUT, NYLON LOCK, 3/8 - 16 .....	2	2
21	8233	NUT, NYLON LOCK, 1/4 - 20 .....	4	4
22	1014007	WASHER, FLAT, TYPE B, 1/4 .....	4	4
23	1011694	SUPPORT, ACCELERATOR PIVOT ROD .....	2	2
24	101861901	SCREW, HEX HEAD CAP, 1/4 - 20 x 1-1/8 .....	4	4
	101187702	KIT, PARK BRAKE LATCH (INCLUDES ITEM 25 BELOW, AND ITEMS 18 - 22 ON PAGE 4-7 OR ITEMS 20-24 ON PAGE 4-9) .....	1	1
25	N/A	RACHET, PARK BRAKE .....	1	1

4

G

E

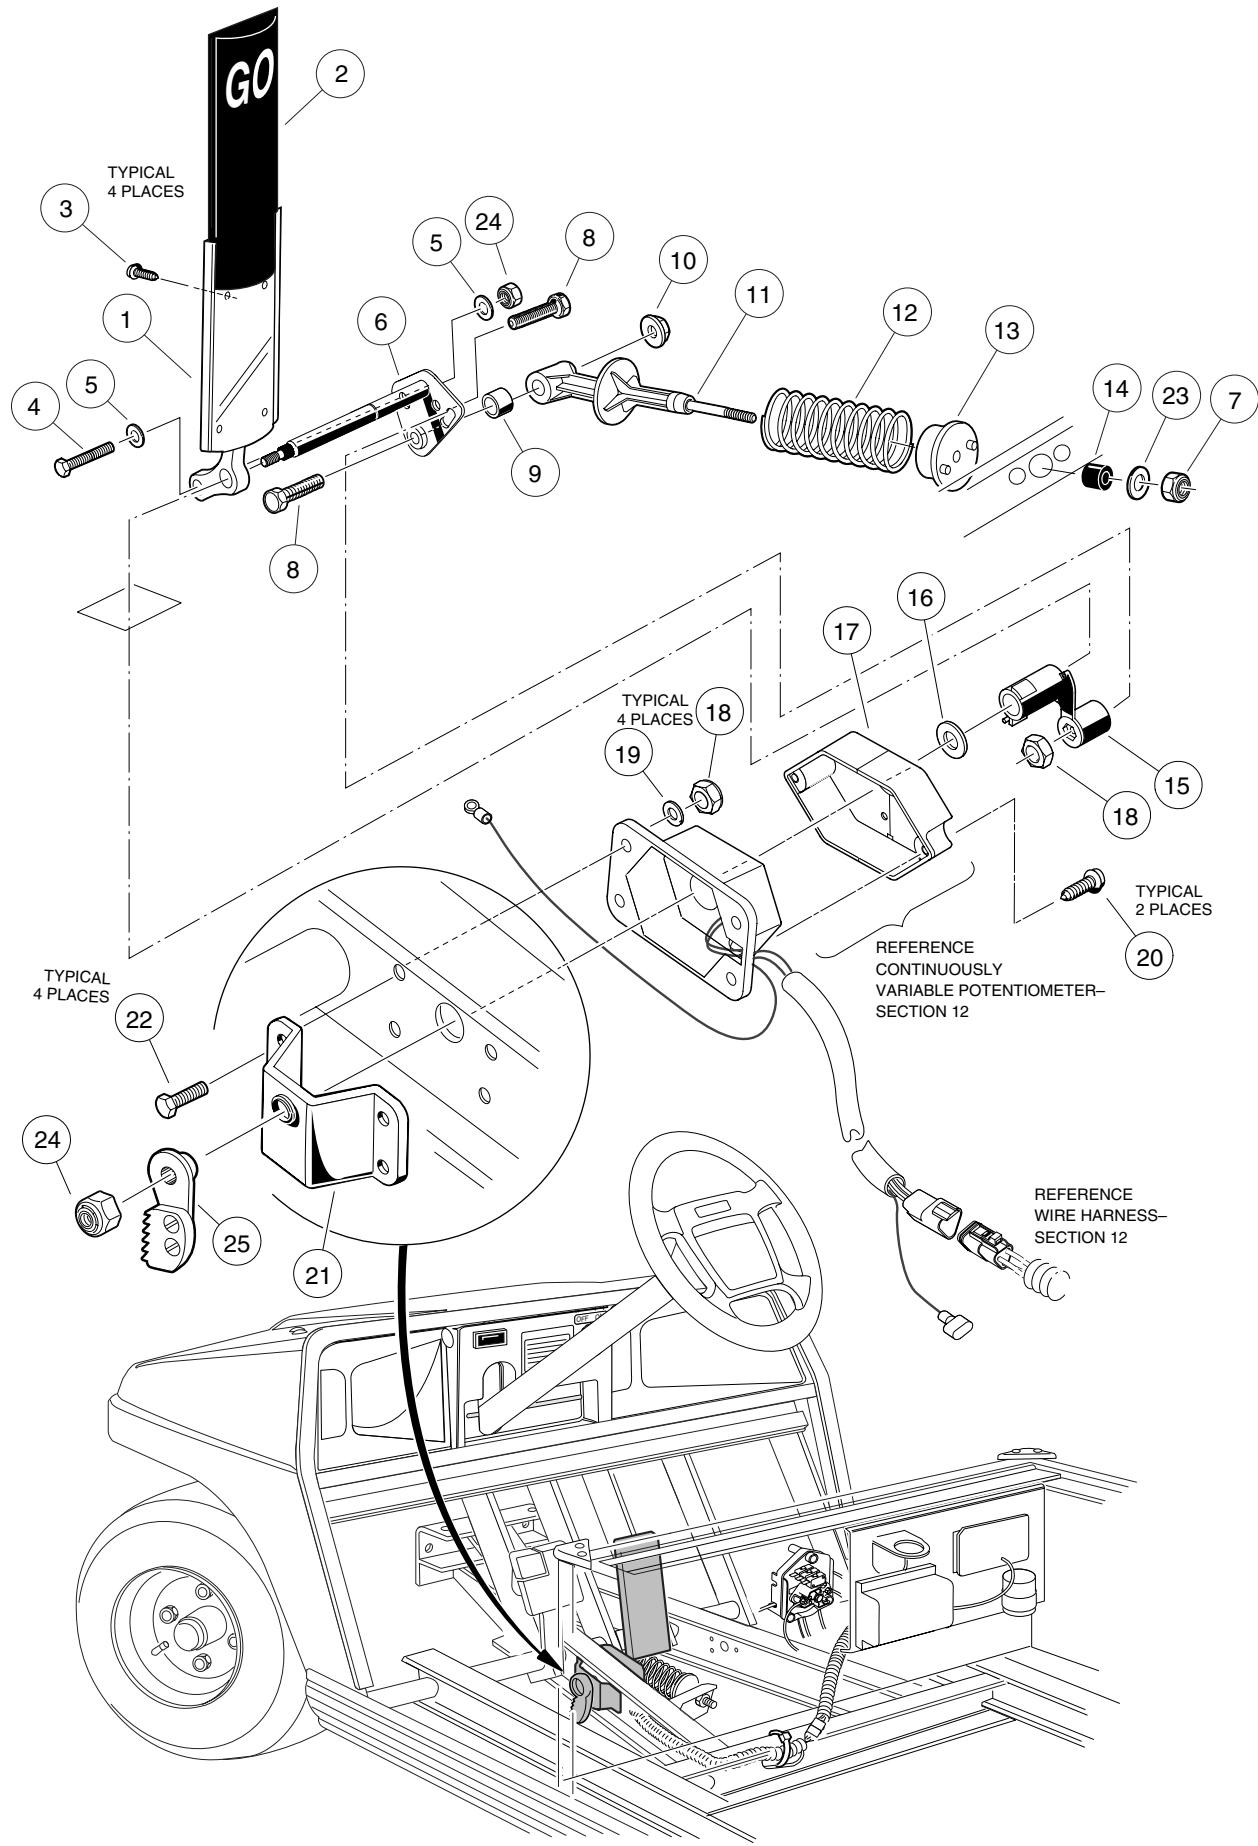**4****G****E**

# ACCELERATOR PEDAL ASSEMBLY– ELECTRIC RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1017696	SUB-ASSEMBLY, ACCELERATOR PEDAL (INCLUDES ITEMS 2 AND 3)	1
2	1013871	PAD, ACCELERATOR PEDAL	1
3	7716	SCREW, SLOTTED HEX WASHER HEAD, #10 - 16 x 1/2	4
4	1624	SCREW, HEX HEAD CAP, 3/8 - 16 x 1-1/2	1
5	334	WASHER, FLAT, 3/8	2
6	102026001	KIT, ACCELERATOR PIVOT ROD	1
7	7473	NUT, NYLON LOCK, 5/16 - 18	1
8	101862001	SCREW, HEX HEAD CAP, 1/4 - 20 x 1-3/8	2
9	1017424	BEARING, PIVOT SUPPORT	1
10	1015661	NUT, FLANGE LOCK, 1/4 - 20	1
11	101817401	RETAINER, SPRING	1
12	101796201	SPRING, RETURN	1
13	1017378	CUP, SPRING	1
14	1017380	BUMPER, RETURN SPRING	1
15	1017400	LEVER, ACTUATOR	1
16	101804201	WASHER, PLASTIC, 1/2	1
17	1017743	COVER, ACCELERATOR	1
18	8233	NUT, NYLON LOCK, 1/4 - 20	5
19	1014007	WASHER, FLAT, TYPE B, 1/4	4
20	101804301	SCREW, HI-LO HEX HEAD, #8 - 18 x 1/2	2
21	1011694	SUPPORT, ACCELERATOR PIVOT ROD	1
22	101861901	SCREW, HEX HEAD CAP, 1/4 - 20 x 1-1/8	4
23	1241	WASHER, FLAT, 5/16	1
24	8754	NUT, NYLON LOCK, 3/8 x 16	2
25	101187702	KIT, PARK BRAKE LATCH (INCLUDES ITEM 25, AND ITEMS 18 - 22 ON PAGE 4-7 OR ITEMS 20-24 ON PAGE 4-9)	1
	N/A	RACHET, PARK BRAKE	1

4

G

E



# **STEERING, FRONT AND REAR SUSPENSION**

---

**5**


**G**

**E**

5

G

E

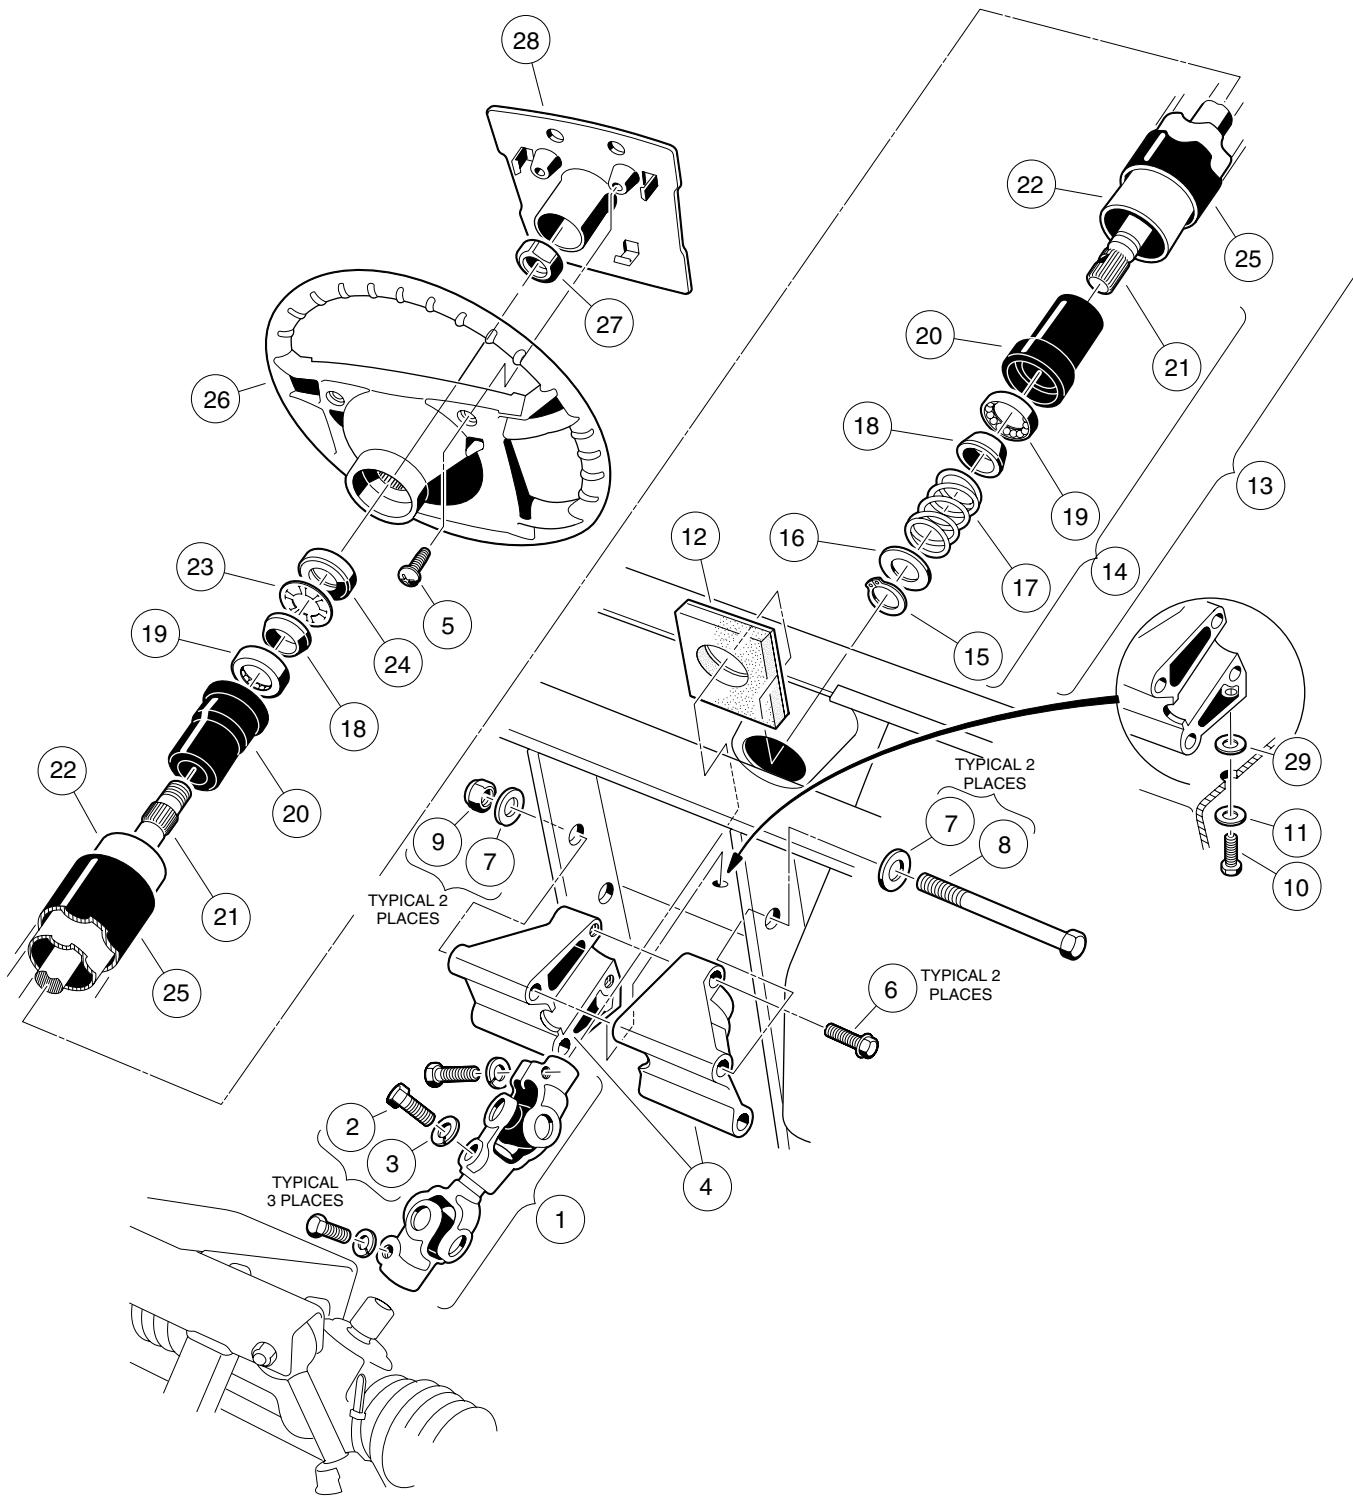


# STEERING COLUMN

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	1013861	JOINT, COMPOUND STEERING (INCLUDES ITEMS 2 AND 3) .....	1	1
2	1017226	SCREW, HEX HEAD CAP, M8 x 1.25 x 30MM .....	3	3
3	7174	WASHER, LOCK, 5/16 .....	3	3
4	101984801	KIT, STEERING COLUMN MOUNTING BRACKET .....	1	1
5	1016663	SCREW, PHILLIPS, TYPE A, #12 - 11 x 5/8 .....	2	2
6	1016269	SCREW, HEX WASHER HEAD THREAD-FORMING, 5/16 - 18 x 2 .....	2	2
7	334	WASHER, FLAT, 3/8 .....	4	4
8	1016183	SCREW, HEX HEAD CAP, 3/8 - 16 x 7 .....	2	2
9	8754	NUT, NYLON LOCK, 3/8 - 16 .....	2	2
10	1014288	SCREW, HEX WASHER HEAD THREAD-FORMING, 5/16 - 18 x 3/4 .....	1	1
11	1011697	WASHER, FLAT, 5/16 x .....	1	1
12	1012499	BOOT, STEERING COLUMN .....	1	1
13	1016181	ASSEMBLY, STEERING COLUMN (TOURALL, TRANS-PORTER/TRANS-SENDER) (INCLUDES ITEMS 14 - 24) .....	1	1
13	1017313	ASSEMBLY, STEERING COLUMN (RESORT VILLAGER ONLY) (INCLUDES ITEMS 14 - 24) .....	1	1
14	1014216	KIT, STEERING COLUMN REBUILD (INCLUDES ITEMS 15 - 24) .....	A/R	A/R
15	1012605	RING, RETAINING .....	1	1
16	1012604	WASHER, STEEL, 5/8 .....	1	1
17	1014217	SPRING, COMPRESSION .....	1	1
18	1014125	WEDGE .....	2	2
19	1014213	ASSEMBLY, BEARING .....	2	2
20	1014126	SEAT, BEARING .....	2	2
21	1015545	SHAFT, STEERING COLUMN .....	1	1
22	1016622	COLUMN, ALUMINUM STEERING .....	1	1
23	1014214	RING, RETAINING .....	1	1
24	1014211	SEAL, BEARING .....	1	1
25	1016263	COVER, STEERING COLUMN .....	1	1
26	1016156	WHEEL, STEERING .....	1	1
27	1017273	NUT, NYLON LOCK, 5/8 - 18 .....	1	1
28	101615502	PLATE, SCORECARD .....	1	1
29	1011578	WASHER, FLAT, TYPE B, 5/16 (RESORT VILLAGER ONLY) .....	1	1

5

G

E

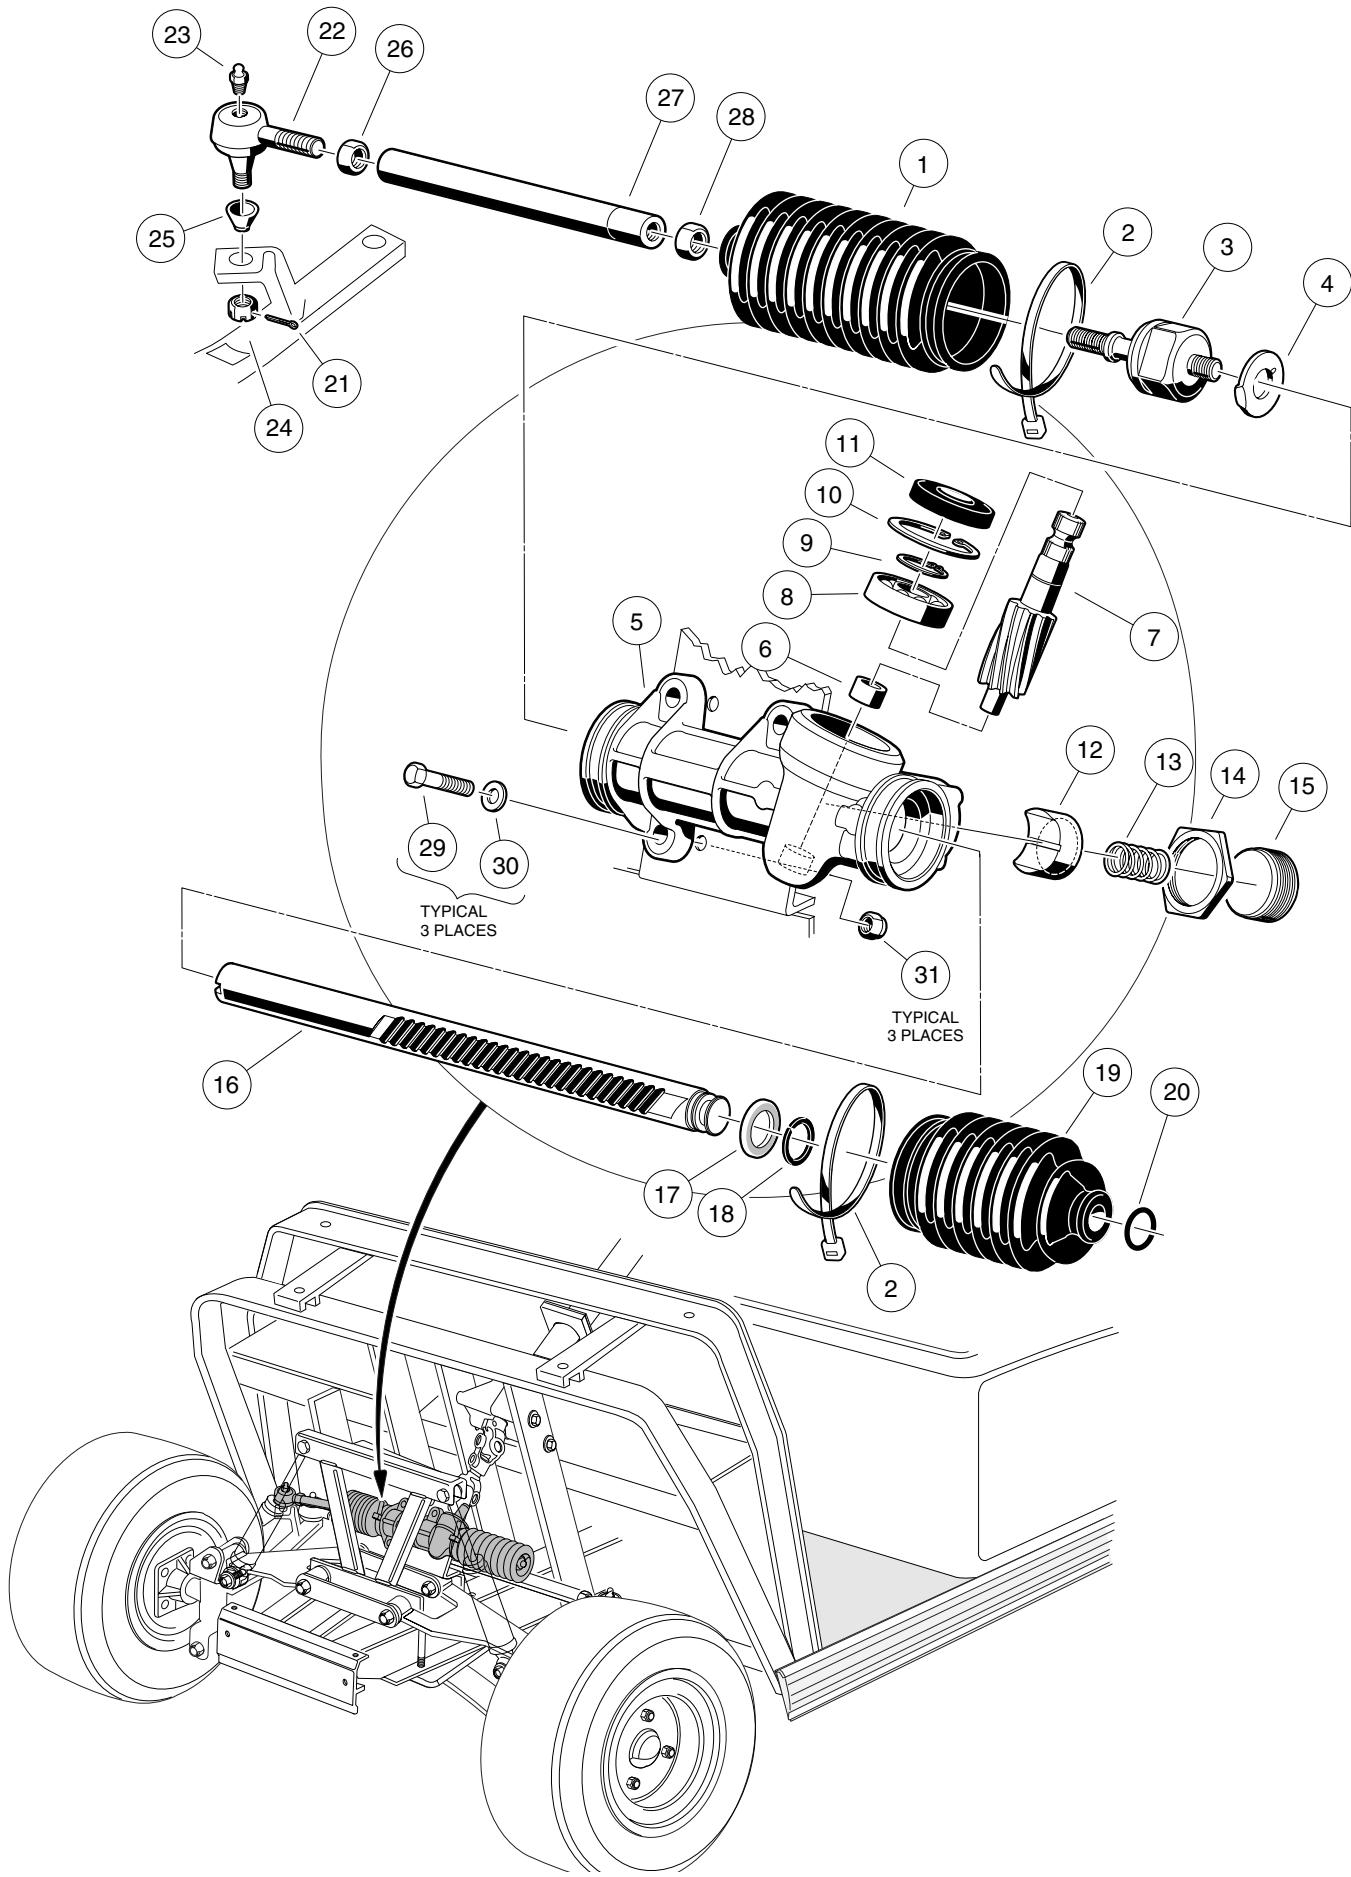**5****G****E**

# STEERING GEAR ASSEMBLY


ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
	101878302	ASSEMBLY, STEERING GEAR BOX (INCLUDES ITEMS 1 - 20) .....	1	1
1	1013035	SEAL, DUST, PASSENGER SIDE .....	1	1
2	8990	TIE, WIRE .....	2	2
3	101880201	ASSEMBLY, INNER BALL JOINT .....	1	1
4	101880301	WASHER, TAB .....	1	1
5	N/A	BOX, STEERING GEAR .....	1	1
6	N/A	BEARING, LOWER PINION .....	1	1
7	N/A	PINION, STEERING .....	1	1
8	101879401	BEARING, UPPER PINION .....	1	1
9	101879901	RING, C-TYPE STOP .....	1	1
10	1013051	RING, SNAP .....	1	1
11	1013052	SEAL, DUST, STEERING PINION .....	1	1
12	101879701	GUIDE, STEERING RACK .....	1	1
13	101879801	SPRING, YOKE .....	1	1
14	1013044	NUT, LOCK, RACK SCREW .....	1	1
15	N/A	SCREW, RACK GUIDE .....	1	1
16	N/A	RACK, STEERING .....	1	1
17	101879501	WASHER, STOP .....	1	1
18	101879601	RING, C-TYPE STOP .....	1	1
19	101880001	SEAL, DUST, DRIVER SIDE .....	1	1
20	101880101	RING, RETAINING .....	1	1
21	1035	PIN, COTTER, 3/32 x 1 .....	1	1
22	7540	BALL JOINT, LEFT-HAND THREAD (INCLUDES ITEMS 23, 24 AND 25) .....	1	1
23	1015597	FITTING, THREAD-FORMING GREASE, 1/4 - 28 .....	1	1
24	7602	NUT, HEX SLOTTED, 3/8 - 24 .....	1	1
25	1011930	BOOT, DUST .....	1	1
26	7555	NUT, HEX, LEFT-HAND THREAD, 1/2 - 20 .....	1	1
27	1012467	LINK, RACK AND PINION DRAG .....	1	1
28	1013042	NUT, HEX, M12 x 1.75 .....	1	1
29	1624	SCREW, HEX HEAD CAP, 3/8 - 16 x 1-1/2 .....	3	3
30	334	WASHER, FLAT, 3/8 .....	3	3
31	8754	NUT, NYLON LOCK, 3/8 - 16 .....	3	3

5

G

E

**5**  
**G**  
**E**

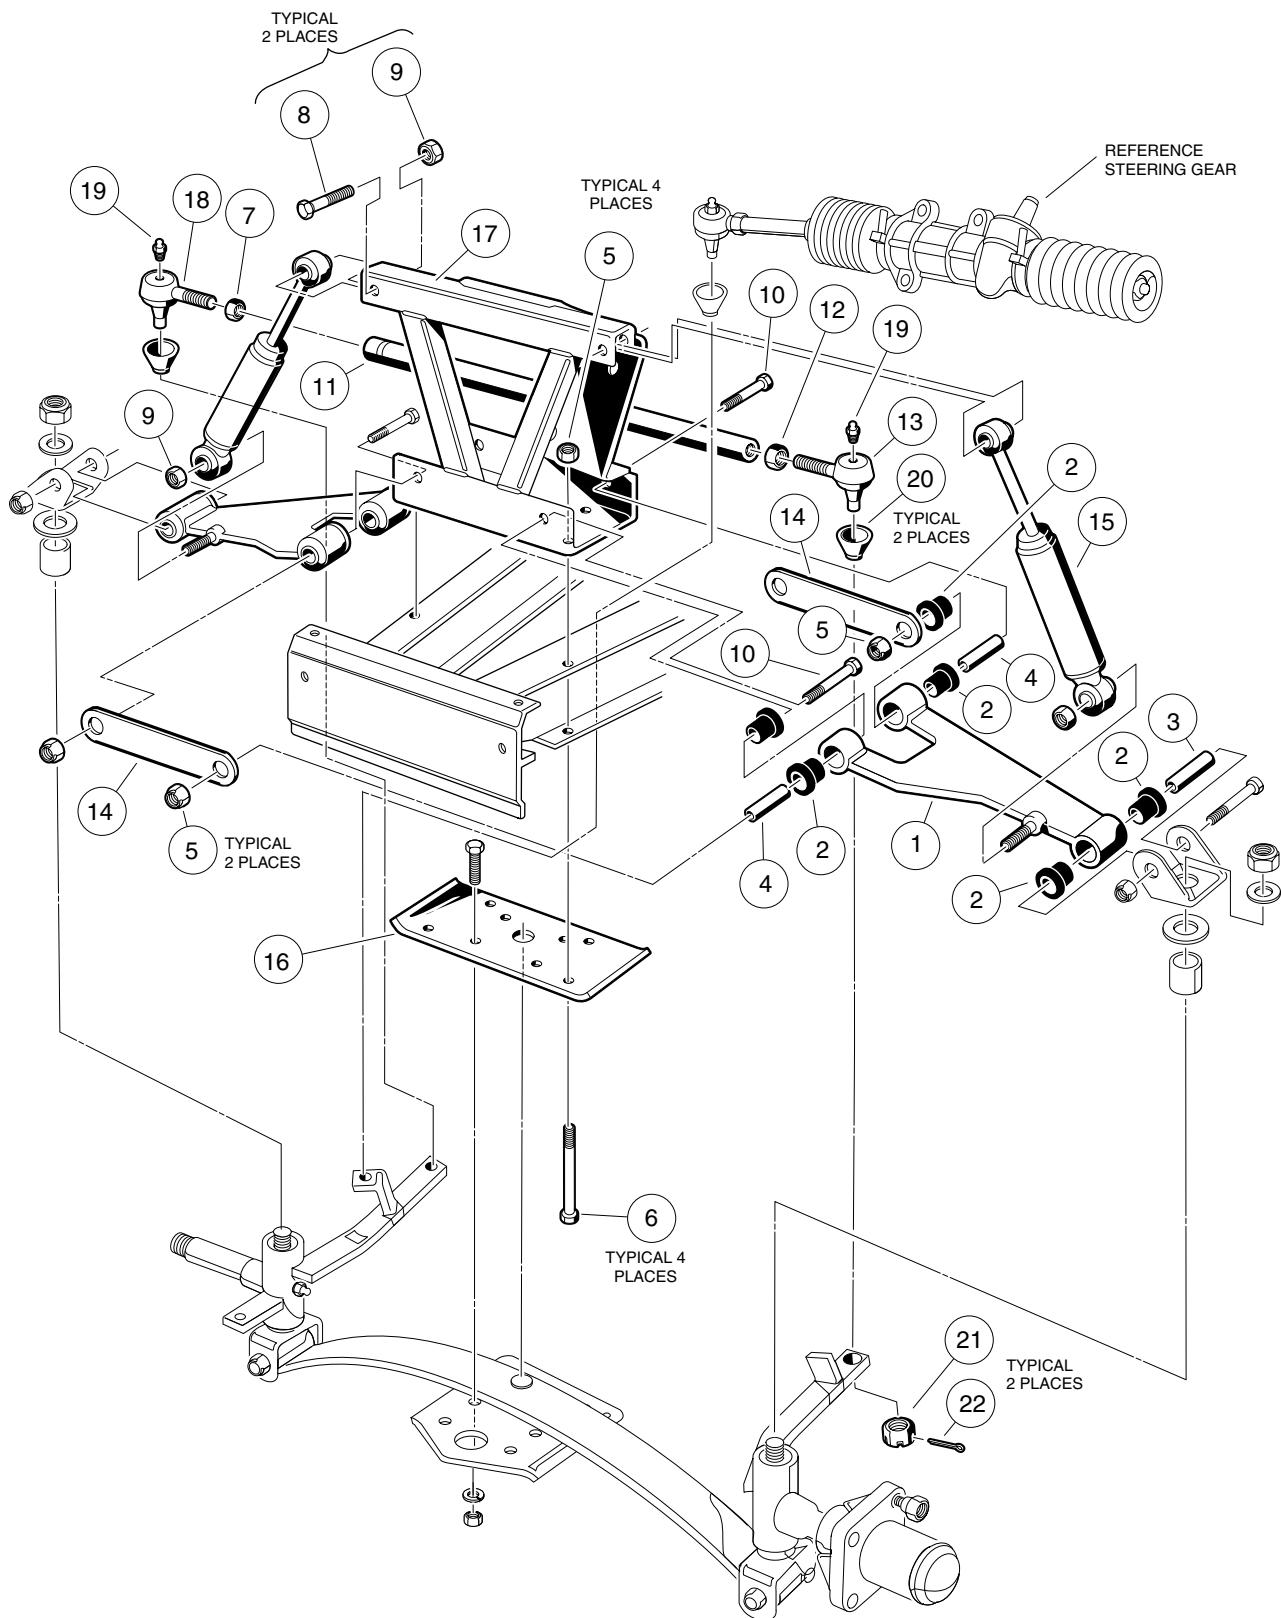


# FRONT SUSPENSION, UPPER- TOURALL

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	1016353	ASSEMBLY, DELTA A-PLATE (INCLUDES ITEMS 2, 3 AND 4) .....	2	2
2	1016346	BUSHING, URETHANE .....	6	6
3	1016350	SLEEVE, DELTA OUTER .....	1	1
4	1016349	SLEEVE, DELTA INNER .....	2	2
5	8754	NUT, NYLON LOCK, 3/8 - 16 .....	8	8
6	1010200	SCREW, HEX HEAD CAP, 3/8 - 16 x 4-1/4 .....	4	4
7	1308	NUT, HEX, 1/2 - 20 .....	1	1
8	1624	SCREW, HEX HEAD CAP, 3/8 - 16 x 1-1/2 .....	2	2
9	1010138	NUT, DIMPLED LOCK, 3/8 - 16 .....	4	4
10	2402	SCREW, HEX HEAD CAP, 3/8 - 16 x 2-1/4 .....	4	4
11	1010219	ROD, TIE .....	1	1
12	7555	NUT, HEX, LEFT-HAND THREAD, 1/2 - 20 .....	1	1
13	7540	BALL JOINT, LEFT-HAND THREAD (INCLUDES ITEMS 19, 20 AND 21) .....	1	1
14	1017266	STRAP, A-PLATE .....	2	2
15	1014235	SHOCK ABSORBER, FRONT .....	2	2
16	1010124	PLATE, SPRING MOUNTING .....	1	1
17	1016385	ASSEMBLY, DELTA SHOCK AND GEAR SUPPORT .....	1	1
18	7539	BALL JOINT (INCLUDES ITEMS 19, 20 AND 21) .....	1	1
19	1015597	FITTING, THREAD-FORMING GREASE, 1/4 - 28 .....	1	1
20	1011930	SEAL, DUST .....	1	1
21	7602	NUT, SLOTTED HEX, 3/8 - 24 .....	1	1
22	1035	PIN, COTTER, 3/32 x 1 .....	2	2

5

G

E

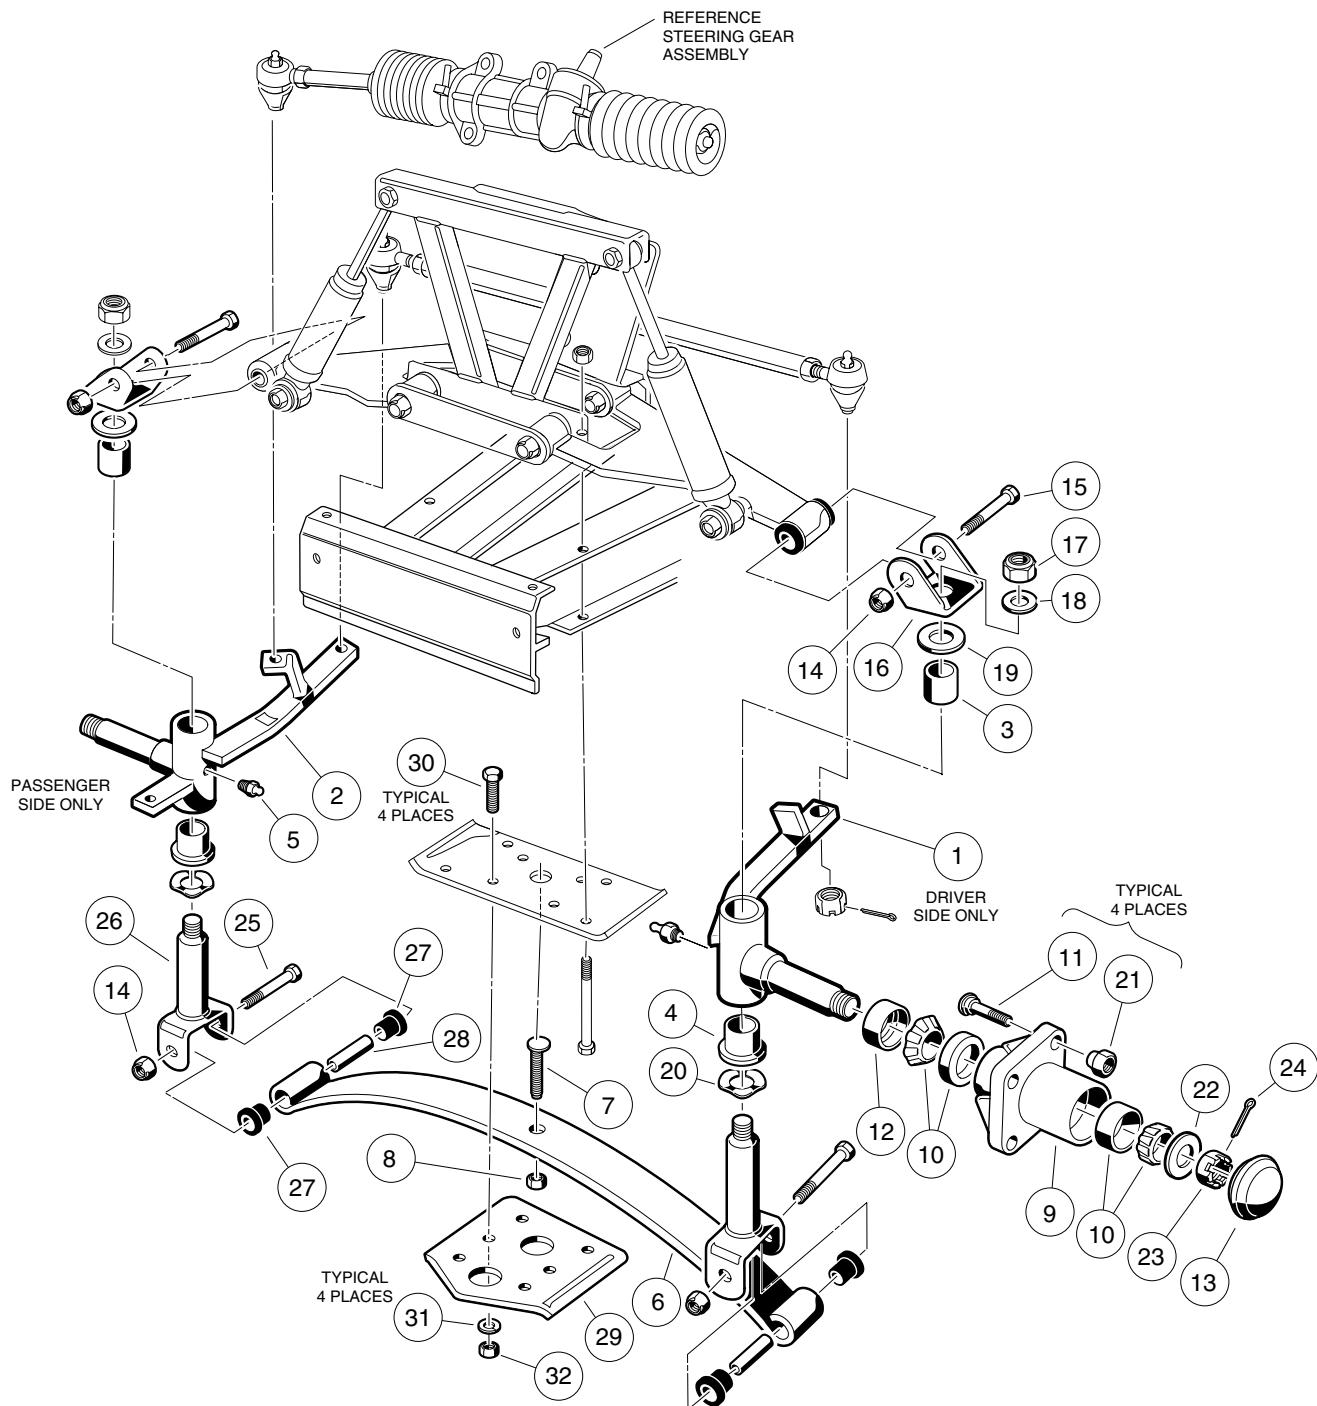**5****G****E**


# FRONT SUSPENSION, LOWER- TOURALL

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	1010348	ASSEMBLY, SPINDLE, DRIVER SIDE (INCLUDES ITEMS 3, 4 AND 5) .....	1	1
2	1010347	ASSEMBLY, SPINDLE, PASSENGER SIDE (INCLUDES ITEMS 3, 4 AND 5) .....	1	1
3	8067	BUSHING, BRONZE SPINDLE .....	1	1
4	7048	BUSHING, BRONZE .....	1	1
5	1015597	FITTING, GREASE, 1/4 - 28 .....	1	1
6	1012030	SPRING, TAPERED LEAF .....	1	1
7	8745	ECCENTRIC .....	1	1
8	706	NUT, HEX, 3/8 - 16 .....	1	1
9	1011892	KIT, HUB ASSEMBLY (INCLUDES ITEMS 10 - 13) .....	2	2
10	1011393	PACKAGE, HUB BEARING .....	2	2
11	1011304	STUD, LUG, 1/2 - 20 .....	4	4
12	1013135	SEAL, DOUBLE LIP .....	1	1
13	1011887	COVER, DUST .....	1	1
14	8754	NUT, NYLON LOCK, 3/8 - 16 .....	4	4
15	1016387	SCREW, HEX HEAD CAP, 3/8 - 16 x 2-3/4 .....	2	2
16	1016384	CLEVIS, UPPER DELTA .....	2	2
17	101903101	NUT, NYLON LOCK, 1/2 - 20 .....	2	2
18	1010028	WASHER, FLAT, 1/2 .....	2	2
19	1010150	BEARING, THRUST .....	2	2
20	1016389	WASHER, KINGPIN WAVE .....	2	2
21	1010984	NUT, LUG .....	8	8
22	1010005	WASHER, FLAT, 3/4 .....	2	2
23	7840	NUT, HEX SLOTTED, 3/4 - 16 .....	2	2
24	7910	PIN, COTTER, 5/32 x 1 .....	2	2
25	8755	SCREW, HEX HEAD CAP, 3/8 - 16 x 3-3/8 .....	2	2
26	1016386	KINGPIN .....	2	2
27	1015583	BUSHING, URETHANE .....	4	4
28	1012303	BUSHING, STEEL .....	2	2
29	1014276	PLATE, FRONT SPRING RETAINER .....	1	1
30	1624	SCREW, HEX HEAD CAP, 3/8 - 16 x 1-1/2 .....	4	4
31	357	WASHER, LOCK, 3/8 .....	4	4
32	706	NUT, HEX, 3/8 - 16 .....	4	4

5

G

E

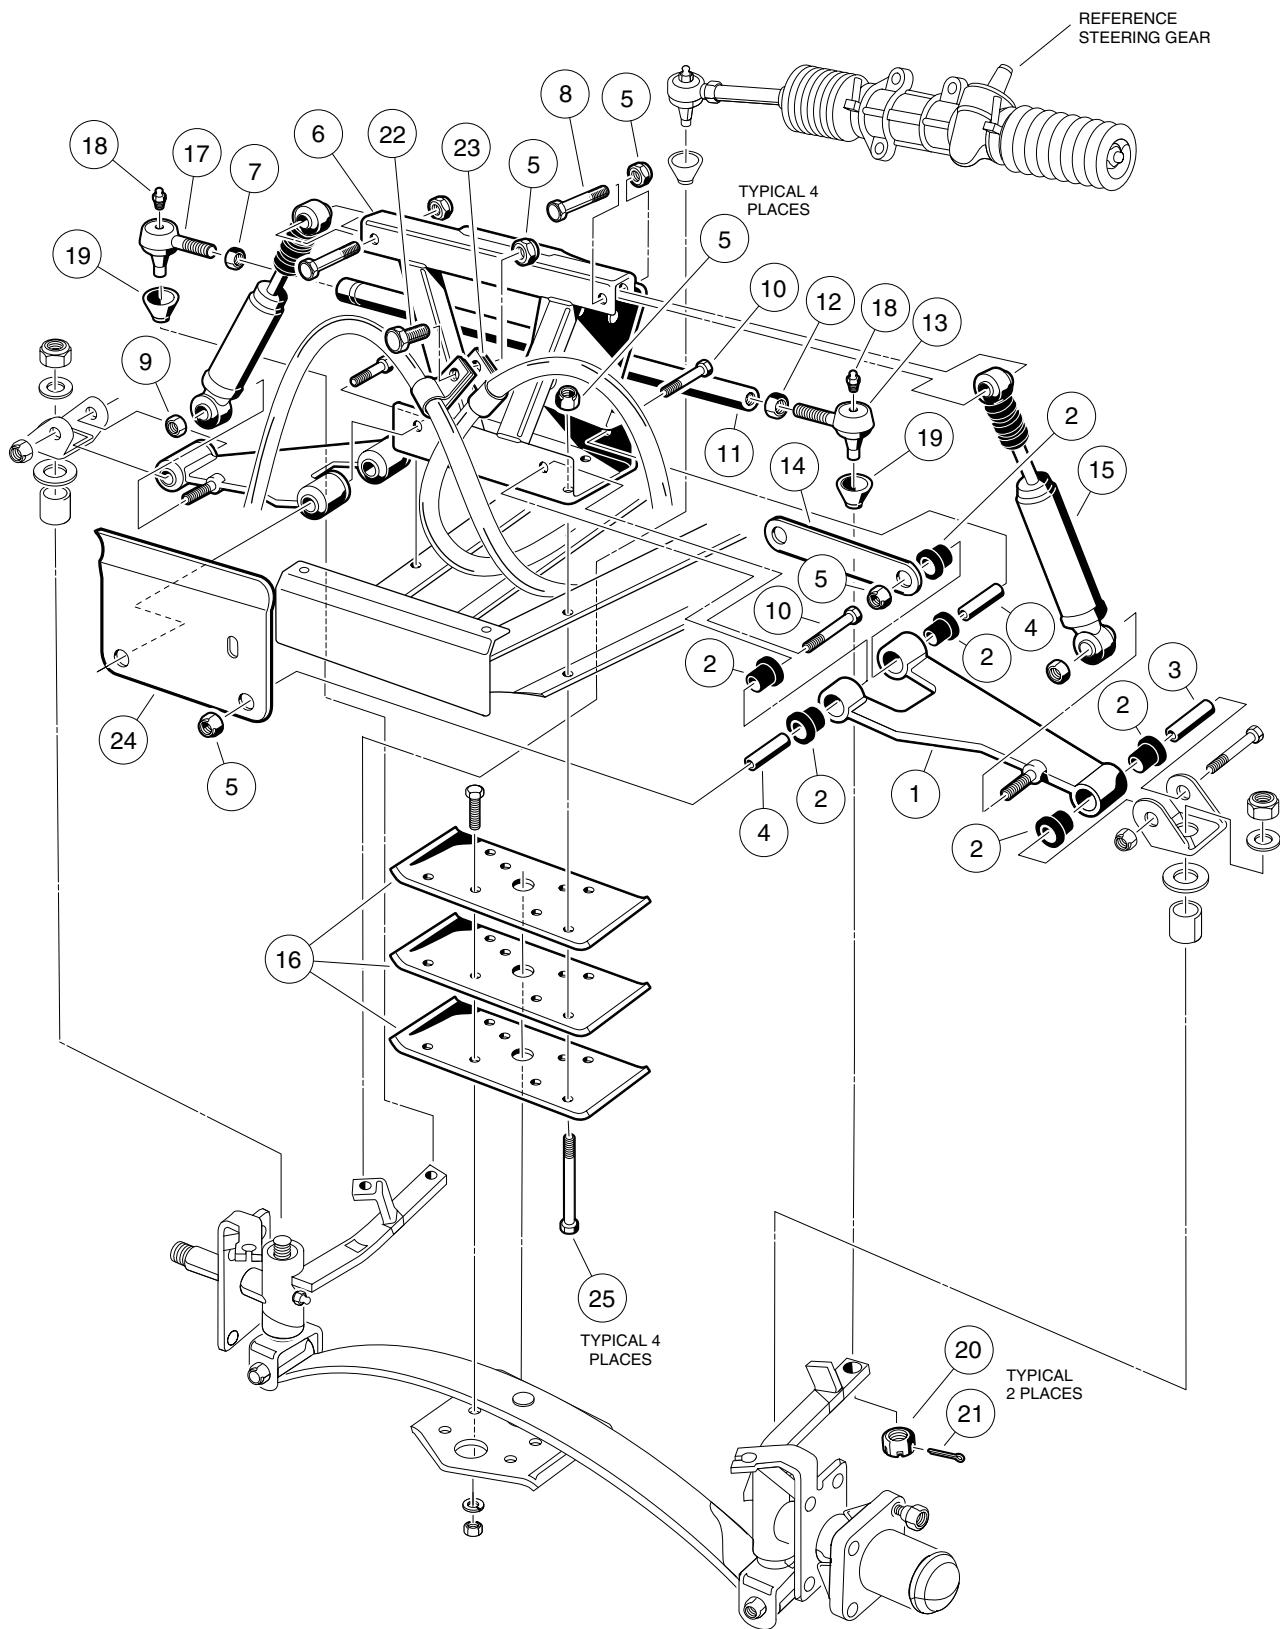**5****G****E**

# FRONT SUSPENSION, UPPER-

## RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	1016353	ASSEMBLY, DELTA A-PLATE (INCLUDES ITEMS 2, 3 AND 4) .....	2	2
2	1016346	BUSHING, URETHANE .....	6	6
3	1016350	SLEEVE, DELTA OUTER .....	1	1
4	1016349	SLEEVE, DELTA INNER .....	2	2
5	8754	NUT, NYLON LOCK, 3/8 - 16 .....	11	11
6	1016385	ASSEMBLY, DELTA SHOCK AND GEAR SUPPORT .....	1	1
7	1308	NUT, HEX, 1/2 - 20 .....	1	1
8	8861	SCREW, HEX HEAD CAP, 3/8 - 16 x 2-3/4 .....	2	2
9	1010138	NUT, DIMPLED LOCK, 3/8 - 16 .....	2	2
10	2402	SCREW, HEX HEAD CAP, 3/8 - 16 x 2-1/4 .....	4	4
11	1010219	ROD, TIE .....	1	1
12	7555	NUT, HEX, LEFT-HAND THREAD, 1/2 - 20 .....	1	1
13	7540	BALL JOINT, LEFT-HAND THREAD (INCLUDES ITEMS 18, 19 AND 20) .....	1	1
14	1017266	STRAP, A-PLATE .....	1	1
15	101870601	SHOCK ABSORBER, FRONT .....	2	2
16	1010124	PLATE, SPRING MOUNTING .....	3	3
17	7539	BALL JOINT (INCLUDES ITEMS 18, 19 AND 20) .....	1	1
18	1015597	FITTING, THREAD-FORMING GREASE, 1/4 - 28 .....	1	1
19	1011930	SEAL, DUST .....	1	1
20	7602	NUT, SLOTTED HEX, 3/8 - 24 .....	1	1
21	1035	PIN, COTTER, 3/32 x 1 .....	2	2
22	320	SCREW, HEX HEAD CAP, 3/8 - 16 x 1 .....	1	1
23	101935301	CLAMP, BRAKE CABLE (PART OF BRAKE CABLE ASSEMBLY) .....	2	2
24	101955001	BRACKET, BRAKE CABLE GUIDE .....	1	1
25	101870501	SCREW, HEX HEAD CAP, 3/8 - 16 x 4-3/4 .....	4	4

5


G

E

5

G

E

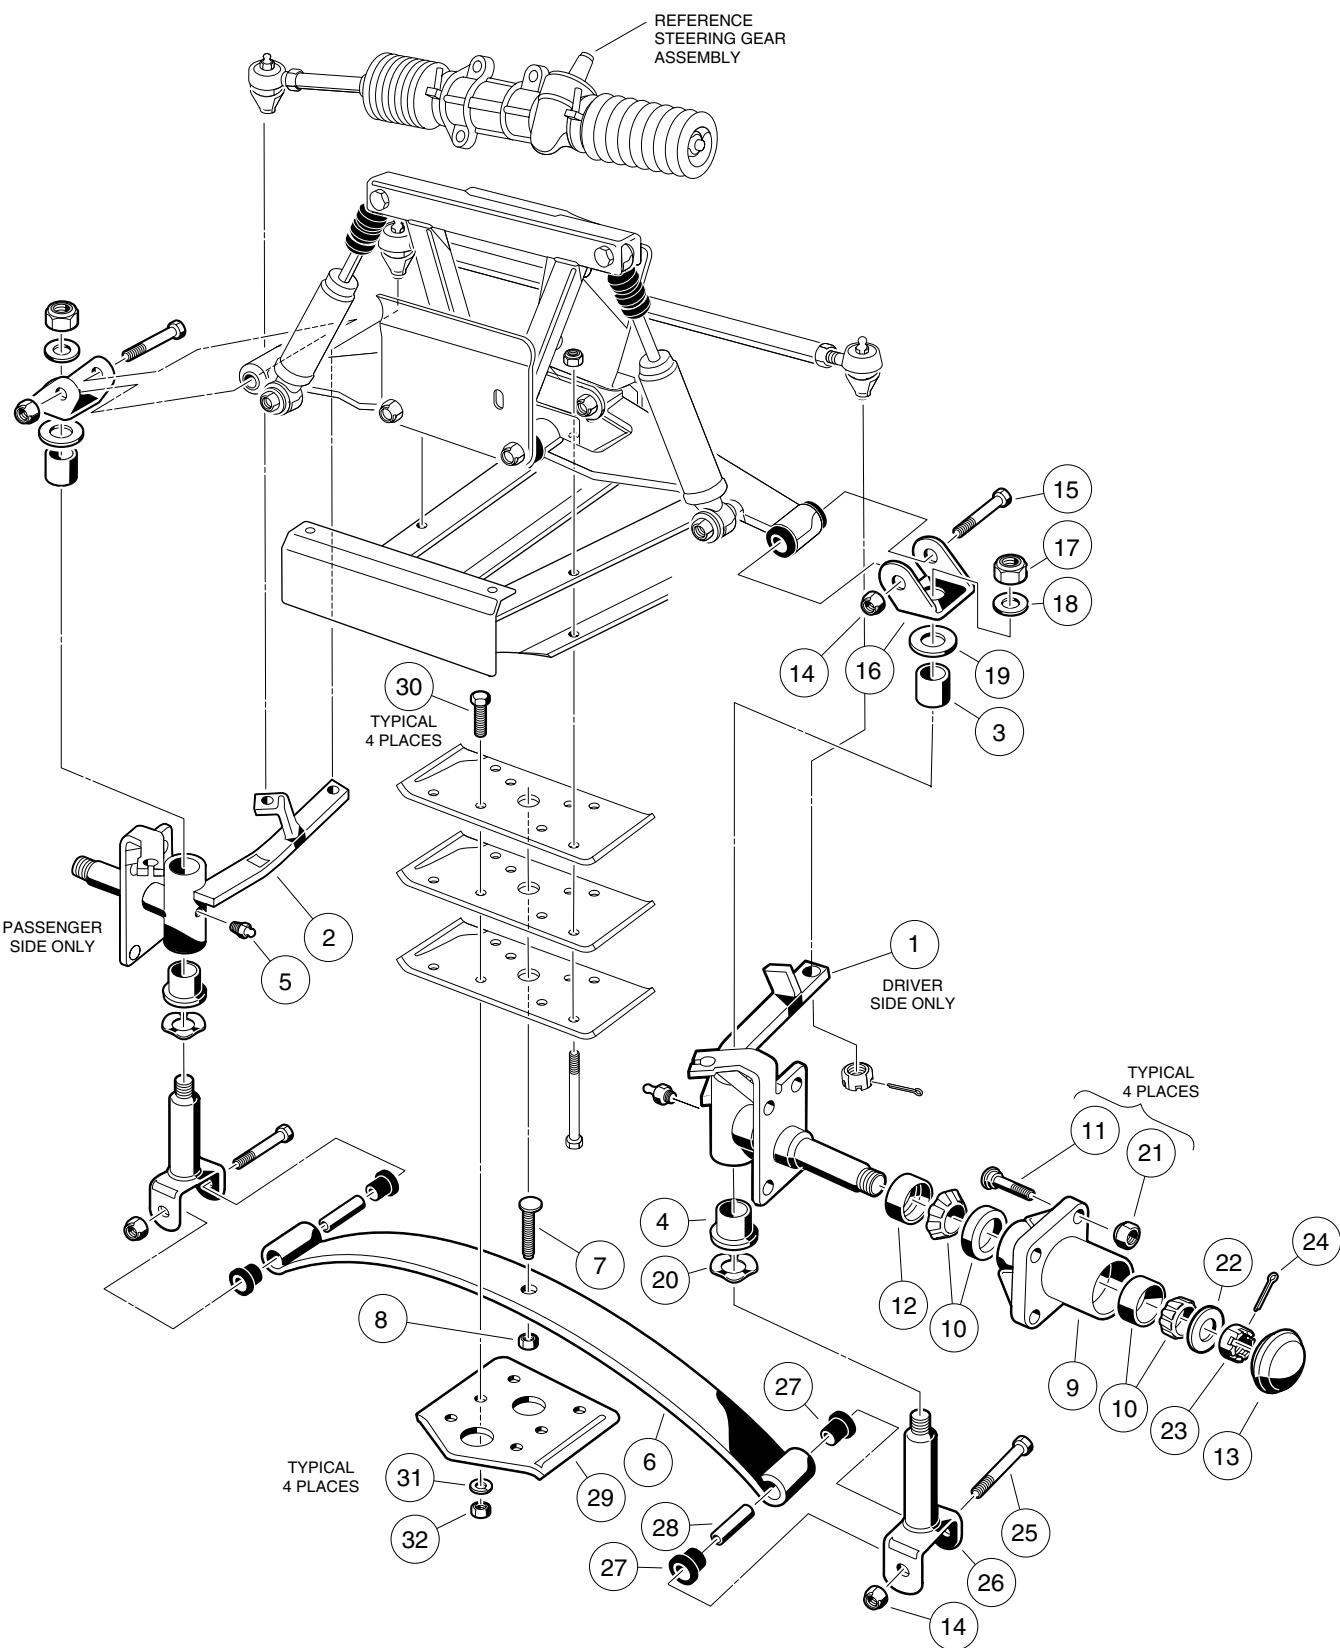


# FRONT SUSPENSION, LOWER– RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	101876901	ASSEMBLY, SPINDLE, DRIVER SIDE (INCLUDES ITEMS 3, 4 AND 5) .....	1	1
2	101877001	ASSEMBLY, SPINDLE, PASSENGER SIDE (INCLUDES ITEMS 3, 4 AND 5) .....	1	1
3	8067	BUSHING, BRONZE SPINDLE .....	1	1
4	7048	BUSHING, BRONZE .....	1	1
5	1015597	FITTING, GREASE, 1/4 - 28 .....	1	1
6	1012030	SPRING, TAPERED LEAF .....	1	1
7	8745	ASSEMBLY, ECCENTRIC .....	1	1
8	706	NUT, HEX, 3/8 - 16 .....	1	1
9	1011892	ASSEMBLY, HUB (INCLUDES ITEMS 10 - 13) .....	2	2
10	1011393	PACKAGE, HUB BEARING .....	2	2
11	1011304	STUD, LUG, 1/2 - 20 .....	4	4
12	1013135	SEAL, DOUBLE LIP .....	1	1
13	1011887	COVER, DUST .....	1	1
14	8754	NUT, NYLON LOCK, 3/8 - 16 .....	4	4
15	1016387	SCREW, HEX HEAD CAP, 3/8 - 16 x 2-3/4 .....	2	2
16	1016384	CLEVIS, UPPER DELTA .....	2	2
17	101903101	NUT, NYLON LOCK, 1/2 - 20 .....	2	2
18	1010028	WASHER, FLAT, 1/2 .....	2	2
19	1010150	BEARING, THRUST .....	2	2
20	1016389	WASHER, KINGPIN WAVE .....	2	2
21	1010984	NUT, LUG .....	8	8
22	1010005	WASHER, FLAT, 3/4 .....	2	2
23	7840	NUT, HEX SLOTTED, 3/4 - 16 .....	2	2
24	7910	PIN, COTTER, 5/32 x 1 .....	2	2
25	8755	SCREW, HEX HEAD CAP, 3/8 - 16 x 3-3/8 .....	2	2
26	1016386	KINGPIN .....	2	2
27	1015583	BUSHING, URETHANE .....	4	4
28	1012303	BUSHING, STEEL .....	2	2
29	1014276	PLATE, FRONT SPRING RETAINER .....	1	1
30	1010177	SCREW, HEX HEAD CAP, 3/8 - 16 x 2 .....	4	4
31	357	WASHER, LOCK, 3/8 .....	4	4
32	706	NUT, HEX, 3/8 - 16 .....	4	4

5


G

E

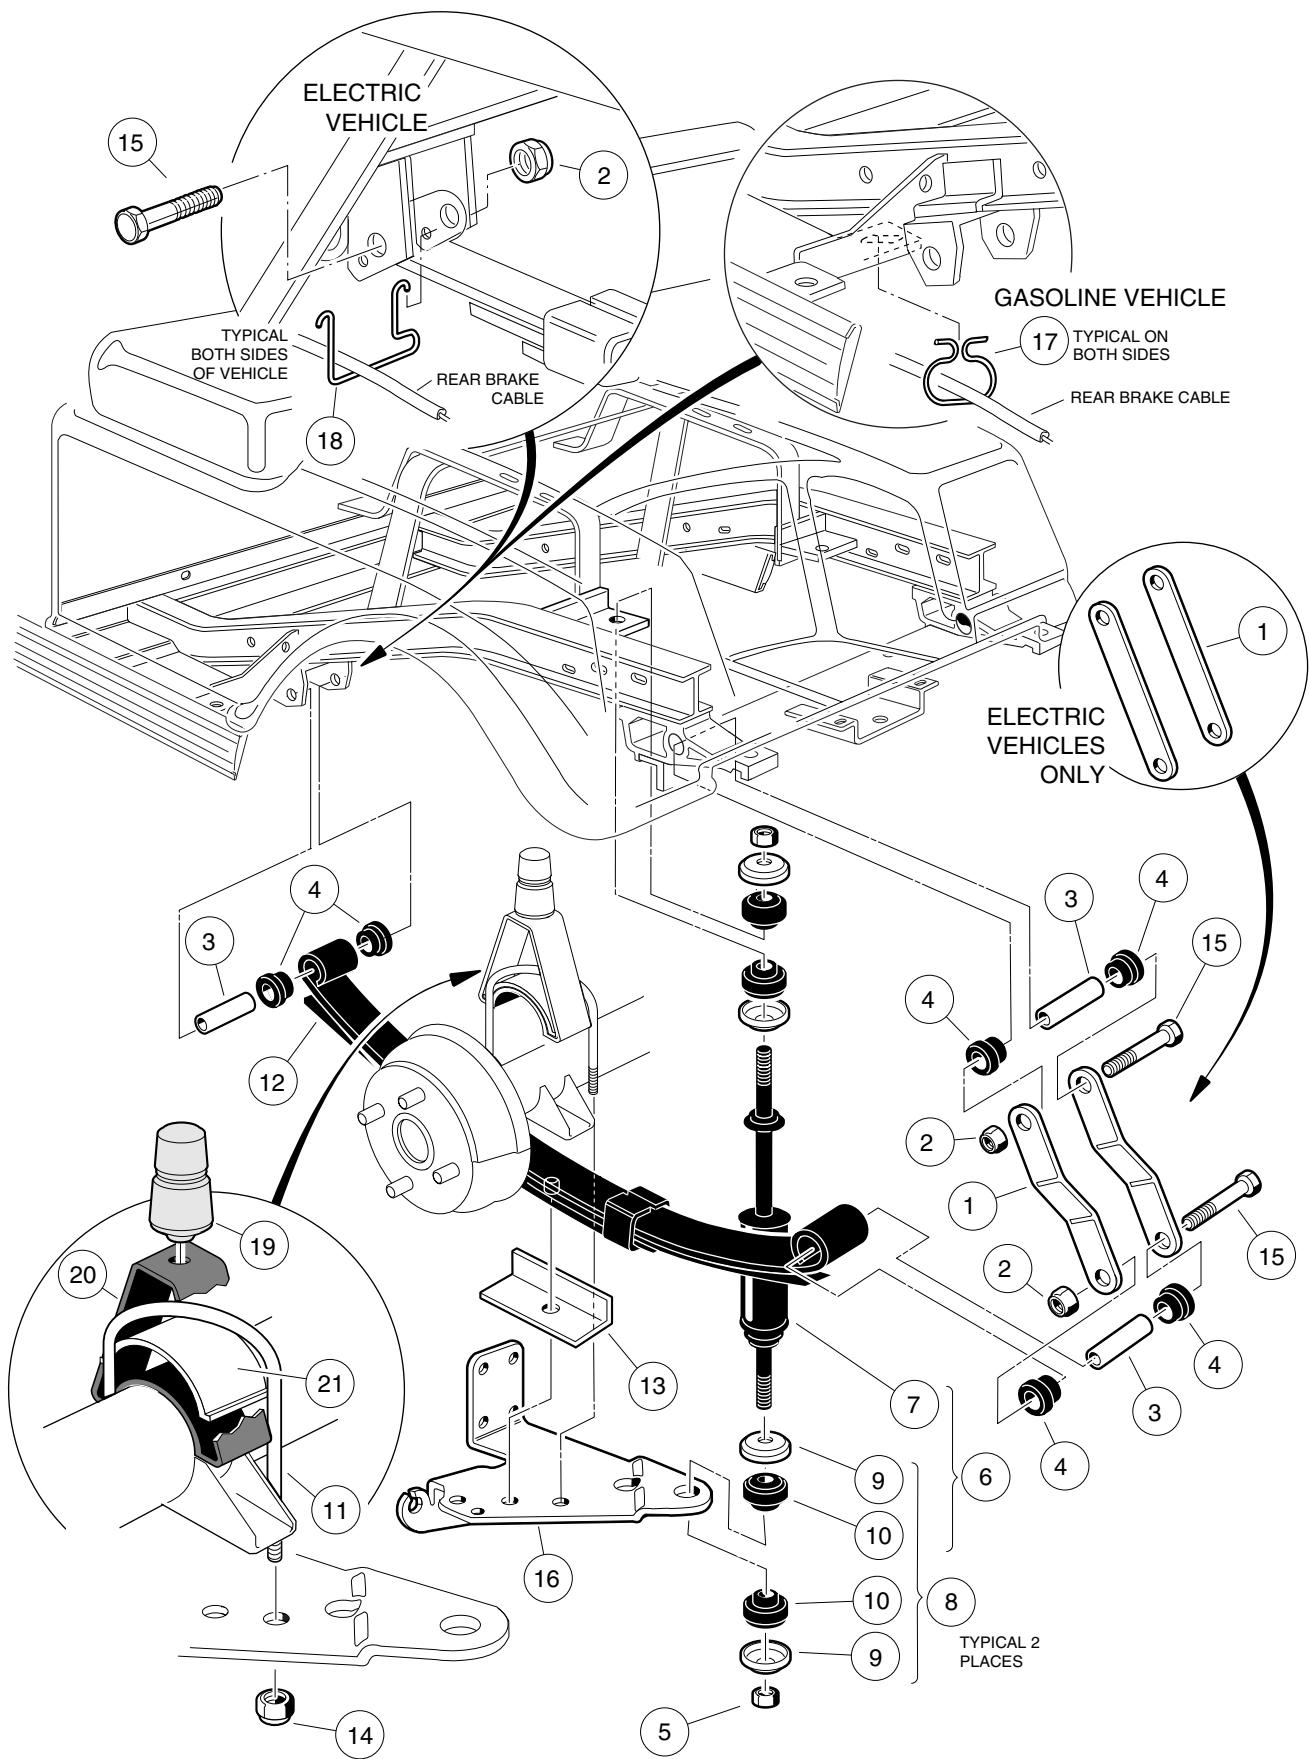**5****G****E**

# REAR SUSPENSION-TOURALL

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	
		1 2 3 4			<b>5</b>
1	7569	SHACKLE, REAR SPRING (ELECTRIC VEHICLE) .....		4	<b>G</b>
1	1012304	SHACKLE, REAR SPRING (GASOLINE VEHICLE) .....	4		
2	8754	NUT, NYLON LOCK, 3/8 - 16 .....	6	6	
3	1012303	BUSHING, STEEL .....	6	6	
4	1015583	BUSHING, URETHANE .....	12	12	
5	1010145	NUT, UNF HEX, 3/8 - 24 .....	4	4	
6	1013164	KIT, SHOCK ABSORBER (INCLUDES ITEMS 7, 9 AND 10) .....	1	1	
7	1014236	SHOCK ABSORBER, REAR .....	2	2	
8	1011415	KIT, SHOCK ABSORBER CUSHION (INCLUDES 2 EACH OF ITEMS 9 AND 10) ...	4	4	
9	N/A	RETAINER, SHOCK ABSORBER CUSHION .....	8	8	
10	N/A	CUSHION, SHOCK ABSORBER .....	8	8	
11	1014902	U-BOLT .....	2	2	
12	1014675	SPRING, REAR LEAF .....	2	2	
13	1014573	RETAINER, SPRING .....	2	2	
14	1014555	NUT, NYLON LOCK, 7/16 - 24 .....	4	4	
15	8755	SCREW, HEX HEAD CAP, 3/8 - 16 x 3-3/8 .....	6	6	
16	101926501	PAD, SPRING, DRIVER SIDE .....	1	1	
16	101929401	PAD, SPRING, PASSENGER SIDE .....	1	1	
17	101900801	HANGER, BRAKE CABLE (GASOLINE TOURALL) .....	2		
18	1013207	HANGER, BRAKE CABLE (ELECTRIC TOURALL) .....		2	
19	1017235	BUMPER, JOUNCE .....	2	2	
20	101454602	MOUNT, BUMPER (GASOLINE VEHICLE ONLY) .....	2		
20	101454902	MOUNT, BUMPER (ELECTRIC VEHICLE ONLY) .....		2	
21	1014901	SPACER, OVERLOAD BUMPER .....	2	2	

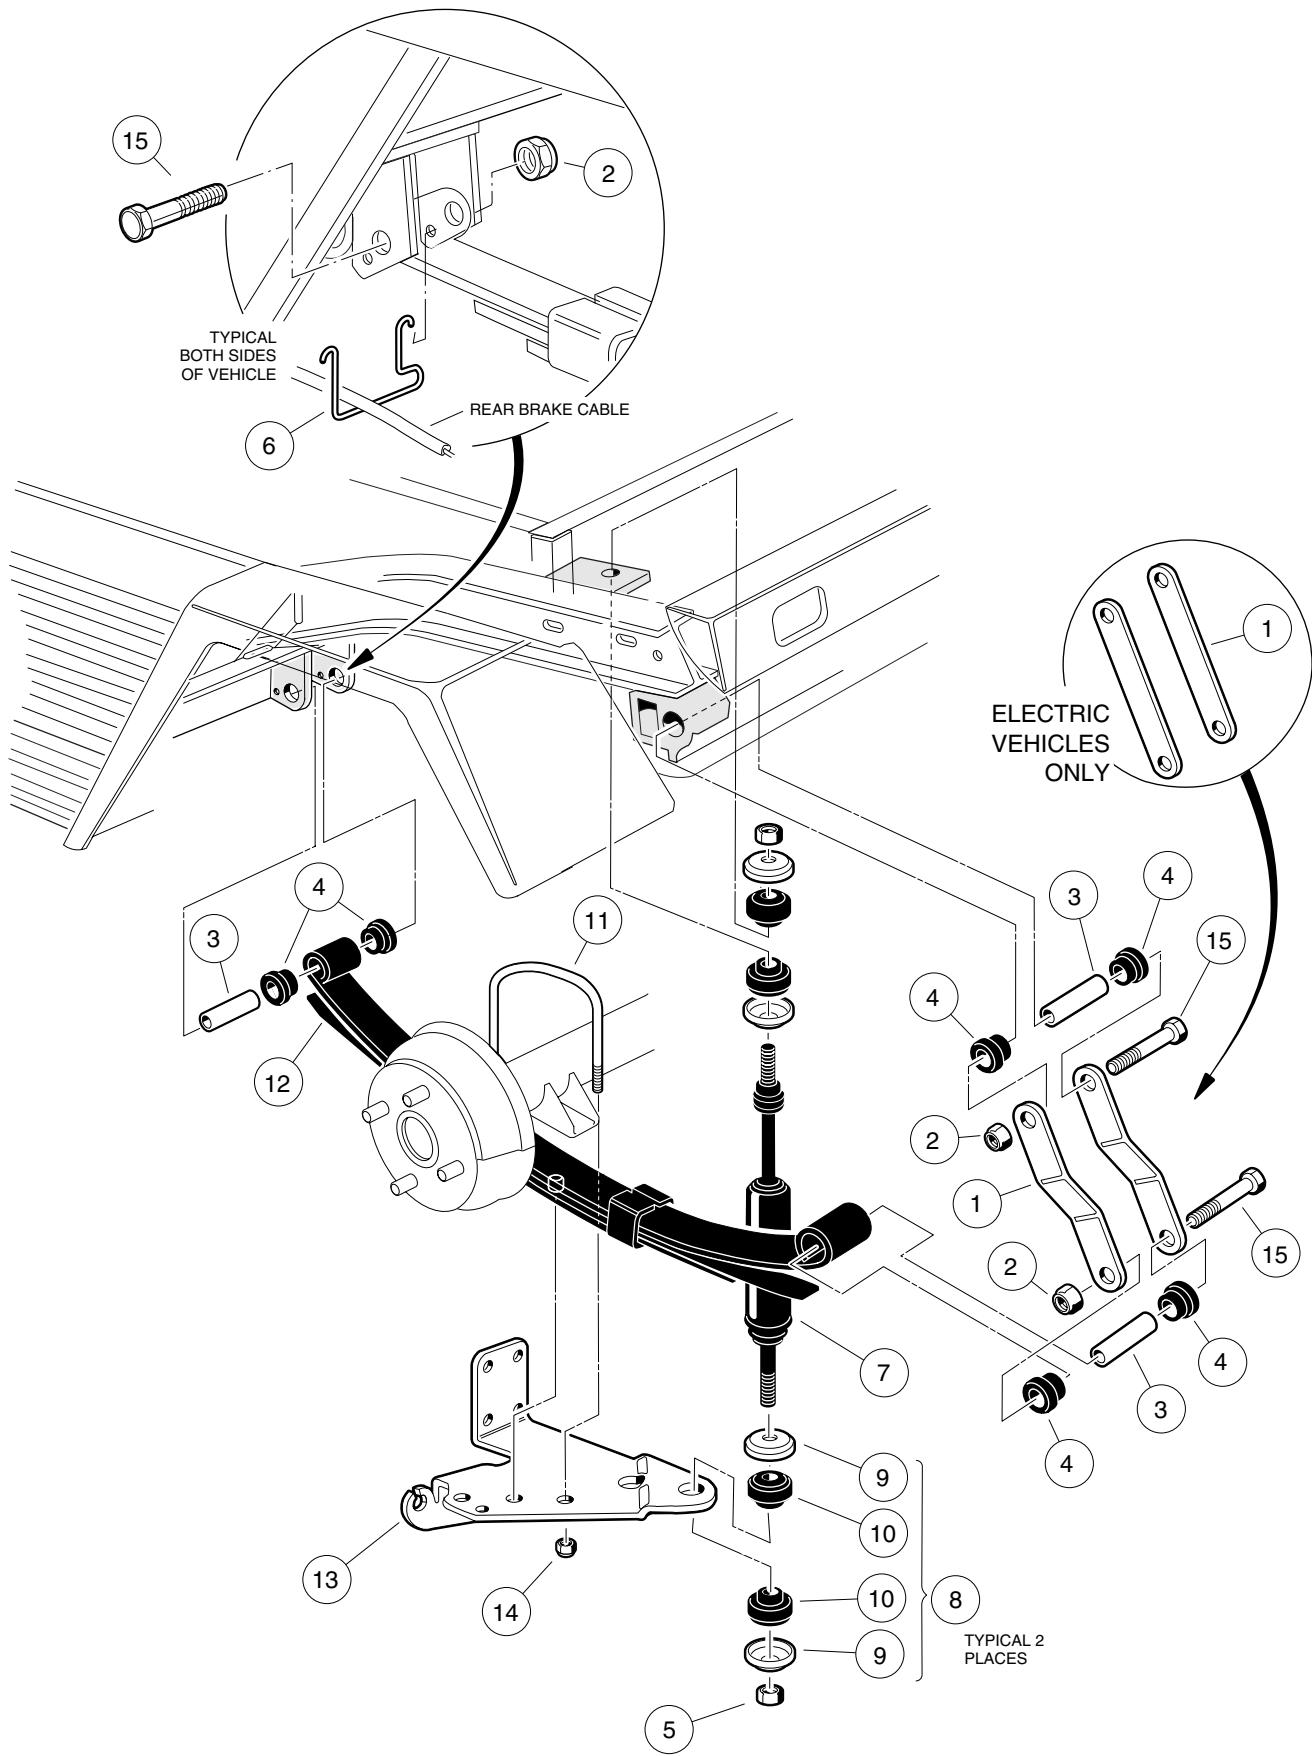**5****G****E**

**REAR SUSPENSION–  
RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER**


ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	7569	SHACKLE, REAR SPRING (ELECTRIC VEHICLE) .....		4
1	1012304	SHACKLE, REAR SPRING (GASOLINE VEHICLE) .....	4	
2	8754	NUT, NYLON LOCK, 3/8 - 16 .....	6	6
3	1012303	BUSHING, STEEL .....	6	6
4	1015583	BUSHING, URETHANE .....	12	12
5	1010145	NUT, UNF HEX, 3/8 - 24 .....	4	4
6	1013207	HANGER, BRAKE CABLE .....	2	2
7	101975101	SHOCK ABSORBER, REAR .....	2	2
8	1011415	KIT, SHOCK ABSORBER CUSHION (INCLUDES 2 EACH OF ITEMS 9 AND 10)....	4	4
9	N/A	RETAINER, SHOCK ABSORBER CUSHION .....	8	8
10	N/A	CUSHION, SHOCK ABSORBER .....	8	8
11	1014902	U-BOLT .....	2	2
12	101975201	SPRING, REAR LEAF .....	2	2
13	101926501	PAD, SPRING, DRIVER SIDE .....	1	1
13	101929401	PAD, SPRING, PASSENGER SIDE .....	1	1
14	1014555	NUT, NYLON LOCK, 7/16 - 24 .....	4	4
15	8755	SCREW, HEX HEAD CAP, 3/8 - 16 x 3-3/8 .....	6	6

5

G

E

**5**  
**G**  
**E**

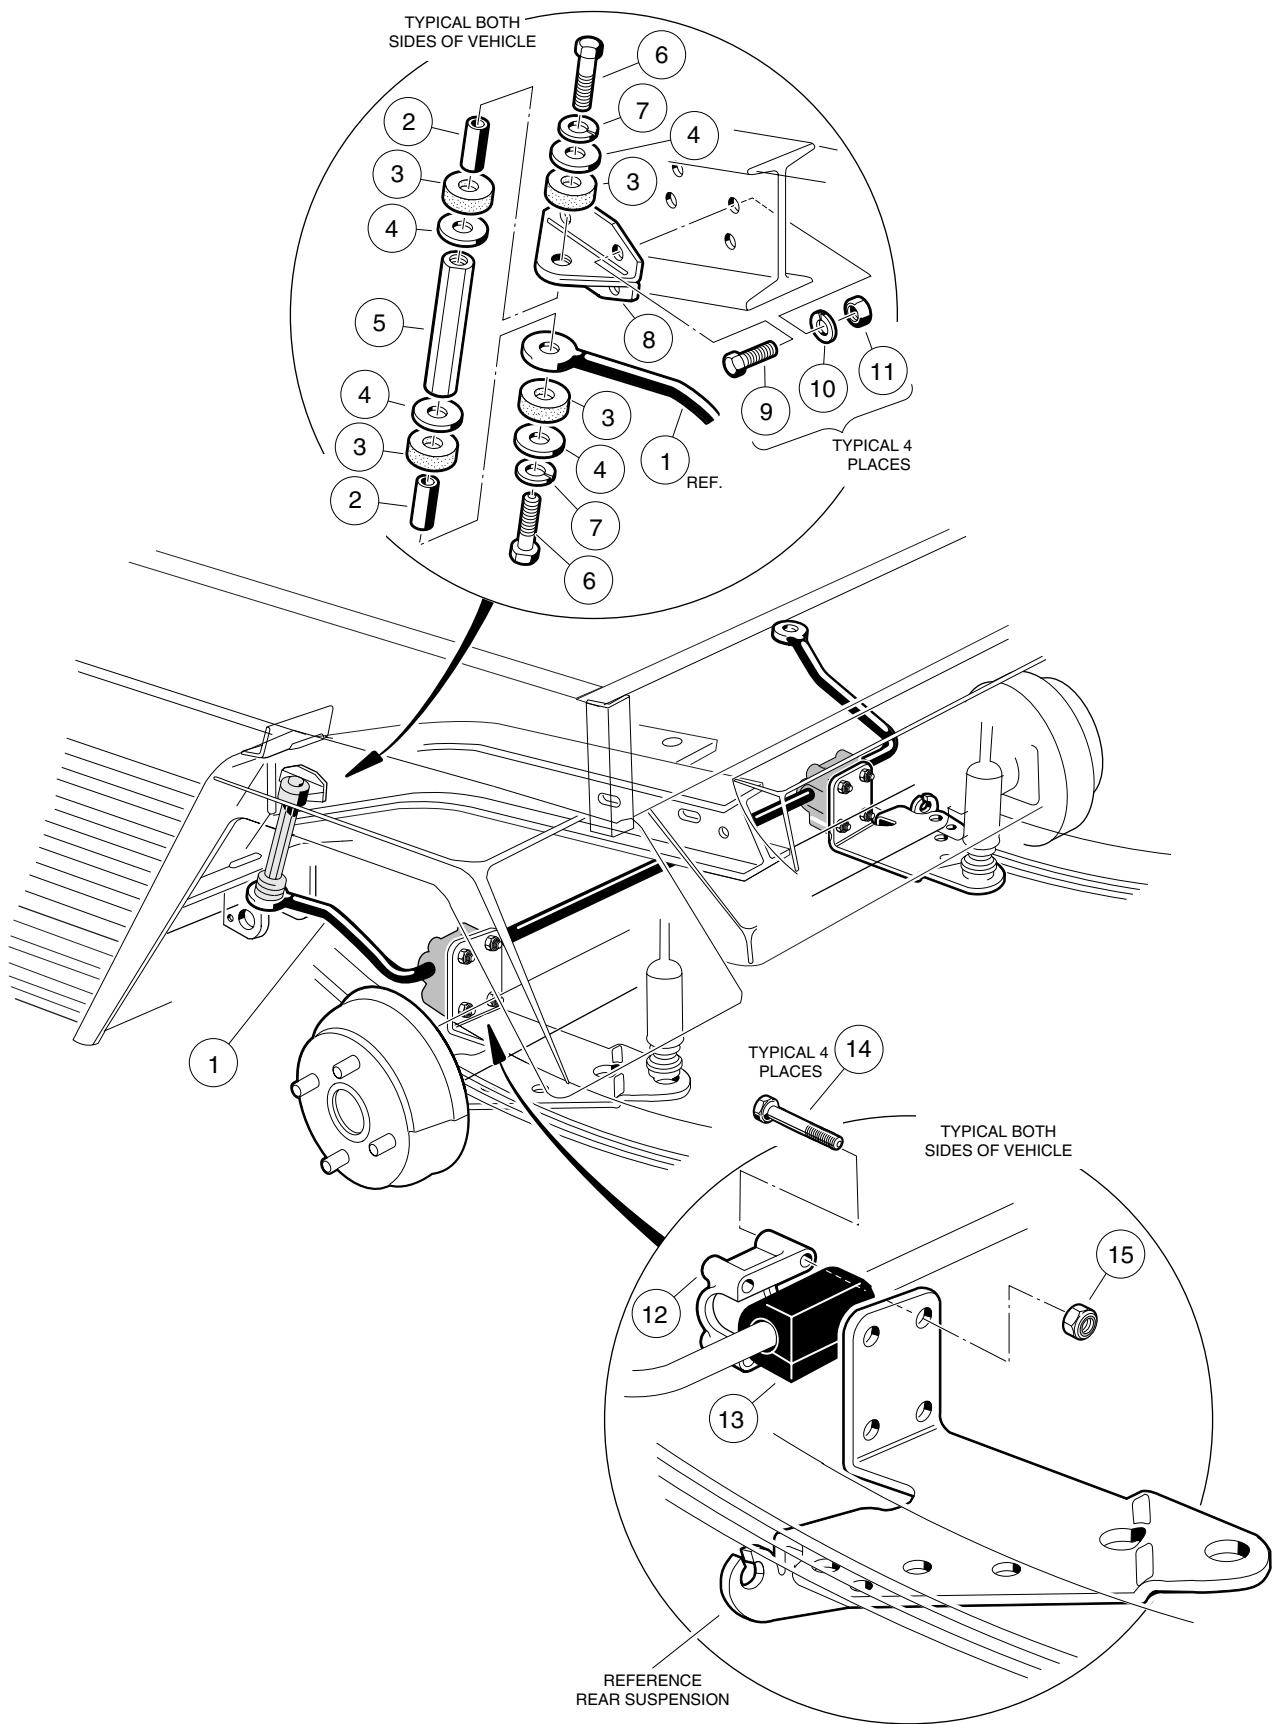

**STABILIZER BAR-GASOLINE**  
**RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1015760	BAR, STABILIZER, 3/4 DIAMETER .....	1
2	1015457	SPACER .....	4
3	1015453	MOUNT, COMPRESSION .....	8
4	808	WASHER, FLAT, 3/8 .....	8
5	1016814	LINK, STABILIZER BAR .....	2
6	8861	SCREW, HEX HEAD CAP, 3/8 - 16 x 1-3/4 .....	4
7	357	WASHER, LOCK, 3/8 .....	4
8	1016813	BRACKET, STABILIZER BAR MOUNTING .....	2
9	7173	SCREW, HEX HEAD CAP, 5/16 - 18 x 3/4 .....	8
10	7174	WASHER, LOCK, 5/16 .....	8
11	1242	NUT, HEX, 5/16 - 18 .....	8
12	1015614	SUPPORT, STABILIZER BAR BUSHING .....	2
13	1015613	BUSHING, STABILIZER BAR .....	2
14	7311	SCREW, HEX HEAD CAP, 1/4 - 20 x 2 .....	8
15	8233	NUT, NYLON LOCK, 1/4 - 20 .....	8

5

G

E




# ELECTRICAL SYSTEM– GASOLINE VEHICLE

---

6

G

**6**  
**G**

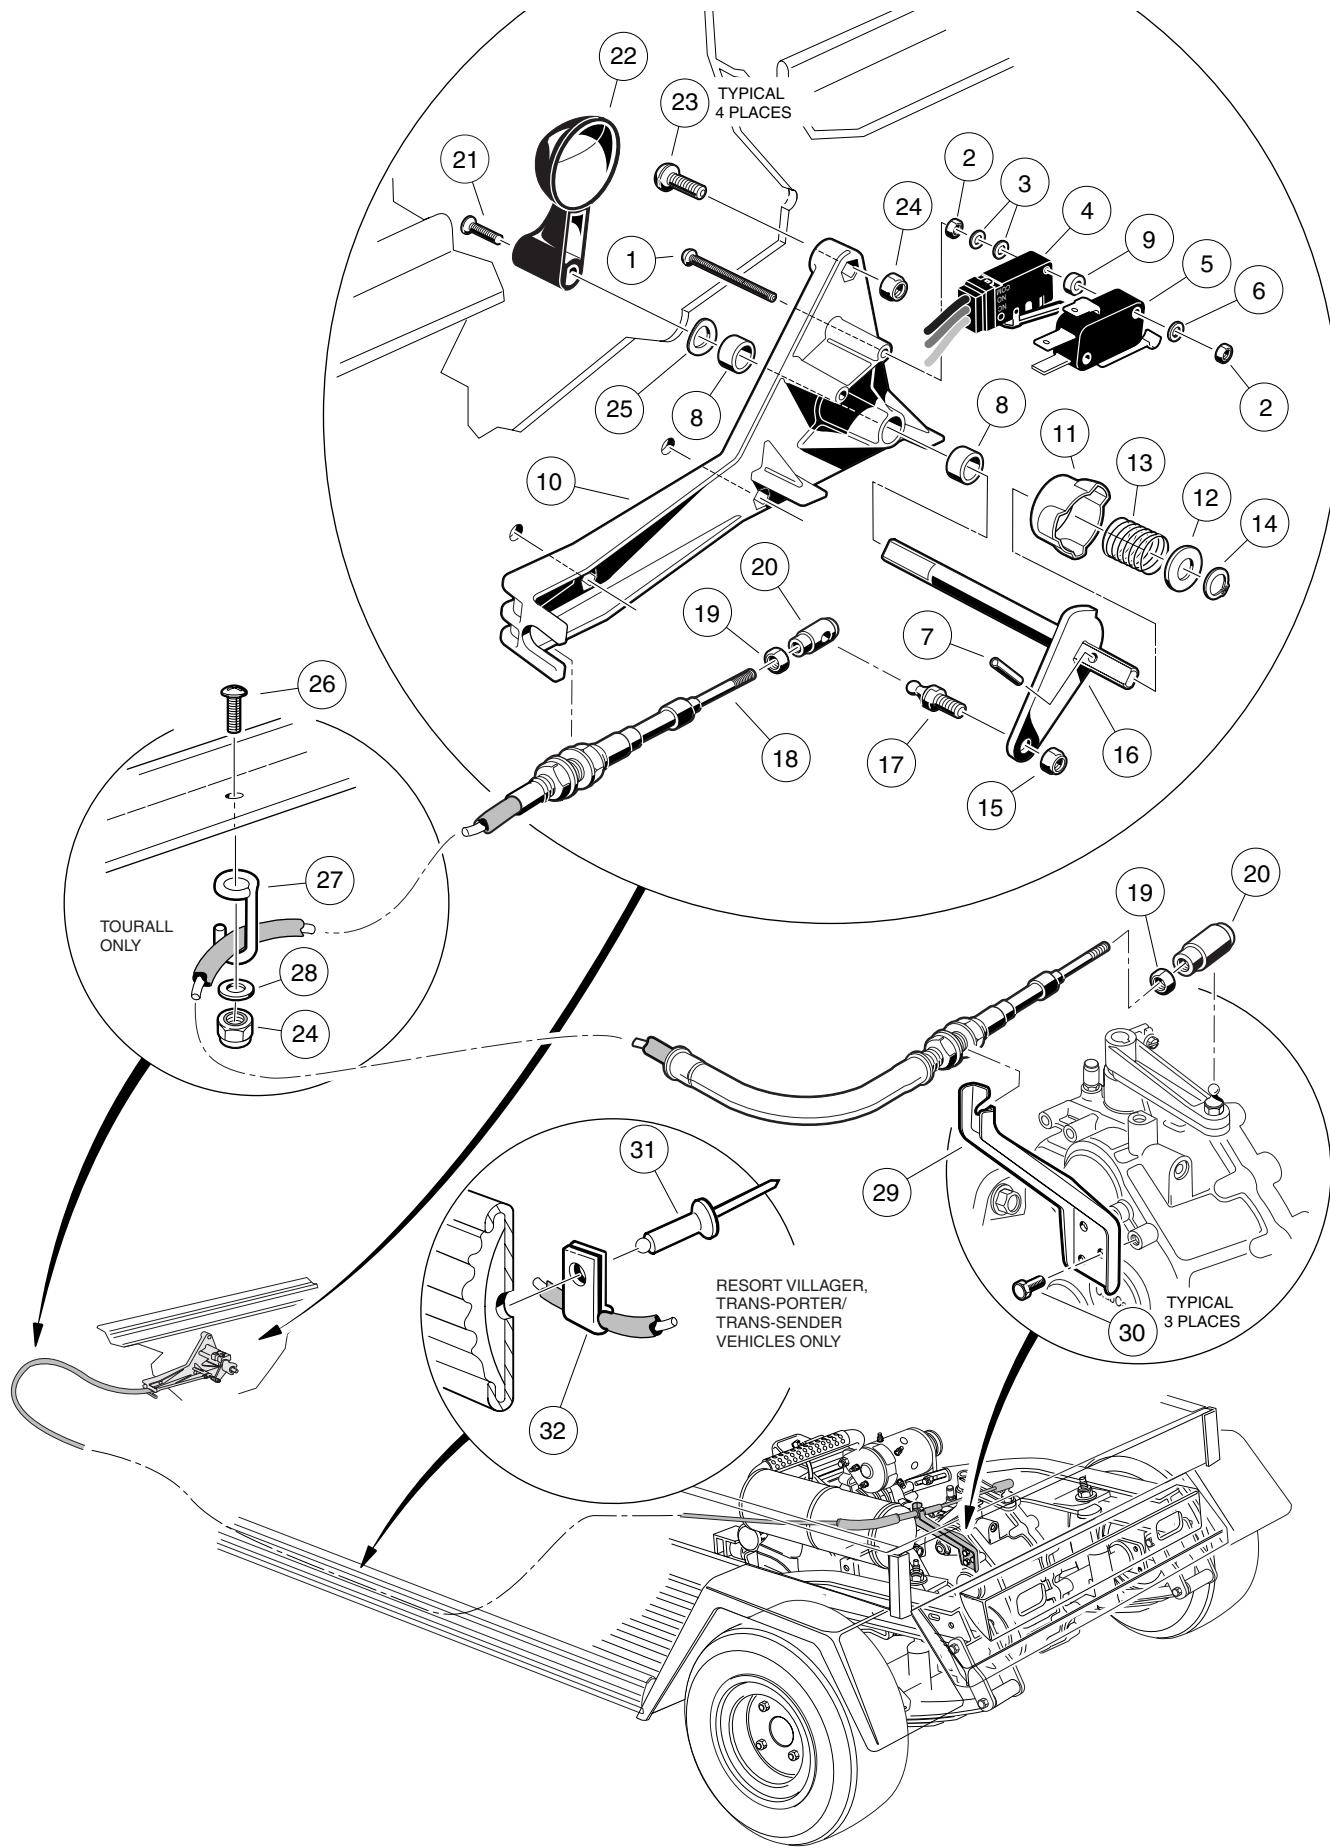


# FORWARD/REVERSE SHIFTER ASSEMBLY— GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	1016947	ASSEMBLY, FORWARD/REVERSE SHIFTER (INCLUDES ITEMS 1 - 17) .....	1
1	1012594	SCREW, MACHINE, #4 - 40 x 1-1/2 .....	2
2	8057	NUT, HEX HEAD, #4 - 40 .....	4
3	1012431	WASHER, FLAT, #4 .....	4
4	101979101	SWITCH, LIMIT .....	1
5	1014807	SWITCH, LIMIT .....	1
6	8058	WASHER, LOCK, #4 .....	2
7	1013591	PIN, ROLL, 1/8 .....	1
8	1014145	BUSHING, BRONZE .....	2
9	1014727	WASHER, NYLON FLAT, #4 .....	2
10	1016342	BASE, FORWARD/REVERSE SHIFTER .....	1
11	1014089	KIT, NEUTRAL LOCK-OUT CAM (INCLUDES ITEM 12) .....	1
12	1014065	WASHER, FLAT .....	1
13	1013590	SPRING, FORWARD/REVERSE CAM .....	1
14	1013589	RING, RETAINING .....	1
15	8717	NUT, NYLON LOCK, 1/4 - 28 .....	1
16	1013587	WELDMENT, FORWARD/REVERSE BELL CRANK .....	1
17	1010954	STUD, BALL, 1/4 - 28 x 1/4 .....	1
18	101951501	CABLE, TRANSMISSION (INCLUDES ITEMS 19 AND 20) (TOURALL ONLY) .....	1
18	101672701	CABLE, TRANSMISSION (INCLUDES ITEMS 19 AND 20) (RESORT VILLAGER AND TRANS-PORTER/TRANS-SENDER ONLY) .....	1
19	7893	NUT, HEX, #10 - 32 .....	2
20	1012333	JOINT, BALL .....	2
21	1013198	SCREW, PHILLIPS OVAL COUNTERSUNK MACHINE, #8 - 32 x 5/8 .....	1
22	1012987	HANDLE, FORWARD/REVERSE SWITCH .....	1
23	8248	SCREW, PHILLIPS TRUSS HEAD, 1/4 - 20 x 3/4 .....	4
24	8233	NUT, NYLON LOCK, 1/4 - 20 .....	5
25	1016201	WASHER, WAVE, 3/8 .....	1
26	8251	SCREW, PHILLIPS HEAD, 1/4 - 20 x 1 (TOURALL ONLY) .....	1
27	101855801	RETAINER, CABLE (TOURALL ONLY) .....	1
28	332	WASHER, FLAT, 1/4 (TOURALL ONLY) .....	1
29	101922601	BRACKET, TRANSMISSION CABLE SUPPORT .....	1
30	1012285	SCREW, THREAD-ROLLING, 1/4 - 20 x 5/8 .....	3
31	7973	RIVET, POP, 3/16 (RESORT VILLAGER AND TRANS-PORTER/TRANS-SENDER ONLY) ...	1
32	8455	CLAMP (RESORT VILLAGER AND TRANS-PORTER/TRANS-SENDER ONLY) .....	1

6

G

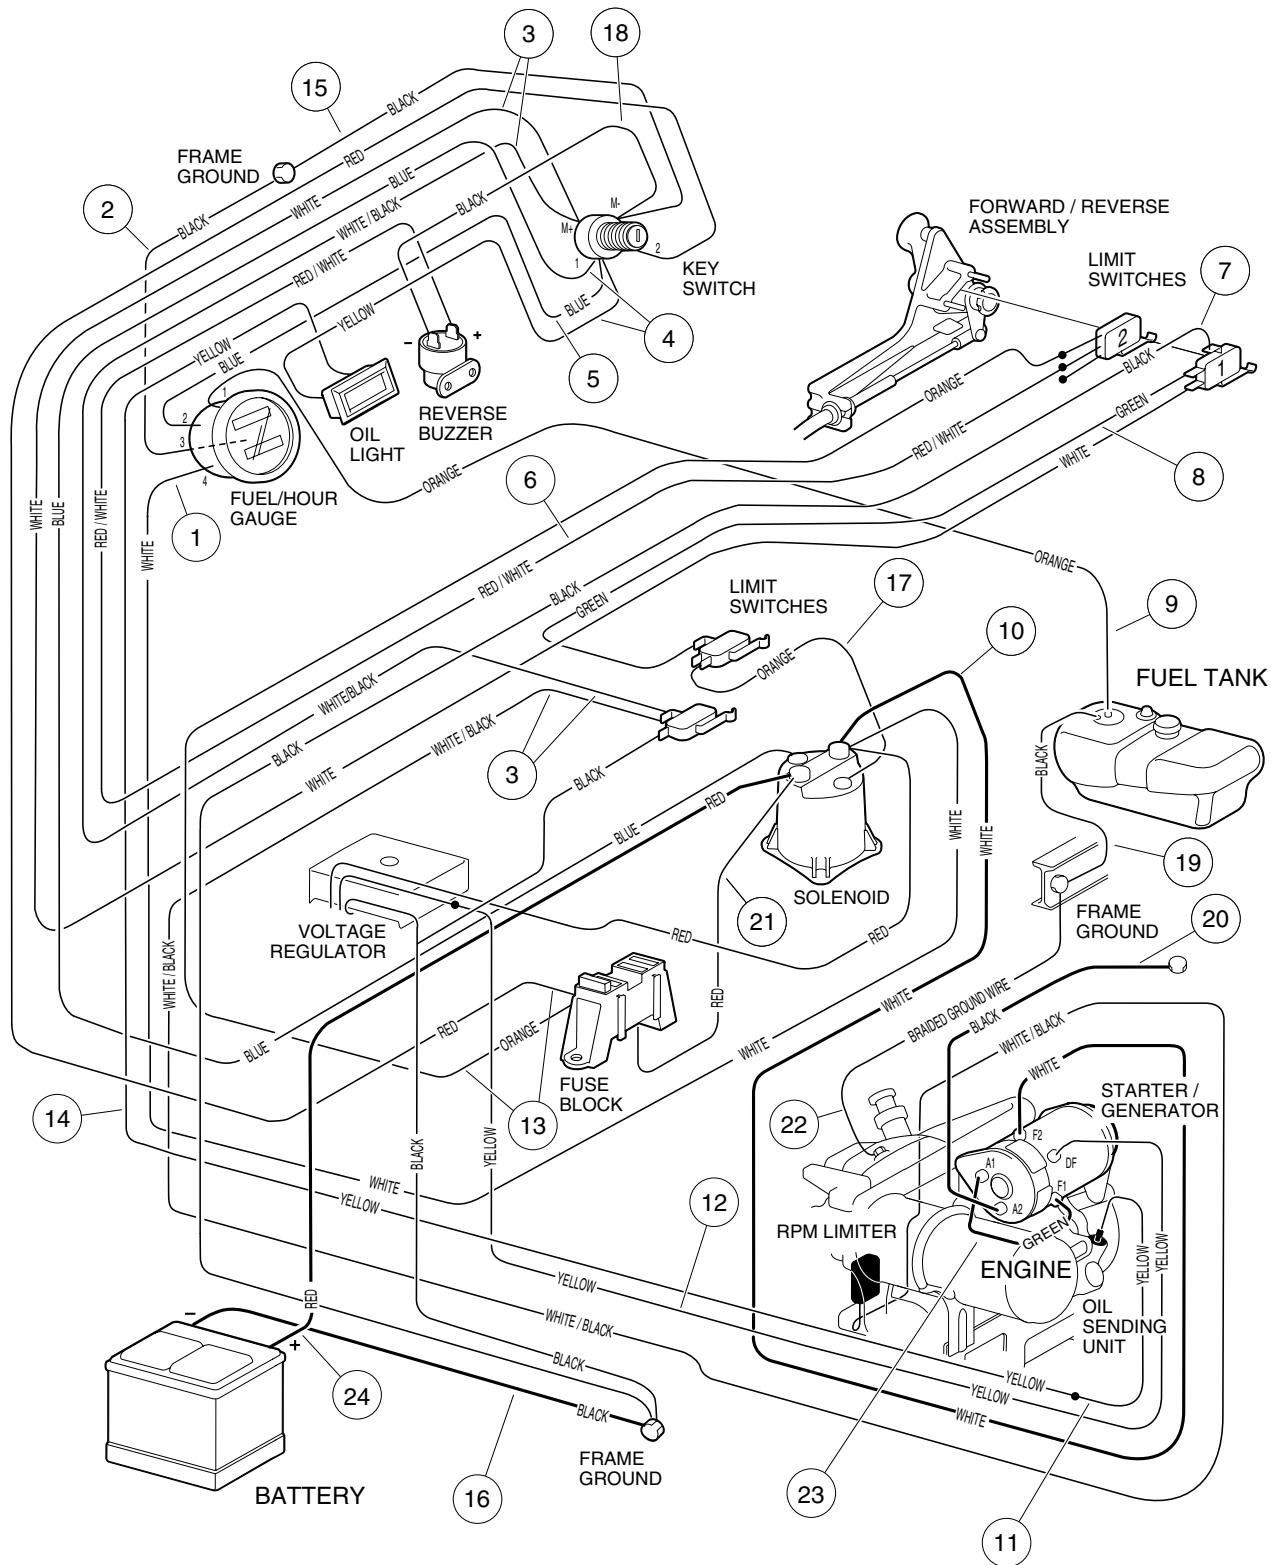


# WIRING-GASOLINE TOURALL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	101987402	WIRE HARNESS ASSEMBLY (INCLUDES ITEMS 1 - 14) .....	1
1	N/A	WIRE ASSEMBLY, #18 WHITE .....	1
2	N/A	WIRE ASSEMBLY, #18 BLACK .....	1
3	N/A	WIRE ASSEMBLY, #18 WHITE, #18 WHITE/BLACK, #18 WHITE/BLACK .....	1
4	N/A	WIRE ASSEMBLY, #18 YELLOW, #16 BLUE .....	1
5	N/A	WIRE ASSEMBLY, #18 BLUE .....	1
6	N/A	WIRE ASSEMBLY, #18 RED/WHITE .....	1
7	N/A	WIRE ASSEMBLY, #18 BLACK .....	1
8	N/A	WIRE ASSEMBLY, #18 GREEN .....	1
9	N/A	WIRE ASSEMBLY, #18 ORANGE .....	1
10	1015769	WIRE ASSEMBLY, #6 WHITE .....	1
11	N/A	WIRE ASSEMBLY, #18 YELLOW .....	1
12	N/A	WIRE ASSEMBLY, #16 YELLOW .....	1
13	N/A	WIRE ASSEMBLY, #16 RED, #16 ORANGE .....	1
14	N/A	WIRE ASSEMBLY, #18 YELLOW .....	1
15	N/A	WIRE ASSEMBLY, #18 BLACK .....	1
16	1012382	WIRE ASSEMBLY, #6 BLACK .....	1
17	N/A	WIRE ASSEMBLY, #18 ORANGE (PART OF ELECTRICAL COMPONENT BOX) .....	1
18	N/A	WIRE ASSEMBLY, #18 BLACK (PART OF REVERSE BUZZER KIT) .....	1
19	N/A	WIRE ASSEMBLY, #18 BLACK .....	1
20	1015920	WIRE ASSEMBLY, #6 BRAIDED GROUND .....	1
21	1015737	WIRE ASSEMBLY, #10 RED (PART OF ELECTRICAL COMPONENT BOX) .....	1
22	1015332	WIRE ASSEMBLY, #10 BRAIDED GROUND .....	1
23	101837301	WIRE ASSEMBLY, #6 GREEN .....	1
24	1014119	WIRE ASSEMBLY, #6 RED .....	1

6

G

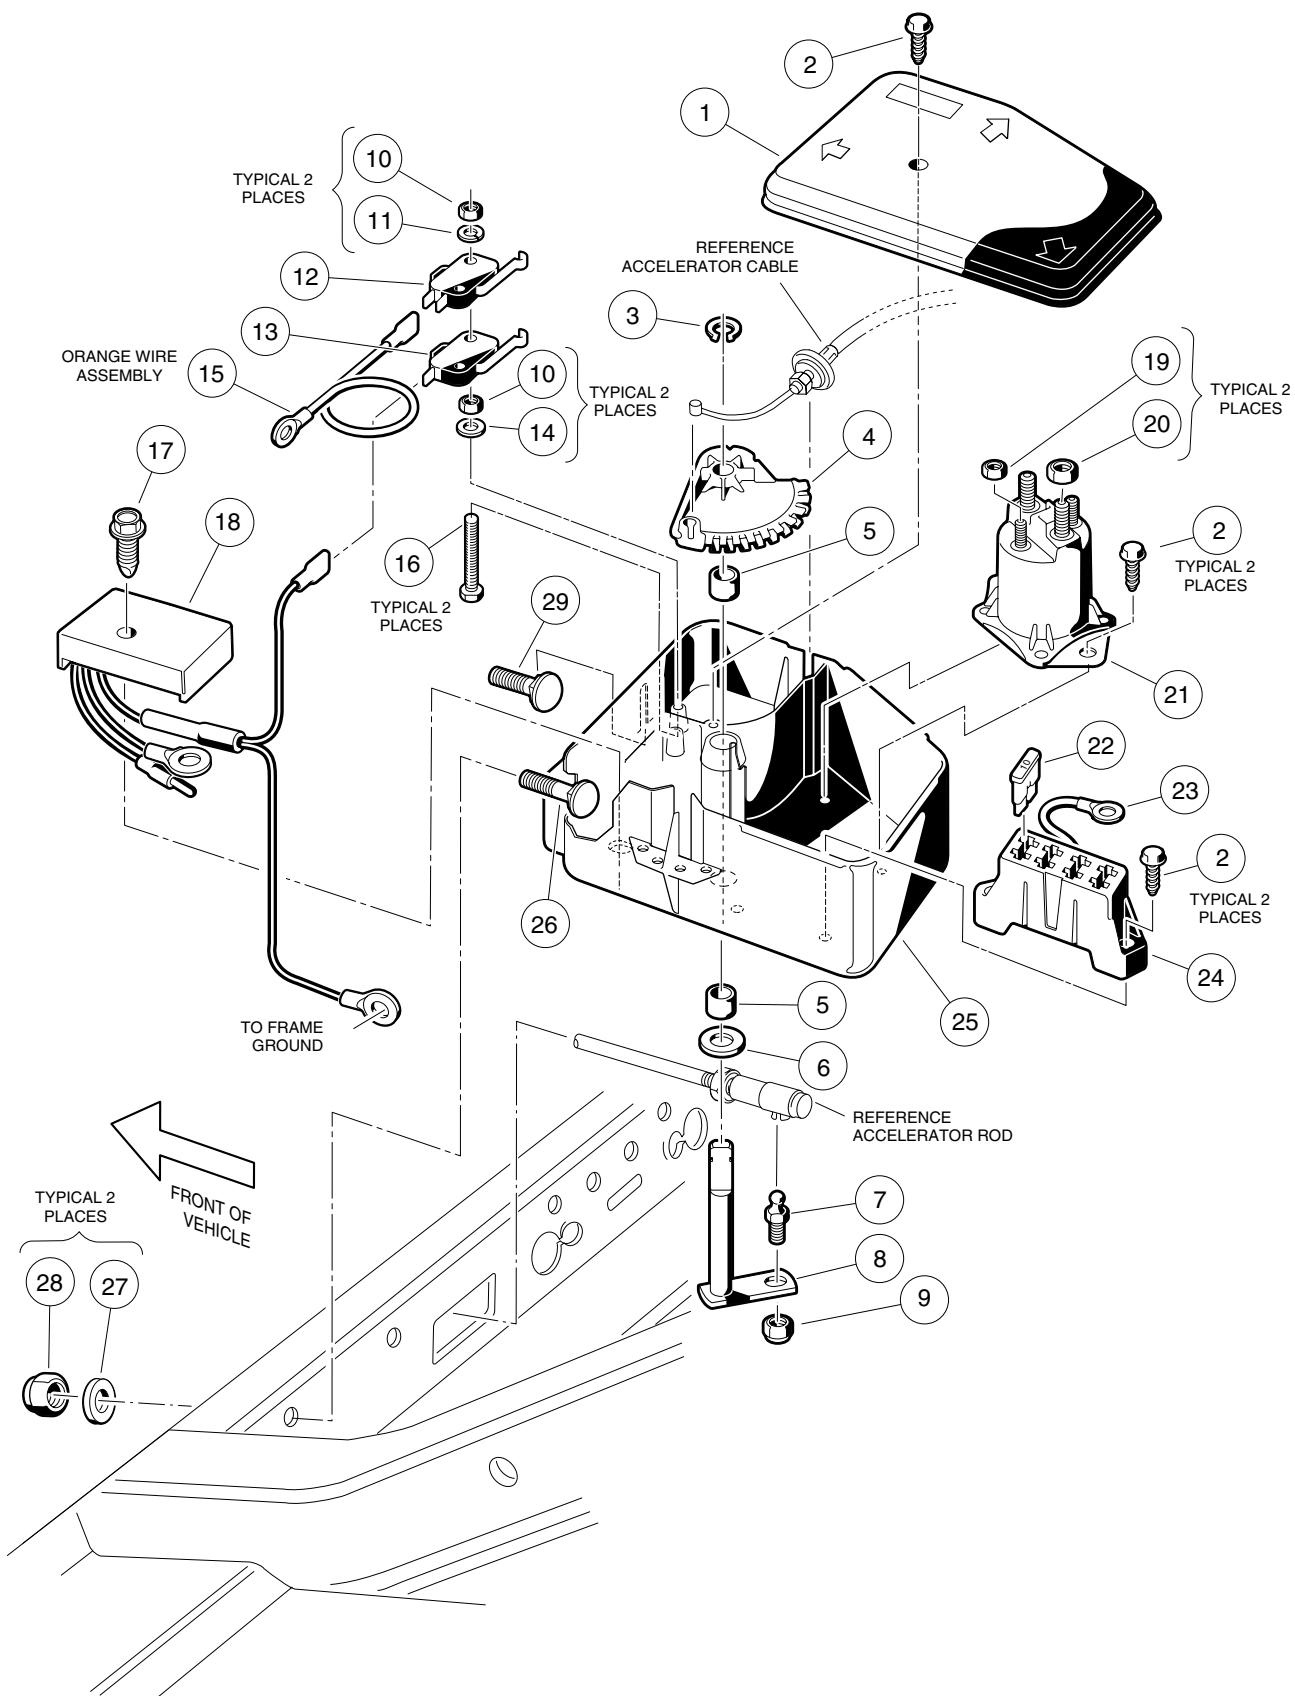


# ELECTRICAL COMPONENT BOX, GASOLINE VEHICLE— TOURALL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	101992601	BOX, ELECTRICAL COMPONENT, COMPLETE (INCLUDES ITEMS 1 - 25) .....	1
1	1015372	COVER, ELECTRICAL COMPONENT BOX .....	1
2	1015752	SCREW, HI-LO, #12 - 16 x 5/8 .....	5
3	1013589	RING, RETAINING .....	1
4	1015373	CAM, ELECTRICAL BOX .....	1
5	1014145	BUSHING, BRONZE .....	2
6	1014065	WASHER, FLAT .....	1
7	1010954	STUD, BALL, 1/4 - 28 .....	1
8	101821301	ASSEMBLY, BELL CRANK AND SHAFT .....	1
9	8717	NUT, NYLON LOCK, 1/4 - 28 .....	1
10	8057	NUT, HEX, #4 - 40 .....	4
11	8058	WASHER, LOCK, #4 .....	2
12	1014807	SWITCH, LIMIT .....	1
13	1014808	SWITCH, LIMIT .....	1
14	1012431	WASHER, FLAT, #4 .....	2
15	N/A	WIRE ASSEMBLY, #16 ORANGE .....	1
16	1015878	SCREW, HEX HEAD MACHINE, #4 - 40 x 1-5/8 .....	2
17	101856102	SCREW, HEX WASHER HEAD HI-LO, 1/4 - 15 x 1-1/2 .....	1
18	1015777	ASSEMBLY, VOLTAGE REGULATOR .....	1
19	7893	NUT, HEX, #10 - 32 .....	2
20	1242	NUT, HEX, 5/16 - 18 .....	2
21	1013609	SOLENOID, 12-VOLT .....	1
22	1012295	FUSE, 10-AMP .....	1
23	1015737	WIRE ASSEMBLY, #10 RED .....	1
24	1015741	BLOCK, FUSE .....	1
25	1015371	BOX, ELECTRICAL COMPONENT .....	1
26	1015405	SCREW, ROUND-HEAD SQUARE-NECK, 5/16 - 18 x 2 .....	1
27	1241	WASHER, FLAT, 5/16 .....	2
28	7473	NUT, NYLON LOCK, 5/16 - 18 .....	2
29	7818	SCREW, ROUND-HEAD SQUARE-NECK, 5/16 - 18 x 1-1/2 .....	1

6

G

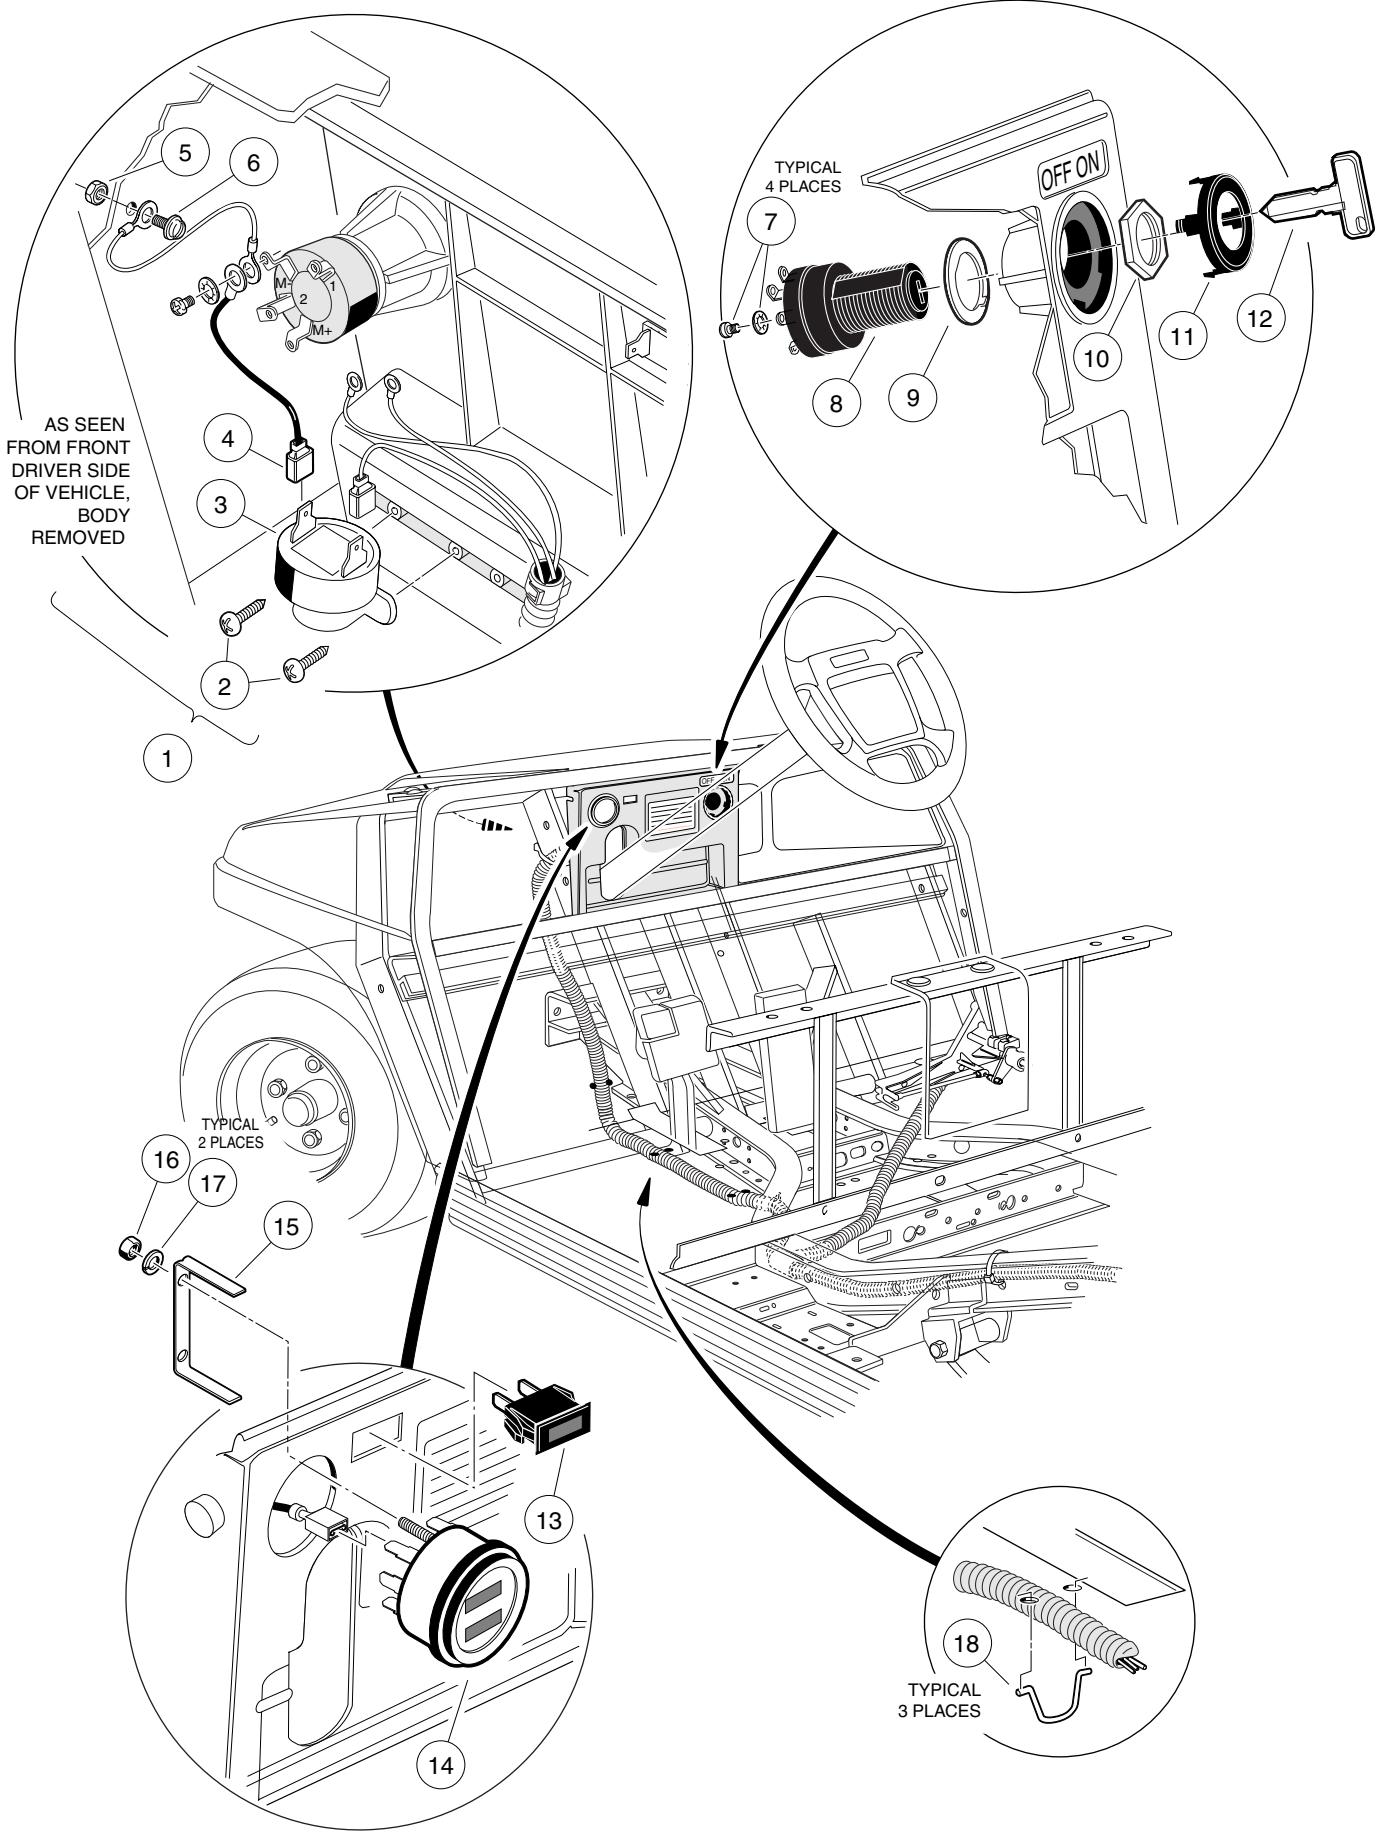
**6****G**

# ELECTRICAL COMPONENTS, FRONT BODY— GASOLINE TOURALL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016859	KIT, REVERSE BUZZER (INCLUDES ITEMS 2, 3 AND 4) .....	1
2	1016849	SCREW, PAN HEAD HILO, #4 - 24 x 5/16 .....	2
3	1016851	BUZZER, REVERSE .....	1
4	N/A	WIRE ASSEMBLY, #18 BLACK .....	1
5	1011229	NUT, K-LOCK, #6 - 32 .....	1
6	1015720	SCREW, HEX WASHER HEAD, # 6 - 32 x 1/2 .....	1
7	101830601	ASSEMBLY, SCREW AND WASHER .....	4
8	101826301	SWITCH, KEY .....	1
9	101851101	WASHER, KEY SWITCH .....	1
10	101830701	NUT, KEY SWITCH .....	1
11	101834502	CAP, KEY SWITCH .....	1
12	1012505	KEY (PAIR) .....	1
13	1016630	LIGHT, OIL WARNING .....	1
14	101990701	GAUGE, FUEL/HOUR .....	1
15	102025901	BRACKET .....	1
16	101991101	NUT, M4 x .7 .....	2
17	1012986	WASHER, LOCK, M4 .....	2
18	101900901	RETAINER, HARNESS .....	3

6

G

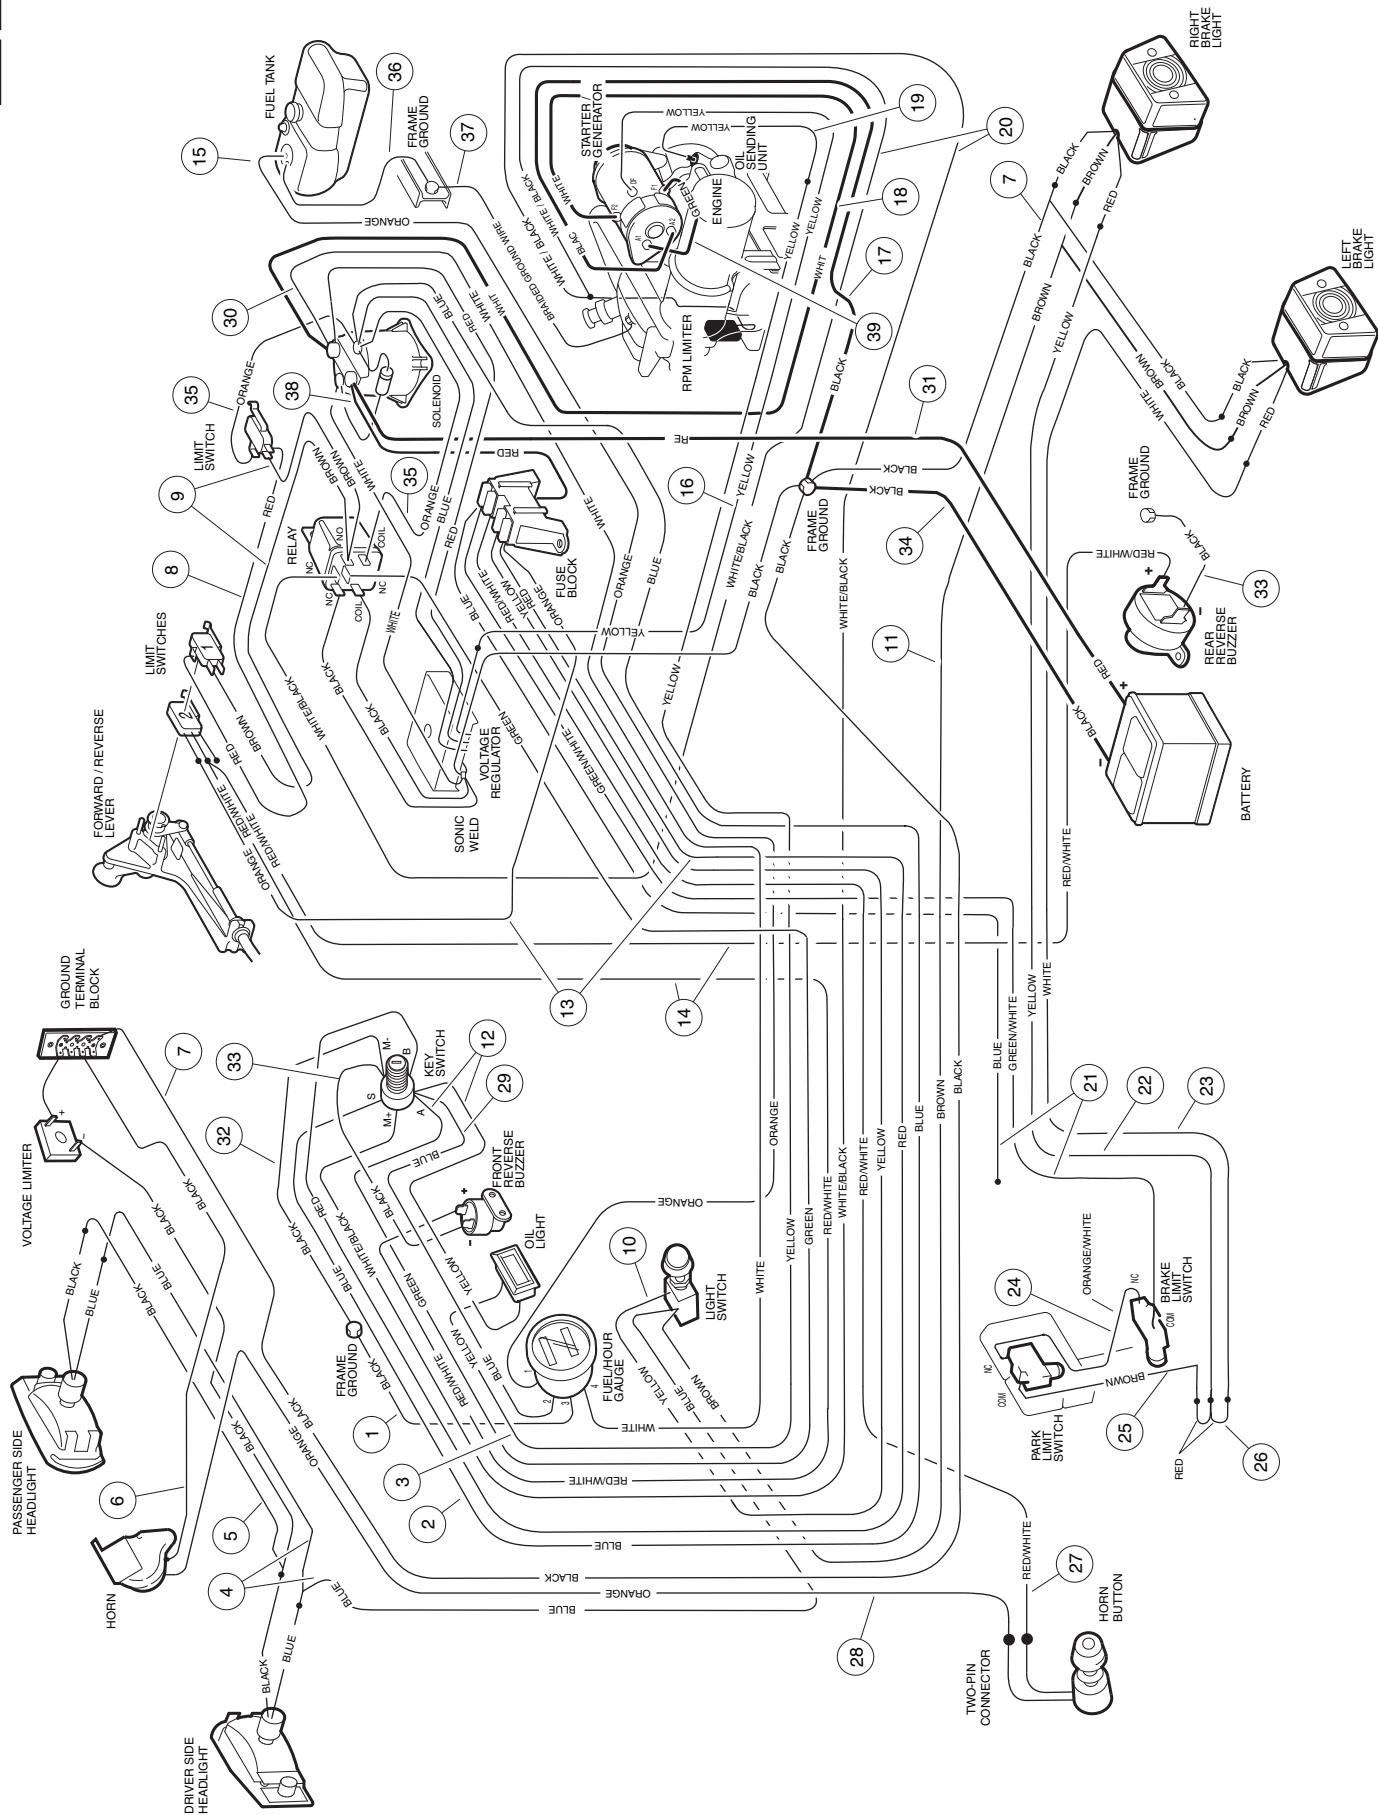

## WIRING-GASOLINE


## RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER

6

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	101990402	HARNESS, WIRE (INCLUDES ITEMS 1 - 30) .....	1
1	N/A	WIRE ASSEMBLY, #18 BLACK .....	1
2	N/A	WIRE ASSEMBLY, #18 BLUE .....	1
3	N/A	WIRE ASSEMBLY, #18 YELLOW .....	1
4	N/A	WIRE ASSEMBLY, #18 BLUE .....	1
5	N/A	WIRE ASSEMBLY, #16 BLACK .....	1
6	N/A	WIRE ASSEMBLY, #16 BLACK .....	1
7	N/A	WIRE ASSEMBLY, #14 BLACK, #18 BLACK .....	1
8	N/A	WIRE ASSEMBLY, #18 RED .....	1
9	N/A	WIRE ASSEMBLY, #18 BROWN .....	1
10	N/A	WIRE ASSEMBLY, #14 YELLOW .....	1
11	N/A	WIRE ASSEMBLY, #18 BROWN .....	1
12	N/A	WIRE ASSEMBLY, #18 GREEN AND #18 YELLOW .....	1
13	N/A	WIRE ASSEMBLY, #16 RED AND #16 ORANGE .....	1
14	N/A	WIRE ASSEMBLY, #18 RED/WHITE .....	1
15	N/A	WIRE ASSEMBLY, #18 ORANGE .....	1
16	N/A	WIRE ASSEMBLY, #16 YELLOW .....	1
17	1016380	WIRE ASSEMBLY, # 6 BLACK .....	1
18	1015769	WIRE ASSEMBLY, # 6 WHITE .....	1
19	N/A	WIRE ASSEMBLY, #18 YELLOW .....	1
20	N/A	WIRE ASSEMBLY, #18 WHITE/BLACK .....	1
21	N/A	WIRE ASSEMBLY, #18 GREEN/WHITE AND #18 BLUE .....	1
22	N/A	WIRE ASSEMBLY, #18 YELLOW .....	1
23	N/A	WIRE ASSEMBLY, #18 WHITE .....	1
24	N/A	WIRE ASSEMBLY, #16 ORANGE/WHITE .....	1
25	N/A	WIRE ASSEMBLY, #16 BROWN .....	1
26	N/A	WIRE ASSEMBLY, #18 RED .....	1
27	N/A	WIRE ASSEMBLY, #16 RED/WHITE .....	1
28	N/A	WIRE ASSEMBLY, #16 ORANGE .....	1
29	N/A	WIRE ASSEMBLY, #18 BLUE .....	1
30	N/A	WIRE ASSEMBLY, #18 WHITE .....	1
31	1014119	WIRE ASSEMBLY, #6 RED .....	1
32	N/A	WIRE ASSEMBLY, #18 BLACK .....	1
33	N/A	WIRE ASSEMBLY, #18 BLACK (PART OF REVERSE BUZZER KIT) .....	2
34	1012382	WIRE ASSEMBLY, #6 BLACK .....	1
35	N/A	WIRE ASSEMBLY, #18 ORANGE (PART OF ELECTRICAL COMPONENT BOX) .....	1
36	N/A	WIRE ASSEMBLY, #18 BLACK .....	1
37	1015332	WIRE ASSEMBLY, #10 BRAIDED GROUND WIRE .....	1
38	1015737	WIRE ASSEMBLY, #10 RED (PART OF ELECTRICAL COMPONENT BOX) .....	1
39	101837301	WIRE ASSEMBLY, #6 GREEN .....	1

**6**  
**G**

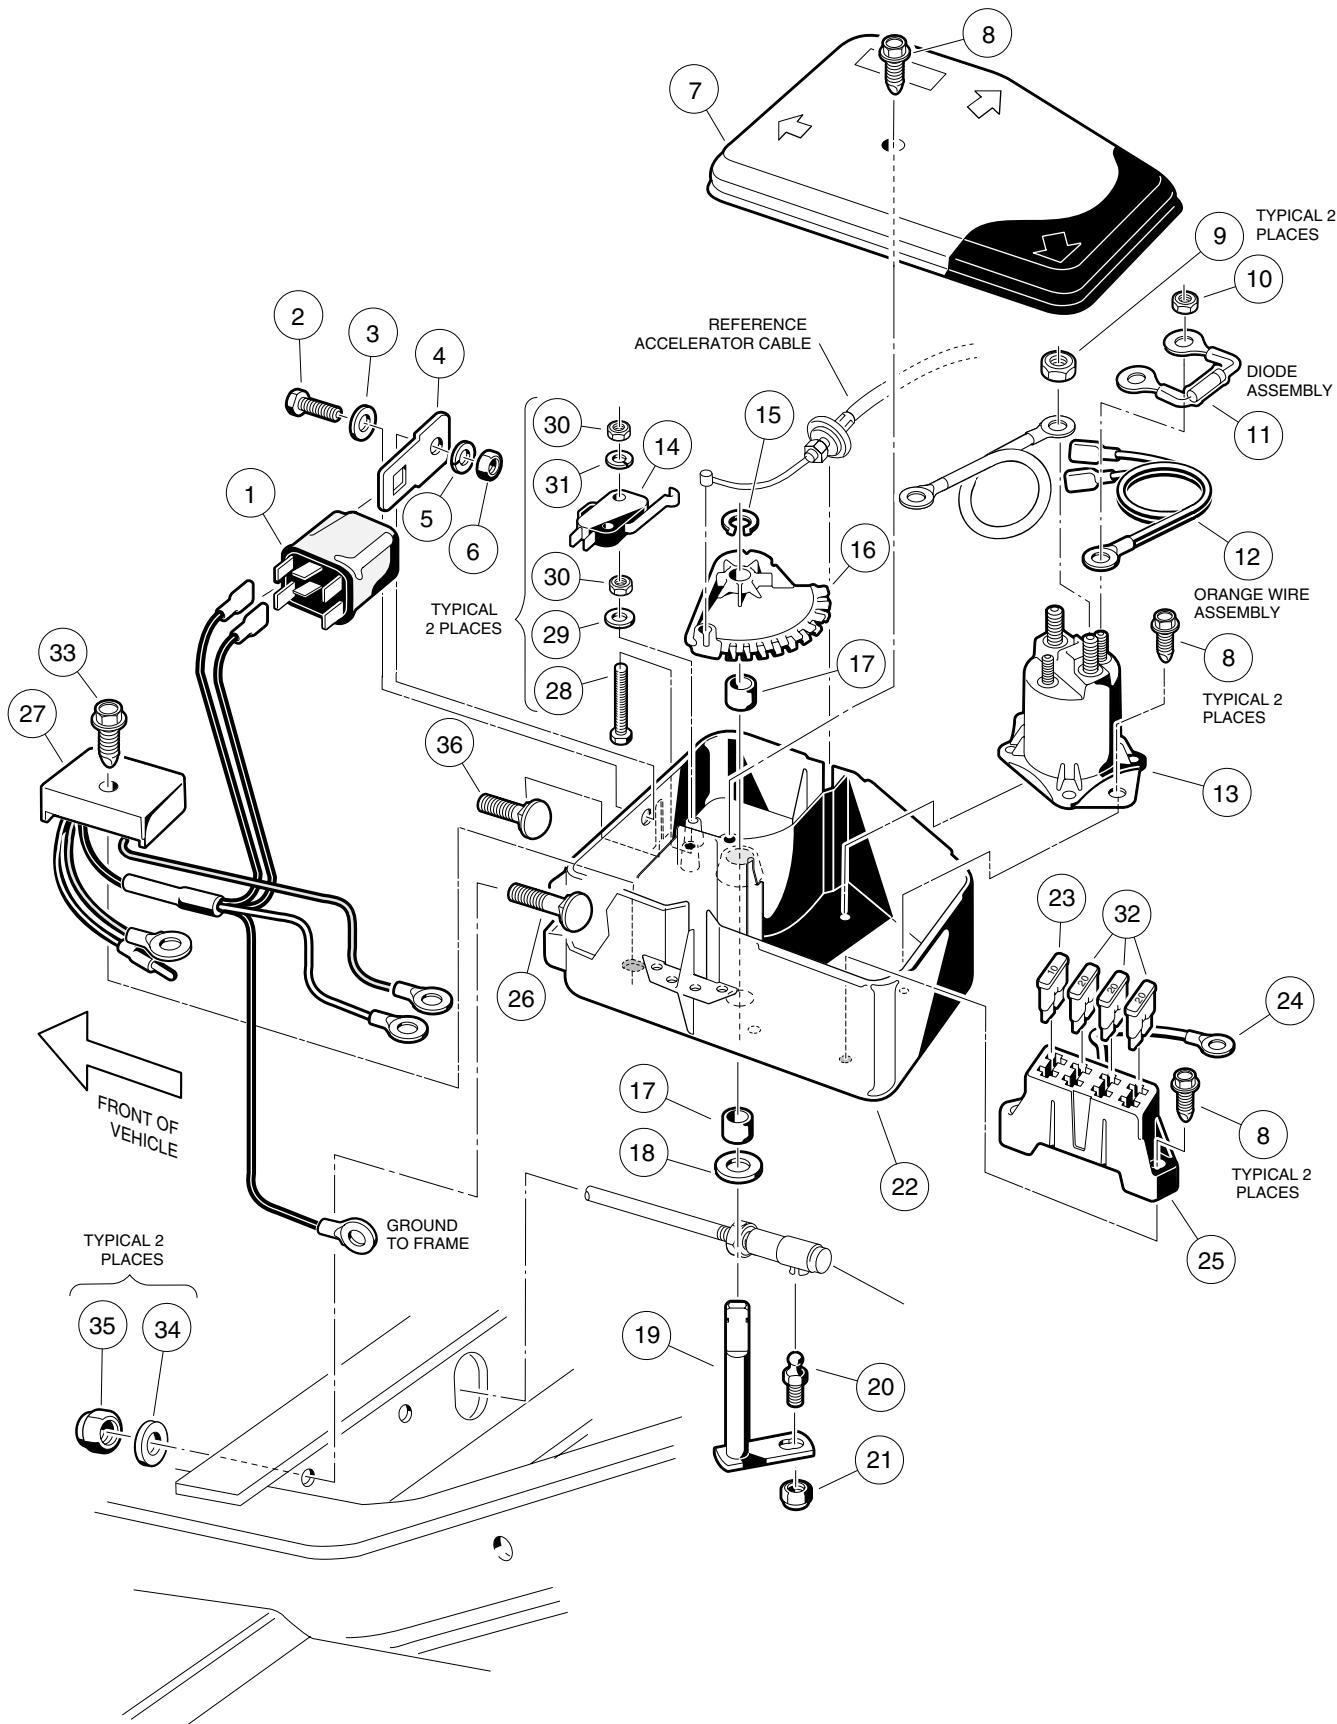


# ELECTRICAL COMPONENT BOX, GASOLINE VEHICLE— RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER

**6**

**G**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101992701	BOX, ELECTRICAL COMPONENT, COMPLETE (INCLUDES ITEMS 1 - 31) .....	1
1	1017239	RELAY .....	1
2	8450	SCREW, HEX HEAD MACHINE, #10 - 24 x 1/2 .....	1
3	183	WASHER, FLAT, #10 .....	1
4	1017243	BRACKET, RELAY MOUNTING .....	1
5	1016	WASHER, LOCK, #10 .....	1
6	1017	NUT, HEX, #10 - 24 .....	1
7	1015372	COVER, ELECTRICAL COMPONENT BOX .....	1
8	1015752	SCREW, HI-LO, #12 - 16 x 5/8 .....	5
9	1242	NUT, HEX, 5/16 - 18 .....	2
10	7893	NUT, HEX, #10 - 32 .....	2
11	1014948	ASSEMBLY, DIODE .....	1
12	N/A	WIRE ASSEMBLY, #18 ORANGE .....	1
13	1013609	SOLENOID .....	1
14	1014807	SWITCH, LIMIT .....	1
15	1013589	RING, RETAINING .....	1
16	1015373	CAM, ELECTRICAL BOX .....	1
17	1014145	BUSHING, BRONZE .....	2
18	1014065	WASHER, FLAT .....	1
19	1015345	ASSEMBLY, BELL CRANK AND SHAFT .....	1
20	1010954	STUD, BALL, 1/4 - 28 .....	1
21	8717	NUT, NYLON LOCK, 1/4 - 28 .....	1
22	1016997	BOX, ELECTRICAL COMPONENT .....	1
23	1012295	FUSE, 10-AMP .....	1
24	1015737	WIRE ASSEMBLY, #10 RED .....	1
25	1015741	BLOCK, FUSE .....	1
26	1015405	SCREW, ROUND-HEAD SQUARE-NECK, 5/16 - 18 x 2 .....	1
27	1017238	REGULATOR, VOLTAGE .....	1
28	1015878	SCREW, HEX HEAD MACHINE, #4 - 40 x 1-5/8 .....	2
29	1012431	WASHER, FLAT, #4 .....	2
30	8057	NUT, HEX, #4 - 40 .....	4
31	8058	WASHER, LOCK, #4 .....	2
32	1016423	FUSE, 20-AMP .....	3
33	101856102	SCREW, HEX WASHER HEAD HI-LO, 1/4 - 15 x 1-1/2 .....	1
34	1241	WASHER, FLAT, 5/16 .....	2
35	7473	NUT, NYLON LOCK, 5/16 - 18 .....	2
36	7818	SCREW, ROUND-HEAD SQUARE-NECK, 5/16 - 18 x 1-1/2 .....	1

**6**  
**G**

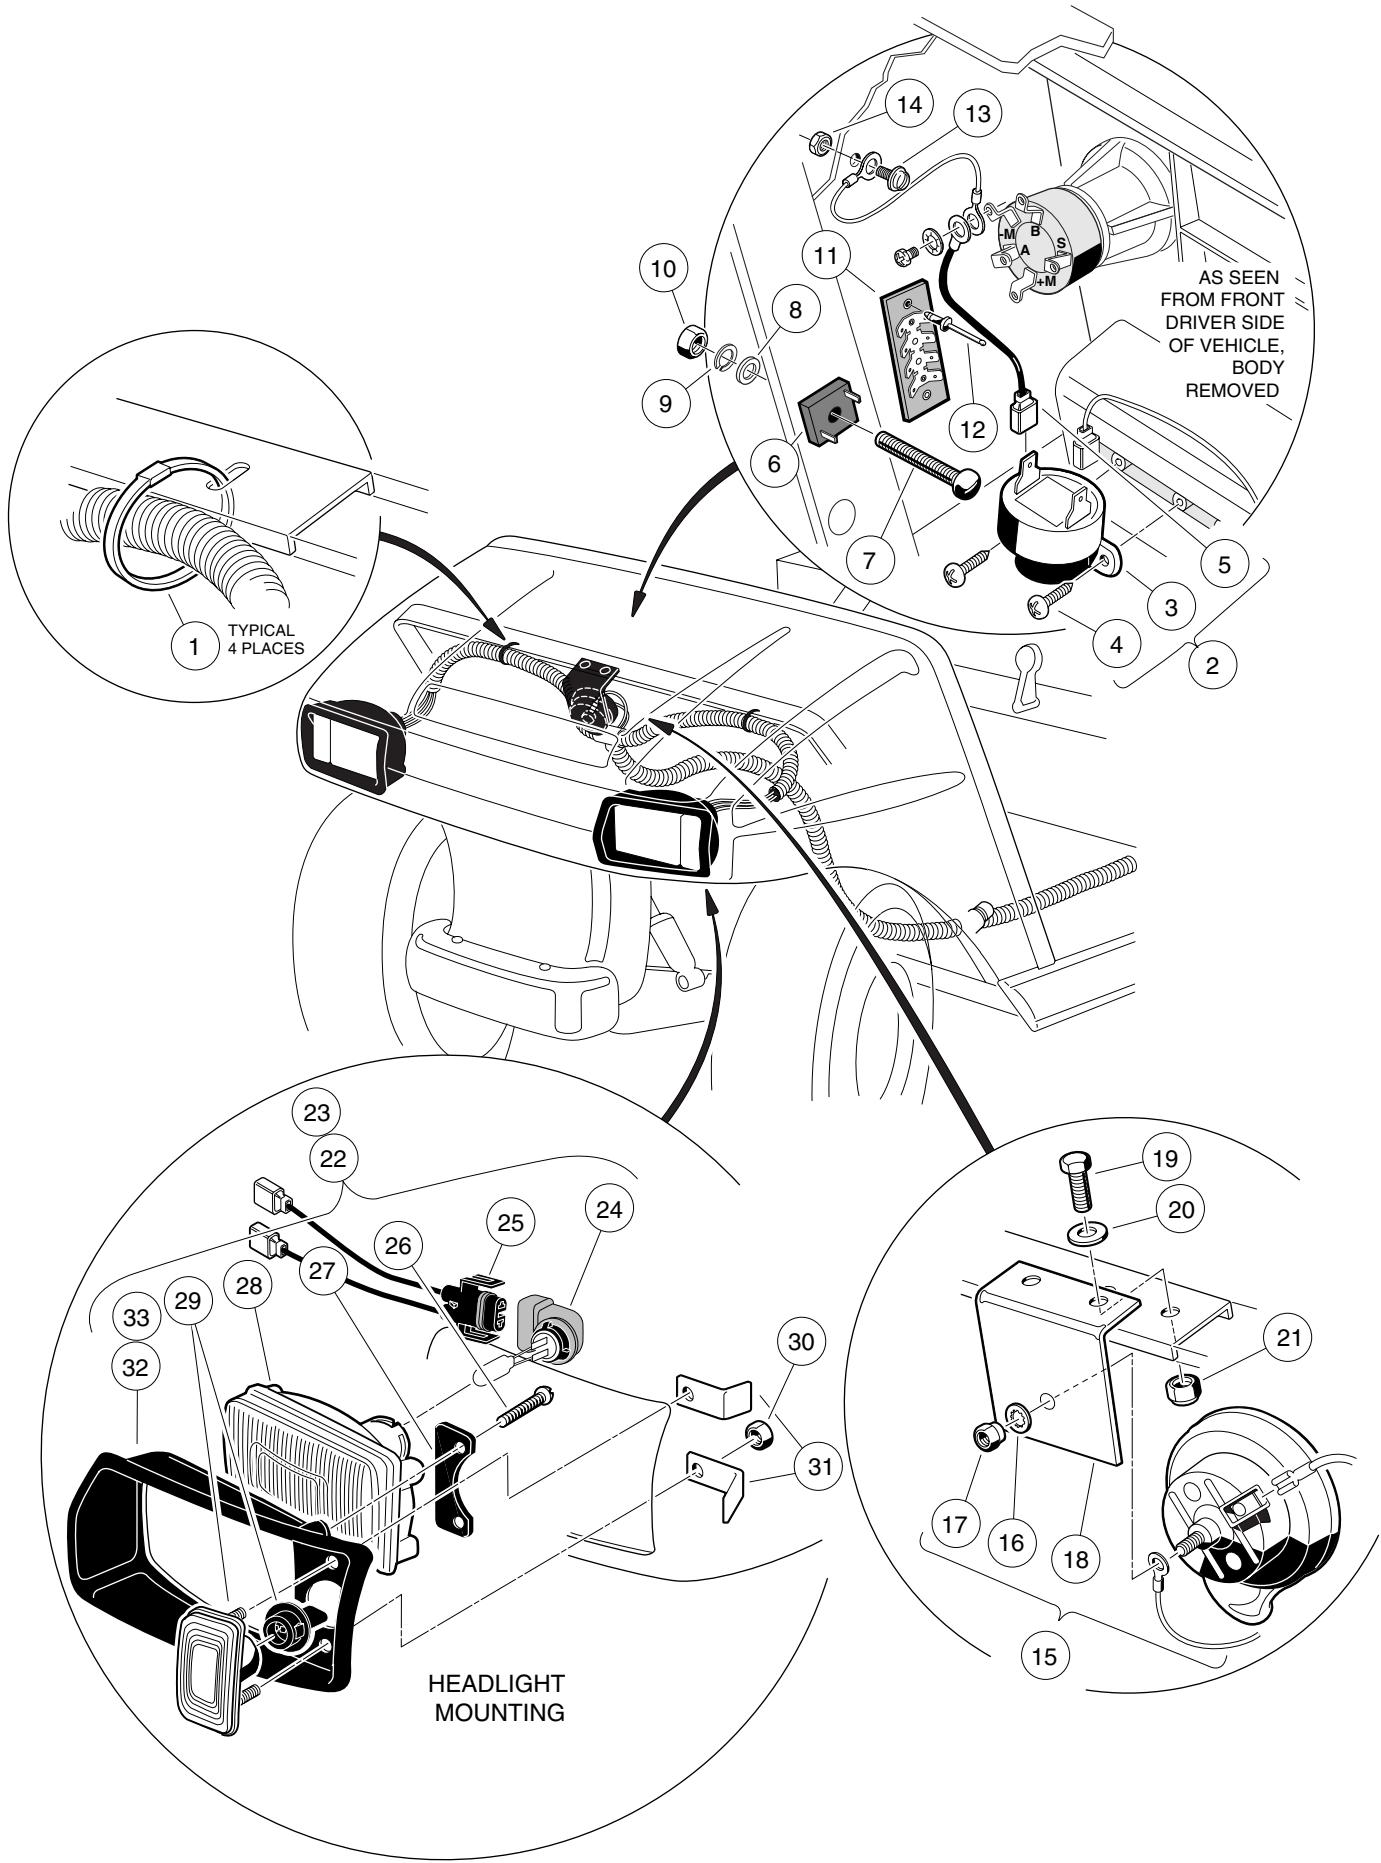


# ELECTRICAL COMPONENTS, FRONT BODY—GASOLINE RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	8639	TIE, WIRE .....	4
2	1016859	KIT, REVERSE BUZZER (INCLUDES ITEMS 3, 4 AND 5) .....	1
3	1016851	BUZZER, REVERSE .....	1
4	1016849	SCREW, PAN HEAD HILO, #4 - 24 x 5/16 .....	2
5	N/A	WIRE ASSEMBLY, #18 BLACK .....	1
6	1017721	LIMITER, VOLTAGE (FOR GASOLINE VEHICLE LIGHTING INSTALLATION) .....	1
7	1010909	SCREW, MACHINE, #10 - 32 x 1-1/4 .....	1
8	183	WASHER, FLAT, #10 .....	1
9	1016	WASHER, LOCK, #10 .....	1
10	7893	NUT, HEX, #10 - 32 .....	1
11	1016356	BLOCK, TERMINAL .....	1
12	1013357	RIVET, ALUMINUM POP, 5/32 .....	2
13	1015720	SCREW, HEX WASHER HEAD, #6 - 32 x 1/2 .....	1
14	1011229	NUT, K-LOCK, #6 - 32 .....	1
15	4029	ASSEMBLY, HORN (INCLUDES ITEMS 16, 17 AND 18) .....	1
16	7820	WASHER, INTERNAL TOOTH, 5/16 .....	1
17	101955101	NUT, M6 x 1.25 .....	1
18	1011825	BRACKET, HORN .....	1
19	304	SCREW, HEX HEAD CAP, 1/4 - 20 x 1 .....	2
20	332	WASHER, FLAT, 1/4 .....	2
21	8233	NUT, NYLON LOCK, 1/4 - 20 .....	2
22	101988001	ASSEMBLY, HEADLIGHT, DRIVER SIDE (INCLUDES ITEMS 24 - 32) .....	1
23	101988002	ASSEMBLY, HEADLIGHT, PASSENGER SIDE (INCLUDES ITEMS 24 - 31 AND 33) .....	1
24	101988101	BULB, HALOGEN .....	1
25	101987901	HARNESS, HEADLIGHT WIRE .....	1
26	1013461	SCREW, HI-LO, #10 - 16 x 7/16 .....	2
27	1017065	RETAINER, HEADLIGHT .....	1
28	101988201	LENS, HEADLIGHT .....	1
29	1017062	ASSEMBLY, TURN SIGNAL LENS .....	1
30	7893	NUT, HEX, #10 - 32 .....	2
31	1017064	BRACKET, MOUNTING .....	2
32	1016880	BEZEL, HEADLIGHT, DRIVER SIDE .....	1
33	1016879	BEZEL, HEADLIGHT, PASSENGER SIDE .....	1

6

G

**6**  
**G**

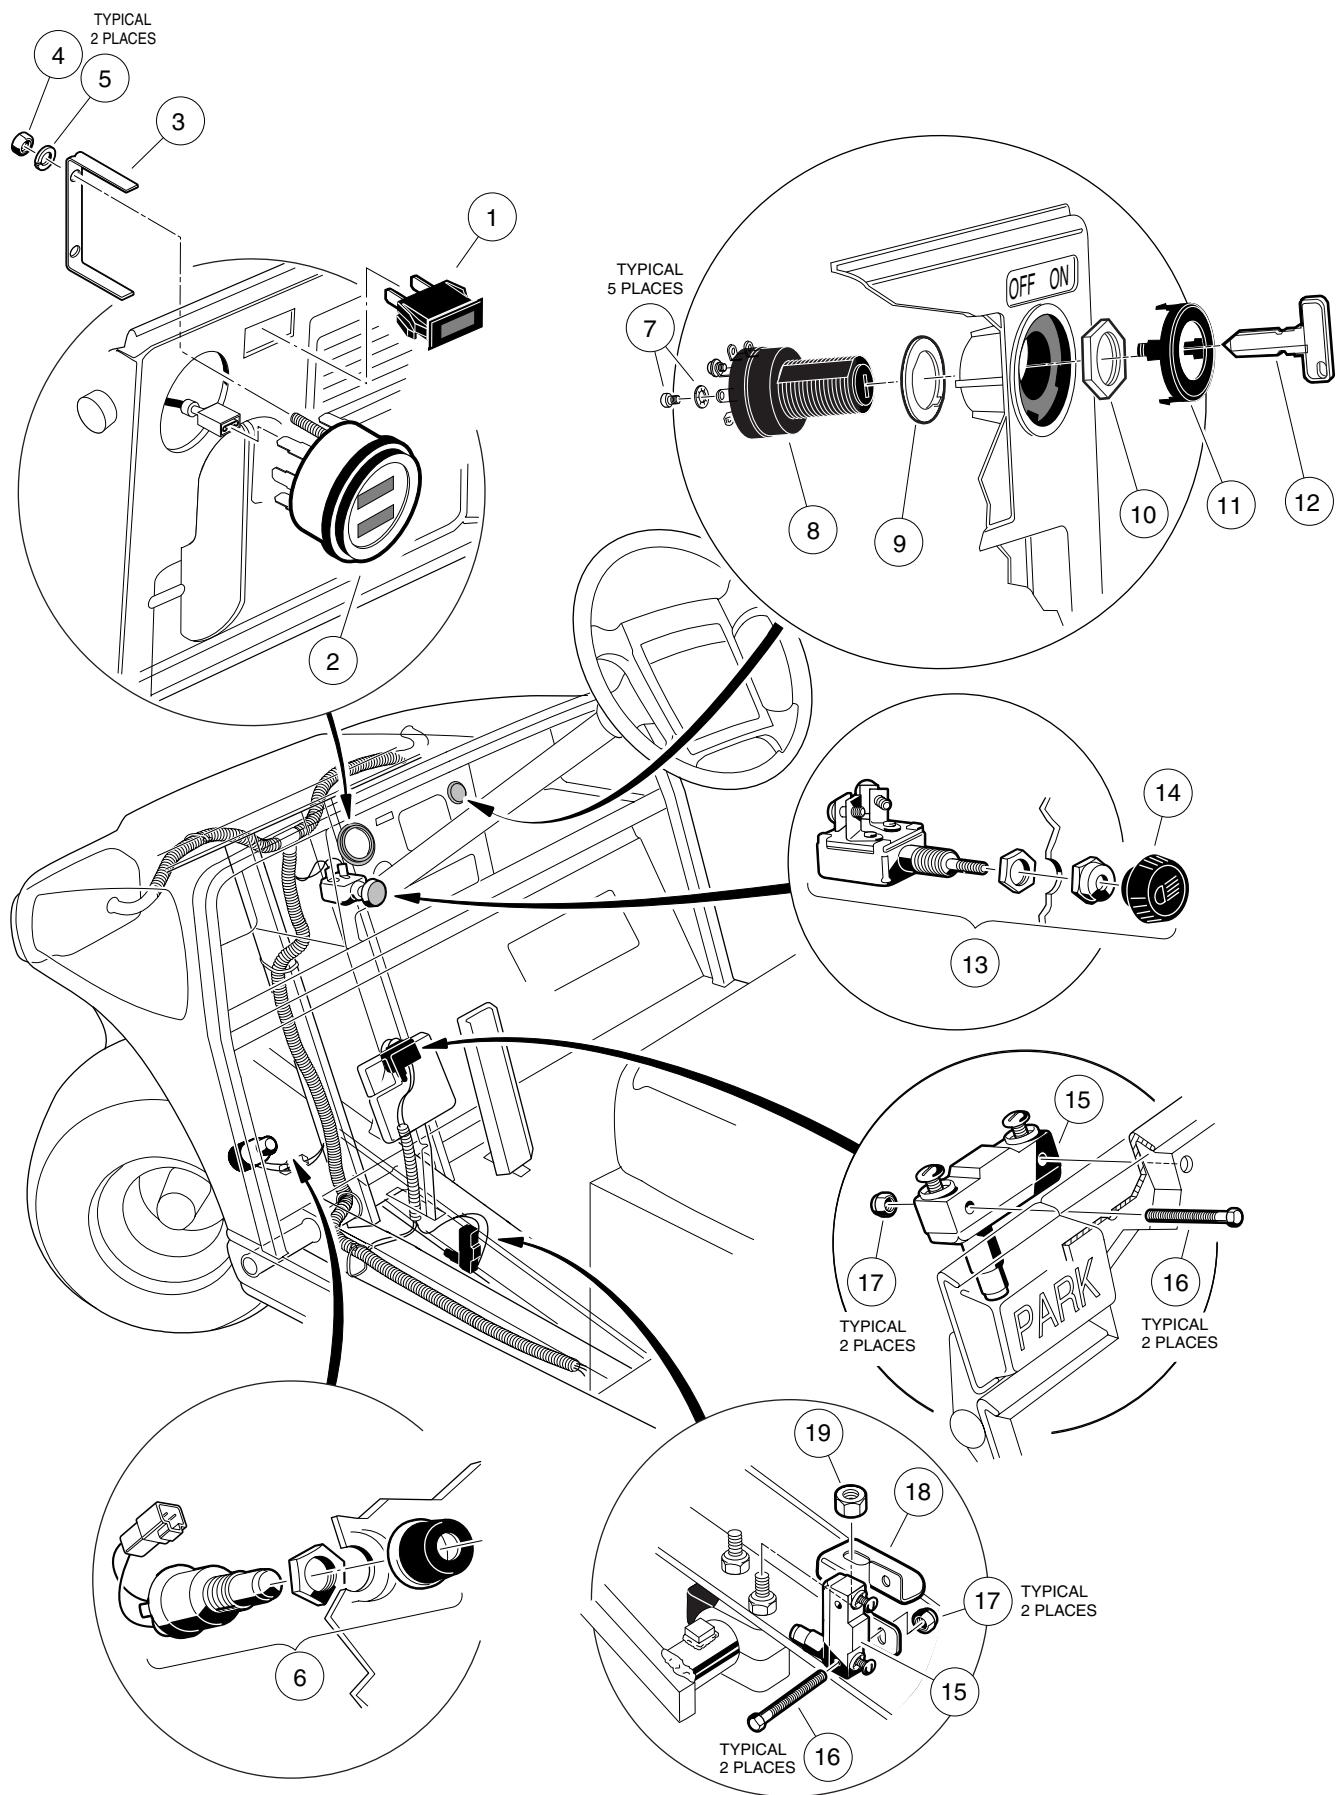


**CONTROLS AND GAUGES—GASOLINE**  
**RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016630	LIGHT, OIL WARNING .....	1
2	101990701	GAUGE, FUEL/HOUR .....	1
3	102025901	BRACKET .....	1
4	101991101	NUT, M4 X .7 .....	2
5	1012986	WASHER, LOCK, M4 .....	2
6	101969701	BUTTON, HORN .....	1
7	101830601	ASSEMBLY, SCREW AND WASHER .....	5
8	101826401	SWITCH, KEY .....	1
9	101851101	WASHER, KEY SWITCH .....	1
10	101830701	NUT, KEY SWITCH .....	1
11	101834502	CAP, KEY SWITCH .....	1
12	1012505	KEY (PAIR) .....	1
13	4034	SWITCH, LIGHT (INCLUDES ITEM 14) .....	1
14	1013857	KNOB, LIGHT SWITCH .....	1
15	1011439	SWITCH, LIMIT .....	2
16	1011557	SCREW, HEX HEAD MACHINE, #6 - 32 x 1 .....	4
17	101932201	NUT, NYLON LOCK, #6 - 32 .....	4
18	101957101	BRACKET, BRAKE LIGHT SWITCH .....	1
19	1011280	NUT, LOCK, 5/16 - 18 .....	1

6

G

**6**  
**G**

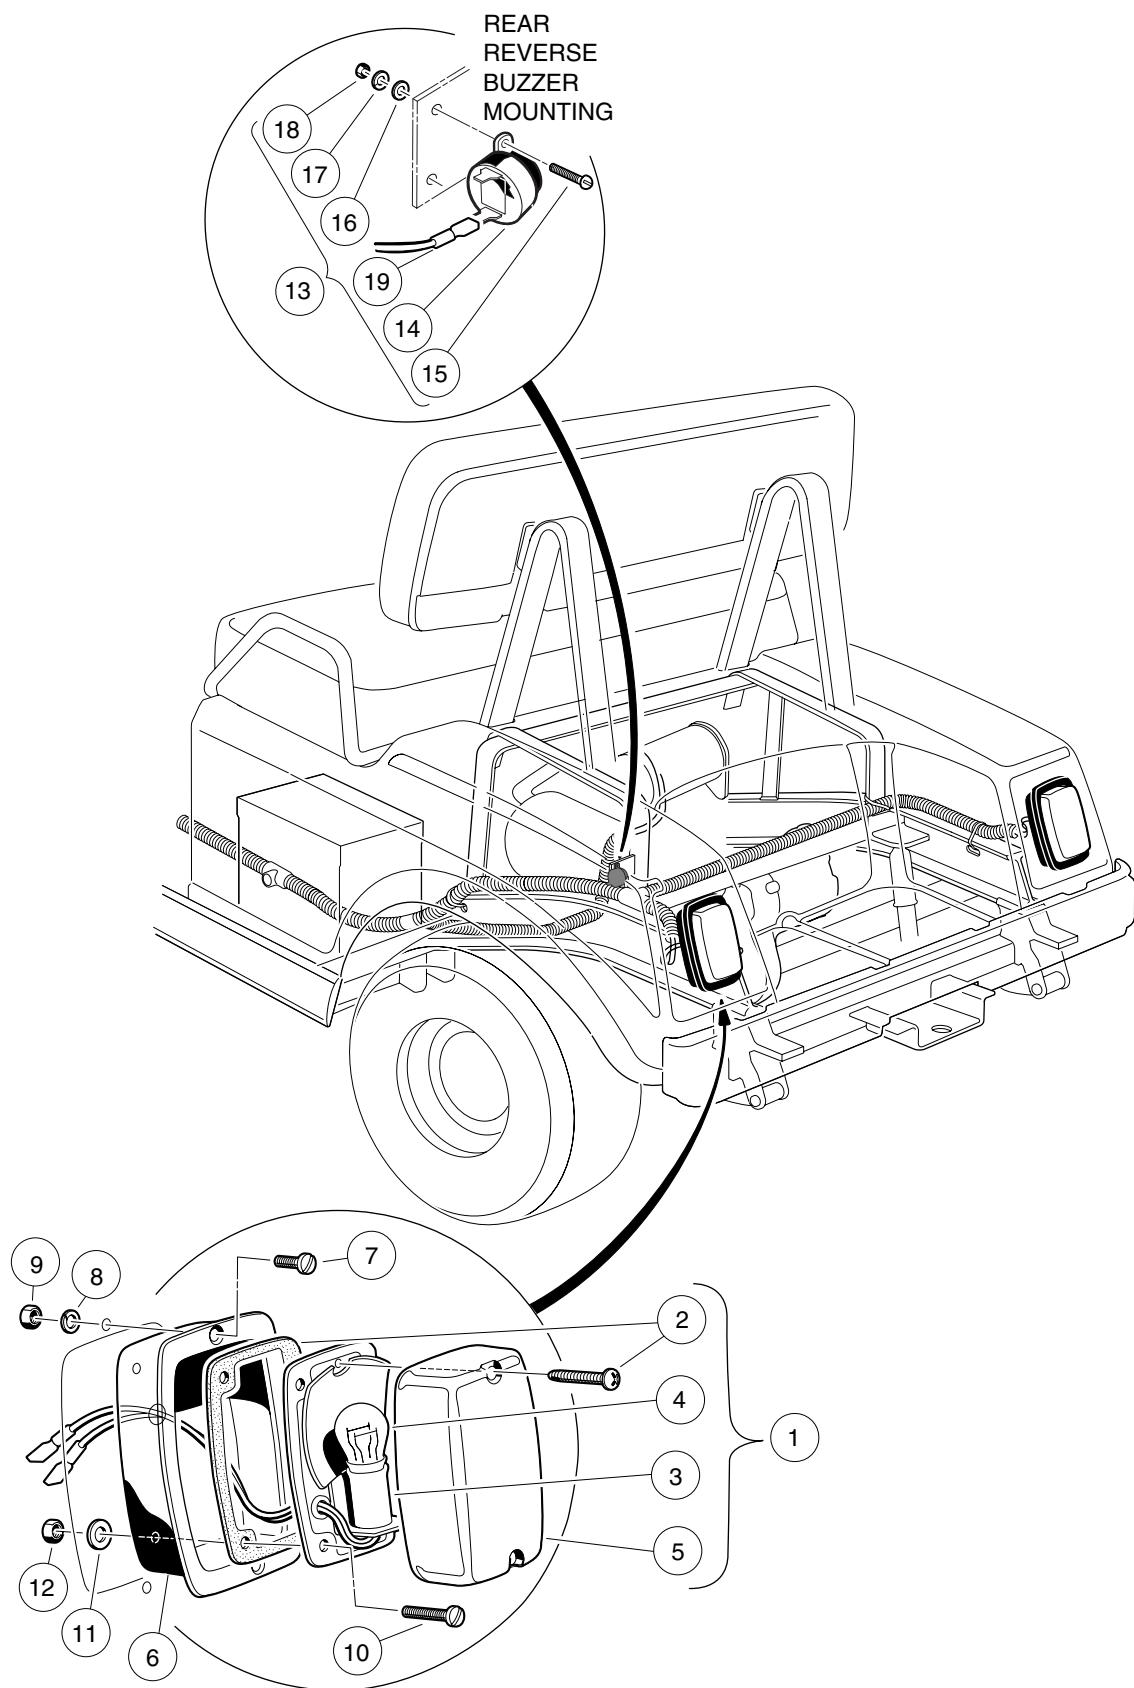


# ELECTRICAL COMPONENTS, REAR BODY—GASOLINE RESORT VILLAGER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1017035	ASSEMBLY, TAILLIGHT (INCLUDES ITEMS 2 - 5) .....	2
2	1017699	KIT, HARDWARE .....	1
3	N/A	BASE, TAILLIGHT .....	1
4	1011582	BULB .....	1
5	1011843	LENS .....	1
6	1011497	BEZEL, TAILLIGHT .....	2
7	1011498	SCREW, MACHINE, #8 - 32 x 1/2 .....	4
8	1011610	WASHER, LOCK, #8 .....	4
9	1011571	NUT, HEX, #8 - 32 .....	4
10	1011557	SCREW, MACHINE, #6 - 32 x 1 .....	4
11	7591	WASHER, FLAT, #6 .....	4
12	1011558	NUT, HEX, #6 .....	6
13	1016859	KIT, REVERSE BUZZER (INCLUDES ITEMS 14 - 19) .....	1
14	1016851	BUZZER, REVERSE .....	1
15	8056	SCREW, ROUND HEAD, #4 - 40 x 3/4 .....	2
16	1012431	WASHER, FLAT, #4 .....	2
17	8058	WASHER, LOCK, #4 .....	2
18	8057	NUT, HEX, #4-40 .....	2
19	N/A	WIRE ASSEMBLY, #18 BLACK .....	1

6

G

**6**  
**G**

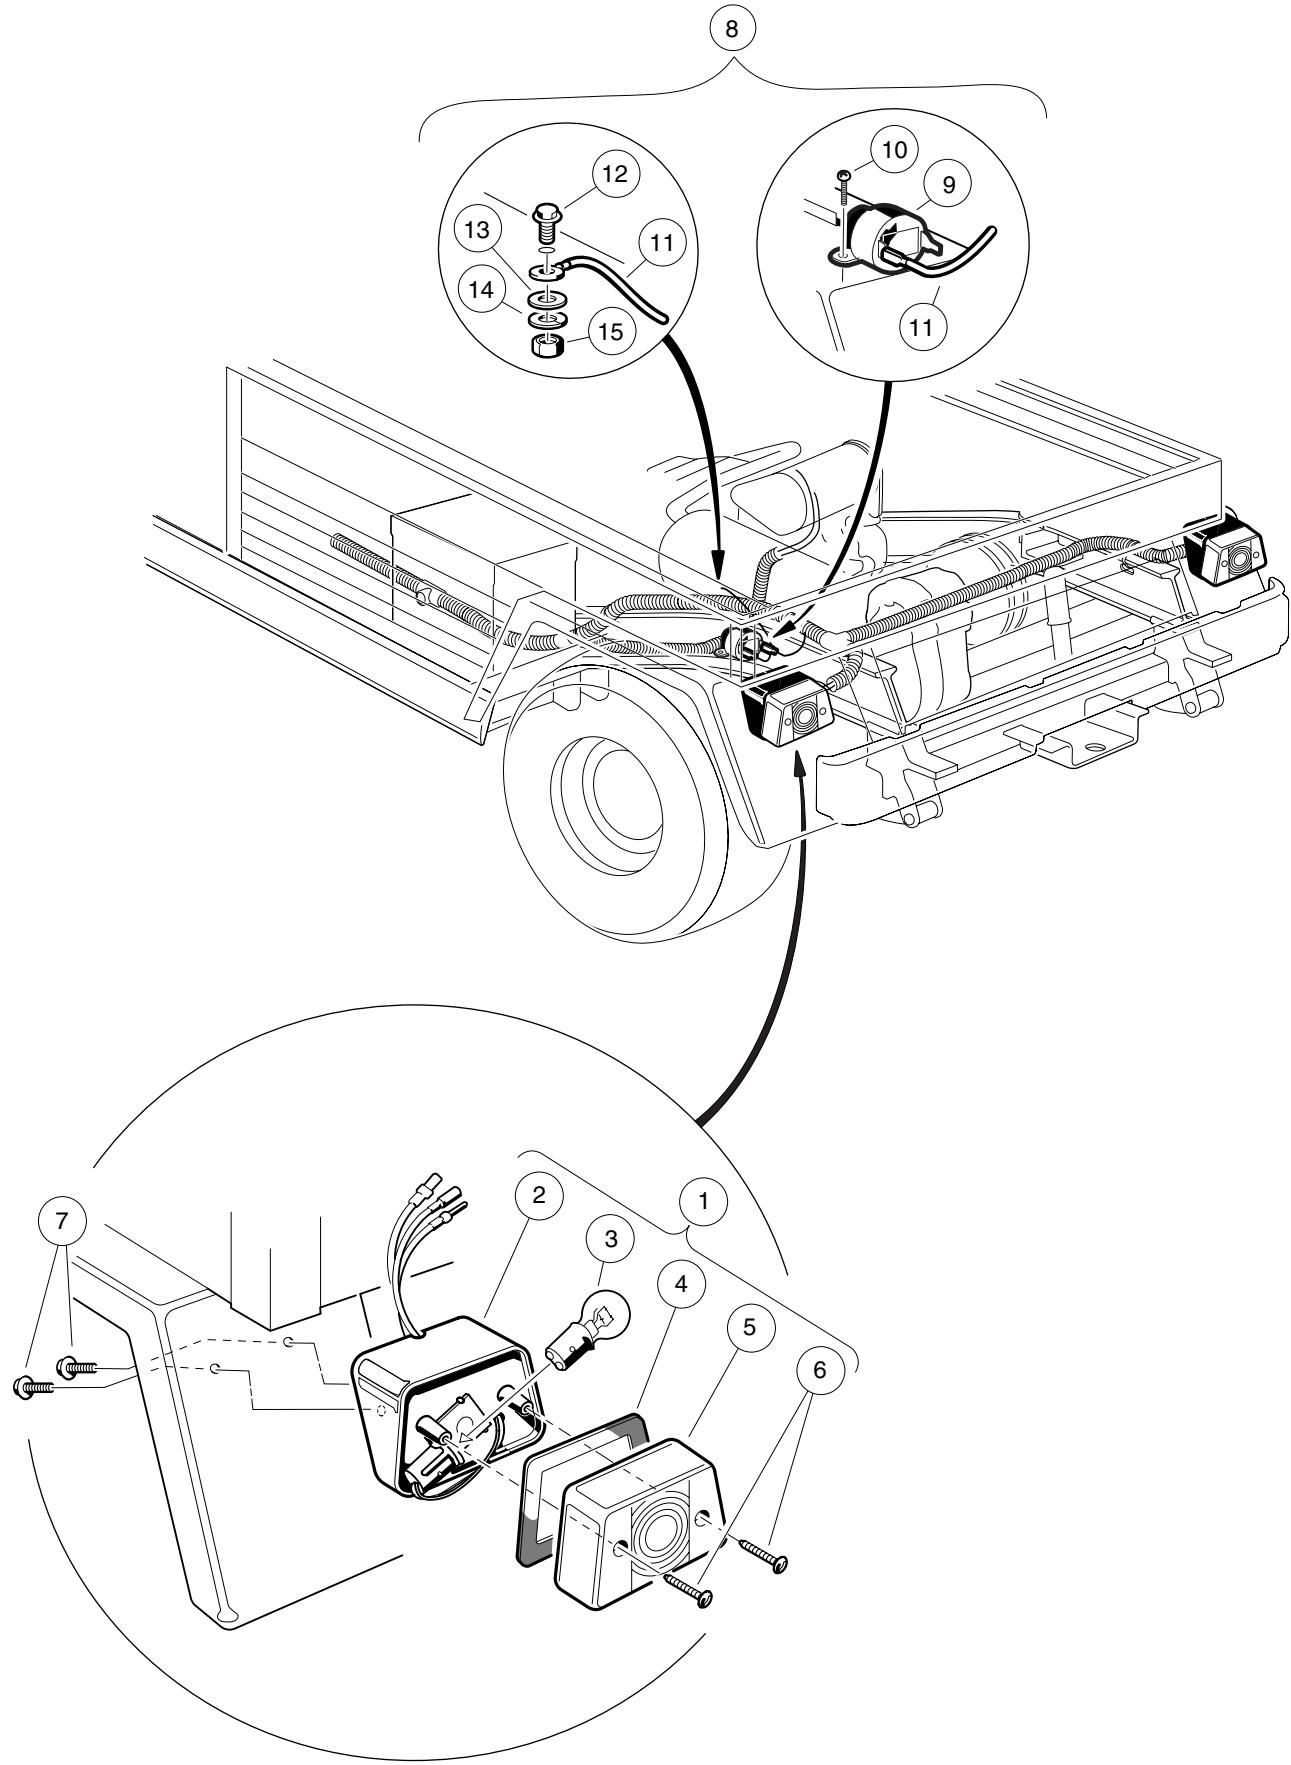


# ELECTRICAL COMPONENTS, REAR BODY—GASOLINE TRANS-PORTER/ TRANS-SENDER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016717	ASSEMBLY, TAILLIGHT (INCLUDES ITEMS 2 - 6) .....	2
2	N/A	HOUSING, TAILLIGHT.....	1
3	1011582	BULB .....	1
4	N/A	GASKET .....	1
5	N/A	LENS .....	1
6	N/A	SCREW, LENS .....	2
7	1015752	SCREW, HEX WASHER HEAD, #12 - 16 x 1/2 .....	4
8	1016859	KIT, REVERSE BUZZER (INCLUDES ITEMS 9 - 15) .....	1
9	1016851	BUZZER, REVERSE .....	1
10	1016849	SCREW, PAN HEAD HILO, #4 - 24 x 5/16 .....	2
11	N/A	WIRE ASSEMBLY, #18 BLACK .....	1
12	1015720	SCREW, HEX WASHER HEAD, #6 - 32 x 1/2 .....	1
13	7591	WASHER, FLAT .....	1
14	1011622	WASHER, LOCK, #6 .....	1
15	1011558	NUT, HEX, #6 - 32 .....	1

6

G

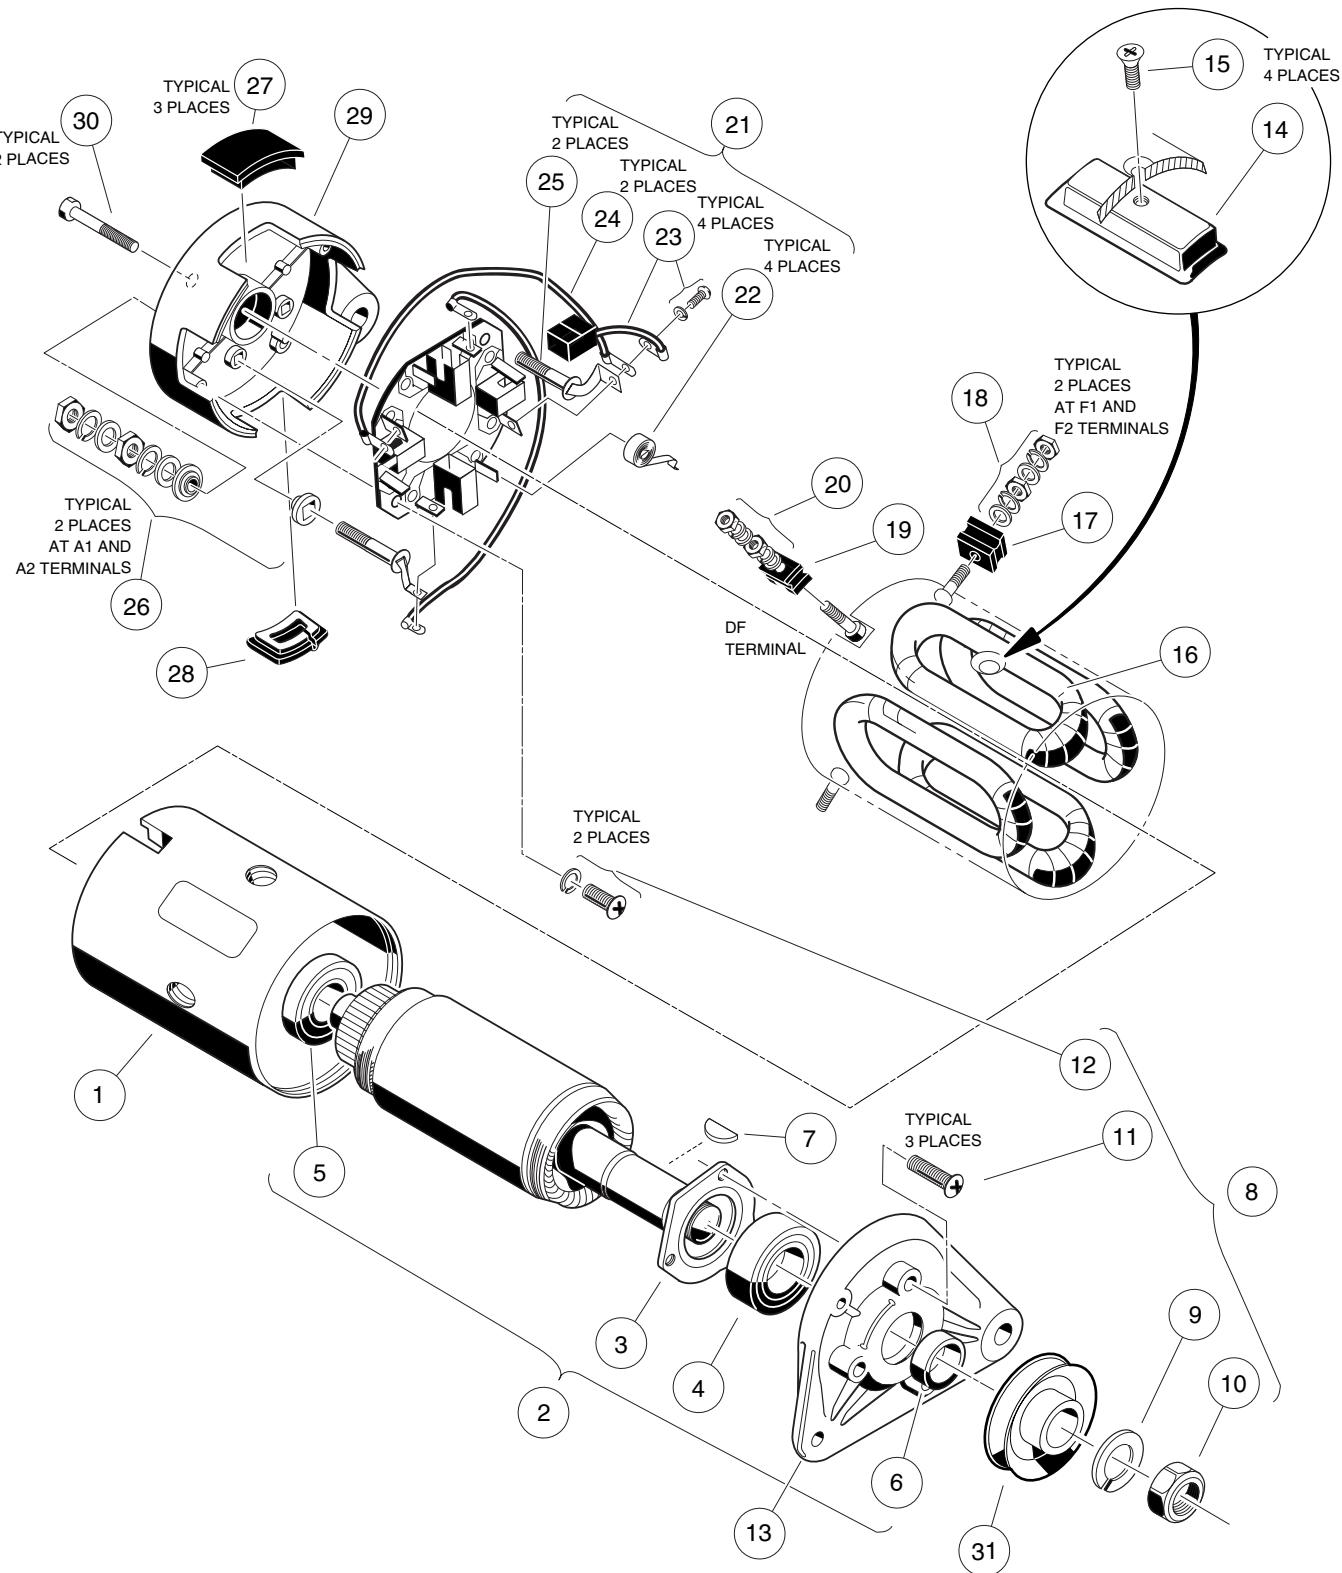**6****G**


# STARTER/GENERATOR ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	101833701	STARTER/GENERATOR (CLOCKWISE ROTATION) (INCLUDES ITEMS 1 - 30) .....	1
1	101875201	HOUSING, FIELD COIL .....	1
2	101875101	ASSEMBLY, ARMATURE (INCLUDES ITEMS 3 - 6) .....	1
3	101875001	RETAINER, BEARING .....	1
4	1013001	BALL BEARING (OUTPUT SHAFT END) .....	1
5	1013005	BALL BEARING (COMMUTATOR END) .....	1
6	101939901	SPACER, 5/16 .....	1
7	1013003	KEY, WOODRUFF .....	1
8	101876501	KIT, PULLEY NUT AND SCREW (INCLUDES ITEMS 9 - 12) .....	1
9	N/A	WASHER, LOCK, M14 .....	1
10	N/A	NUT, HEX, M14 x 2 .....	1
11	N/A	SCREW, CROSS - RECESSED, M5 x .8 x 18MM .....	3
12	101896501	SCREW, CROSS - RECESSED, M5 x .8 x 16MM (WITH LOCK WASHER) .....	2
13	101874901	END BELL (OUTPUT SHAFT END) .....	1
14	101875301	SET, POLE (SET OF 4) .....	1
15	101875401	SCREW, POLE PIECE (SET OF 4) .....	1
16	101875501	ASSEMBLY, FIELD COIL .....	1
17	101875601	INSULATOR, F TERMINAL .....	2
18	101877601	PACKAGE, TERMINAL HARDWARE (F1 AND F2) .....	2
19	101875701	INSULATOR, DF TERMINAL .....	1
20	101877701	PACKAGE, TERMINAL HARDWARE (DF) .....	1
21	101301102	HOLDER, BRUSH (INCLUDES ITEMS 22 - 25) .....	1
22	101878101	SPRING, BRUSH .....	4
23	101869302	PACKAGE, BRUSH (INCLUDES 4 BRUSHES, 4 SCREWS, 4 WASHERS) .....	1
24	101876202	ASSEMBLY, BRUSH CONNECTOR .....	2
25	101875802	A CONNECTOR (SET OF 2) .....	1
26	101876001	PACKAGE, TERMINAL HARDWARE (A1 AND A2) .....	2
27	101876301	COVER, BRUSH INSPECTION PORT (SET OF 4) (INCLUDES ITEM 28) .....	1
28	1017653	COVER, BRUSH INSPECTION PORT, WITH DRAIN .....	1
29	101876402	END BELL (COMMUTATOR END) .....	1
30	101879001	BOLT, CLAMP, M6 x 1 x 180MM .....	2
31	1014289	PULLEY .....	1

6

G

**6**  
**G**

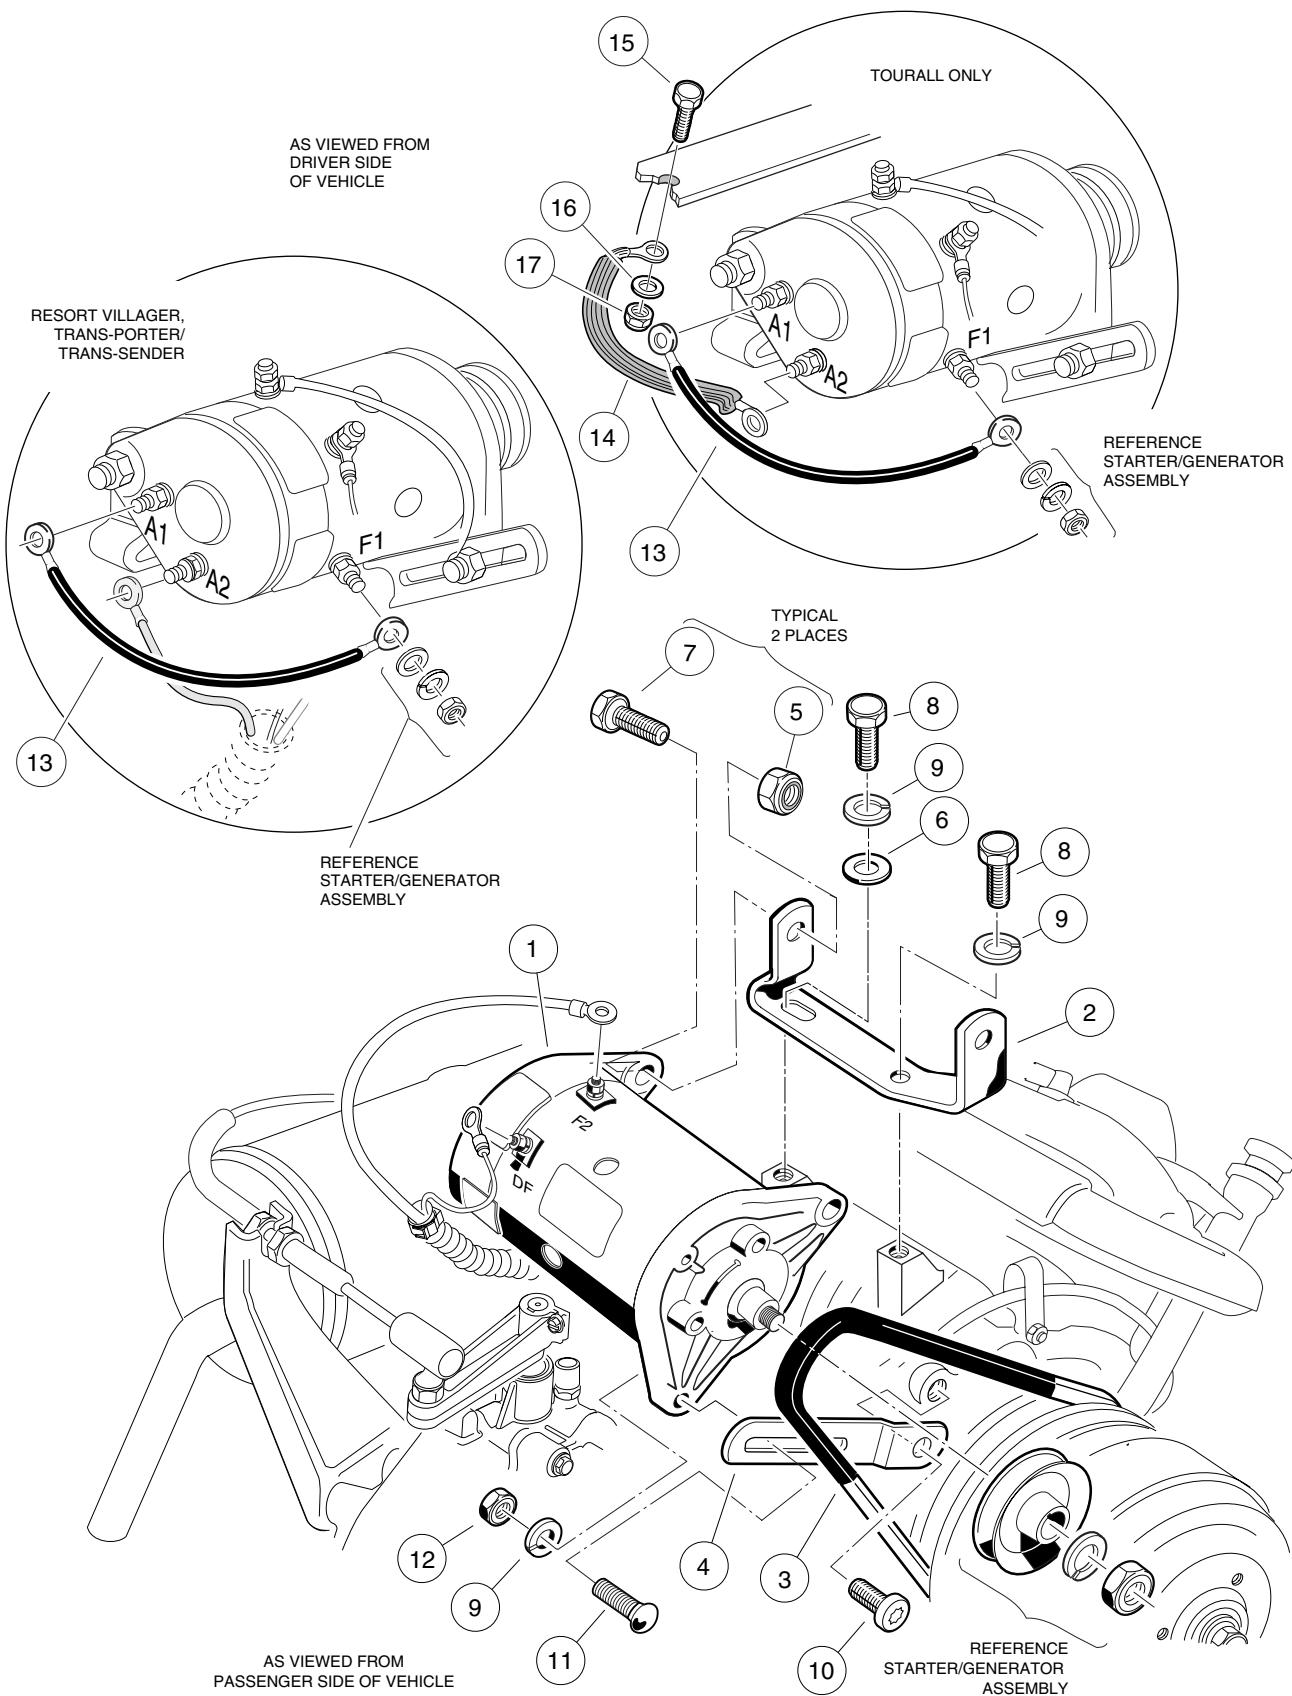


# STARTER/GENERATOR MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101833701	STARTER/GENERATOR .....	1
2	101524001	BRACKET, MOUNTING, FE 290 (TOURALL ONLY).....	1
2	101524002	BRACKET, MOUNTING, FE 350 (RESORT VILLAGER AND TRANS-PORTER/TRANS-SENDER ONLY) .....	1
3	101916701	BELT, STARTER/GENERATOR .....	1
4	1016883	BRACKET, ADJUSTING .....	1
5	8754	NUT, NYLON LOCK, 3/8 - 16 .....	2
6	1015075	WASHER, FLAT, 5/16 .....	1
7	705	SCREW, HEX HEAD CAP, 3/8 - 16 x 1-1/4 .....	2
8	1012830	SCREW, HEX HEAD CAP, M8 x 1.25 x 22MM .....	2
9	7174	WASHER, LOCK, 5/16 .....	3
10	1016074	SCREW, TORX HEAD, M8 x 1.25 x 18MM .....	1
11	1015932	SCREW, ROUND-HEAD SQUARE-NECK, 5/16 - 18 x 1 .....	1
12	1242	NUT, HEX, 5/16 - 18 .....	1
13	101837301	WIRE ASSEMBLY, #6 GREEN .....	1
14	1015920	WIRE ASSEMBLY, #6 BRAIDED GROUND (TOURALL ONLY) .....	1
15	7173	SCREW, HEX HEAD CAP, 5/16 - 18 x 3/4 (TOURALL ONLY) .....	1
16	7473	NUT, NYLON LOCK, 5/16 - 18 (TOURALL ONLY) .....	1
17	1241	WASHER, FLAT, 5/16 (TOURALL ONLY) .....	1

6

G

**6**  
**G**

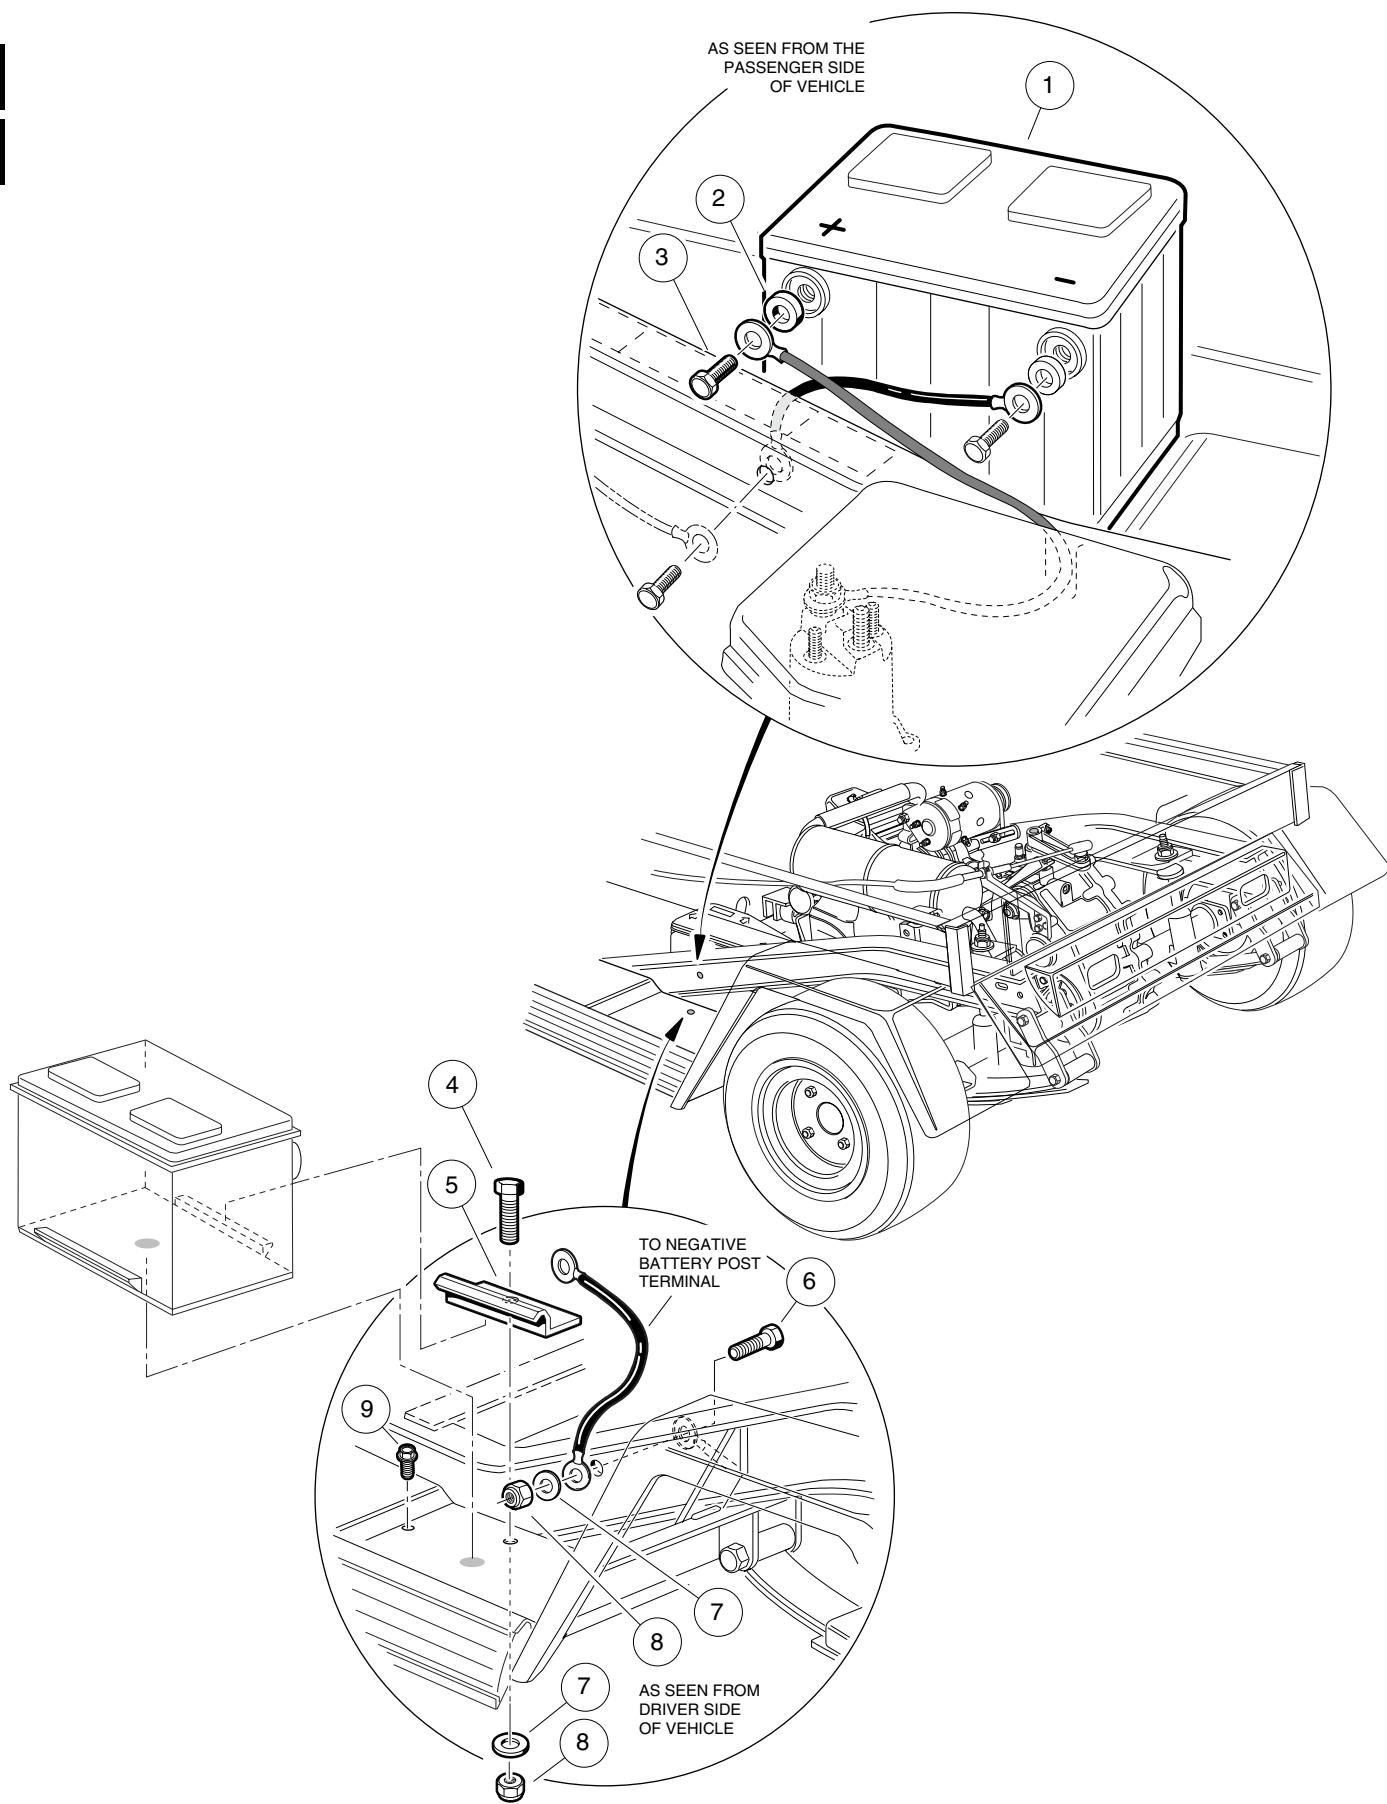

# BATTERY-GASOLINE VEHICLE

6

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1012328	BATTERY, 12-VOLT .....	1
2	1014374	SPACER, BATTERY TERMINAL BOLT .....	2
3	1014375	SCREW, HEX HEAD CAP, STAINLESS STEEL, 3/8 - 16 x 1/2 .....	2
4	1010934	SCREW, HEX HEAD CAP, 5/16 - 18 x 1 .....	1
5	101898001	CLAMP, BATTERY .....	1
6	7173	SCREW, HEX HEAD CAP, 5/16 - 18 x 3/4 .....	1
7	241	WASHER, FLAT, 5/16 .....	2
8	7473	NUT, NYLON LOCK, 5/16 - 18 .....	2
9	1014288	SCREW, THREAD-FORMING, 5/16 - 16 x 3/4 .....	1




# ENGINE

---

7

G

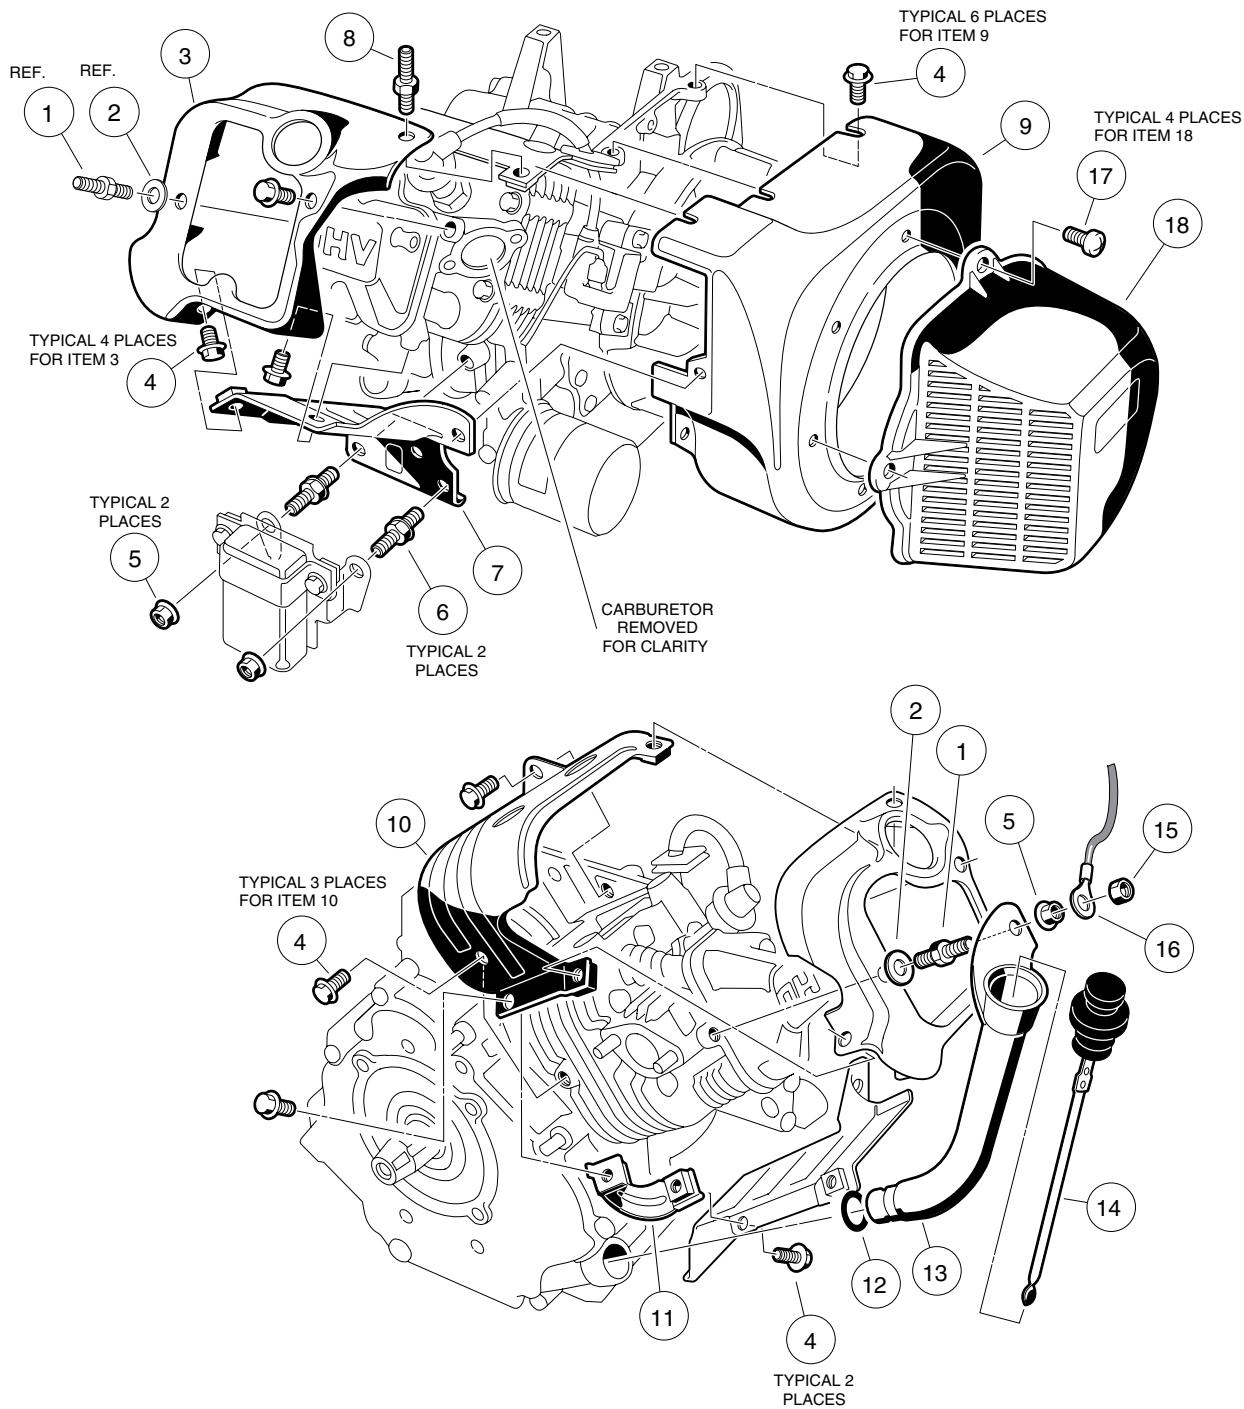


# FE290 ENGINE– SHROUDS AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	101953901	FE290 OHV GASOLINE ENGINE (CLOCKWISE ROTATION) WITH CARBURETOR (DOES NOT INCLUDE ITEMS 15 THROUGH 18)	1
1	1016507	BOLT, 2-ENDED, M6 x 1 x 29MM	1
2	1016512	WASHER, FLAT, 6MM	1
3	1016524	SHROUD, ENGINE, FE290	1
4	1016456	BOLT, FLANGED, M6 x 1 x 12MM	15
5	1016547	NUT, FLANGE, M6 x 1	3
6	101909701	BOLT, 2-ENDED, M6 x 1 x 27MM	2
7	1016526	SHROUD, ENGINE, FE290 (LOWER)	1
8	1017221	BOLT, 2-ENDED, M6 x 1 x 46MM	1
9	101915601	HOUSING, FAN	1
10	1016525	SHROUD, ENGINE, FE290 (UPPER)	1
11	1016443	BRACKET	1
12	1016539	O-RING	1
13	1016536	TUBE, OIL FILLER, FE290	1
14	1016531	DIPSTICK	1
15	101887601	NUT, NYLON LOCK, M6 x1	1
16	1015332	WIRE ASSEMBLY, #10 BRAIDED GROUND	1
17	1015969	SCREW, PAN HEAD, M6 x 1 x 14MM	4
18	1015649	SHROUD, FAN	1

7

G

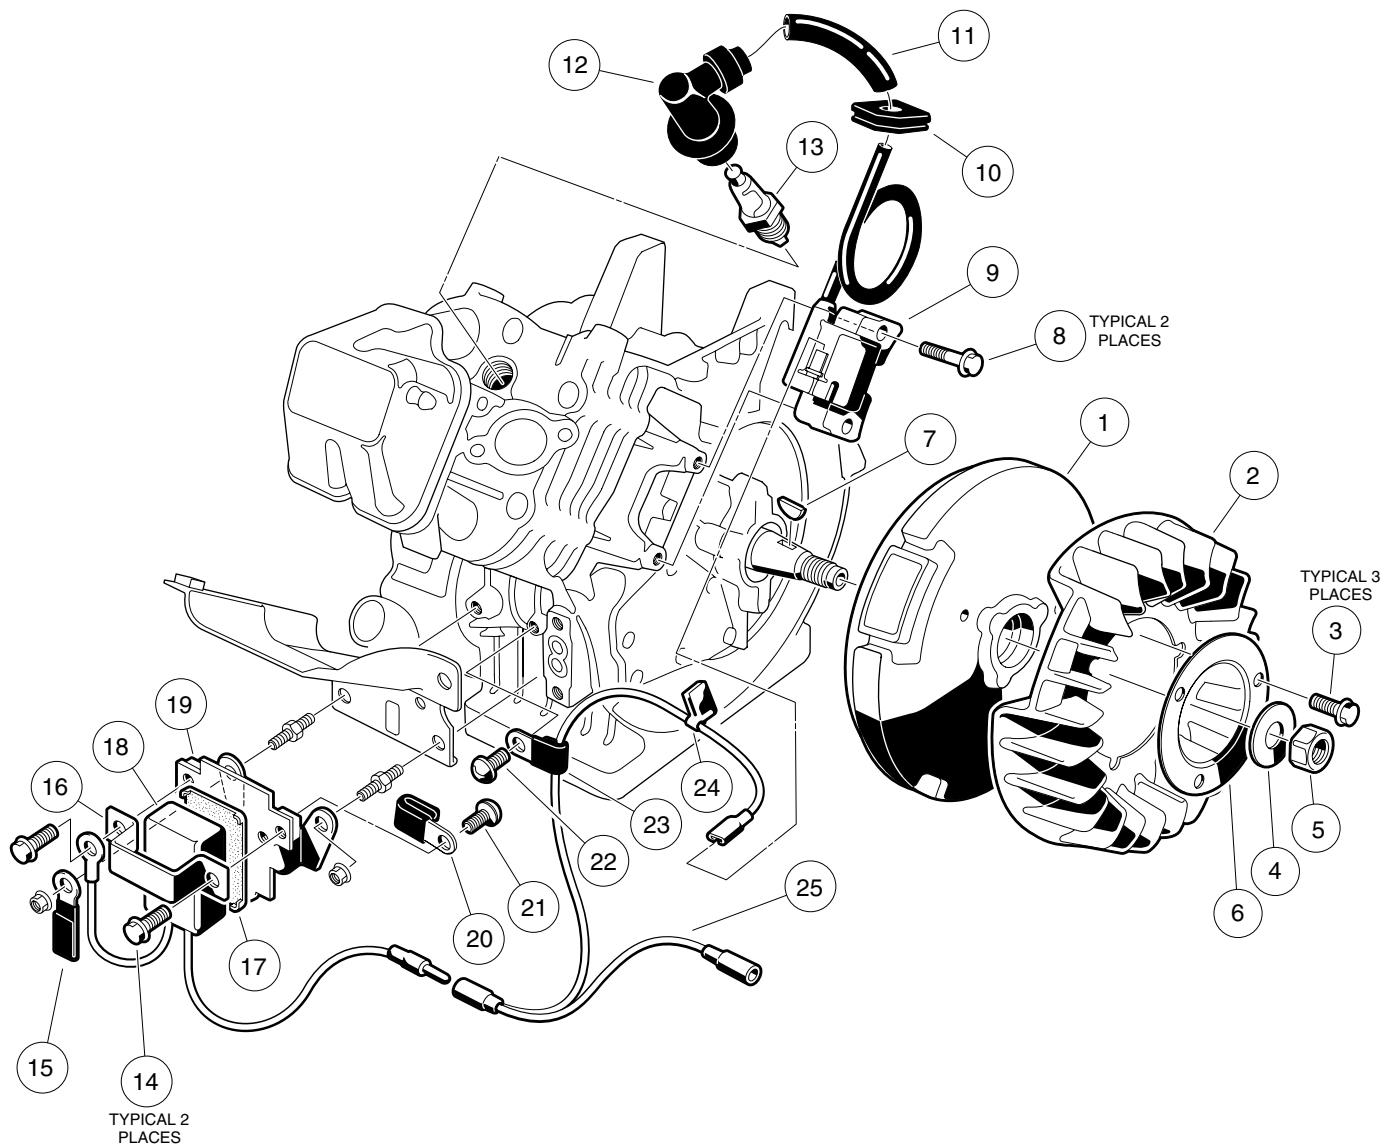


# FE290 ENGINE– IGNITION COMPONENTS AND FLYWHEEL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101915701	FLYWHEEL .....	1
2	101915801	FAN, FLYWHEEL, GRAY .....	1
3	1017448	SCREW, FLANGED HEX HEAD, M6 x 1 x 10MM .....	3
4	1016548	WASHER, FLAT, 16MM .....	1
5	1016505	NUT, HEX, M16 x 1.5 .....	1
6	1017455	PLATE, FLYWHEEL FAN .....	1
7	1016562	KEY .....	1
8	1016455	BOLT, FLANGED, M5 x .8 x 25MM .....	2
9	101909201	COIL, IGNITION (WITH INTERNAL IGNITER) .....	1
10	1016578	GROMMET .....	1
11	1016588	TUBE, 7MM x 70MM .....	1
12	1016493	ASSEMBLY, PLUG CAP .....	1
13	101881101	PLUG, SPARK, OHV .....	1
14	1016456	BOLT, FLANGED, M6 x 1 x 12MM .....	2
15	1012981	CLAMP .....	1
16	1016579	BAND, RPM LIMITER MOUNT .....	1
17	1016586	DAMPER, RPM LIMITER .....	1
18	101909401	LIMITER, RPM .....	1
19	1016445	BRACKET, RPM LIMITER .....	1
20	101909501	CLAMP .....	1
21	1016497	SCREW, CROSS PAN HEAD, M5 x .8 x 8MM .....	1
22	1016544	SCREW, CROSS PAN HEAD SELF-TAPPING, M5 x .8 x 12MM .....	1
23	1016561	CLAMP .....	1
24	1016587	CLAMP .....	1
25	101909301	WIRE, LEAD .....	1

7

G

## FE290 ENGINE

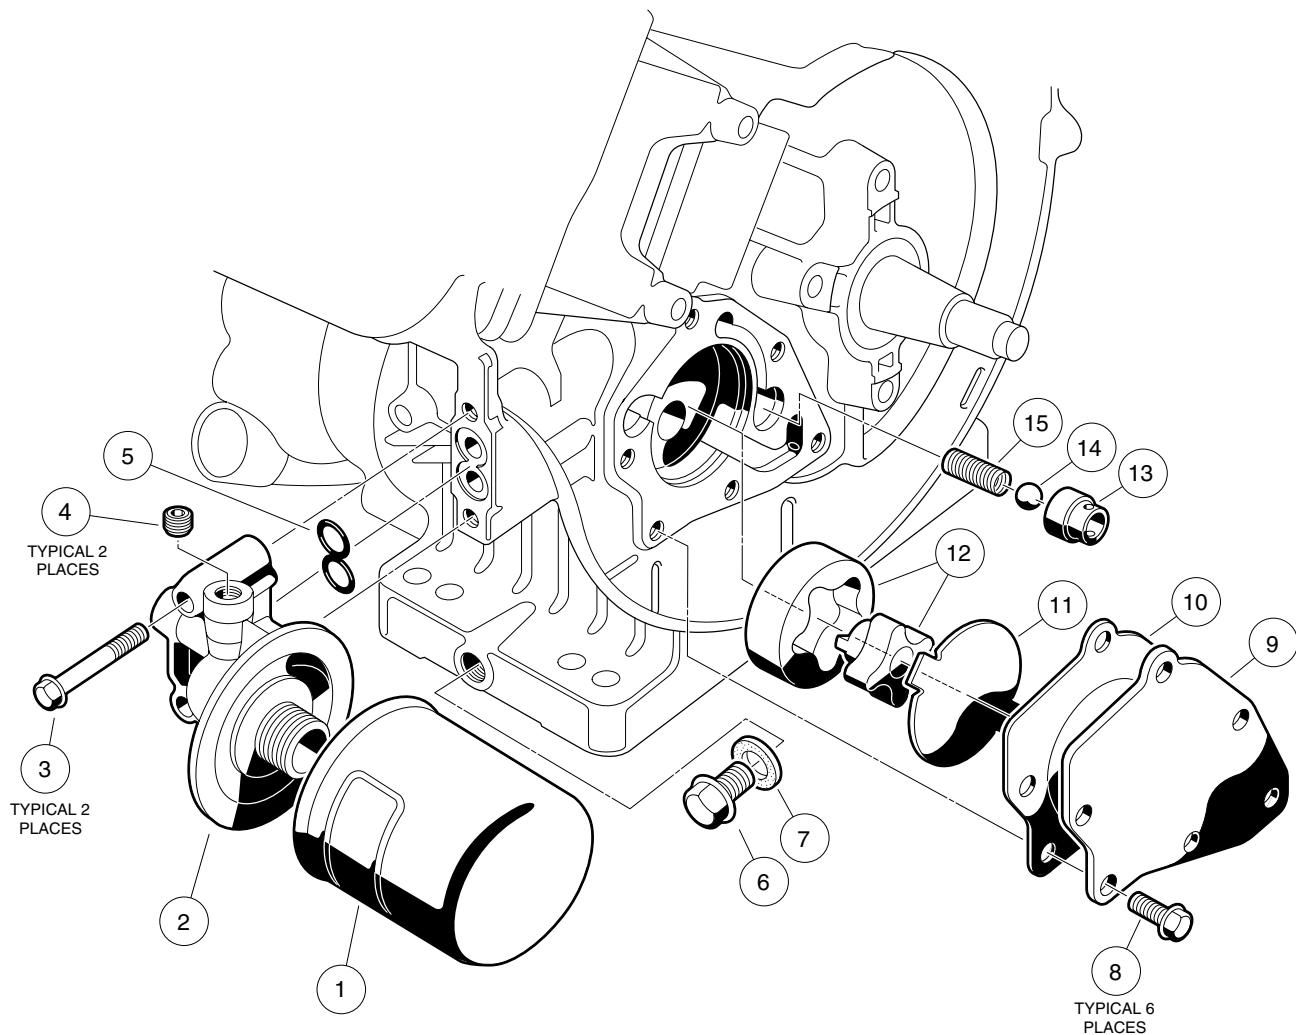


**FE290 ENGINE–  
OIL CIRCULATION**

**7**

**G**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016467	ASSEMBLY, OIL FILTER, OHV .....	1
2	1016502	BRACKET, OIL FILTER .....	1
3	1016457	BOLT, FLANGED HEX HEAD, M6 x 1 x 40MM .....	2
4	1017507	PLUG .....	2
5	1016570	O-RING, OIL FILTER MOUNT .....	1
6	1016576	PLUG, DRAIN, FE290 .....	1
7	1016432	GASKET, DRAIN PLUG .....	1
8	1017456	SCREW, FLANGED HEX HEAD, M6 x 1 x 12MM .....	6
9	1016484	COVER, PUMP .....	1
10	1016435	GASKET, OIL PUMP .....	1
11	1016473	PLATE, OIL PUMP .....	1
12	101648203	PUMP, OIL, AND ROTOR .....	1
13	1016429	SEAT, VALVE .....	1
14	1016537	BALL, STEEL, PRESSURE RELIEF .....	1
15	1016581	SPRING .....	1

# FE290 ENGINE

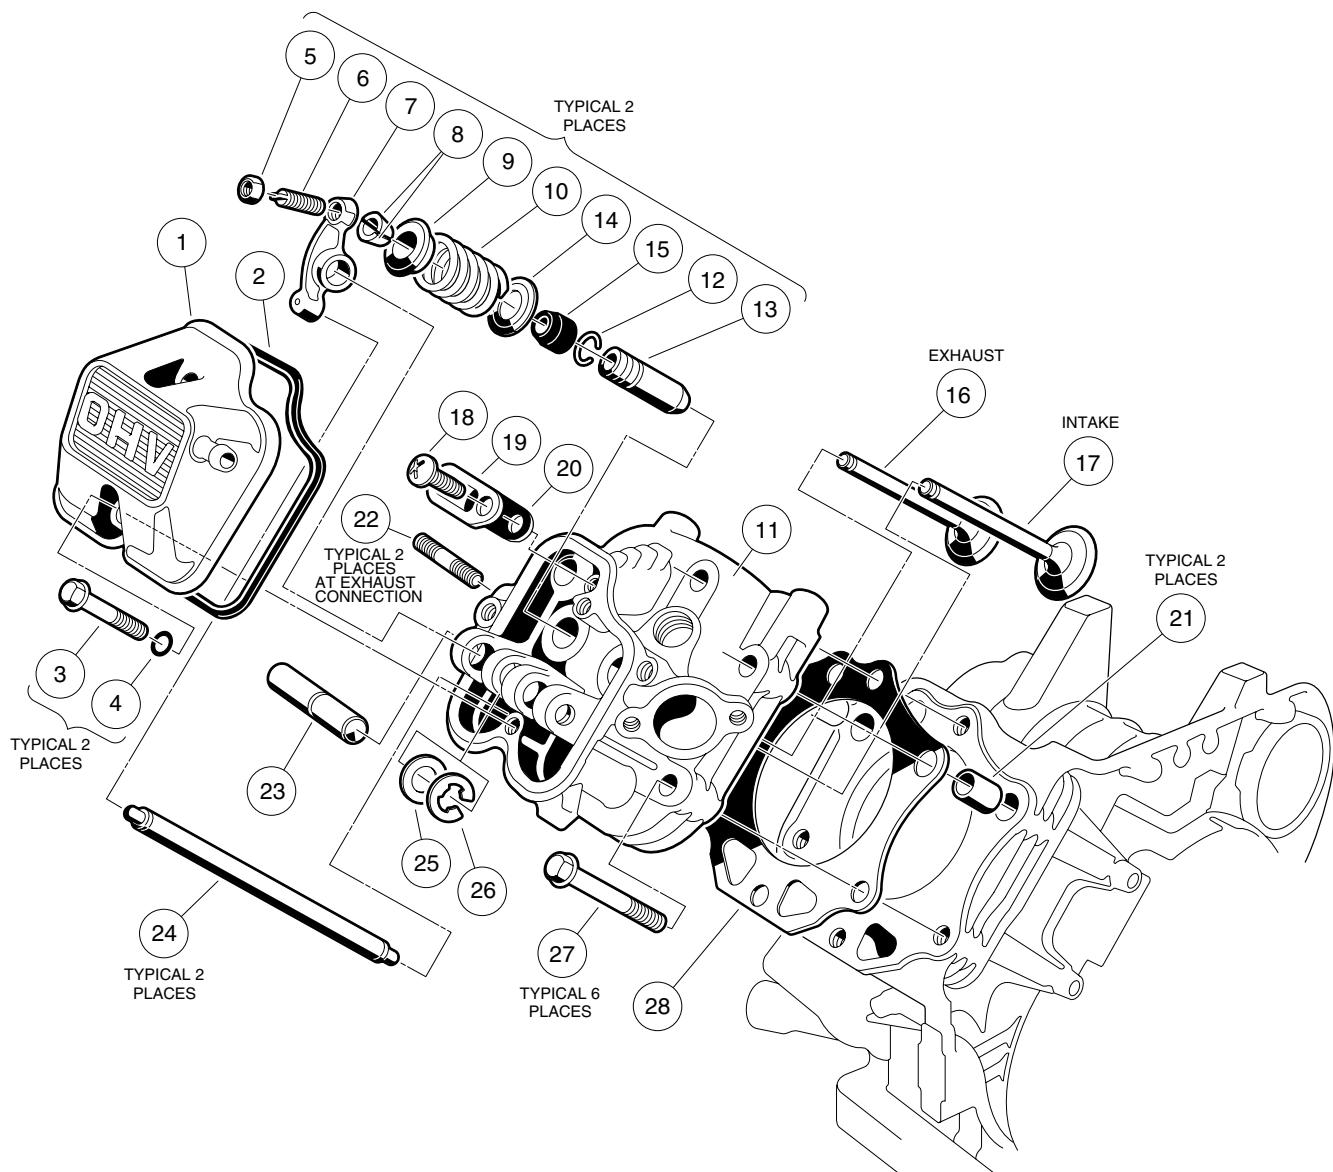


# FE290 ENGINE– CYLINDER HEAD

7

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016442	CASE, ROCKER .....	1
2	1016436	GASKET, ROCKER CASE .....	1
3	1016583	BOLT, FLANGED, M6 x 1 x 35MM .....	2
4	1016569	O-RING .....	2
5	1016545	NUT, HEX, M5 x .8 .....	2
6	1016542	SCREW, STUD, M5 x .8 .....	2
7	1016451	ARM, ROCKER .....	2
8	1016450	COLLET .....	4
9	1016449	RETAINER, VALVE SPRING .....	2
10	1016523	SPRING, ENGINE VALVE .....	2
11	1016431	ASSEMBLY, CYLINDER HEAD, OHV (INCLUDES ITEMS 12 AND 13) .....	1
12	1016560	RING, SNAP .....	2
13	1016519	GUIDE, VALVE .....	2
14	1016479	SEAT, SPRING .....	2
15	1016566	SEAL, VALVE .....	2
16	1016448	VALVE, EXHAUST .....	1
17	1016447	VALVE, INTAKE .....	1
18	1016544	SCREW, CROSS PAN HEAD SELF-TAPPING, M5 x .8 x 12MM .....	1
19	1016474	PLATE .....	1
20	1016483	VALVE .....	1
21	1016563	PIN .....	2
22	1016489	BOLT, STUD, M8 x 1.25 x 29MM .....	2
23	1016452	SHAFT, ROCKER .....	1
24	1016471	ROD, PUSH .....	2
25	1016549	WASHER, FLAT, M12 .....	1
26	1016517	CIRCLIP, TYPE E .....	1
27	1016458	BOLT, FLANGED, M8 x 1.25 x 45MM .....	6
28	1016430	GASKET, HEAD .....	1

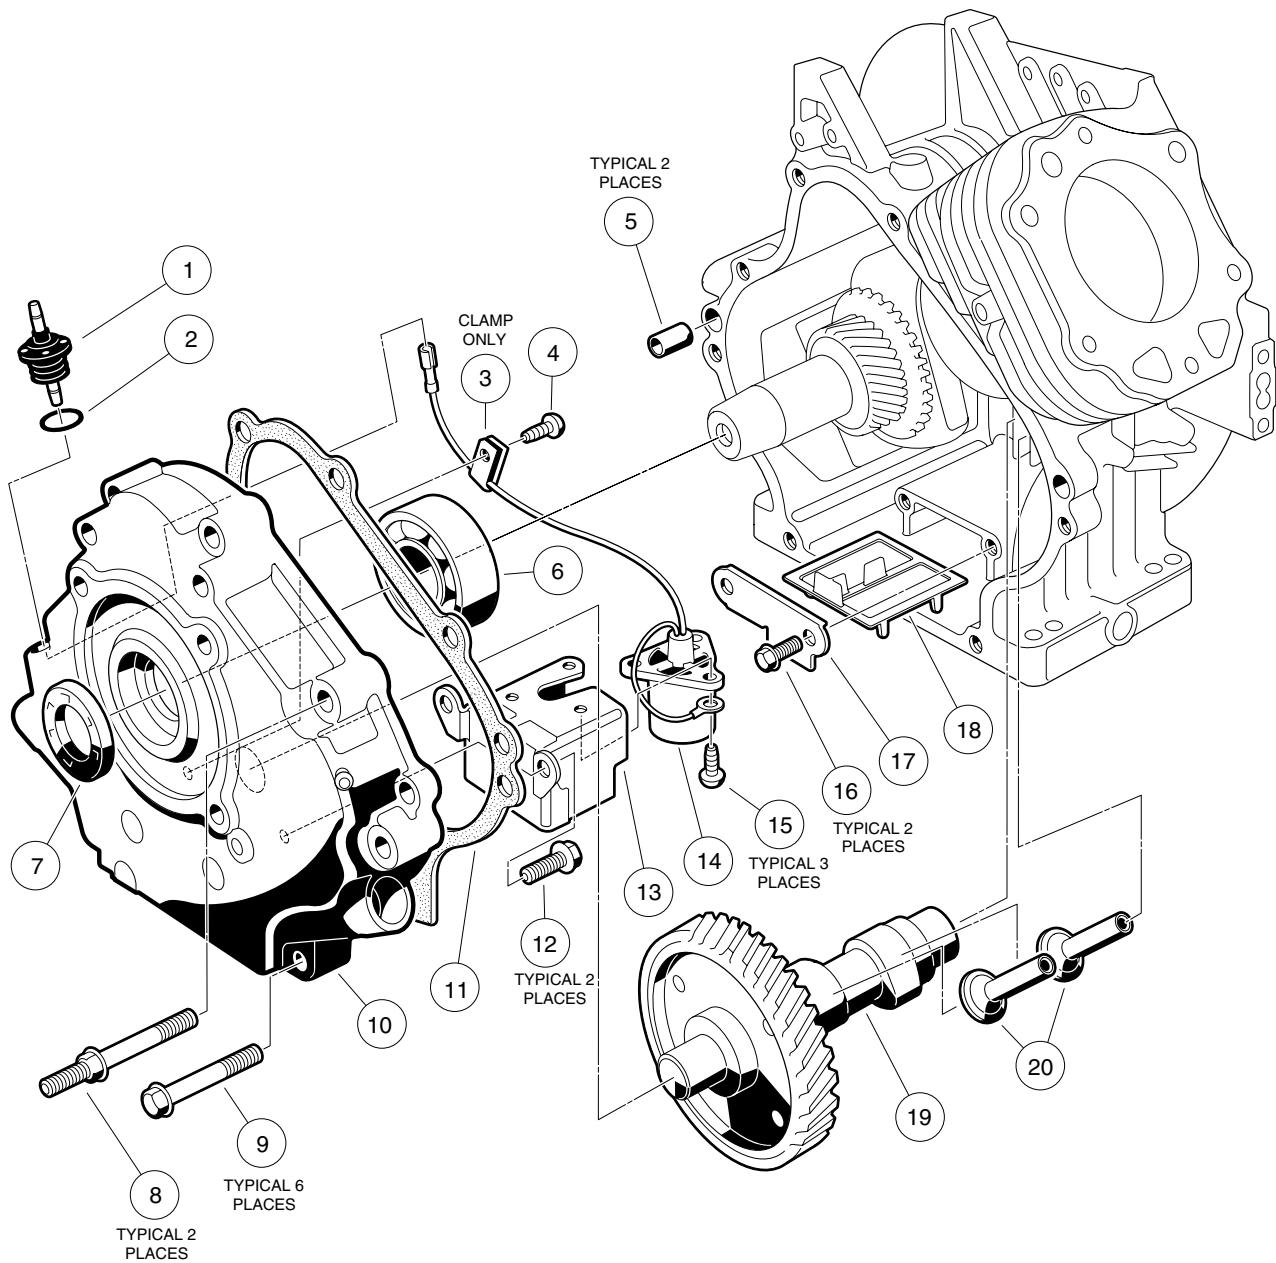


**FE290 ENGINE–  
CRANKCASE, CAMSHAFT AND OIL SENSOR**

**7**

**G**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016535	CONNECTOR, CORD .....	1
2	1016538	O-RING .....	1
3	1016506	CLAMP .....	1
4	1016544	SCREW, CROSS PAN HEAD SELF-TAPPING, M5 x .8 x 12MM .....	1
5	1016564	PIN .....	2
6	1016565	BEARING, BALL .....	1
7	1016567	SEAL, CRANKSHAFT .....	1
8	1016584	BOLT, 2-ENDDED, M8 x 1.25 x 69MM .....	2
9	1016458	BOLT, FLANGED, M8 x 1.25 x 45MM .....	6
10	1016520	COVER, CRANKCASE .....	1
11	1016446	GASKET, CRANKCASE COVER .....	1
12	1016456	BOLT, FLANGED, M6 x 1 x 12MM .....	2
13	1016510	BRACKET, OIL LEVEL SWITCH .....	1
14	1016494	SENSOR, OIL LEVEL .....	1
15	1016496	SCREW, CROSS PAN HEAD, M4 x .7 x 8MM .....	3
16	1016454	BOLT, FLANGED, M5 x .8 x 8MM .....	2
17	1016472	PLATE, OIL FILTER SCREEN .....	1
18	1016521	SCREEN, OIL FILTER .....	1
19	101915401	CAMSHAFT, COMPLETE .....	1
20	1016453	TAPPET .....	2


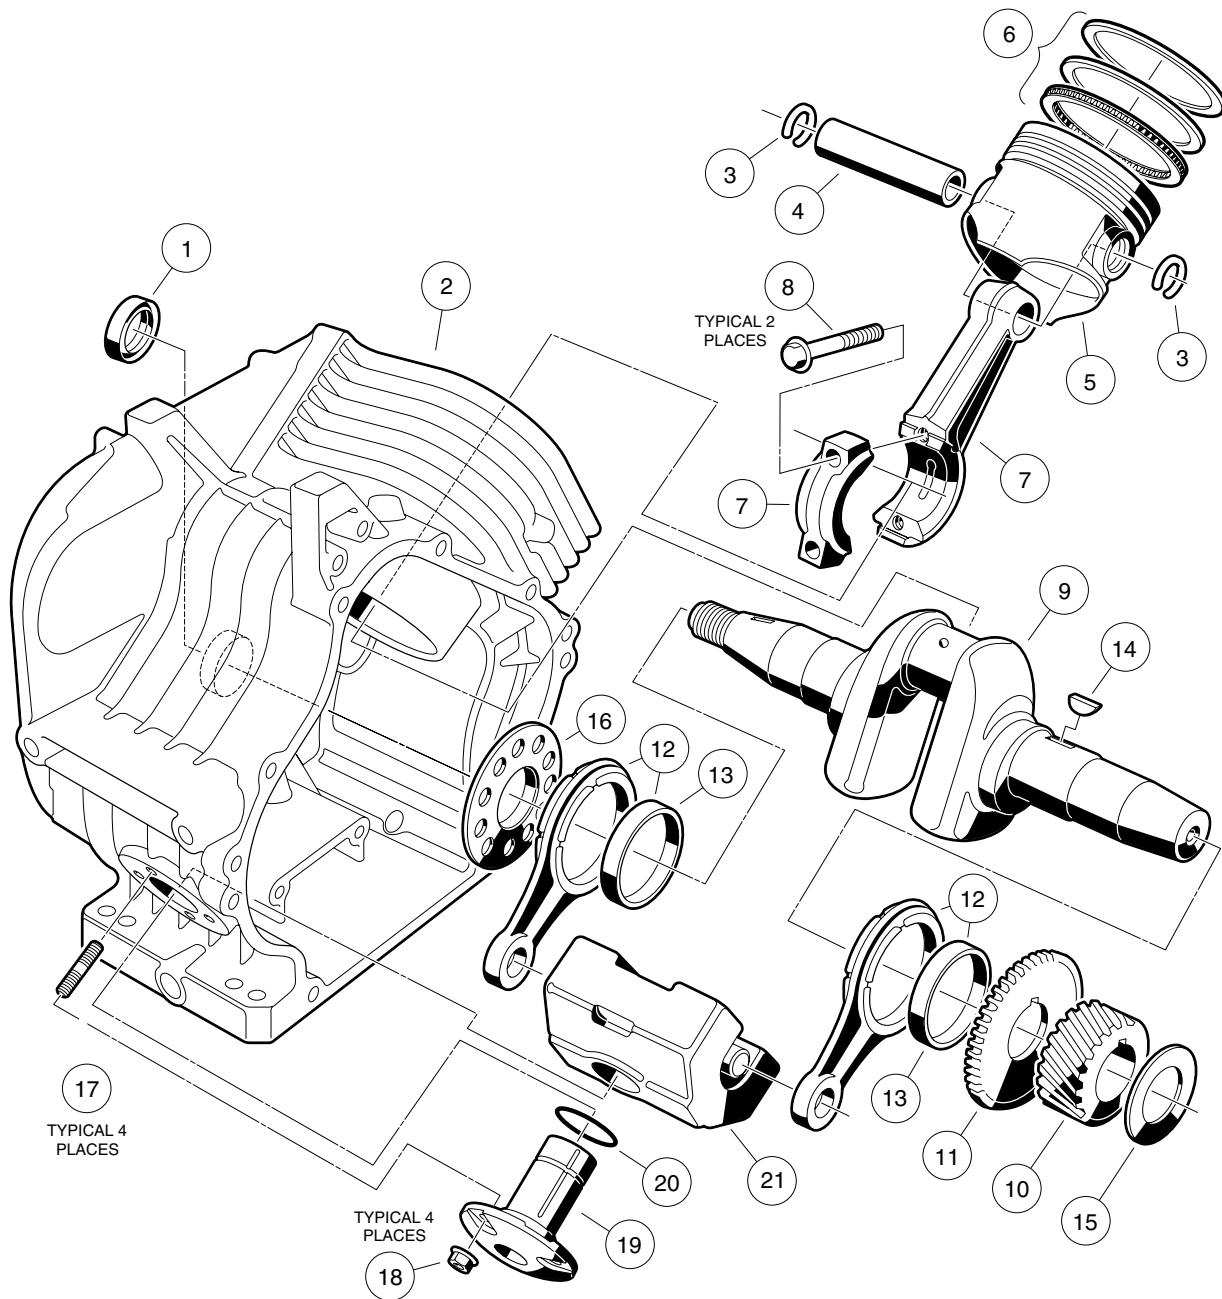


# FE290 ENGINE– CRANKCASE AND CRANKSHAFT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016568	SEAL, OIL .....	1
2	101915501	CRANKCASE, COMPLETE, OHV .....	1
3	1016558	RING, SNAP .....	2
4	1016460	PIN, PISTON .....	1
5	101645901	PISTON, STANDARD .....	1
5	101645902	PISTON, .25MM OVERSIZED .....	1
5	101645903	PISTON, .50MM OVERSIZED .....	1
6	101646101	RING SET, PISTON, STANDARD .....	1
6	101646102	RING SET, PISTON, .25MM OVERSIZED .....	1
6	101646103	RING SET, PISTON, .50MM OVERSIZED .....	1
7	101647501	ASSEMBLY, CONNECTING ROD, STANDARD (INCLUDES 2 EACH OF ITEM 8) .....	1
7	101647502	ASSEMBLY, CONNECTING ROD, .50MM UNDERSIZED (INCLUDES 2 EACH OF ITEM 8) .....	1
8	1016509	BOLT, HEX HEAD, M7 x 1 x 36MM .....	2
9	101922301	CRANKSHAFT, FE290 (LEFT-HAND THREAD) (INCLUDES ITEMS 10, 11 AND ONE EACH OF ITEM 12) .....	1
10	1016533	GEAR, HELICAL .....	1
11	1016532	GEAR, SPUR .....	1
12	1016516	ASSEMBLY, ROD (INCLUDES ONE EACH OF ITEM 13) .....	2
13	1016580	BEARING, PLAIN .....	2
14	1016562	KEY .....	1
15	101655001	SHIM, CRANKSHAFT, 1.13MM THICK .....	A/R
15	101655002	SHIM, CRANKSHAFT, 1.18MM THICK .....	A/R
15	101655003	SHIM, CRANKSHAFT, 1.23MM THICK .....	A/R
15	101655004	SHIM, CRANKSHAFT, 1.28MM THICK .....	A/R
15	101655005	SHIM, CRANKSHAFT, 1.33MM THICK .....	A/R
15	101655006	SHIM, CRANKSHAFT, 1.38MM THICK .....	A/R
15	101655007	SHIM, CRANKSHAFT, 1.43MM THICK .....	A/R
15	101655008	SHIM, CRANKSHAFT, 1.48MM THICK .....	A/R
15	101655009	SHIM, CRANKSHAFT, 1.53MM THICK .....	A/R
16	1016559	SPACER .....	1
17	1016541	BOLT, STUD, M6 x 1 x 22MM .....	4
18	1016547	NUT, FLANGED, M6 x 1 .....	4
19	1016470	SHAFT, GUIDE COUNTERBALANCE .....	1
20	1016571	O-RING .....	1
21	1016469	WEIGHT, COUNTERBALANCE .....	1

7

G

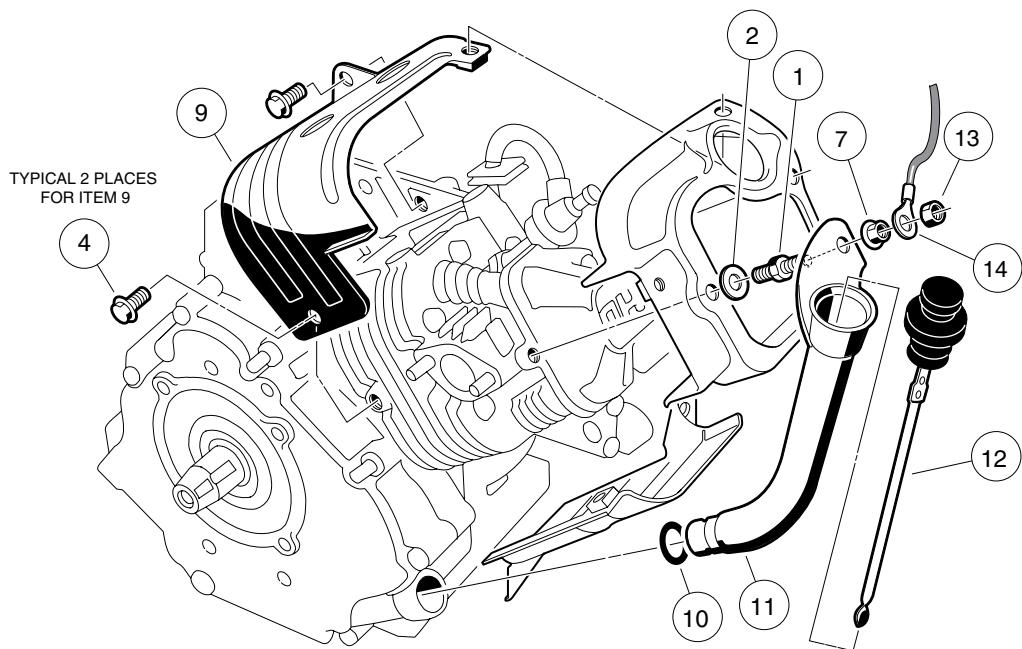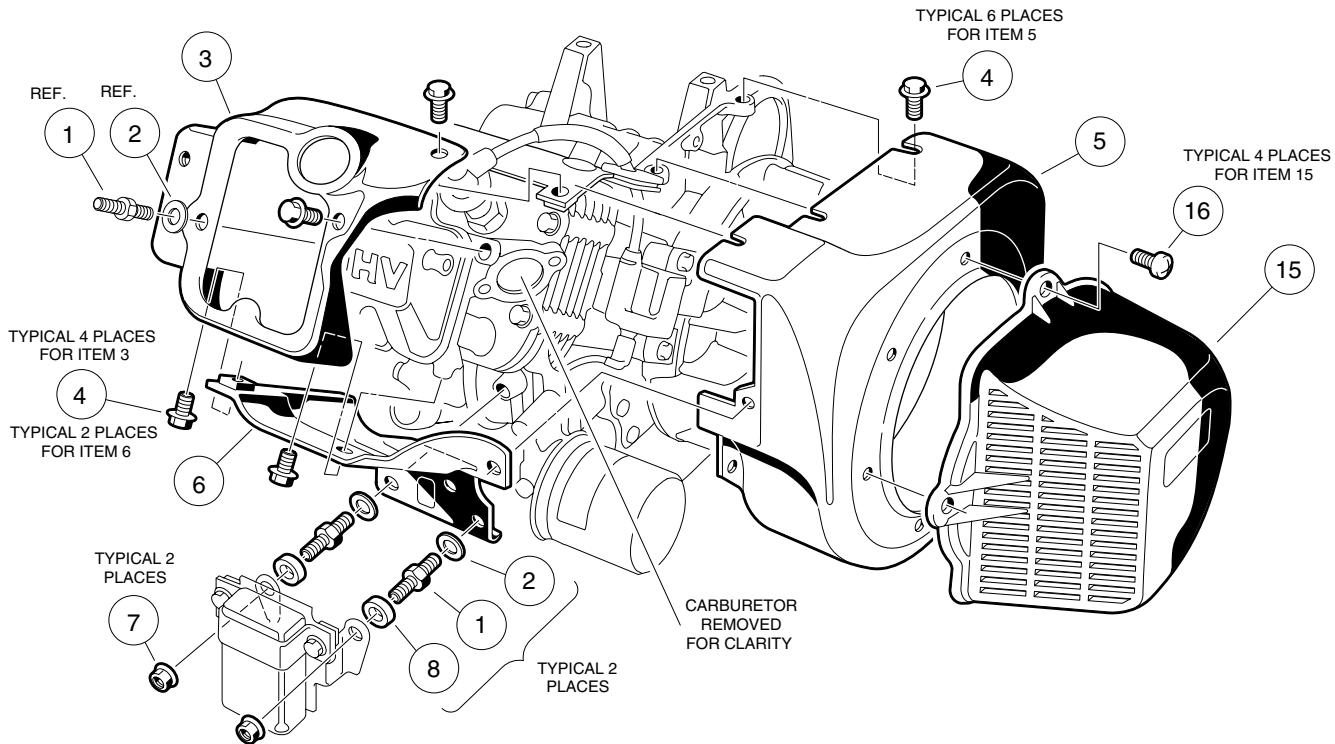

# FE350 ENGINE– SHROUDS AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	101953801	FE350 OHV GASOLINE ENGINE, COMPLETE (CLOCKWISE ROTATION) WITH CARBURETOR (WITH COMPRESSION RELEASE) (KEY-START VEHICLES) (DOES NOT INCLUDE ITEMS 13 - 16) .....	
1	1016507	BOLT, 2-ENDDED, M6 x 1 x 29MM .....	1
2	1016512	WASHER, FLAT, 6 MM .....	3
3	1017474	SHROUD, CYLINDER HEAD .....	1
4	1016456	BOLT, FLANGED, M6 x 1 x 12MM .....	14
5	101916101	HOUSING, FAN .....	1
6	1017476	SHROUD, LOWER CYLINDER .....	1
7	1016547	NUT, FLANGE, M6 x 1 .....	3
8	1017500	SPACER .....	2
9	1017475	SHROUD, UPPER CYLINDER .....	1
10	1016539	O-RING .....	1
11	1017486	TUBE, OIL FILLER .....	1
12	1016531	DIPSTICK .....	1
13	101887601	NUT, NYLON LOCK, M6 x 1 .....	1
14	1015332	WIRE ASSEMBLY, #10 BLACK .....	1
15	1015649	SHROUD, FAN .....	1
16	1015969	SCREW, PAN HEAD, M6 x 1 x 14 MM .....	4


7

G

7

G

# FE350 ENGINE

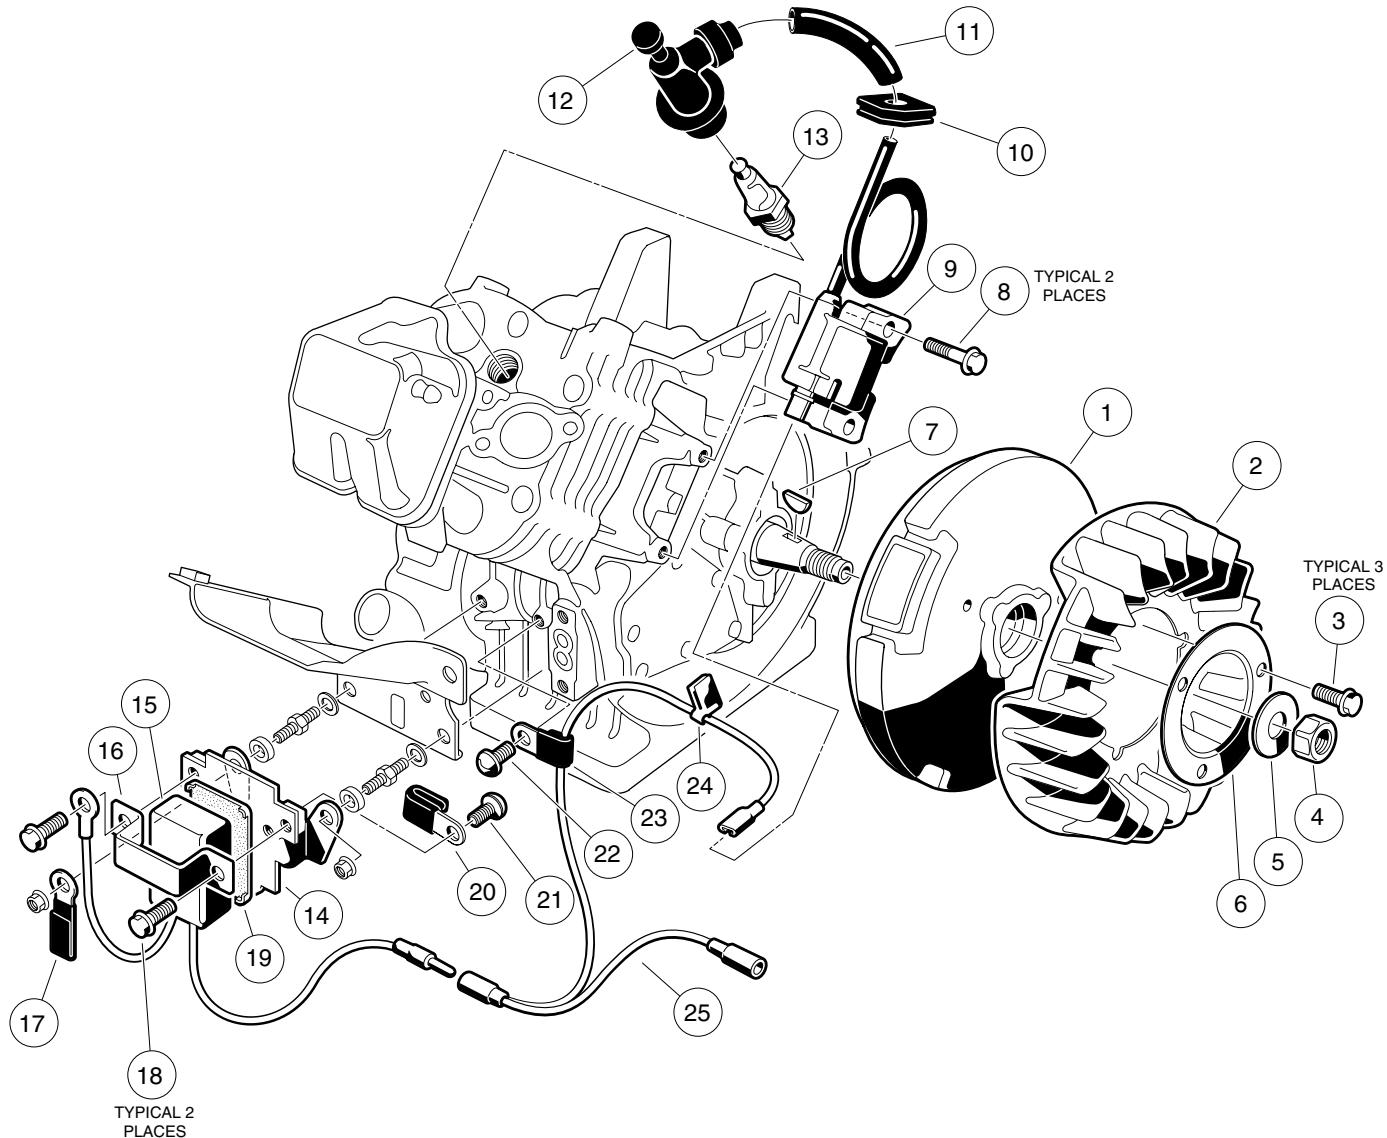

# FE350 ENGINE– IGNITION COMPONENTS AND FLYWHEEL


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101916201	FLYWHEEL .....	1
2	101916301	FAN, FLYWHEEL–GRAY .....	1
3	1017448	SCREW, FLANGED HEX HEAD, M6 x 1 x 10MM .....	3
4	1017467	NUT, HEX, 18MM FINE .....	1
5	1017490	WASHER, FLAT, 18MM .....	1
6	1017455	PLATE, FLYWHEEL FAN .....	1
7	1016562	KEY .....	1
8	1016455	SCREW, HEX HEAD FLANGED, M5 x 0.8 x 25MM .....	2
9	101909201	COIL, IGNITION (WITH INTERNAL IGNITER) .....	1
10	1016578	GROMMET .....	1
11	1016588	TUBE, 7MM I.D. x 10MM O.D. x 70MM LONG .....	1
12	1017463	ASSEMBLY, PLUG CAP .....	1
13	101881101	PLUG, SPARK, OHV .....	1
14	1016445	BRACKET, RPM LIMITER .....	1
15	101909401	LIMITER, RPM .....	1
16	1016579	BAND, RPM LIMITER MOUNT .....	1
17	1012981	CLAMP .....	1
18	1016456	SCREW, FLANGED HEX HEAD, M6 x 1 x 12MM .....	2
19	1016586	DAMPER .....	1
20	101909501	CLAMP .....	1
21	1016497	SCREW, CROSS PAN HEAD, M5 x .08 x 8MM .....	1
22	1016544	SCREW, CROSS PAN HEAD SELF-TAPPING, M5 x 12MM .....	1
23	1016561	CLAMP .....	1
24	1016587	CLAMP .....	1
25	101909301	WIRE, LEAD .....	1

7

G

**7****G**

# FE350 ENGINE

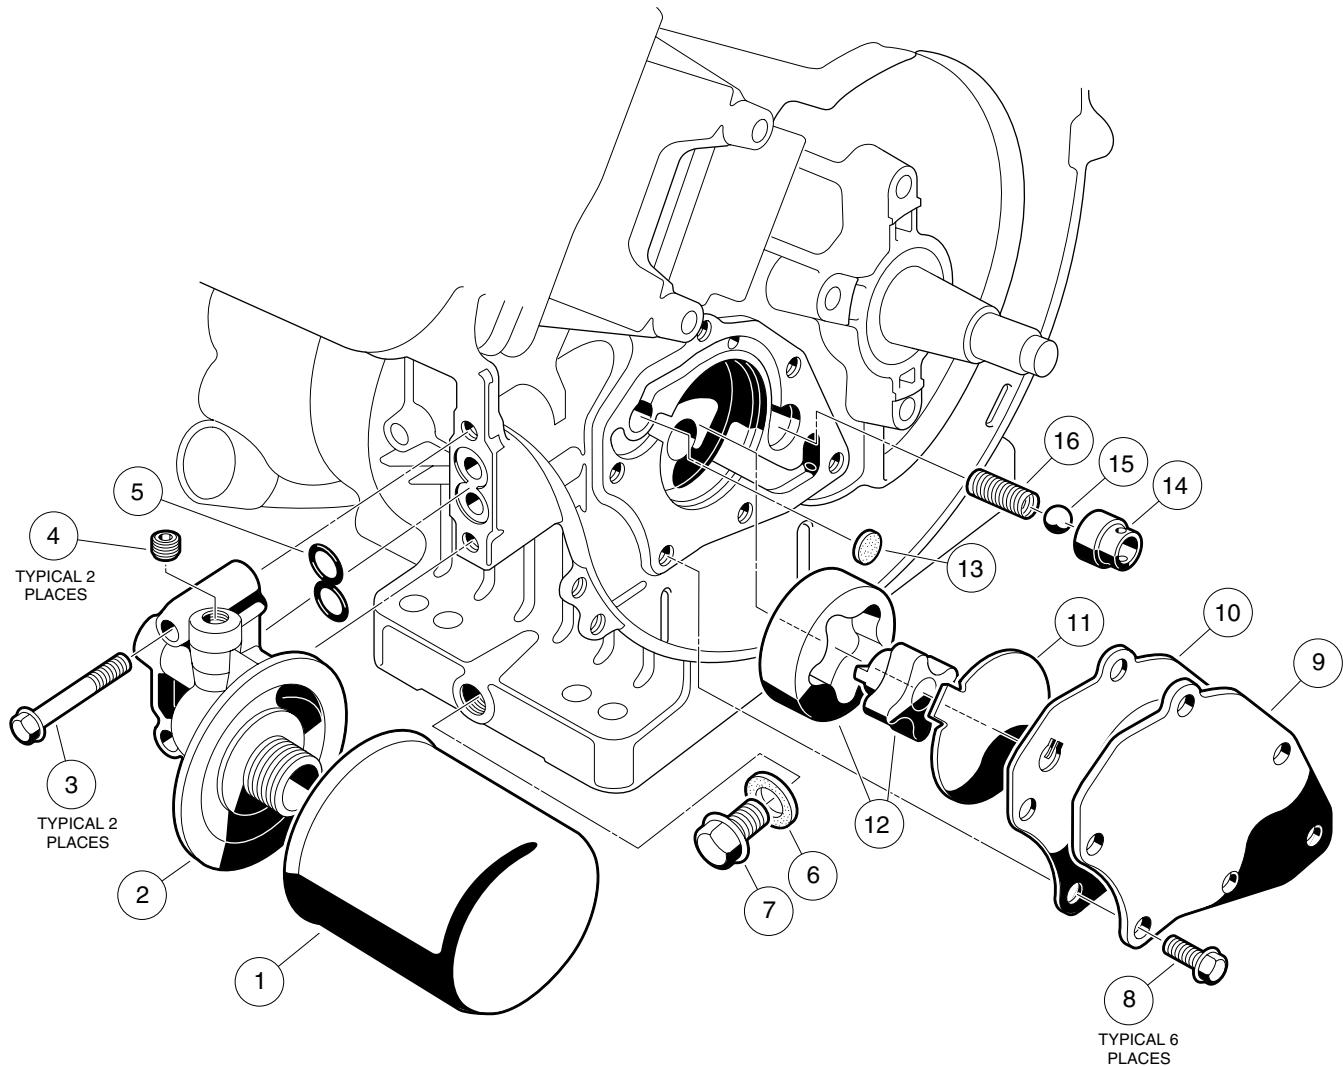


# FE350 ENGINE– OIL CIRCULATION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016467	OIL FILTER .....	1
2	1016502	BRACKET, OIL FILTER .....	1
3	1016457	BOLT, FLANGED HEX HEAD, M6 x 1 x 40MM .....	2
4	1017507	PLUG .....	2
5	1016570	O-RING .....	1
6	1016432	GASKET, DRAIN PLUG .....	1
7	1016576	PLUG, DRAIN .....	1
8	1017456	SCREW, FLANGED HEX HEAD, M6 x 1 x 12MM .....	6
9	1017460	COVER, PUMP .....	1
10	1017442	GASKET, OIL PUMP .....	1
11	1016473	PLATE, OIL PUMP .....	1
12	101648203	PUMP, OIL, AND ROTOR .....	1
13	1017458	FILTER .....	1
14	1016429	SEAT, VALVE .....	1
15	1016537	BALL, STEEL, PRESSURE RELIEF .....	1
16	1016581	SPRING .....	1

7

G

# FE350 ENGINE

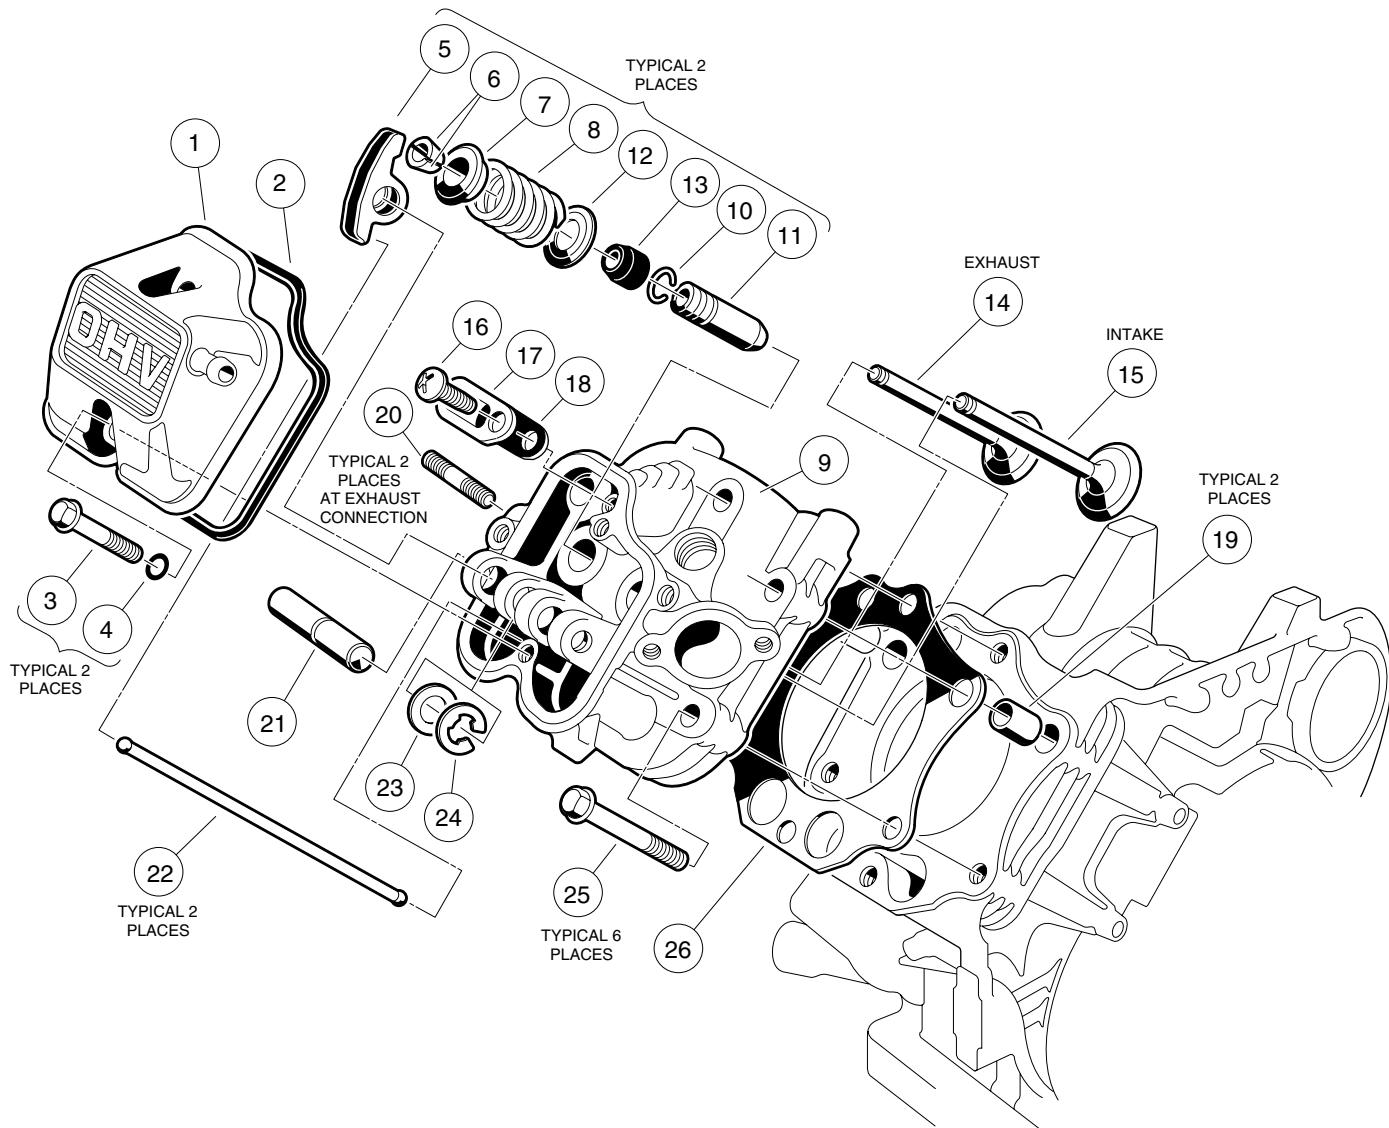

# FE350 ENGINE– CYLINDER HEAD

7


G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016442	CASE, ROCKER .....	1
2	1016436	GASKET, ROCKER CASE .....	1
3	1016583	BOLT, FLANGED, M6 x 1 x 35MM .....	2
4	1016569	O-RING .....	2
5	1017446	ARM, ROCKER .....	2
6	1016450	COLLET .....	4
7	1016449	RETAINER, VALVE SPRING .....	2
8	1017473	SPRING, ENGINE VALVE .....	2
9	1017435	ASSEMBLY, CYLINDER HEAD, FE350 (INCLUDES ITEMS 10 AND 11) .....	1
10	1016560	RING, SNAP .....	2
11	1016519	GUIDE, VALVE .....	2
12	1016479	SEAT, SPRING .....	2
13	1016566	SEAL, VALVE .....	2
14	1017445	VALVE, EXHAUST .....	1
15	1017444	VALVE, INTAKE .....	1
16	1016544	SCREW, CROSS PAN HEAD SELF-TAPPING, M5 x .8 x 12MM .....	1
17	1016474	PLATE .....	1
18	1016483	VALVE .....	1
19	1016563	PIN .....	2
20	1016489	BOLT, STUD, M8 x 1.25 x 29MM .....	2
21	1016452	SHAFT, ROCKER .....	1
22	1017454	ROD, PUSH .....	2
23	1016549	WASHER, FLAT, M12 .....	1
24	1016517	CIRCLIP, TYPE-E .....	1
25	1016458	BOLT, FLANGED, M8 x 1.25 x 45MM .....	6
26	1017434	GASKET, HEAD .....	1

7

G

# FE350 ENGINE

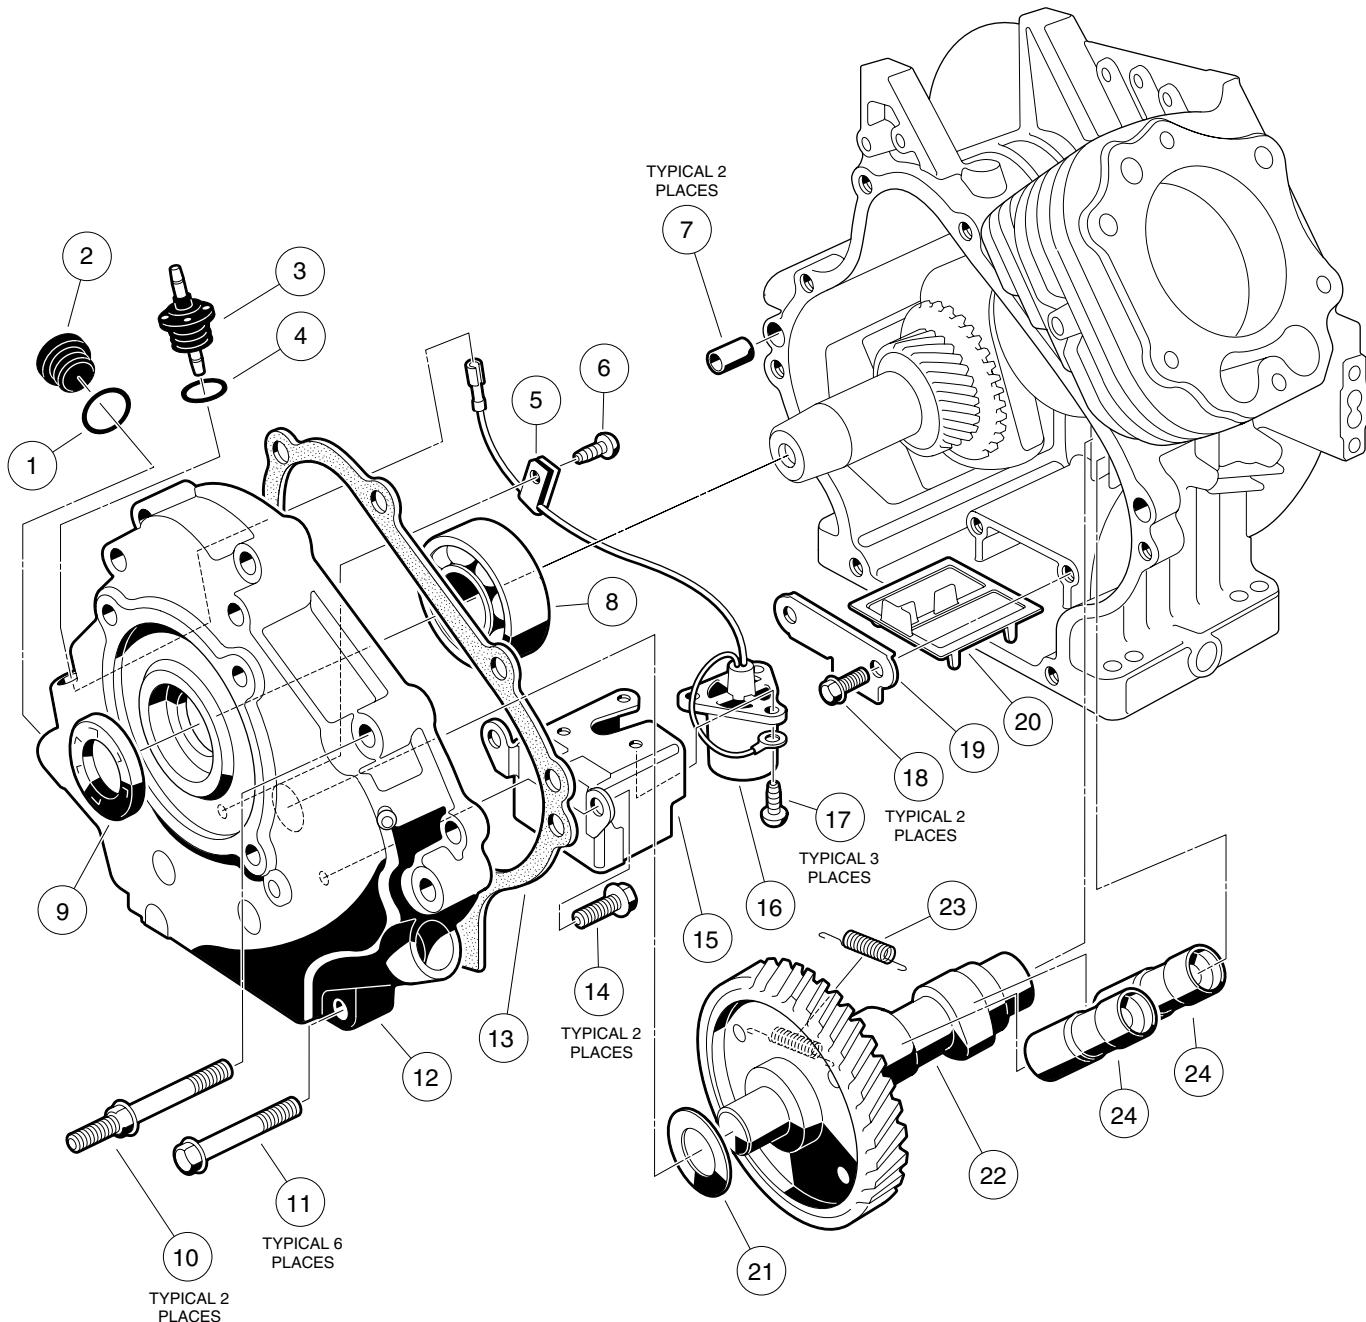


**FE350 ENGINE–  
CRANKCASE, CAMSHAFT AND OIL SENSOR**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016538	O-RING .....	1
2	1017508	PLUG .....	1
3	1016535	CONNECTOR, OIL SENDING UNIT .....	1
4	1016538	O-RING .....	1
5	1016506	CLAMP .....	1
6	1016544	SCREW, CROSS PAN HEAD SELF-TAPPING, M5 x .8 x 12MM .....	1
7	1016564	PIN .....	2
8	1017487	BEARING, CRANKSHAFT .....	1
9	1017504	SEAL, CRANKSHAFT .....	1
10	1016584	BOLT, 2-ENDDED FLANGED, M8 x 1.25 x 69MM .....	2
11	1017514	BOLT, FLANGED, M8 x 1.25 x 45MM .....	6
12	1017472	COVER, CRANKCASE .....	1
13	1017443	GASKET, CRANKCASE COVER .....	1
14	1017513	BOLT, FLANGED, M6 x 1 x 12MM .....	2
15	1016510	BRACKET, OIL LEVEL SWITCH .....	1
16	1016494	SENSOR, OIL LEVEL.....	1
17	1016496	SCREW, CROSS PAN HEAD, M4 x .7 x 8MM .....	3
18	1016454	BOLT, FLANGED, M5 x .8 x 8MM .....	2
19	1016472	PLATE, OIL FILTER SCREEN .....	1
20	1016521	SCREEN, OIL FILTER .....	1
21	101751801	SHIM, 0.3MM THICK .....	A/R
21	101751802	SHIM, 0.4MM THICK .....	A/R
21	101751803	SHIM, 0.5MM THICK .....	A/R
22	101915901	CAMSHAFT (INCLUDES ITEM 23) .....	1
23	1017511	SPRING .....	1
24	1017447	LIFTER, HYDRAULIC .....	2

7

G

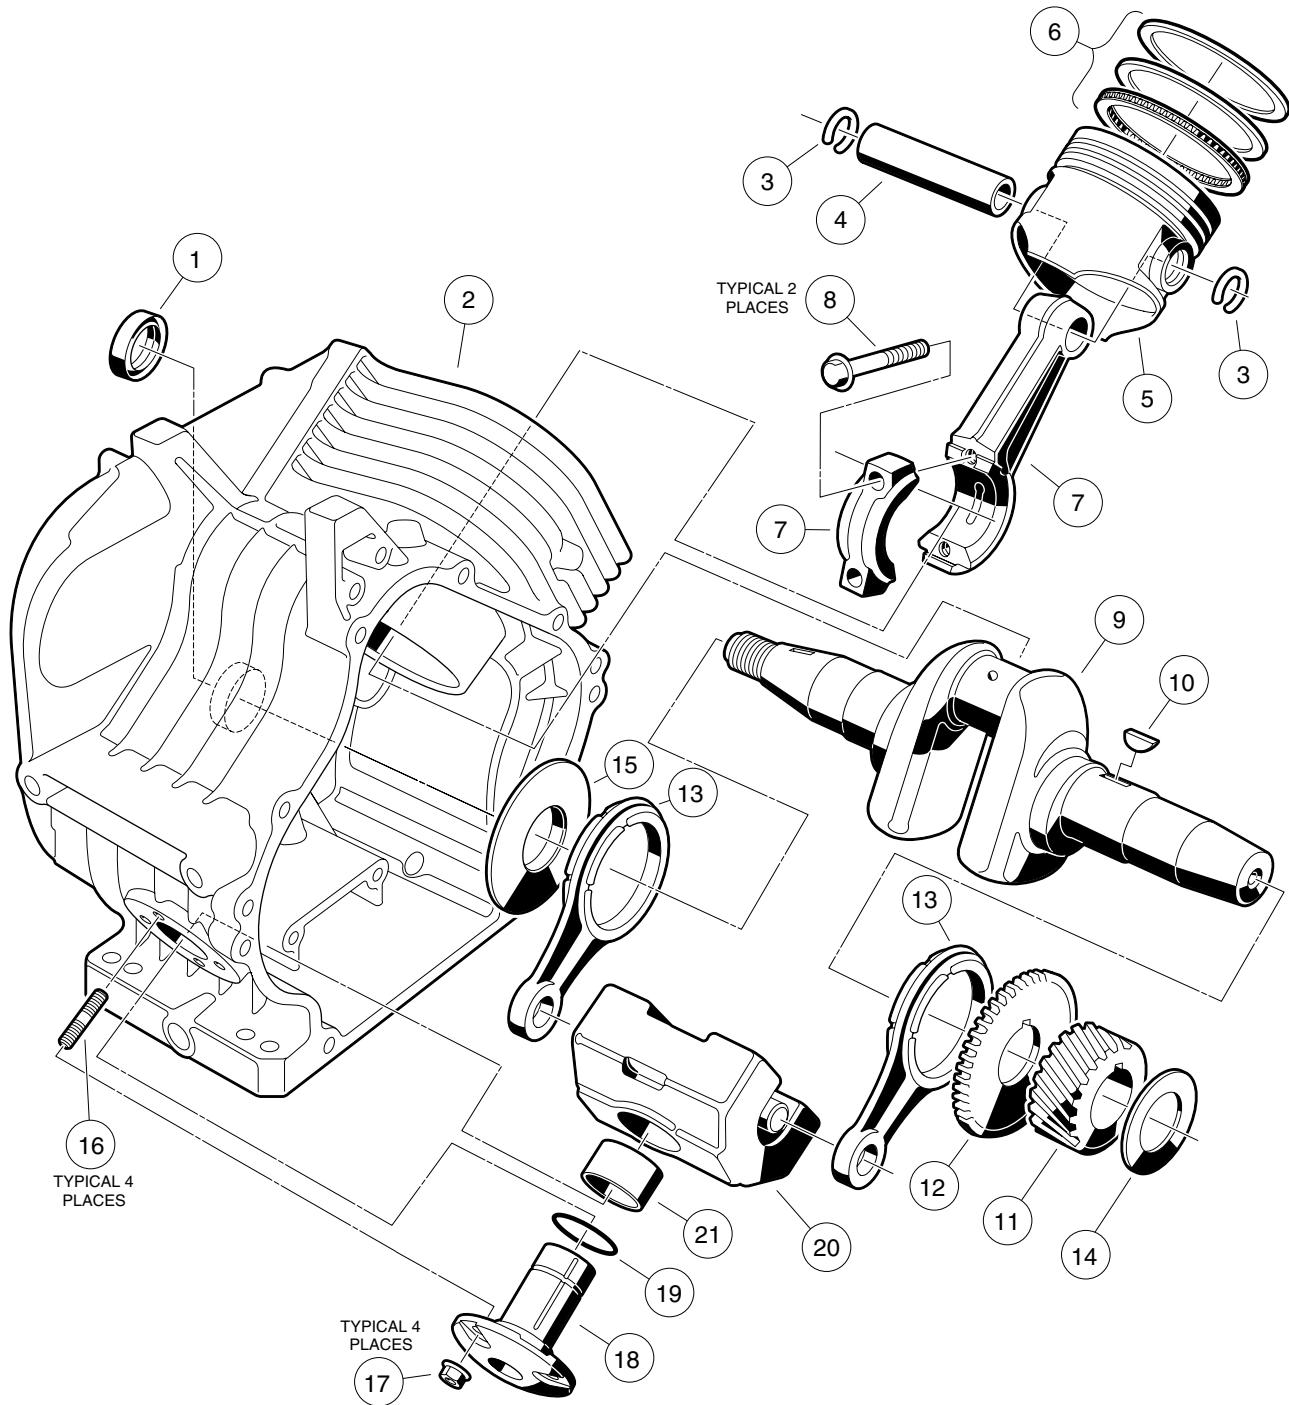**FE350 ENGINE**


# FE350 ENGINE— CRANKCASE AND CRANKSHAFT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1017503	SEAL, OIL .....	1
2	101916001	CRANKCASE, COMPLETE, FE350 (CLOCKWISE ROTATION) .....	1
3	1017502	RING, SNAP .....	2
4	1017450	PIN, PISTON .....	1
5	101744901	PISTON, STANDARD.....	1
5	101744902	PISTON, .50MM OVERSIZED .....	1
6	101745101	RING SET, PISTON, STANDARD .....	1
6	101745102	RING SET, PISTON, .50MM OVERSIZED .....	1
7	101745701	ASSEMBLY, CONNECTING ROD, STANDARD (INCLUDES 2 EACH OF ITEM 8) .....	1
7	101745702	ASSEMBLY, CONNECTING ROD, .50MM UNDERSIZED (INCLUDES 2 EACH OF ITEM 8) .....	1
8	1017512	BOLT, HEX HEAD, M7 x 1 x 36MM .....	2
9	101922302	CRANKSHAFT, FE350 (LEFT-HAND THREADS) (INCLUDES ITEMS 10 - 12 AND ONE EACH OF ITEM 13) .....	1
10	1016562	KEY .....	1
11	1017484	GEAR, HELICAL .....	1
12	1017483	GEAR, SPUR .....	1
13	1017471	ROD .....	2
14	101773301	SHIM, CRANKSHAFT, 1.18MM THICK .....	A/R
14	101773302	SHIM, CRANKSHAFT, 1.25MM THICK .....	A/R
14	101773303	SHIM, CRANKSHAFT, 1.32MM THICK .....	A/R
14	101773304	SHIM, CRANKSHAFT, 1.39MM THICK .....	A/R
14	101773305	SHIM, CRANKSHAFT, 1.46MM THICK .....	A/R
14	101773306	SHIM, CRANKSHAFT, 1.53MM THICK .....	A/R
14	101773307	SHIM, CRANKSHAFT, 1.60MM THICK .....	A/R
14	101773308	SHIM, CRANKSHAFT, 1.67MM THICK .....	A/R
14	101773309	SHIM, CRANKSHAFT, 1.74MM THICK .....	A/R
14	101773310	SHIM, CRANKSHAFT, 1.11MM THICK .....	A/R
14	101773311	SHIM, CRANKSHAFT, 1.81MM THICK .....	A/R
15	1017501	SPACER .....	1
16	1016541	BOLT, STUD, M6 x 1 x 22MM .....	4
17	1016547	NUT, FLANGED, M6 x 1 .....	4
18	1016470	SHAFT, GUIDE COUNTERBALANCE .....	1
19	1016571	O-RING .....	1
20	1017453	WEIGHT, COUNTERBALANCE (INCLUDES ITEM 21) .....	1
21	1017510	BEARING .....	1

7

G

**7**  
**G**

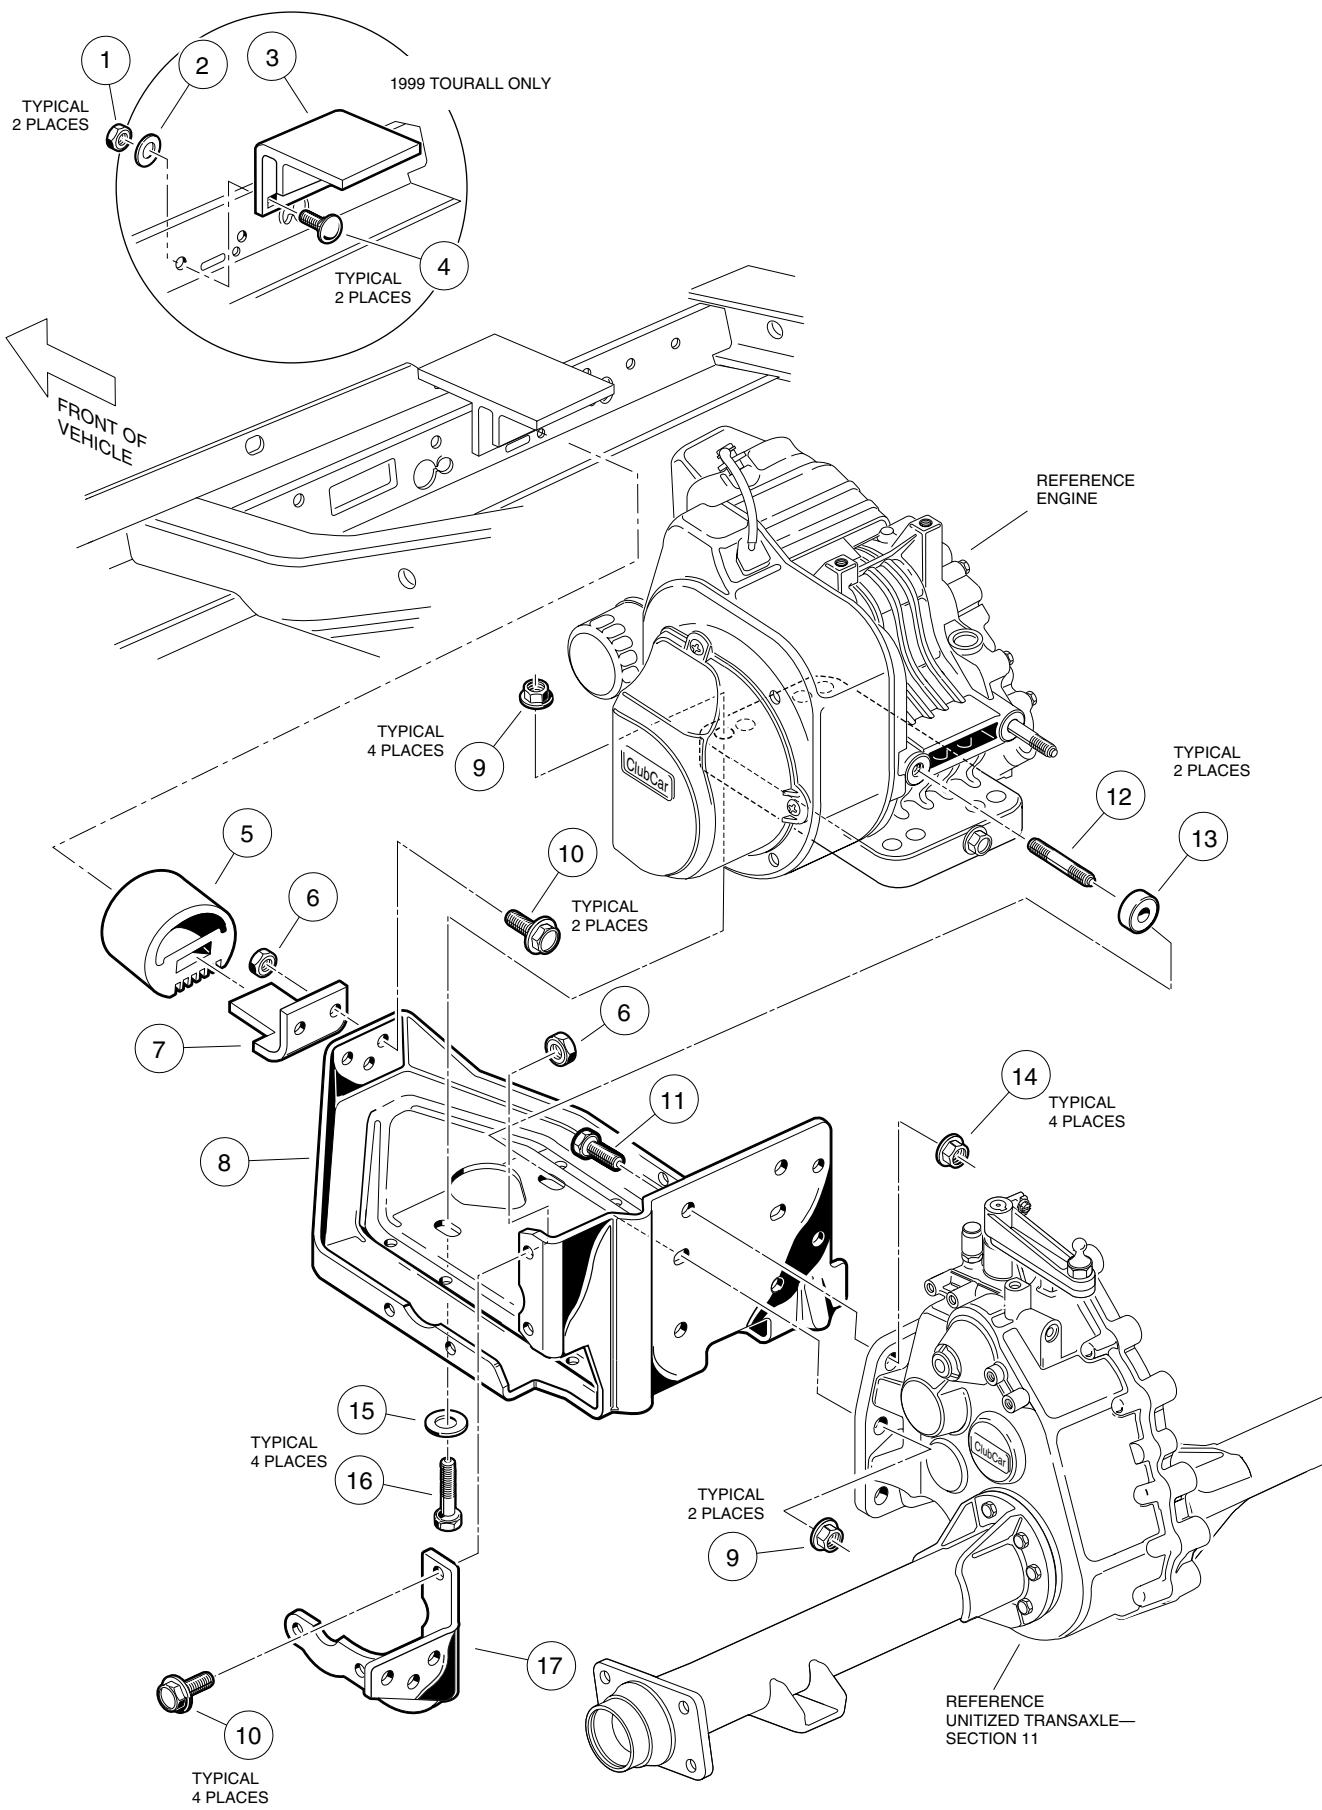

# ENGINE MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	7473	NUT, NYLON LOCK, 5/16 - 18 (1999 TOURALL ONLY) .....	2
2	1241	WASHER, FLAT, 5/16 - 18 (1999 TOURALL ONLY) .....	2
3	101864601	RETAINER, SNUBBER (1999 TOURALL ONLY) .....	1
4	7818	BOLT, ROUND-HEAD SQUARE-NECK, 5/16 - 18 x 1-1/2 (1999 TOURALL ONLY) .....	2
5	1012164	SNUBBER .....	1
6	1013924	NUT, HEX LOCK, 5/16 - 24, UNF .....	10
7	101834601	BRACKET, SNUBBER .....	1
8	101827101	PLATE, MOUNTING .....	1
9	101833001	NUT, FLANGE, M8 x 1.25 .....	6
10	101884801	SCREW, HEX WASHER, 5/16 -24 x 7/8 .....	10
11	101833301	SCREW, HEX HEAD CAP, M10 x 1.25 x 30MM .....	4
12	101833201	STUD, M8 x 1.25 x 60MM (TOURALL ONLY) .....	2
12	101833101	STUD, M8 x 1.25 x 50MM (RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER) .....	2
13	101832101	SPACER (TOURALL ONLY) .....	2
13	1011697	WASHER, FLAT, 5/16 (RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER) .....	2
14	101832901	NUT, FLANGE, M10 x 1.25 .....	4
15	1012571	WASHER, HEAVY FLAT, 5/16 .....	4
16	101855901	SCREW, HEX HEAD CAP, M8 x 1.25 x 43MM .....	4
17	101832701	STIFFENER, FLYWHEEL SIDE .....	1

7

G




# **FUEL, INTAKE, AND GOVERNOR SYSTEMS**

---

**8**

**G**

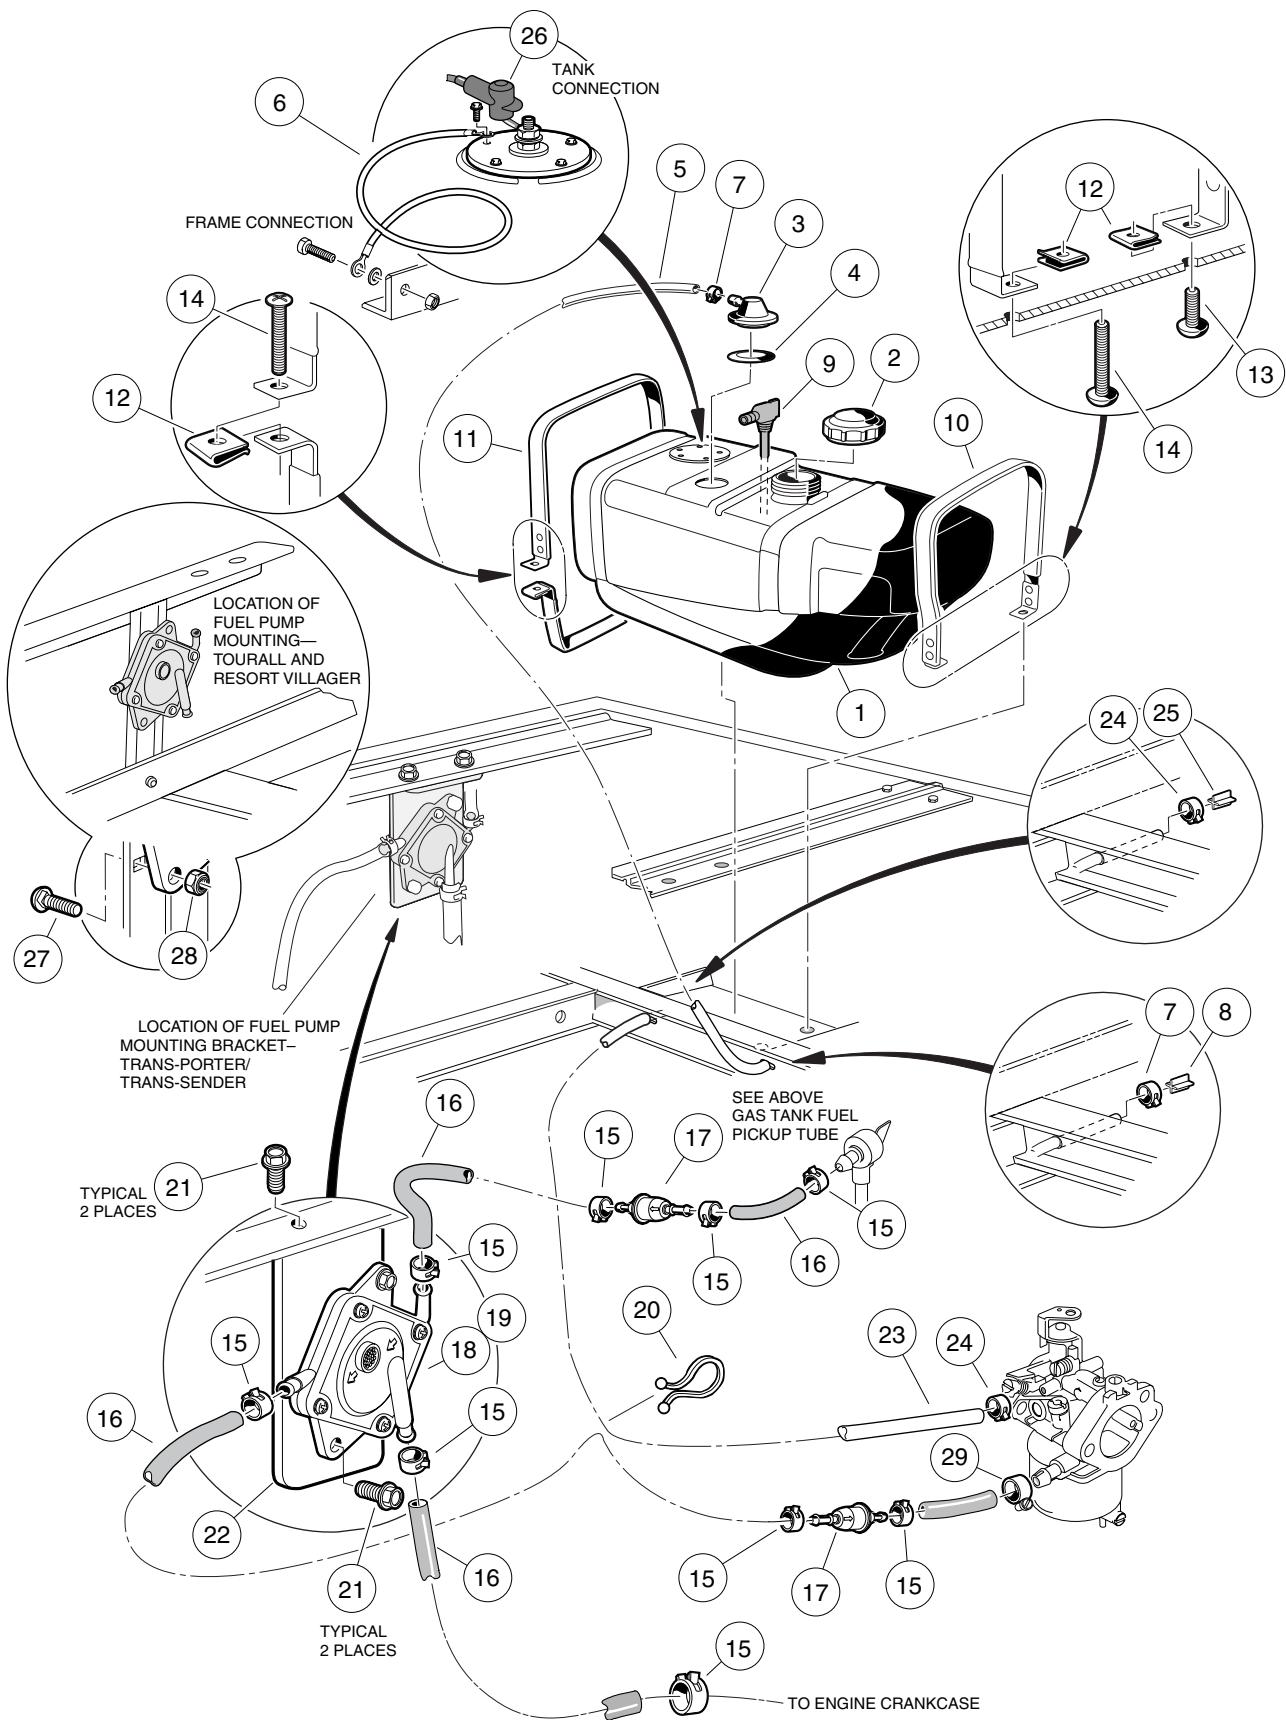


# FUEL SYSTEM

**8**

**G**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016004	KIT, FUEL TANK, WITH SENDING UNIT (INCLUDES ITEMS 2 - 9) .....	1
2	1015188	CAP, FUEL TANK, NONVENTED .....	1
3	1015143	ASSEMBLY, FUEL TANK VENT .....	1
4	1015139	GROMMET, INSULATION .....	1
5	1015137	LINE, BULK VENT (AVAILABLE BY THE FOOT) .....	A/R
6	N/A	WIRE ASSEMBLY, #16 BLACK .....	1
7	1013746	CLAMP, HOSE (GRAY) .....	2
8	101824401	BARB, VENT .....	1
9	101896901	VALVE, FUEL PICKUP TUBE WITH SHUT-OFF .....	1
10	1014928	ASSEMBLY, REAR FUEL STRAP .....	1
11	101955301	ASSEMBLY, FRONT FUEL STRAP .....	1
12	1014116	NUT, U-TYPE SPEED, 1/4 - 20 .....	3
13	8248	SCREW, PHILLIPS TRUSS HEAD, 1/4 - 20 x 3/4 .....	1
14	1011988	SCREW, PHILLIPS TRUSS HEAD, 1/4 - 20 x 2 .....	2
15	1012649	CLAMP, HOSE (RED) .....	9
16	1013692	LINE, BULK FUEL (GRAY) .....	A/R
17	102003201	FILTER, FUEL .....	2
18	1014523	PUMP, FUEL IMPULSE .....	1
19	1014524	KIT, REBUILD, FUEL IMPULSE PUMP .....	A/R
20	101987701	CLAMP, PLASTIC .....	1
21	1012285	SCREW, THREAD-ROLLING, 1/4 - 20 x 5/8 .....	4
22	101929501	BRACKET, FUEL PUMP MOUNTING (TRANS-PORTER/TRANS-SENDER ONLY) .....	1
23	1015137	LINE, BULK VENT (AVAILABLE BY THE FOOT) .....	A/R
24	1013746	CLAMP, HOSE (GRAY) .....	2
25	101824401	BARB, VENT .....	1
26	102048501	BOOT, RUBBER .....	1
27	1017203	SCREW, ROUND-HEAD SQUARE-NECK, 1/4-20 x 1 .....	2
28	8233	NUT, NYLON LOCK, 1/4-20 .....	2
29	1013687	CLAMP, HOSE, 3/8 .....	1

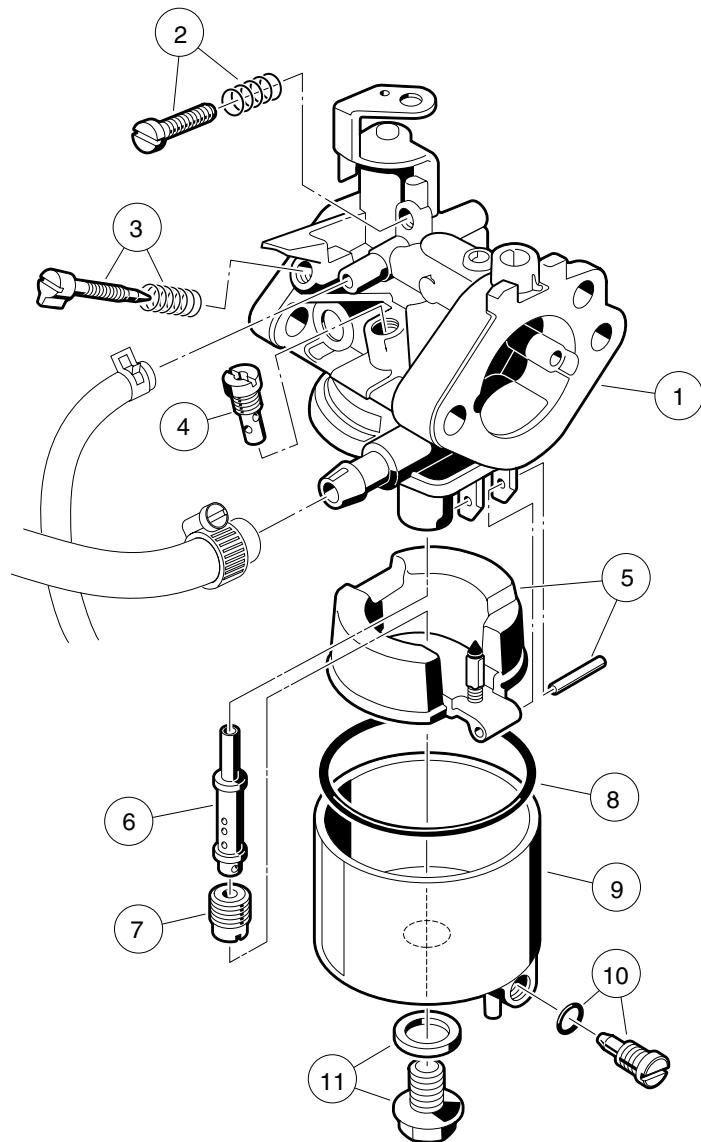


# CARBURETOR ASSEMBLY, FE290 ENGINE– TOURALL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101905601	ASSEMBLY, CARBURETOR (INCLUDES ITEMS 2 - 11) .....	1
2	1016501	ASSEMBLY, IDLE SCREW .....	1
3	N/A	ASSEMBLY, PILOT AIR SCREW .....	1
4	101973101	JET, PILOT, #40 .....	1
5	1016486	ASSEMBLY, FLOAT .....	1
6	101973201	NOZZLE, MAIN .....	1
		STANDARD JETTING:	
7	101642582	JET, MAIN, 0 - 3,000 FEET .....	1
7	101642580	JET, MAIN, 3,000 - 5,000 FEET .....	A/R
7	101642578	JET, MAIN, 5,000 - 8,000 FEET .....	A/R
7	101642575	JET, MAIN, 8,000 - 10,000 FEET .....	A/R
7	101642572	JET, MAIN, 10,000 FEET AND ABOVE .....	A/R
8	1016437	GASKET, FLOAT CHAMBER .....	1
9	1017461	ASSEMBLY, FLOAT CHAMBER (INCLUDES ITEM 10) .....	1
10	1016499	ASSEMBLY, SCREW .....	1
11	1016585	ASSEMBLY, BOLT .....	1

8

G

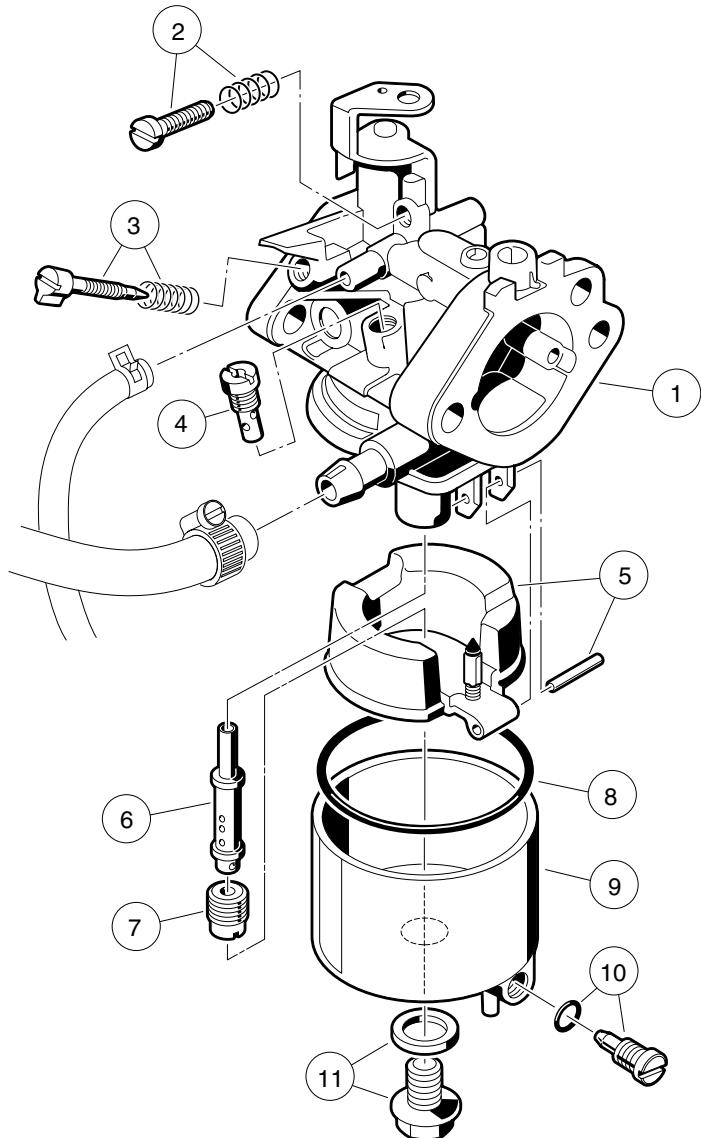


**CARBURETOR ASSEMBLY, FE350 ENGINE–  
RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER**

**8**

**G**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101905901	ASSEMBLY, CARBURETOR (INCLUDES ITEMS 2 - 11) .....	1
2	1016501	ASSEMBLY, IDLE SCREW .....	1
3	N/A	ASSEMBLY, PILOT AIR SCREW .....	1
4	101973101	JET, PILOT, #40 .....	1
5	1016486	ASSEMBLY, FLOAT .....	1
6	101973301	NOZZLE, MAIN .....	1
		STANDARD JETTING:	
7	101642585	JET, MAIN, 0 - 3,000 FEET .....	1
7	101642582	JET, MAIN, 3,000 - 5,000 FEET .....	A/R
7	101642580	JET, MAIN, 5,000 - 8,000 FEET .....	A/R
7	101642578	JET, MAIN, 8,000 - 10,000 FEET .....	A/R
7	101642575	JET, MAIN, 10,000 FEET AND ABOVE .....	A/R
8	1016437	GASKET, FLOAT CHAMBER .....	1
9	1017461	ASSEMBLY, FLOAT CHAMBER (INCLUDES ITEM 10) .....	1
10	1016499	ASSEMBLY, SCREW .....	1
11	1016585	ASSEMBLY, BOLT .....	1

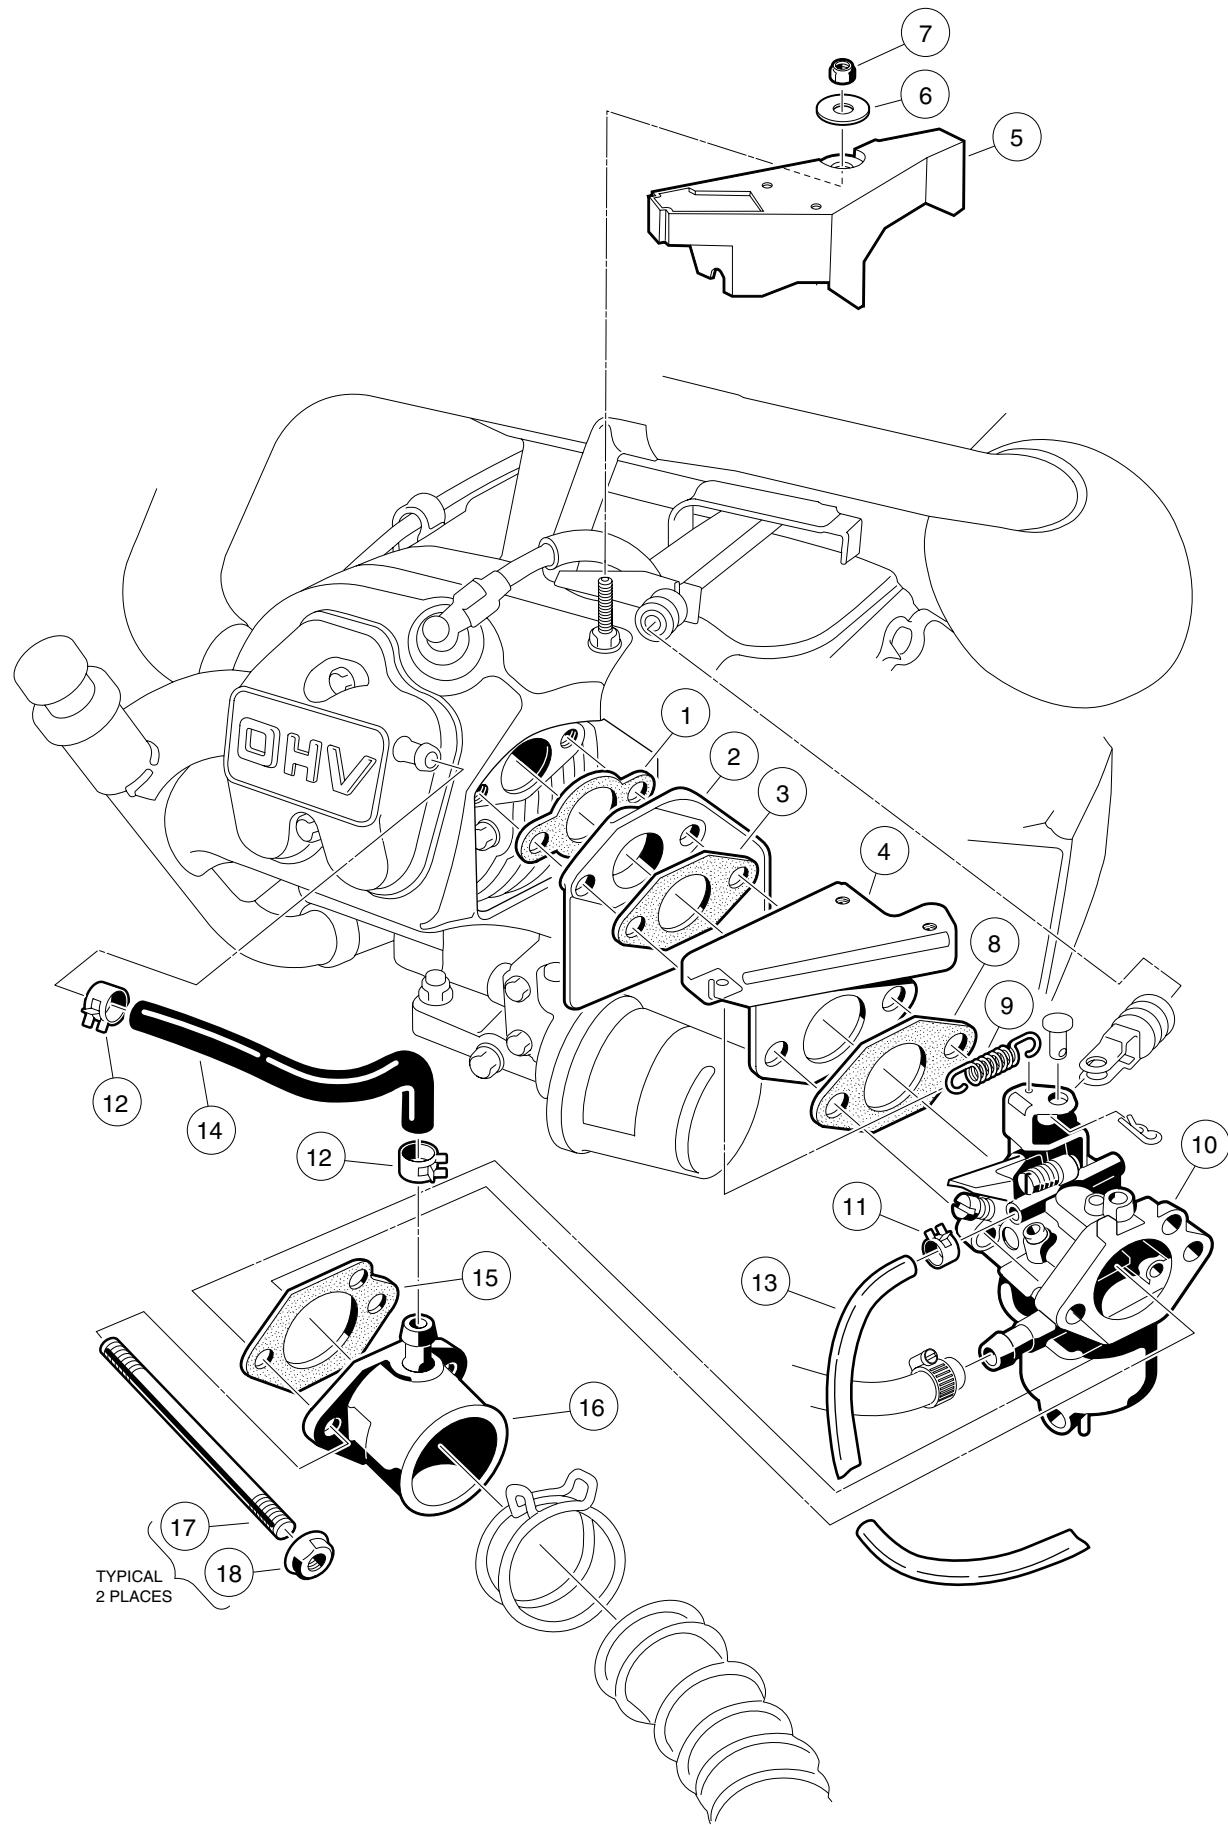


# CARBURETOR INSTALLATION

**8**

**G**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016440	GASKET, INSULATOR .....	1
2	101648102	INSULATOR, CARBURETOR .....	1
3	1016439	GASKET, CARBURETOR INSULATOR TO THROTTLE BRACKET (TOURALL ONLY) .....	1
3	101973401	GASKET, CARBURETOR INSULATOR TO THROTTLE BRACKET (RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER) .....	1
4	1016444	BRACKET, THROTTLE .....	1
5	101820201	GUARD, GOVERNOR (TOURALL ONLY) .....	1
6	1011697	WASHER, FLAT, 5/16 (TOURALL ONLY) .....	1
7	101887601	NUT, NYLON LOCK, M6 x 1 (TOURALL ONLY) .....	1
8	1016441	GASKET, THROTTLE BRACKET TO CARBURETOR .....	1
9	1016582	SPRING, THROTTLE RETURN .....	1
10	101905601	ASSEMBLY, CARBURETOR (TOURALL ONLY) .....	1
10	101905901	ASSEMBLY, CARBURETOR (RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER) ...	1
11	1013746	CLAMP, HOSE (GRAY) .....	1
12	1017466	CLAMP, HOSE (BRONZE) .....	2
13	1015137	LINE, BULK VENT .....	A/R
14	1016572	TUBE, CRANKCASE VENT .....	1
15	1016438	GASKET, CARBURETOR TO INTAKE MANIFOLD .....	1
16	1016480	PIPE, INTAKE .....	1
17	101649002	SCREW, 2-ENDED STUD, M6 x 1 x 90MM .....	2
18	1016547	NUT, FLANGED, M6 x 1 .....	2

**8**  
**G**

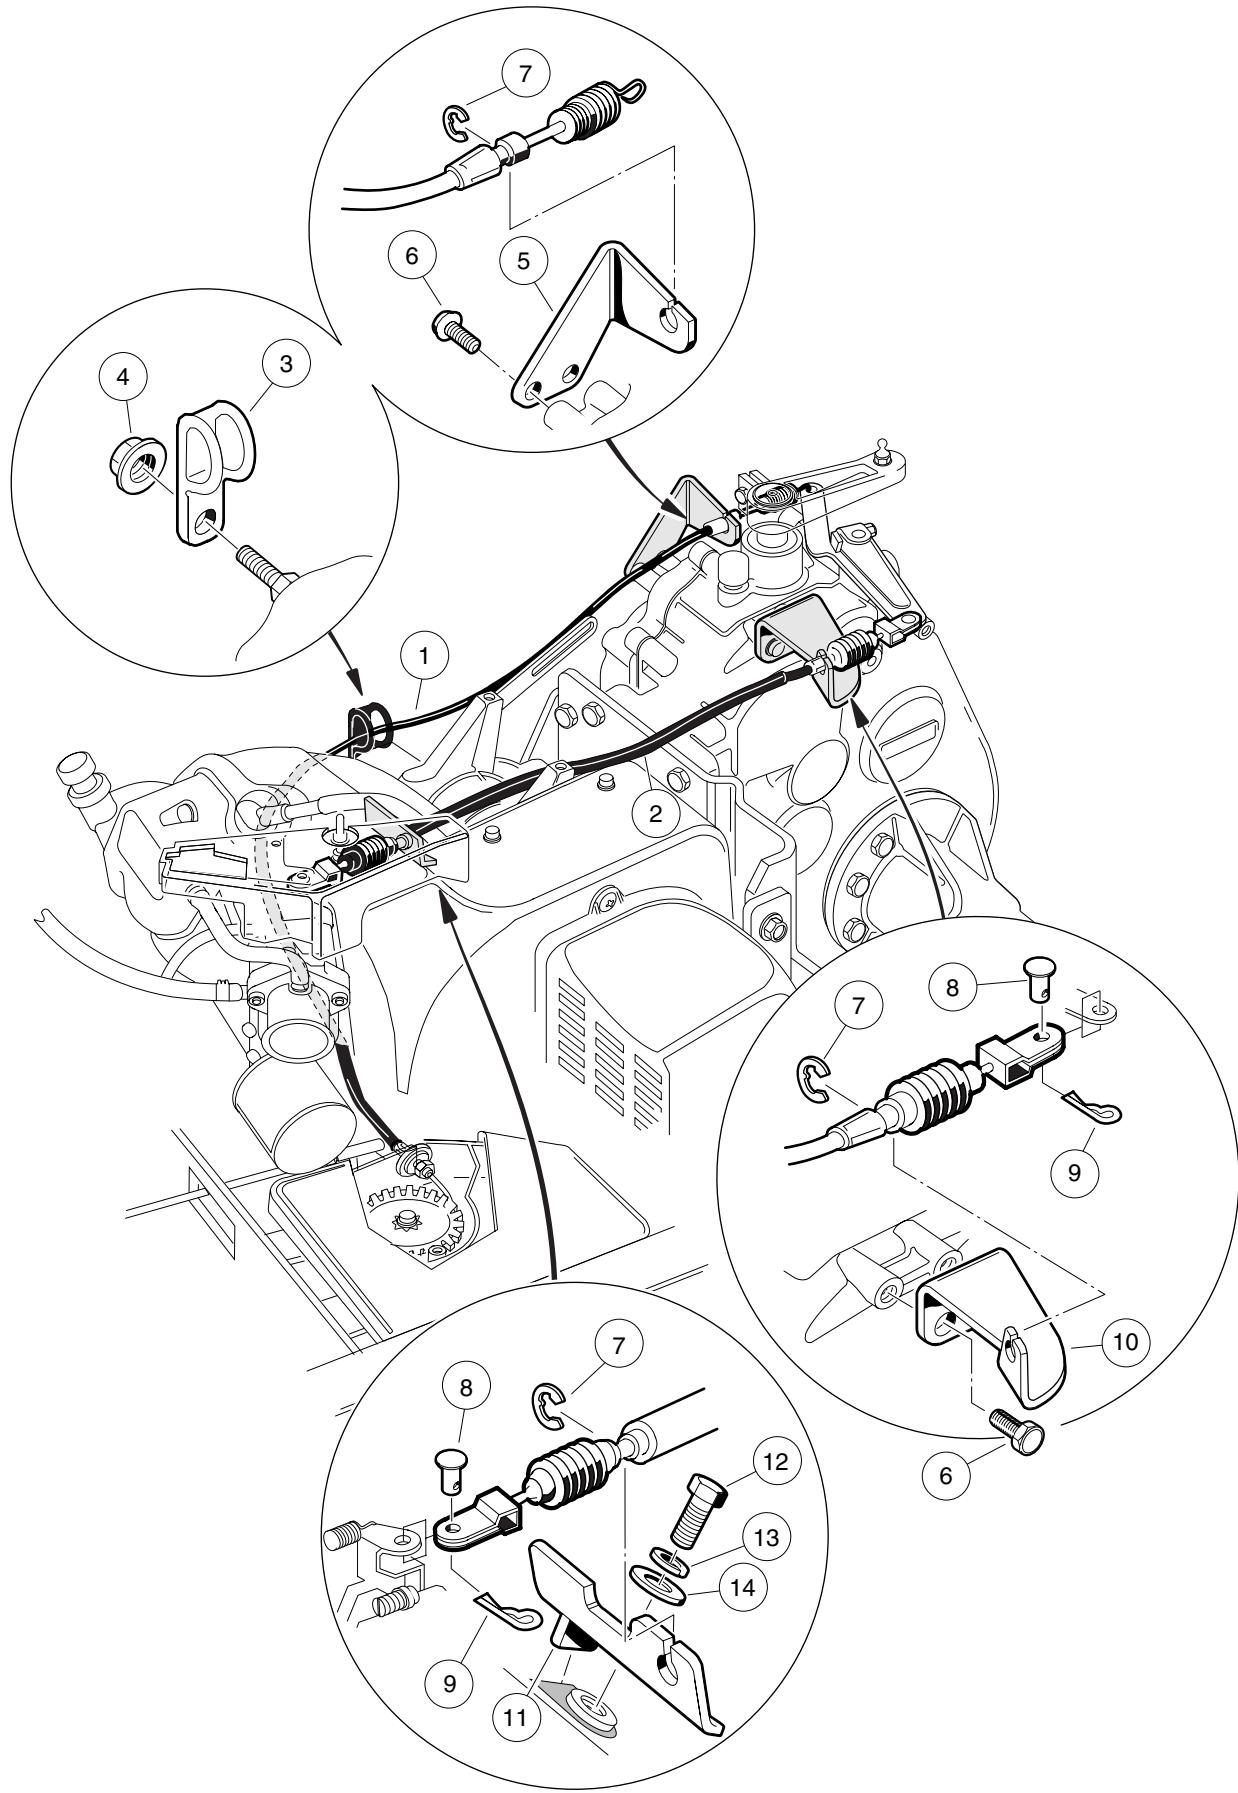


# GOVERNOR AND ACCELERATOR CABLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101832501	CABLE, ACCELERATOR .....	1
2	101832401	CABLE, GOVERNOR (TOURALL ONLY) .....	1
2	101832402	CABLE, GOVERNOR (RESORT VILLAGER AND TRANS-PORTER/TRANS-SENDER) .....	1
3	1013700	CLAMP, CABLE RETAINING .....	2
4	1016546	NUT, FLANGED HEX, M8 x 1.25 .....	2
5	101832301	BRACKET, ACCELERATOR SUPPORT .....	1
6	1012285	SCREW, THREAD ROLLING, 1/4 - 20 x 5/8 .....	4
7	1016202	E-RING .....	3
8	1015408	PIN, GOVERNOR CABLE CLEVIS .....	2
9	1014413	PIN, HAIR SPRING COTTER, 1/8 I.D. x 5/8 .....	2
10	101832201	BRACKET, SUPPORT .....	1
11	1015845	BRACKET, GOVERNOR CABLE ENGINE .....	1
12	101903501	SCREW, HEX HEAD CAP, M8 x 1.25 x 24 MM .....	1
13	7174	WASHER, LOCK, 5/16 .....	1
14	1011697	WASHER, FLAT, 5/16 .....	1


8

G

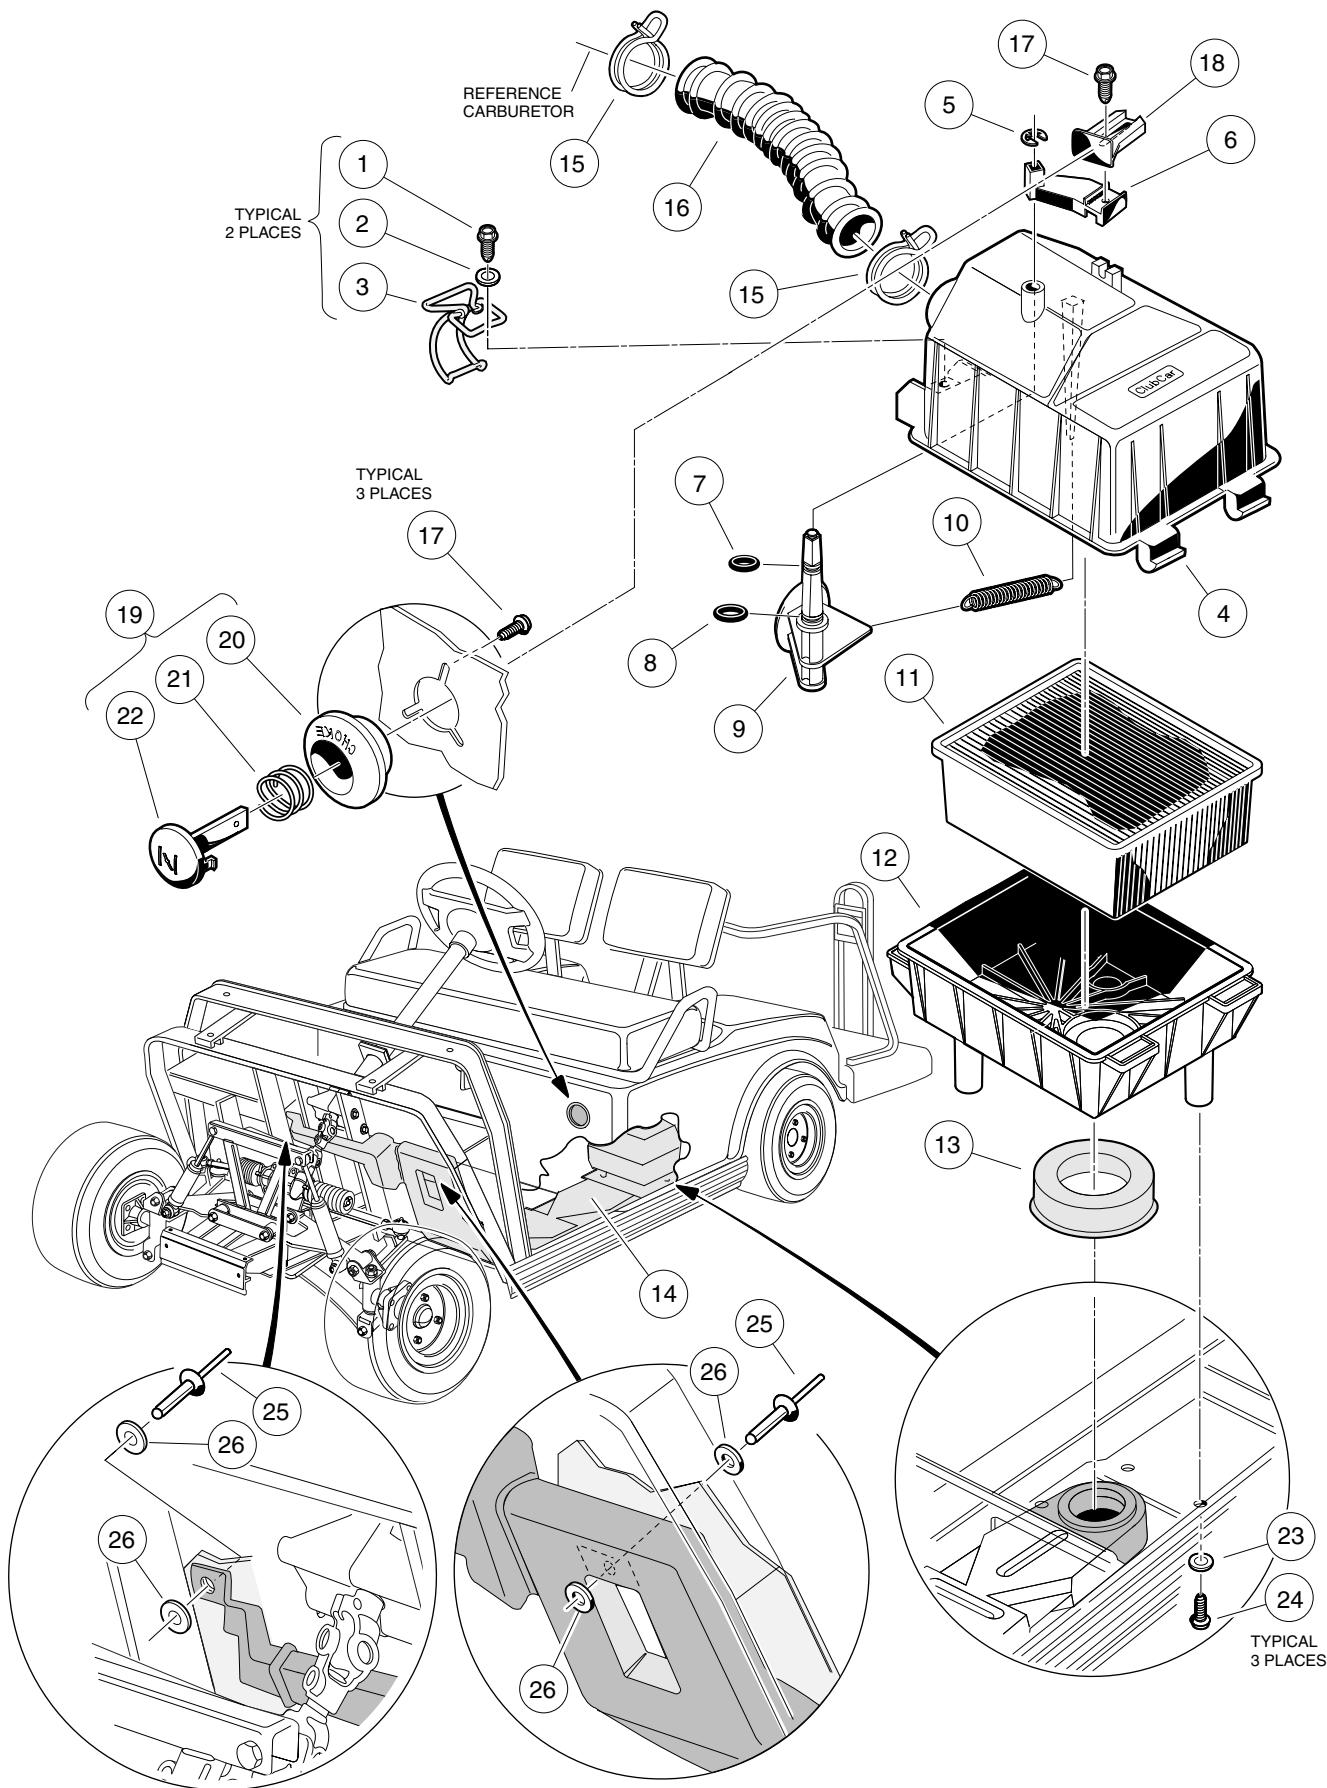

# INTAKE DUCT, CHOKE, AND AIR BOX ASSEMBLY— TOURALL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	101821501	ASSEMBLY, AIR BOX (INCLUDES ITEMS 1 - 13) .....	1
1	101804301	SCREW, HI-LO HEX HEAD, #8 - 1/2 .....	2
2	101881701	WASHER, STAINLESS STEEL, #8 .....	2
3	101925701	LATCH, WIRE .....	2
4	101972801	ASSEMBLY, AIR BOX TOP (INCLUDES ITEMS 5 - 10) .....	1
5	101813001	E-CLIP .....	1
6	101917601	LEVER, CHOKE .....	1
7	N/A	O-RING, 5/16 (RED) .....	1
8	N/A	O-RING, 3/8 (GREEN) .....	1
9	N/A	VALVE, CHOKE .....	1
10	101812301	SPRING, RETURN .....	1
11	1015426	FILTER, AIR .....	1
12	101811901	BOTTOM, AIR BOX .....	1
13	101921501	SEAL, INTAKE .....	1
14	101958101	ASSEMBLY, AIR DUCT .....	1
15	101971301	CLAMP, HOSE (AIR INTAKE) .....	2
16	101837101	HOSE, INTAKE .....	1
17	101850301	SCREW, HI-LO, #12 x 1/2 .....	4
18	101917701	POSITIONER, CHOKE .....	1
19	101805701	ASSEMBLY, CHOKE BUTTON (INCLUDES ITEMS 20, 21 AND 22) .....	1
20	101811501	GUIDE, CHOKE LEVER .....	1
21	101856201	SPRING, COMPRESSION .....	1
22	101811401	LEVER, CHOKE .....	1
23	332	WASHER, FLAT, 1/4 .....	3
24	1015752	SCREW, HI-LO, #12 - 16 x 5/8 .....	3
25	1606	RIVET, POP, 3/16 .....	2
26	183	WASHER, FLAT, #10 .....	4
	101971001	KIT, AIR DUCT REPAIR (NOT SHOWN) .....	A/R

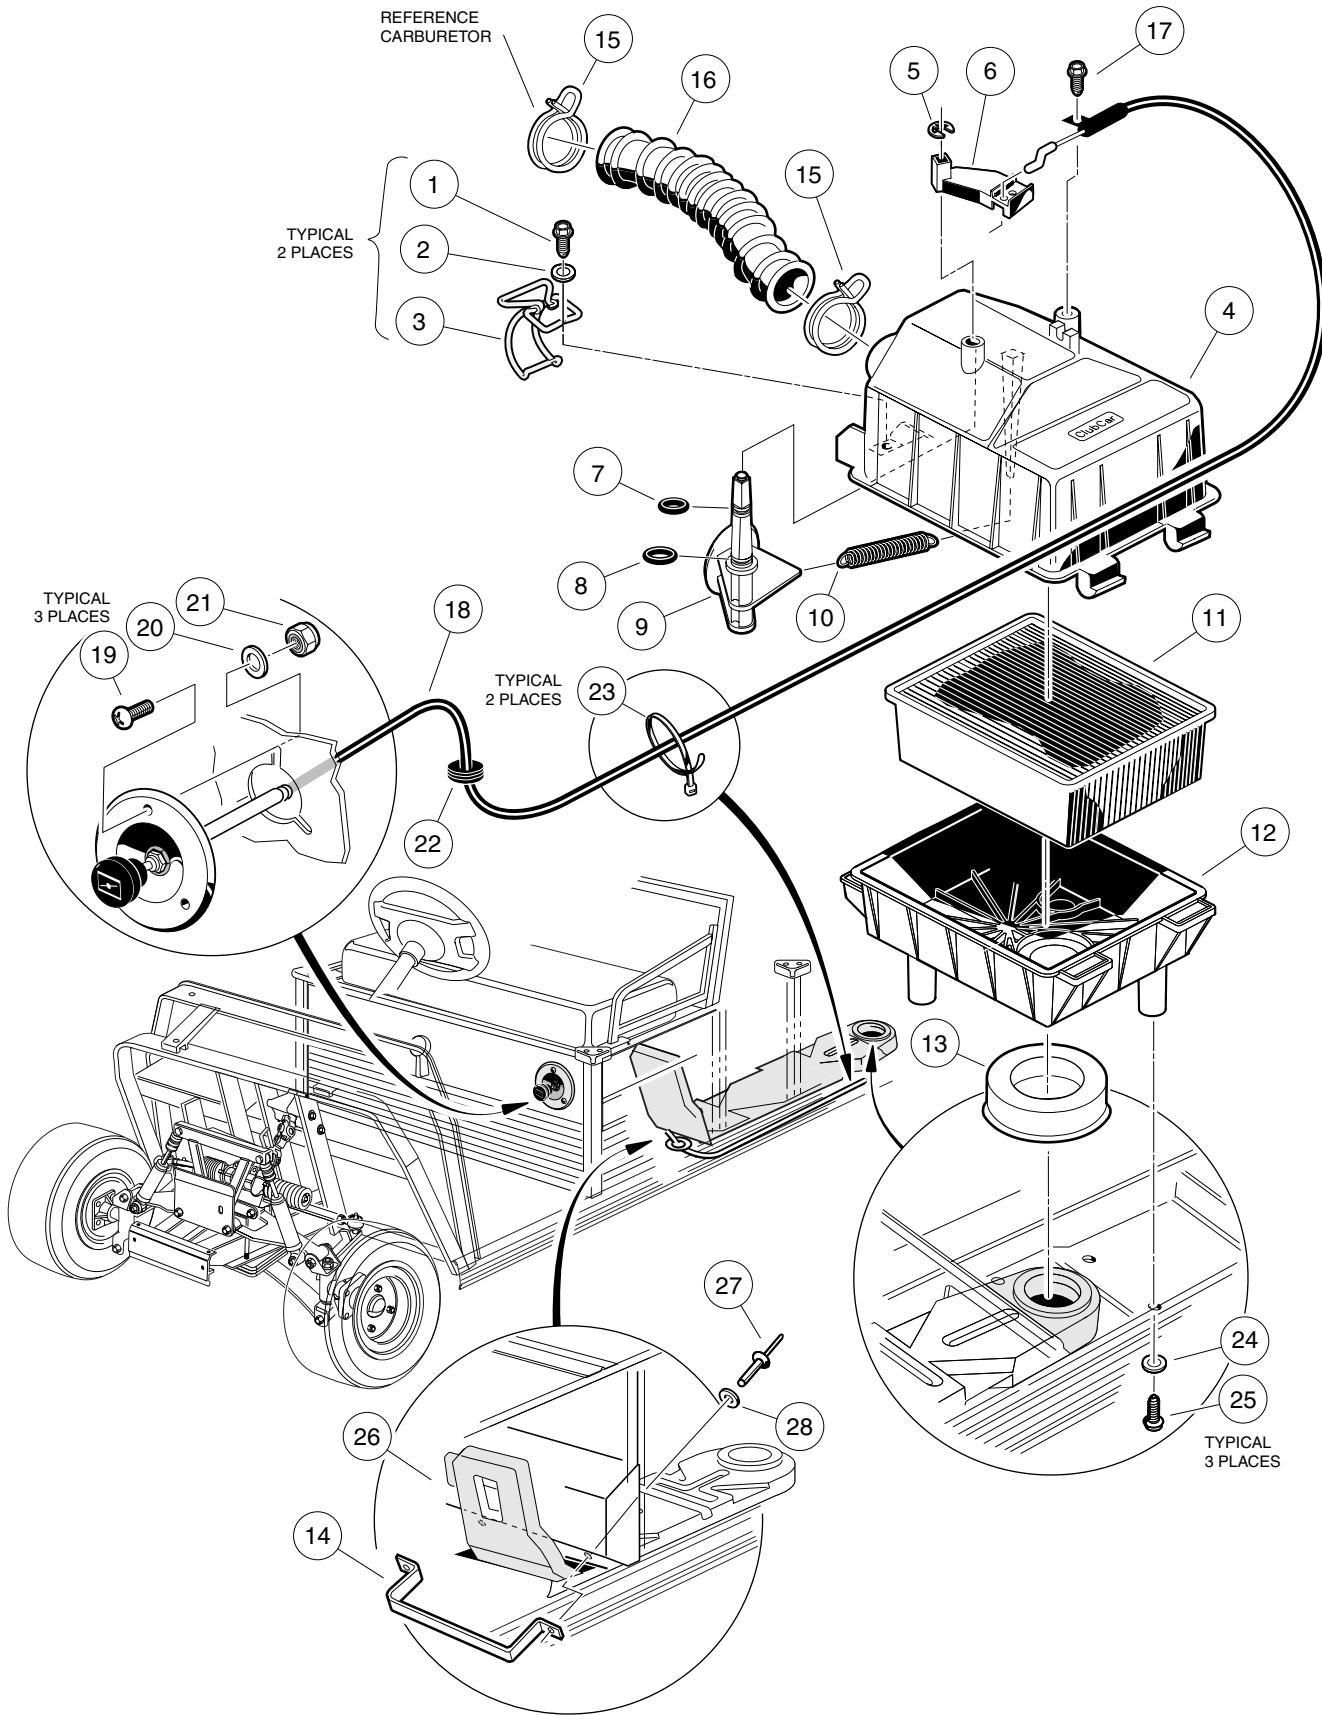

# INTAKE DUCT, CHOKE, AND AIR BOX ASSEMBLY— RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	101821501	ASSEMBLY, AIR BOX (INCLUDES ITEMS 1 - 13) .....	1
1	101804301	SCREW, HI-LO HEX HEAD, #8 - 1/2 .....	2
2	101881701	WASHER, STAINLESS STEEL, #8 .....	2
3	101925701	LATCH, WIRE .....	2
4	101972801	ASSEMBLY, AIR BOX TOP (INCLUDES ITEMS 5 - 10) .....	1
5	101813001	E-CLIP .....	1
6	101917601	LEVER, CHOKE .....	1
7	N/A	O-RING, 5/16 (RED) .....	1
8	N/A	O-RING, 3/8 (GREEN) .....	1
9	N/A	VALVE, CHOKE .....	1
10	101812301	SPRING, RETURN .....	1
11	1015426	FILTER, AIR .....	1
12	101811901	BOTTOM, AIR BOX .....	1
13	101921501	SEAL, INTAKE .....	1
14	101825701	BRACKET, RETAINING .....	1
15	101971301	CLAMP, HOSE (AIR INTAKE) .....	2
16	101837101	HOSE, INTAKE .....	1
17	101804301	SCREW, HEX HEAD HI-LO, #8 x 1/2 .....	1
18	101926802	CABLE, CHOKE .....	1
19	1631	SCREW, PAN HEAD, #10 - 24 x 3/4 .....	3
20	183	WASHER, #10 .....	3
21	1012438	NUT, NYLON LOCK, #10 - 24 .....	3
22	1015139	GROMMET (TRANS-PORTER/TRANS-SENDER ONLY) .....	1
23	8168	TIE, WIRE .....	2
24	332	WASHER, FLAT, 1/4 .....	3
25	1015752	SCREW, HI-LO, #12 - 16 x 5/8 .....	3
26	101811301	DUCT, AIR .....	1
27	7973	RIVET, POP, 3/16 .....	2
28	183	WASHER, FLAT, #10 .....	2
	101971001	KIT, AIR DUCT REPAIR (NOT SHOWN) .....	A/R

8

G




# **EXHAUST SYSTEM**

---

**9**

**G**

**9**  
**G**

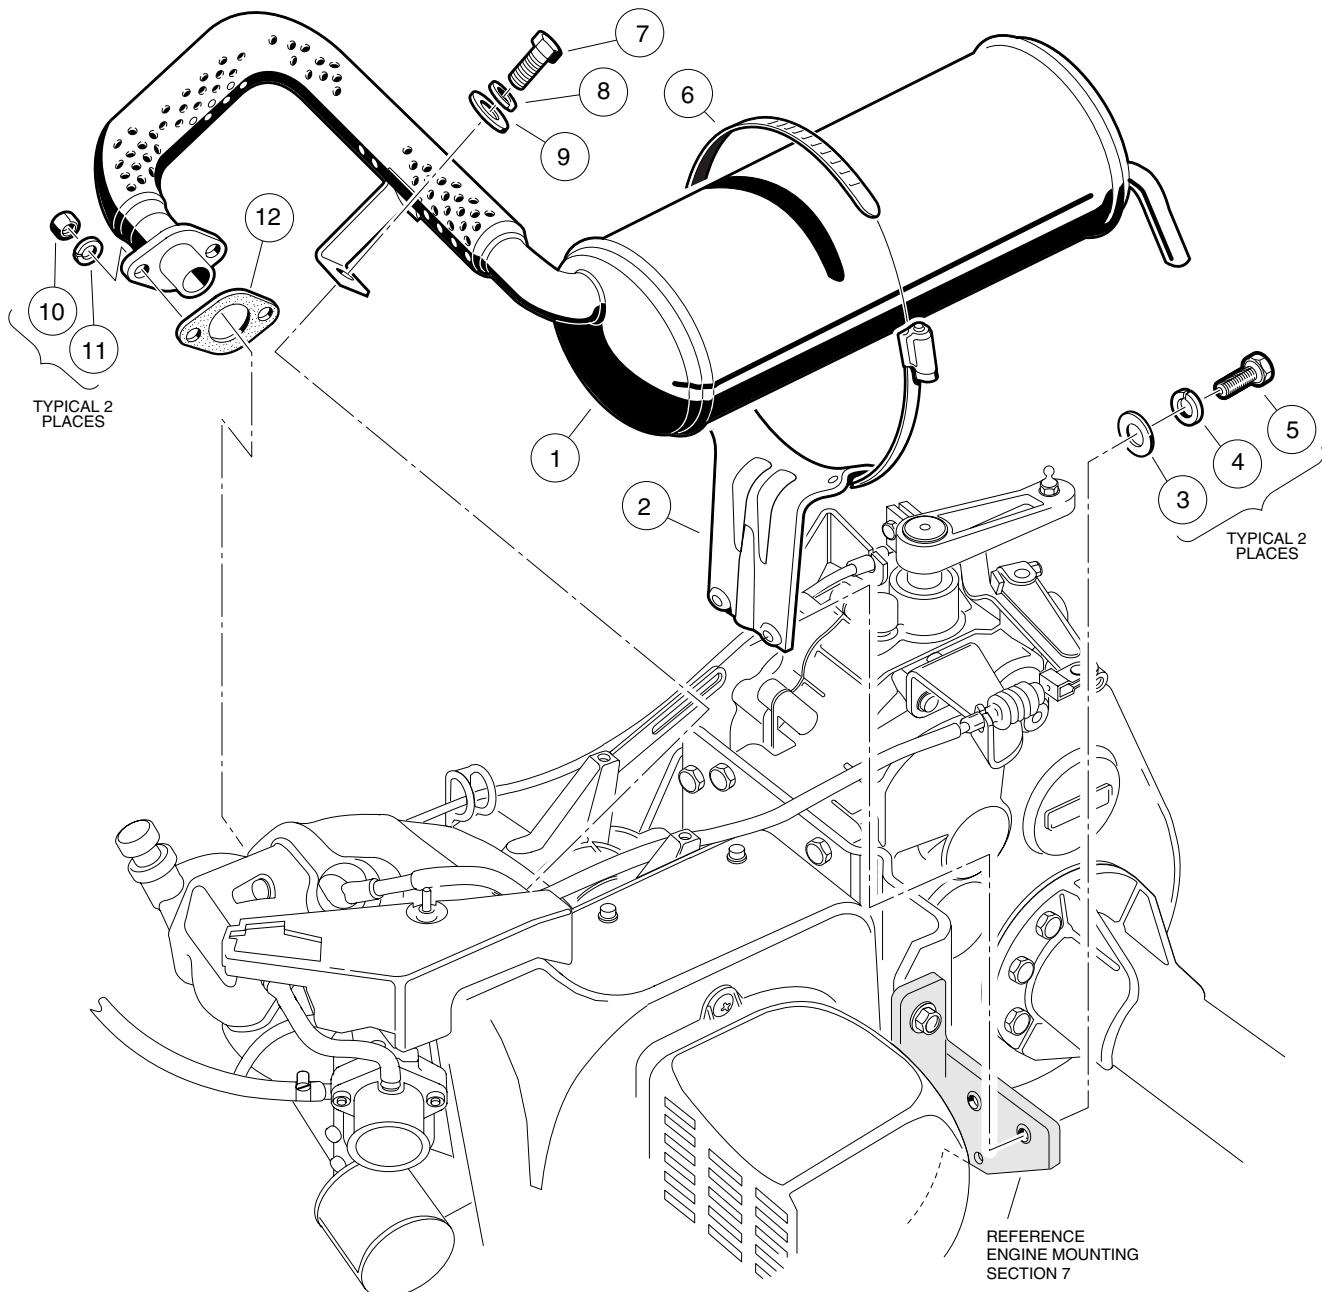


# EXHAUST SYSTEM, FE290– TOURALL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101859301	SYSTEM, EXHAUST .....	1
2	1015814	BRACKET, MUFFLER MOUNTING .....	1
3	332	WASHER, FLAT, 1/4 .....	2
4	451	WASHER, LOCK, 1/4 .....	2
5	7847	SCREW, HEX HEAD CAP, 1/4 - 20 x 3/4 .....	2
6	1017689	CLAMP, MUFFLER .....	1
7	1012830	SCREW, HEX HEAD CAP, M8 x 1.25 x 22MM .....	1
8	7174	WASHER, LOCK, 5/16 .....	1
9	1015075	WASHER, FLAT, 5/16 .....	1
10	1012528	NUT, HEX, M8 x 1.25 .....	2
11	1013734	WASHER, LOCK, 8MM .....	2
12	1015330	GASKET, EXHAUST .....	1

9

G

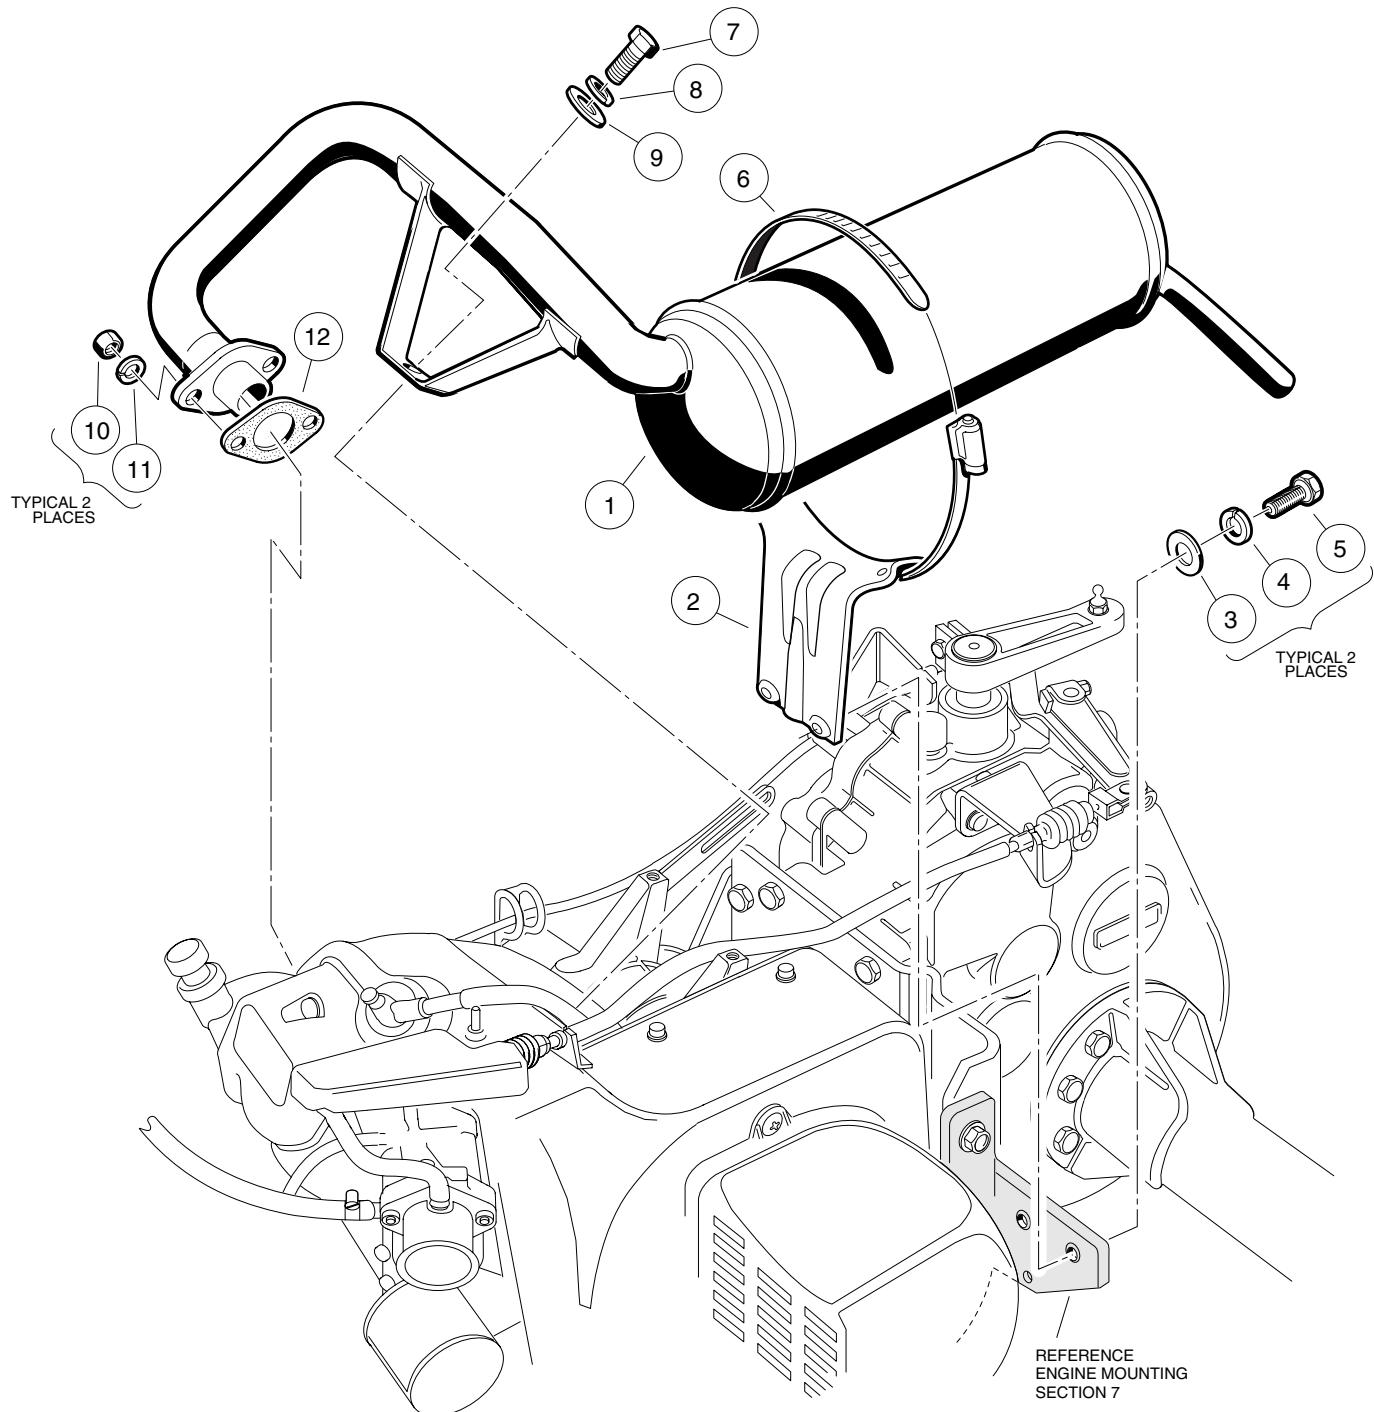**9****G**

**EXHAUST SYSTEM, FE350–  
RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101859401	SYSTEM, EXHAUST .....	1
2	1015814	BRACKET, MUFFLER MOUNTING .....	1
3	332	WASHER, FLAT, 1/4 .....	2
4	451	WASHER, LOCK, 1/4 .....	2
5	7847	SCREW, HEX HEAD CAP, 1/4 - 20 x 3/4 .....	2
6	1017689	CLAMP, MUFFLER .....	1
7	1012830	SCREW, HEX HEAD CAP, M8 x 1.25 x 22MM .....	1
8	7174	WASHER, LOCK, 5/16 .....	1
9	1015075	WASHER, FLAT, 5/16 .....	1
10	1012528	NUT, HEX, M8 x 1.25 .....	2
11	1013734	WASHER, LOCK, 8MM .....	2
12	1016904	GASKET, EXHAUST .....	1

9

G




# TORQUE CONVERTER

---

10

G

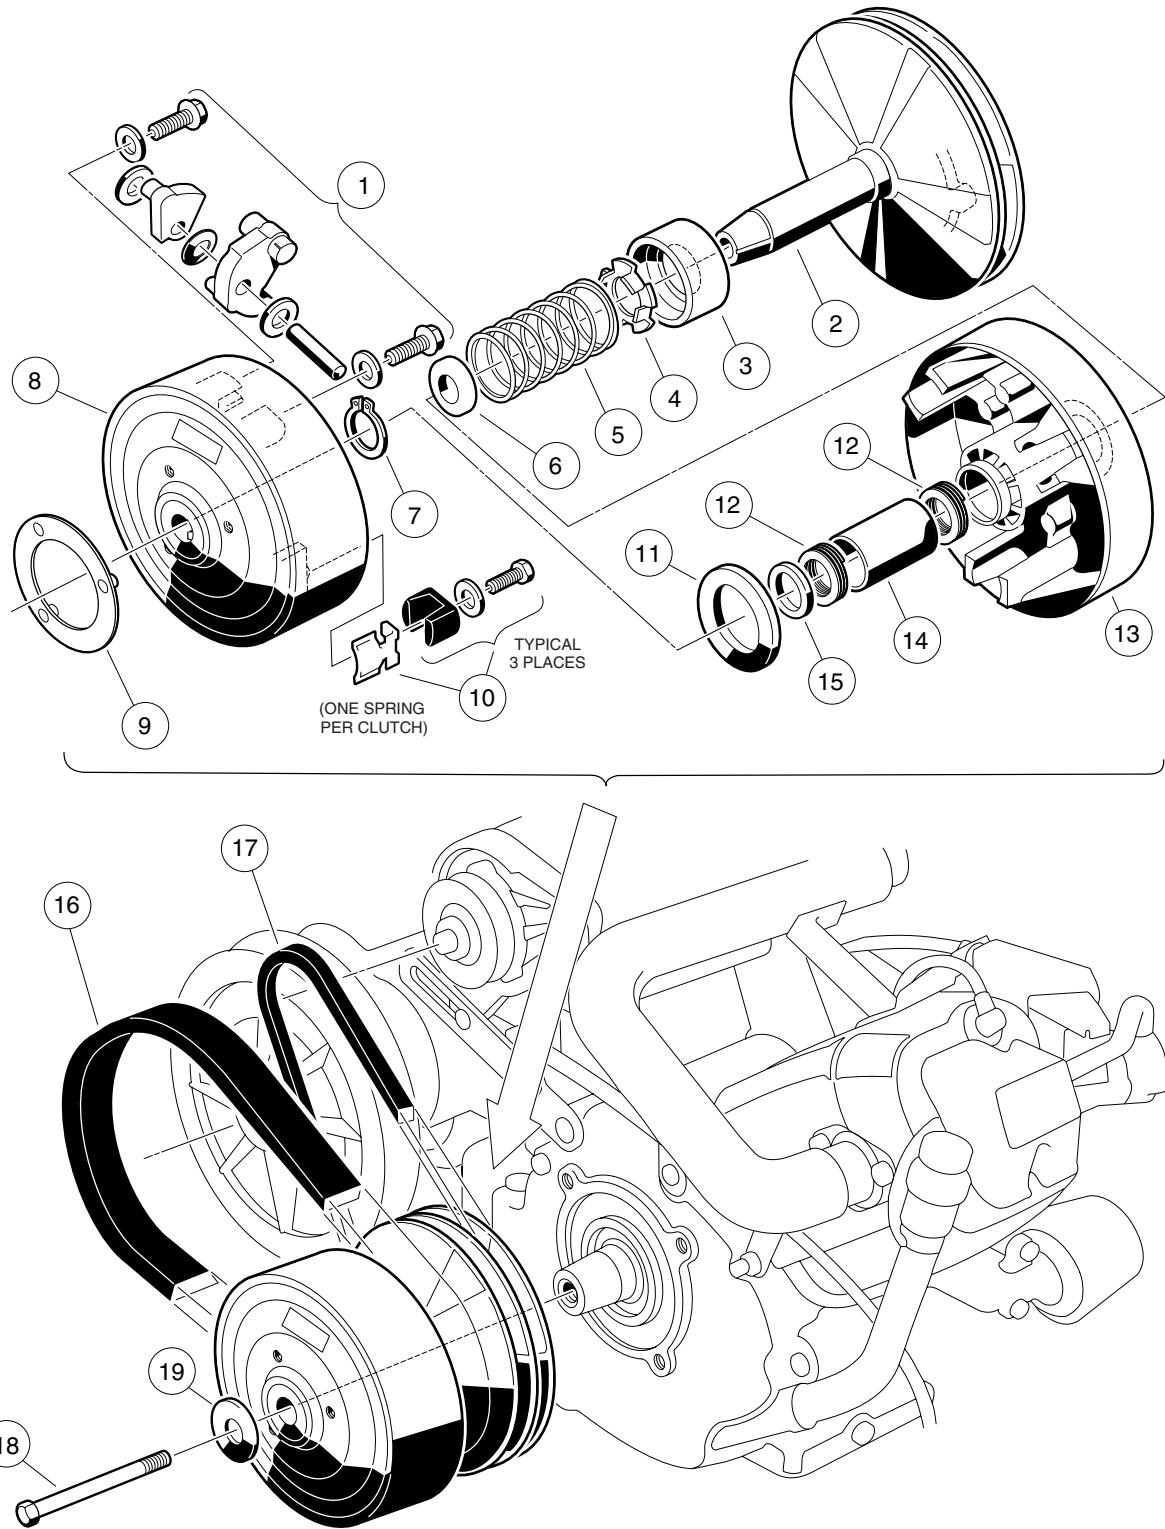


# DRIVE CLUTCH

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	101833902	ASSEMBLY, DRIVE CLUTCH (TOURALL ONLY) (INCLUDES ITEMS 1 - 15) .....	1
	101833904	ASSEMBLY, DRIVE CLUTCH (RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER) (INCLUDES ITEMS 1 - 15) .....	1
1	1016801	KIT, DRIVE CLUTCH WEIGHT .....	1
2	101929801	ASSEMBLY, FIXED FACE (TOURALL ONLY) .....	1
2	101738301	ASSEMBLY, FIXED FACE (RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER) ...	1
3	1014049	BEARING, IDLER .....	1
4	1014050	SPRING, RETAINER .....	1
5	1014051	SPRING, DRIVE CLUTCH—BLACK (TOURALL ONLY) .....	1
5	1016901	SPRING, DRIVE CLUTCH—DARK GREEN (RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER) .....	1
6	1016289	SPACER, FIXED FACE SHAFT .....	1
7	1014057	RING, RETAINING .....	1
8	1014059	ASSEMBLY, DRIVE HUB .....	1
9	101925601	PLUG, DRIVE CLUTCH .....	1
10	1014453	KIT, DRIVE CLUTCH BUTTON (INCLUDES ONE SPRING AND THREE EACH OF THE SCREW, WASHER, AND BUTTON) .....	1
11	1014058	WASHER, THRUST .....	1
12	1014056	RING, SPIRAL BACK-UP .....	2
13	1014052	ASSEMBLY, MOVEABLE FACE (INCLUDES ITEMS 14 AND 15) .....	1
14	N/A	BUSHING .....	1
15	1014055	RETAINER .....	1
16	1016203	BELT, DRIVE (TOURALL ONLY) .....	1
16	1017188	BELT, DRIVE (RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER) .....	1
17	101916701	BELT, STARTER/GENERATOR .....	1
18	101916501	SCREW, HEX HEAD CAP (LEFT HAND THREADS), 3/8 - 24 x 5-1/2 .....	1
19	1017328	WASHER, MOUNTING—GREEN .....	1

**10**

**G**

**10**  
**G**

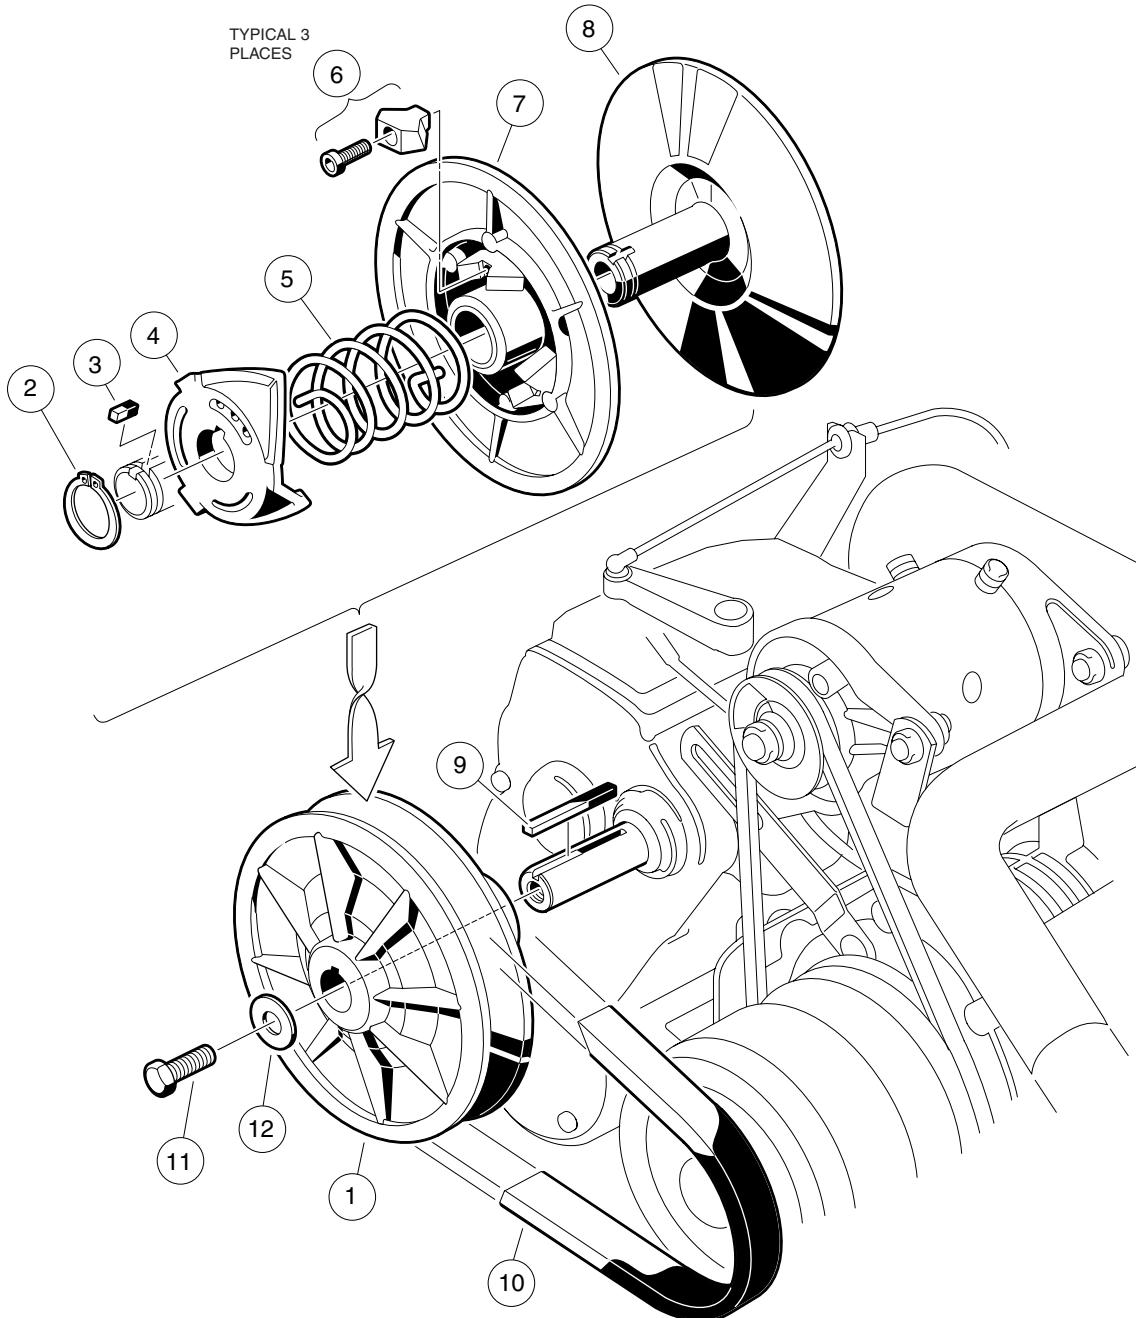

# DRIVEN CLUTCH

10

G


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101834001	ASSEMBLY, DRIVEN CLUTCH (INCLUDES ITEMS 2 - 8) .....	1
2	1014080	RING, RETAINING .....	1
3	1014078	KEY .....	1
4	1017686	CAM .....	1
5	101836201	SPRING—GREEN .....	1
6	1014454	KIT, BUTTON (INCLUDES 3 BUTTONS AND 3 SCREWS) .....	1
7	1014072	ASSEMBLY, MOVEABLE FACE, WITH BUSHING .....	1
8	1014070	ASSEMBLY, FIXED FACE .....	1
9	101833401	KEY, SQUARE TRANSMISSION .....	1
10	1016203	BELT, DRIVE (TOURALL ONLY) .....	1
10	1017188	BELT, DRIVE (RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER) .....	1
11	7173	SCREW, HEX HEAD CAP, 5/16 - 18 x 3/4 .....	1
12	1017327	WASHER, MOUNTING—YELLOW .....	1



# **UNITIZED TRANSAXLE– GASOLINE VEHICLE**

---

**11**  
**G**

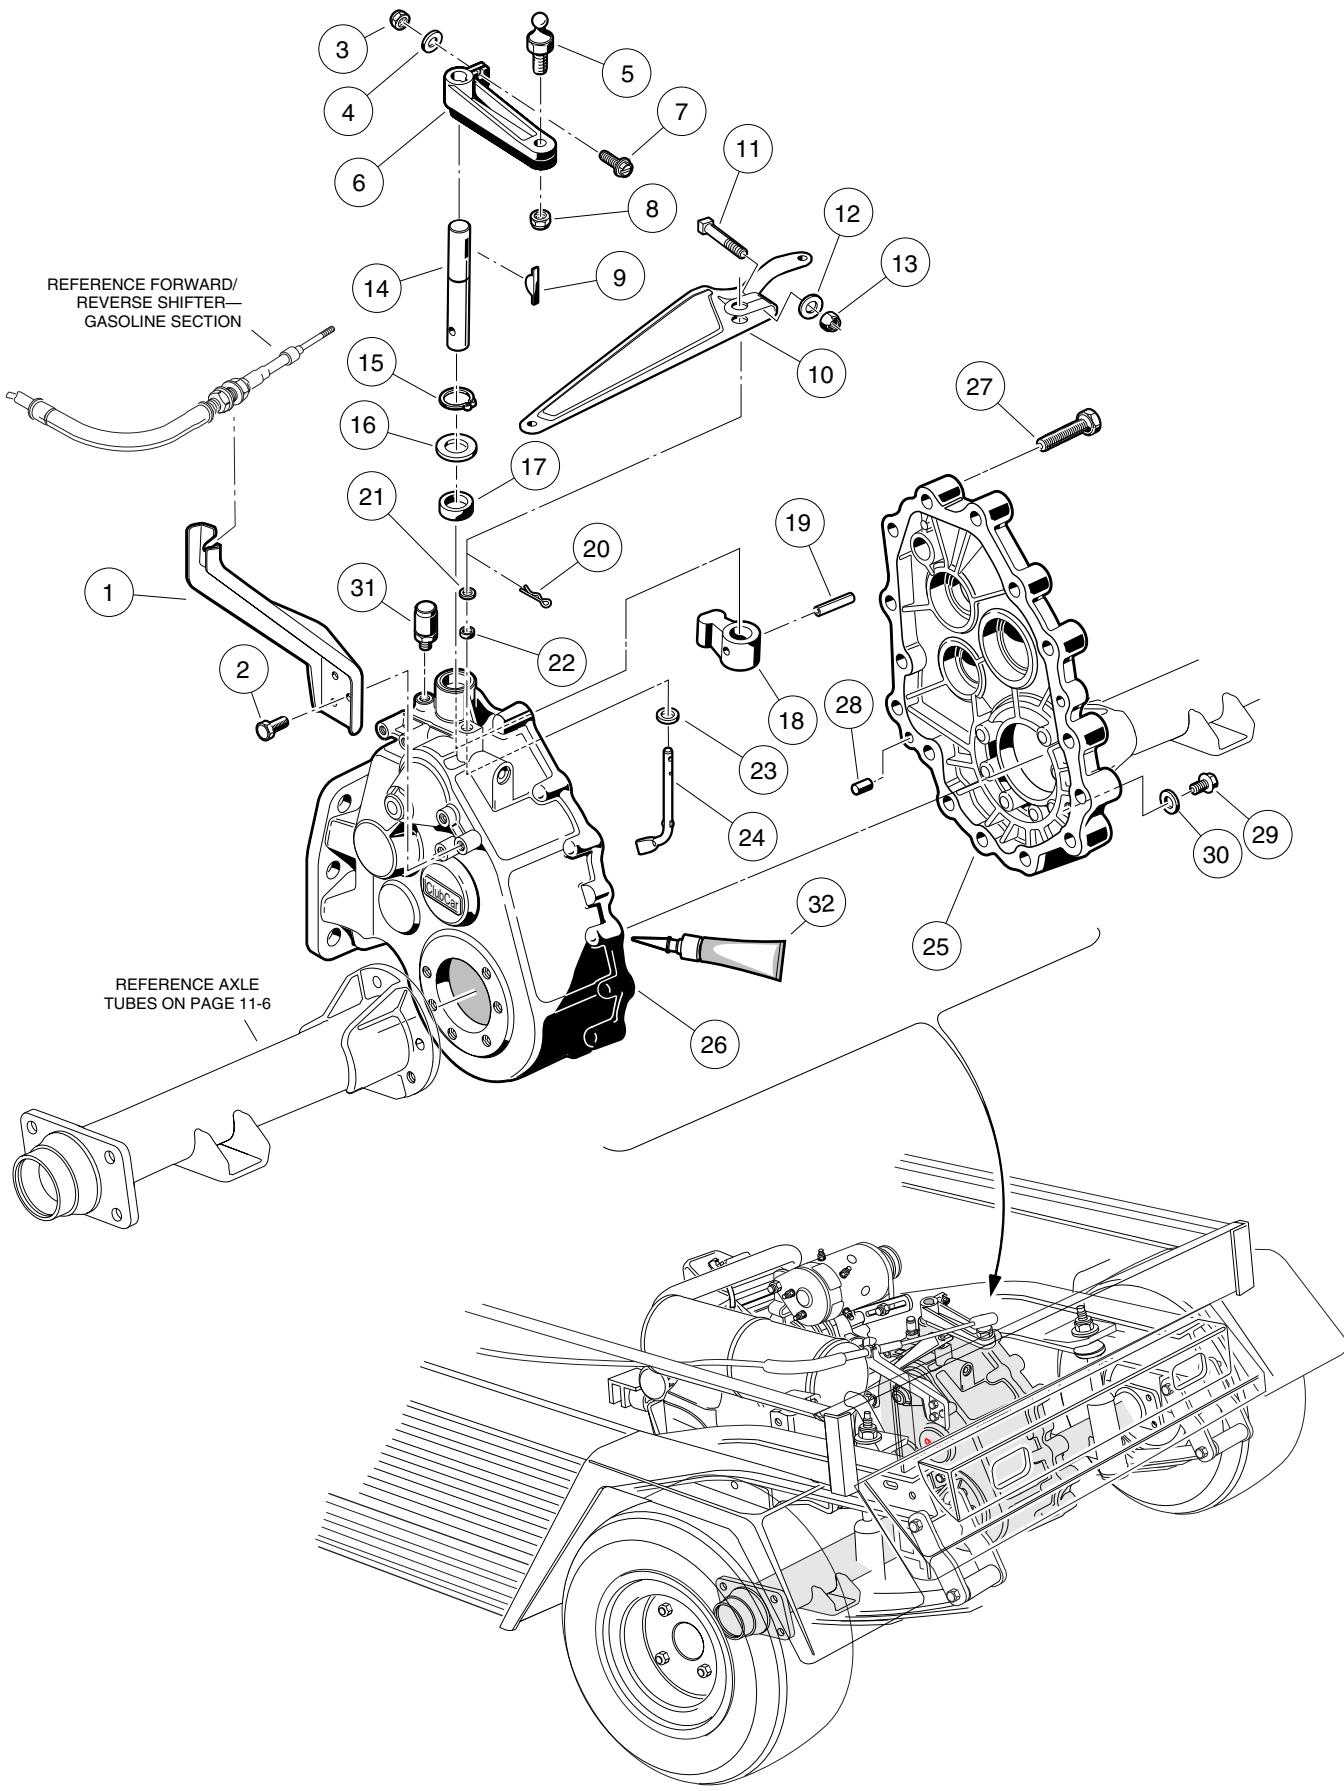


# UNITIZED TRANSAXLE, GASOLINE VEHICLE— GEAR CASES AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101922601	BRACKET, TRANSMISSION CABLE SUPPORT .....	1
2	1012285	SCREW, THREAD ROLLING, 1/4 - 20 x 5/8 .....	3
3	1013061	NUT, NYLON LOCK, #10 - 32 .....	1
4	183	WASHER, FLAT, #10 .....	1
5	1010954	STUD, BALL, 1/4 - 28 x 9/16 .....	1
6	1016341	LEVER, TRANSMISSION SHIFTER .....	1
7	1017082	SCREW, HEX WASHER HEAD, #10 - 32 x 3/4 .....	1
8	8717	NUT, NYLON LOCK, 1/4 - 28 .....	1
9	1017231	KEY, WOODRUFF .....	1
10	101834801	ARM, GOVERNOR LEVER .....	1
11	101886101	SCREW, SQUARE HEAD, 1/4 - 20 x 1 .....	1
12	1014007	WASHER, TYPE B, 1/4 .....	1
13	8233	NUT, NYLON LOCK, 1/4 - 20 .....	1
	101833601	TRANSAXLE, UNITIZED (INCLUDES ITEMS 14 - 90)	1
14	101890201	SHAFT, SHIFTER .....	1
15	101927301	RING, SNAP .....	1
16	101892901	WASHER, FLAT .....	1
17	101927201	SEAL, OIL .....	1
18	101890101	LEVER, SHIFTER .....	1
19	1012752	PIN, ROLL .....	1
20	101928601	PIN, COTTER .....	1
21	1016513	WASHER, FLAT .....	1
22	101927101	SEAL, OIL .....	1
23	101893801	WASHER .....	1
24	101891301	ARM, PIVOT .....	1
25	101890601	GEAR CASE (PASSENGER SIDE) .....	1
26	101890501	GEAR CASE (DRIVER SIDE) .....	1
27	101926901	BOLT, FLANGED, M8 x 1.25 x 40MM .....	15
28	1012896	PIN, DOWEL .....	2
29	1013759	PLUG, DRAIN (INCLUDES ITEM 30) .....	2
30	1016432	GASKET .....	1
31	1012711	BREATHER .....	1
32	101928701	GASKET, LIQUID, 8.8 OZ. (250 GRAMS) .....	A/R

**11**

**G**

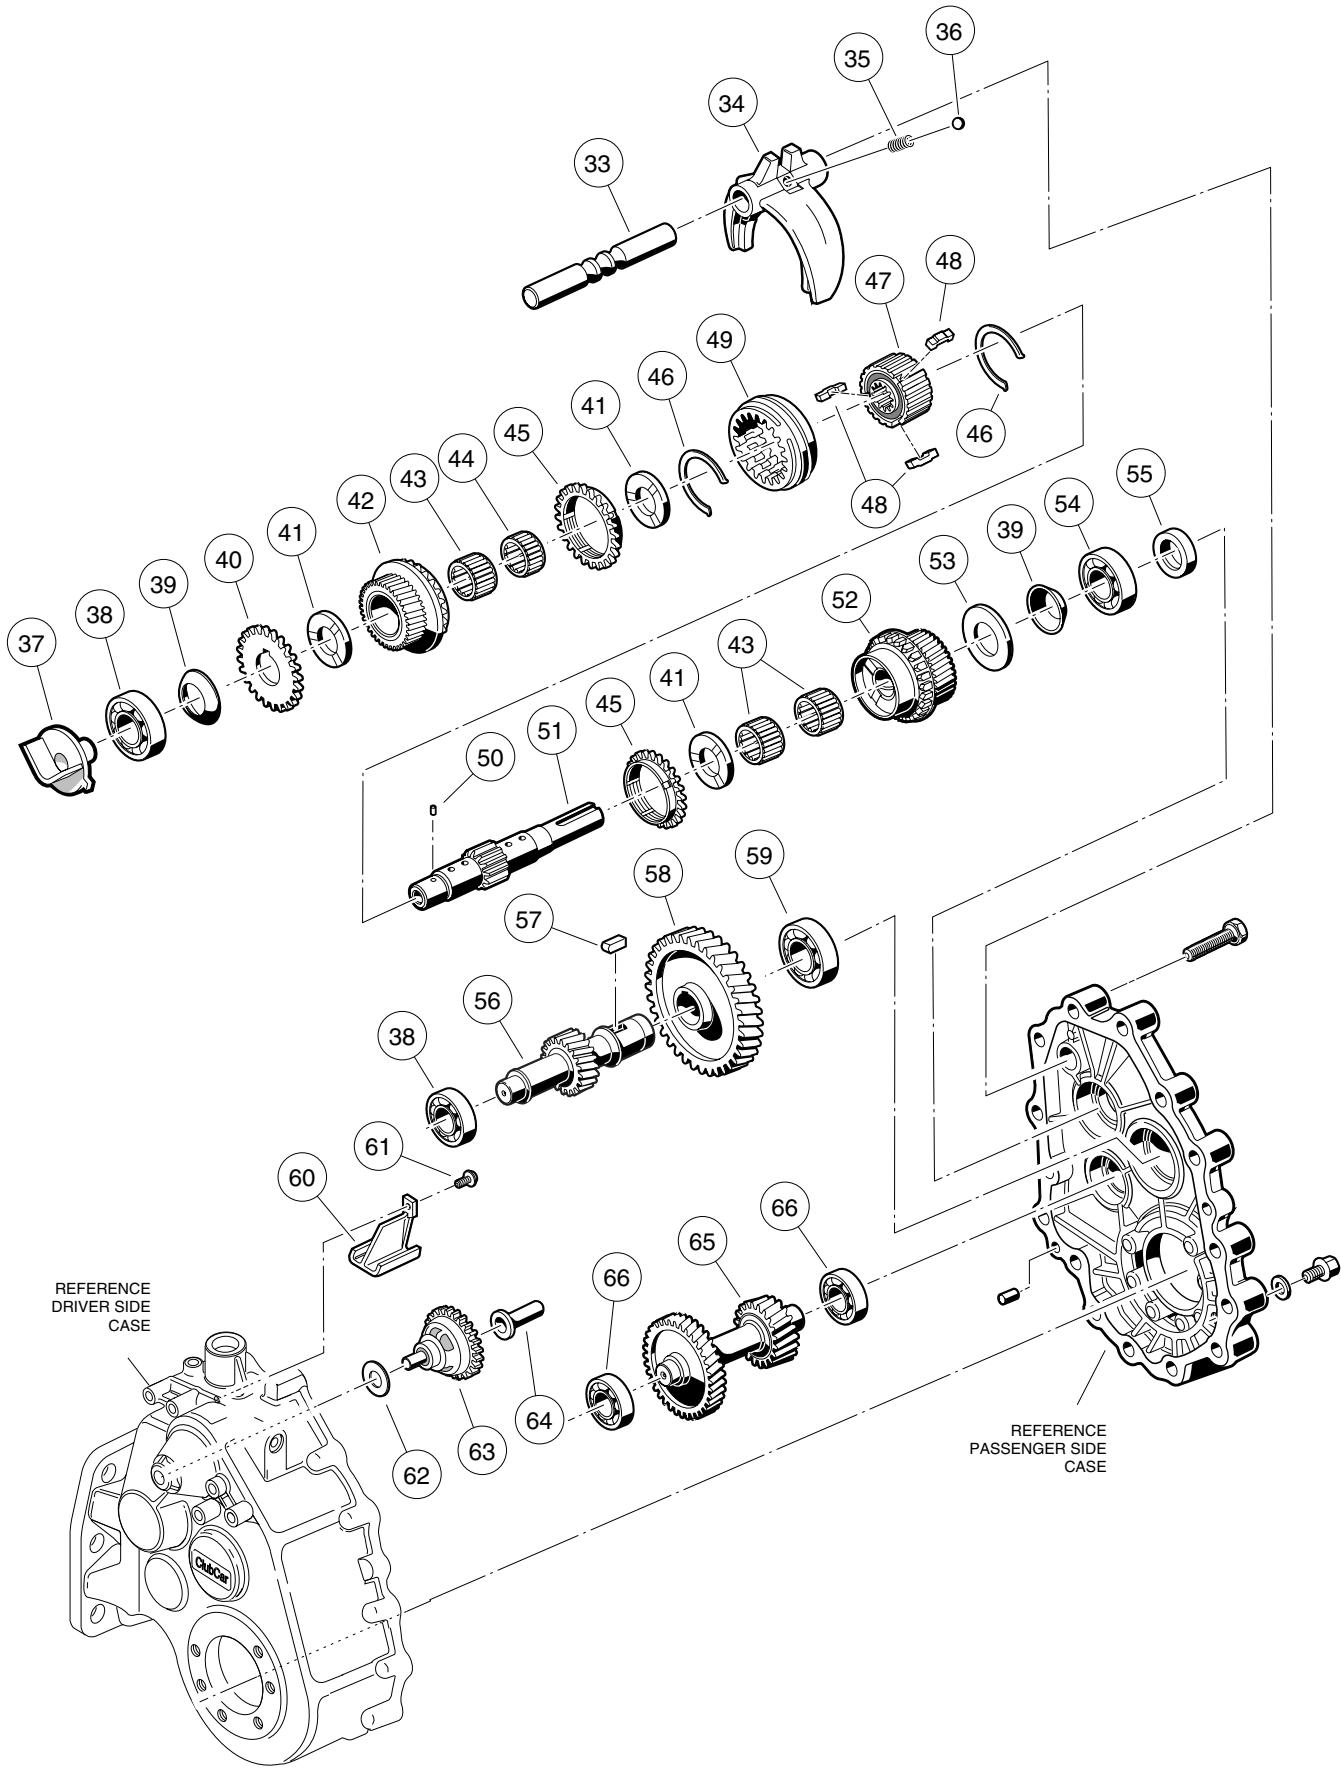


# UNITIZED TRANSAXLE, GASOLINE VEHICLE– F&R TRANSMISSION AND GEAR REDUCTION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
33	101892001	ROD, SHIFT .....	1
34	101890001	FORK, SHIFT .....	1
35	1012748	SPRING .....	1
36	1012747	BALL, STEEL .....	1
37	101889401	GUIDE .....	1
38	7336	BEARING, BALL .....	2
39	1016338	WASHER, SPRING .....	2
40	101892401	GEAR, SPUR .....	1
41	101892201	PLATE, THRUST .....	3
42	101980901	GEAR ASSEMBLY, INPUT, 28 TOOTH (16°) .....	1
43	101927601	BEARING, NEEDLE .....	3
44	101927501	BEARING, NEEDLE .....	1
45	101981001	RING, SYNCHRONIZER (16°) .....	2
46	1012741	SPRING, SYNCHRONIZER .....	2
47	101928001	HUB, SYNCHRONIZER CLUTCH .....	1
48	1012740	INSERT, SYNCHRONIZER .....	3
49	101927901	SLEEVE, SYNCHRONIZER .....	1
50	101927701	PIN, DOWEL .....	1
51	101889901	SHAFT, INPUT .....	1
52	101980801	GEAR ASSEMBLY, INPUT, 25 TOOTH (16°) .....	1
53	1016337	WASHER, THRUST .....	1
54	101927801	BEARING, BALL .....	1
55	1012714	SEAL, OIL, INPUT SHAFT .....	1
56	101892601	GEAR, 17-TOOTH .....	1
57	101893201	KEY .....	1
58	101892501	GEAR, 61-TOOTH .....	1
59	101928101	BEARING, BALL .....	1
60	101889501	GUIDE, OIL .....	1
61	101928201	SCREW, M8 x 1.25 x 10 MM .....	1
62	101893901	WASHER .....	1
63	101892301	GOVERNOR ASSEMBLY .....	1
64	101891601	SLEEVE .....	1
65	101891901	GEAR, CLUSTER IDLER .....	1
66	7335	BEARING, BALL .....	2

11

G

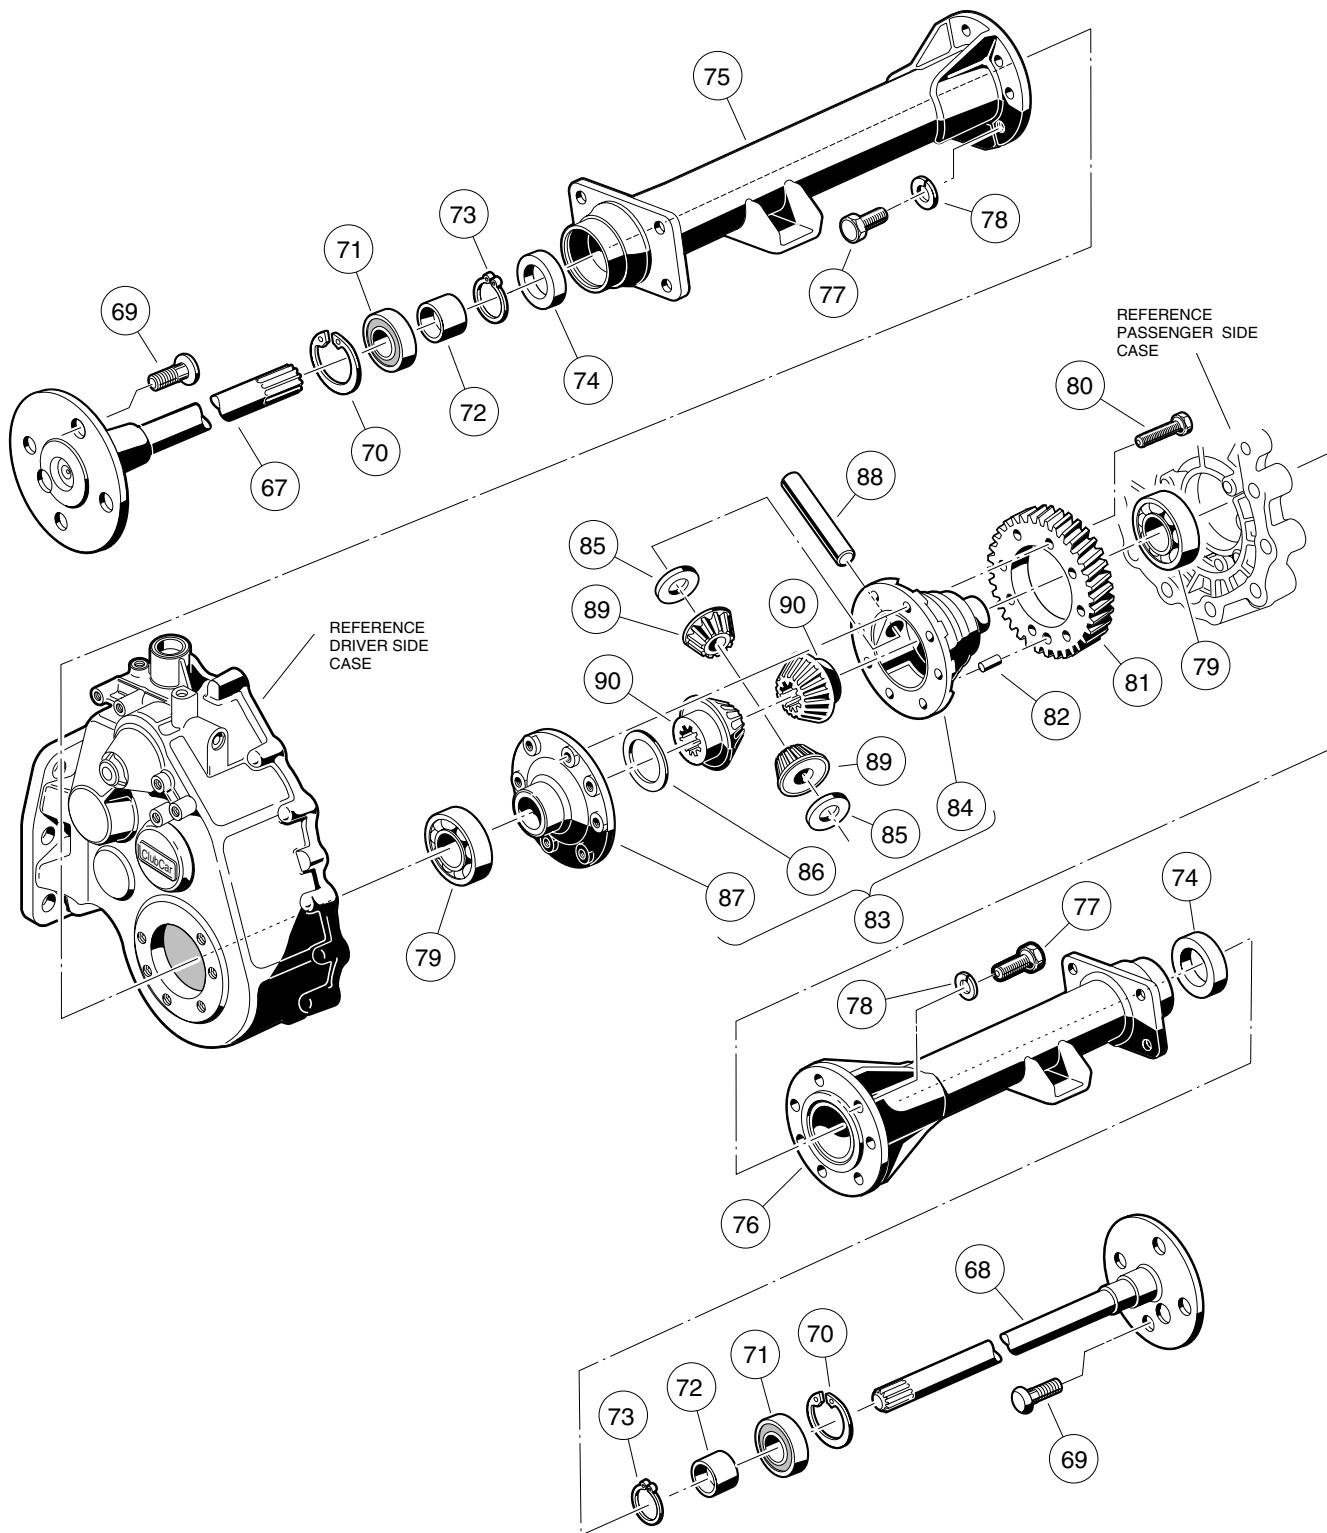

# UNITIZED TRANSAXLE, GASOLINE VEHICLE— DIFFERENTIAL AND AXLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
67	101891501	AXLE ASSEMBLY, DRIVER SIDE (INCLUDES ITEMS 69 - 73) .....	1
68	101891401	AXLE ASSEMBLY, PASSENGER SIDE (INCLUDES ITEMS 69 - 73) .....	1
69	1013787	STUD, LUG .....	4
70	1013792	RING, RETAINING .....	1
71	1011291	BEARING, OUTER AXLE TUBE .....	1
72	1014207	COLLAR, 25 MM I. D. .....	1
73	1016672	RING, RETAINING .....	1
74	1013794	SEAL, OIL .....	2
75	101891001	ASSEMBLY, AXLE TUBE, DRIVER SIDE .....	1
76	101890901	ASSEMBLY, AXLE TUBE, PASSENGER SIDE .....	1
77	1013790	BOLT, M10 x 1.5 x 30MM .....	14
78	1013791	WASHER, LOCK, M10 .....	14
79	7330	BEARING, INNER AXLE TUBE .....	2
80	101928301	BOLT, M8 x 1.25 x 37MM .....	8
81	101892701	GEAR, OUTPUT .....	1
82	1014193	PIN, DOWEL .....	1
83	101910501	KIT, DIFFERENTIAL GEAR CASE (INCLUDES ITEMS 84 - 87) .....	1
84	1013768	CASE, GEAR CARRIER .....	1
85	1013774	PLATE, THRUST (IDLER GEAR) .....	2
86	1013773	PLATE, THRUST (DIFFERENTIAL GEAR) .....	1
87	1013769	COVER, GEAR CASE .....	1
88	1013772	PIN, DIFFERENTIAL .....	1
89	1013770	GEAR, DIFFERENTIAL IDLER .....	2
90	1013771	GEAR, DIFFERENTIAL .....	2

11



G



# ELECTRICAL SYSTEM— ELECTRIC VEHICLE

---

12  
E

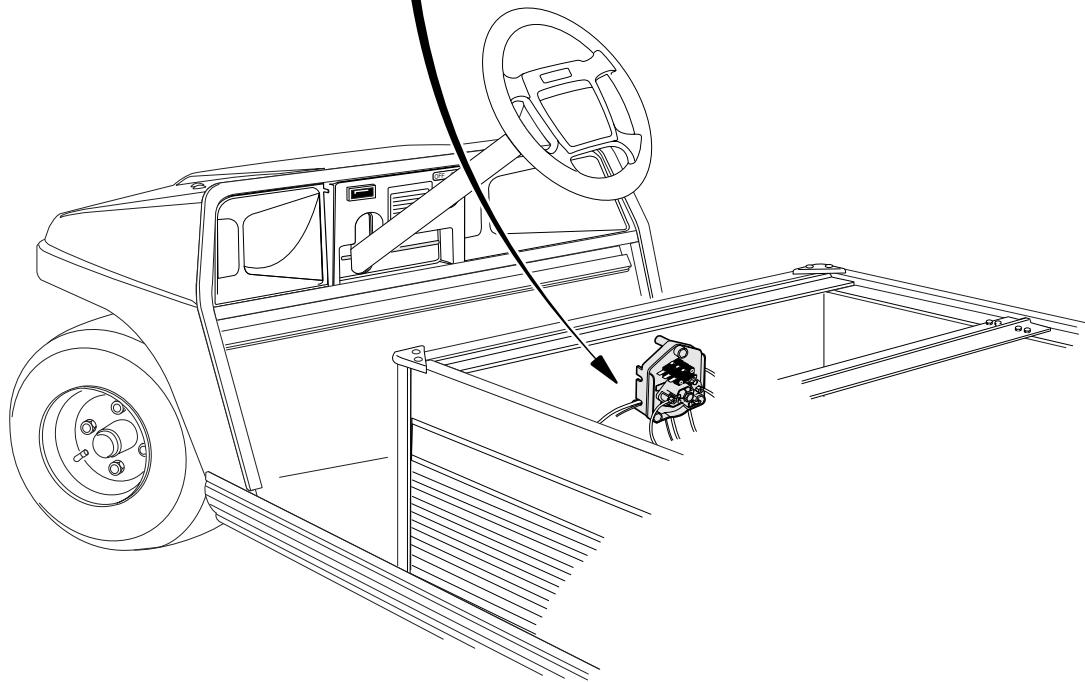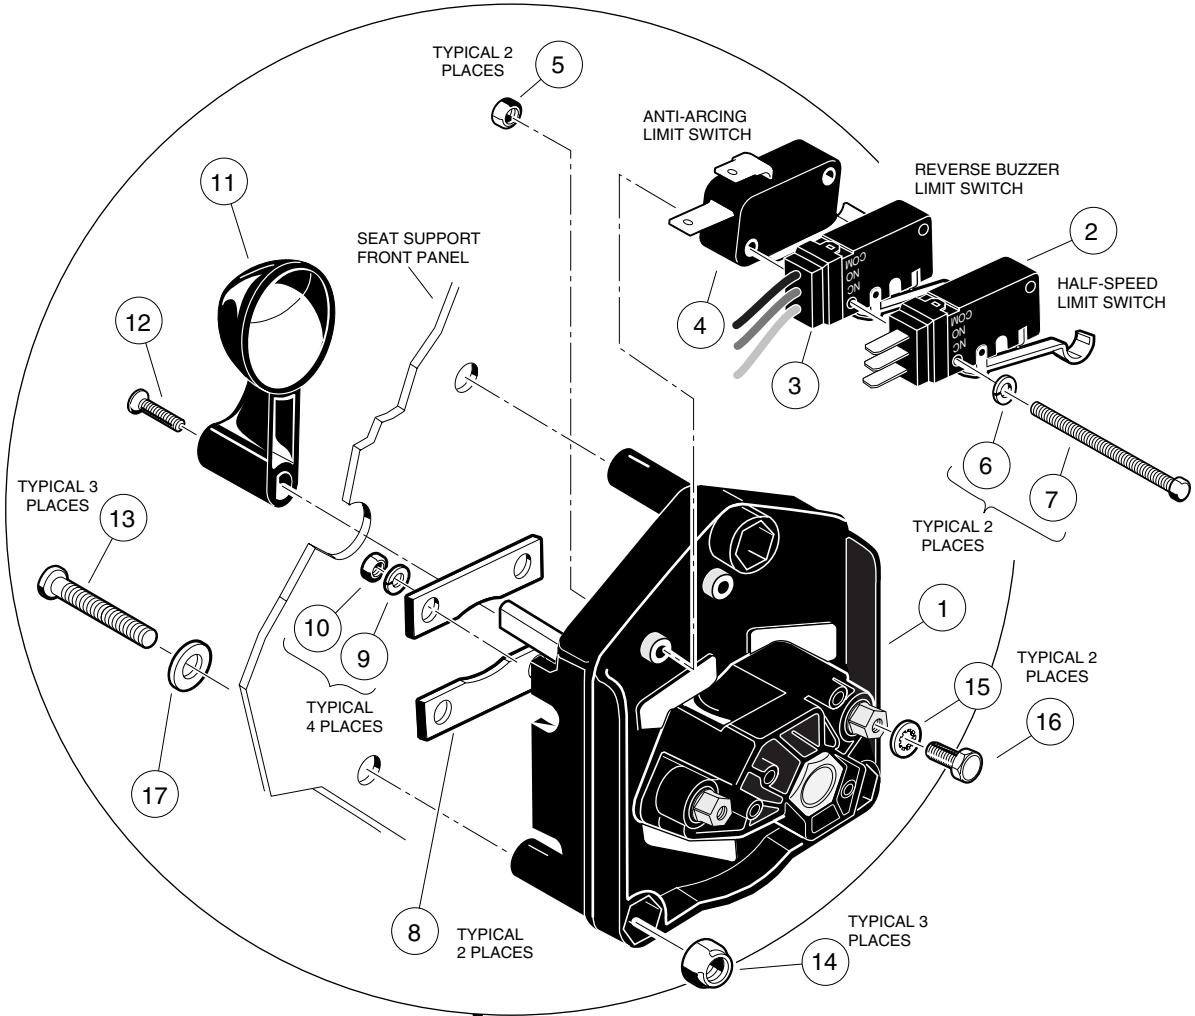


# FORWARD/REVERSE SWITCH— POWERDRIVE ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101753005	ASSEMBLY, FORWARD/REVERSE SWITCH (INCLUDES ITEMS 2 - 10) .....	1
2	101977101	SWITCH, LIMIT, SEALED .....	1
3	101979101	SWITCH, LIMIT, SEALED .....	1
4	1014808	SWITCH, LIMIT .....	1
5	8057	NUT, HEX, #4 - 40 .....	2
6	8058	WASHER, LOCK, #4 .....	2
7	1014871	SCREW, HEX WASHER HEAD, #4 - 40 x 2 .....	2
8	1017799	BAR, BUS .....	2
9	451	WASHER, LOCK, 1/4 .....	4
10	1028	NUT, HEX, 1/4 - 20 .....	4
11	1012987	HANDLE, FORWARD/REVERSE SWITCH .....	1
12	1013198	SCREW, PHILLIPS HEAD MACHINE, #8 - 32 x 5/8 .....	1
13	1016845	SCREW, PHILLIPS TRUSS HEAD, 1/4 - 20 x 2-1/8 .....	3
14	8233	NUT, NYLON LOCK, 1/4 - 20 .....	3
15	8049	WASHER, INTERNAL TOOTH LOCK, #10 .....	2
16	8450	SCREW, HEX HEAD CAP, #10 - 24 x 1/2 .....	2
17	1014528	WASHER, PLASTIC, 1/4 (TOURALL AND RESORT VILLAGER ONLY) .....	3

**12**

**E**

12  
E

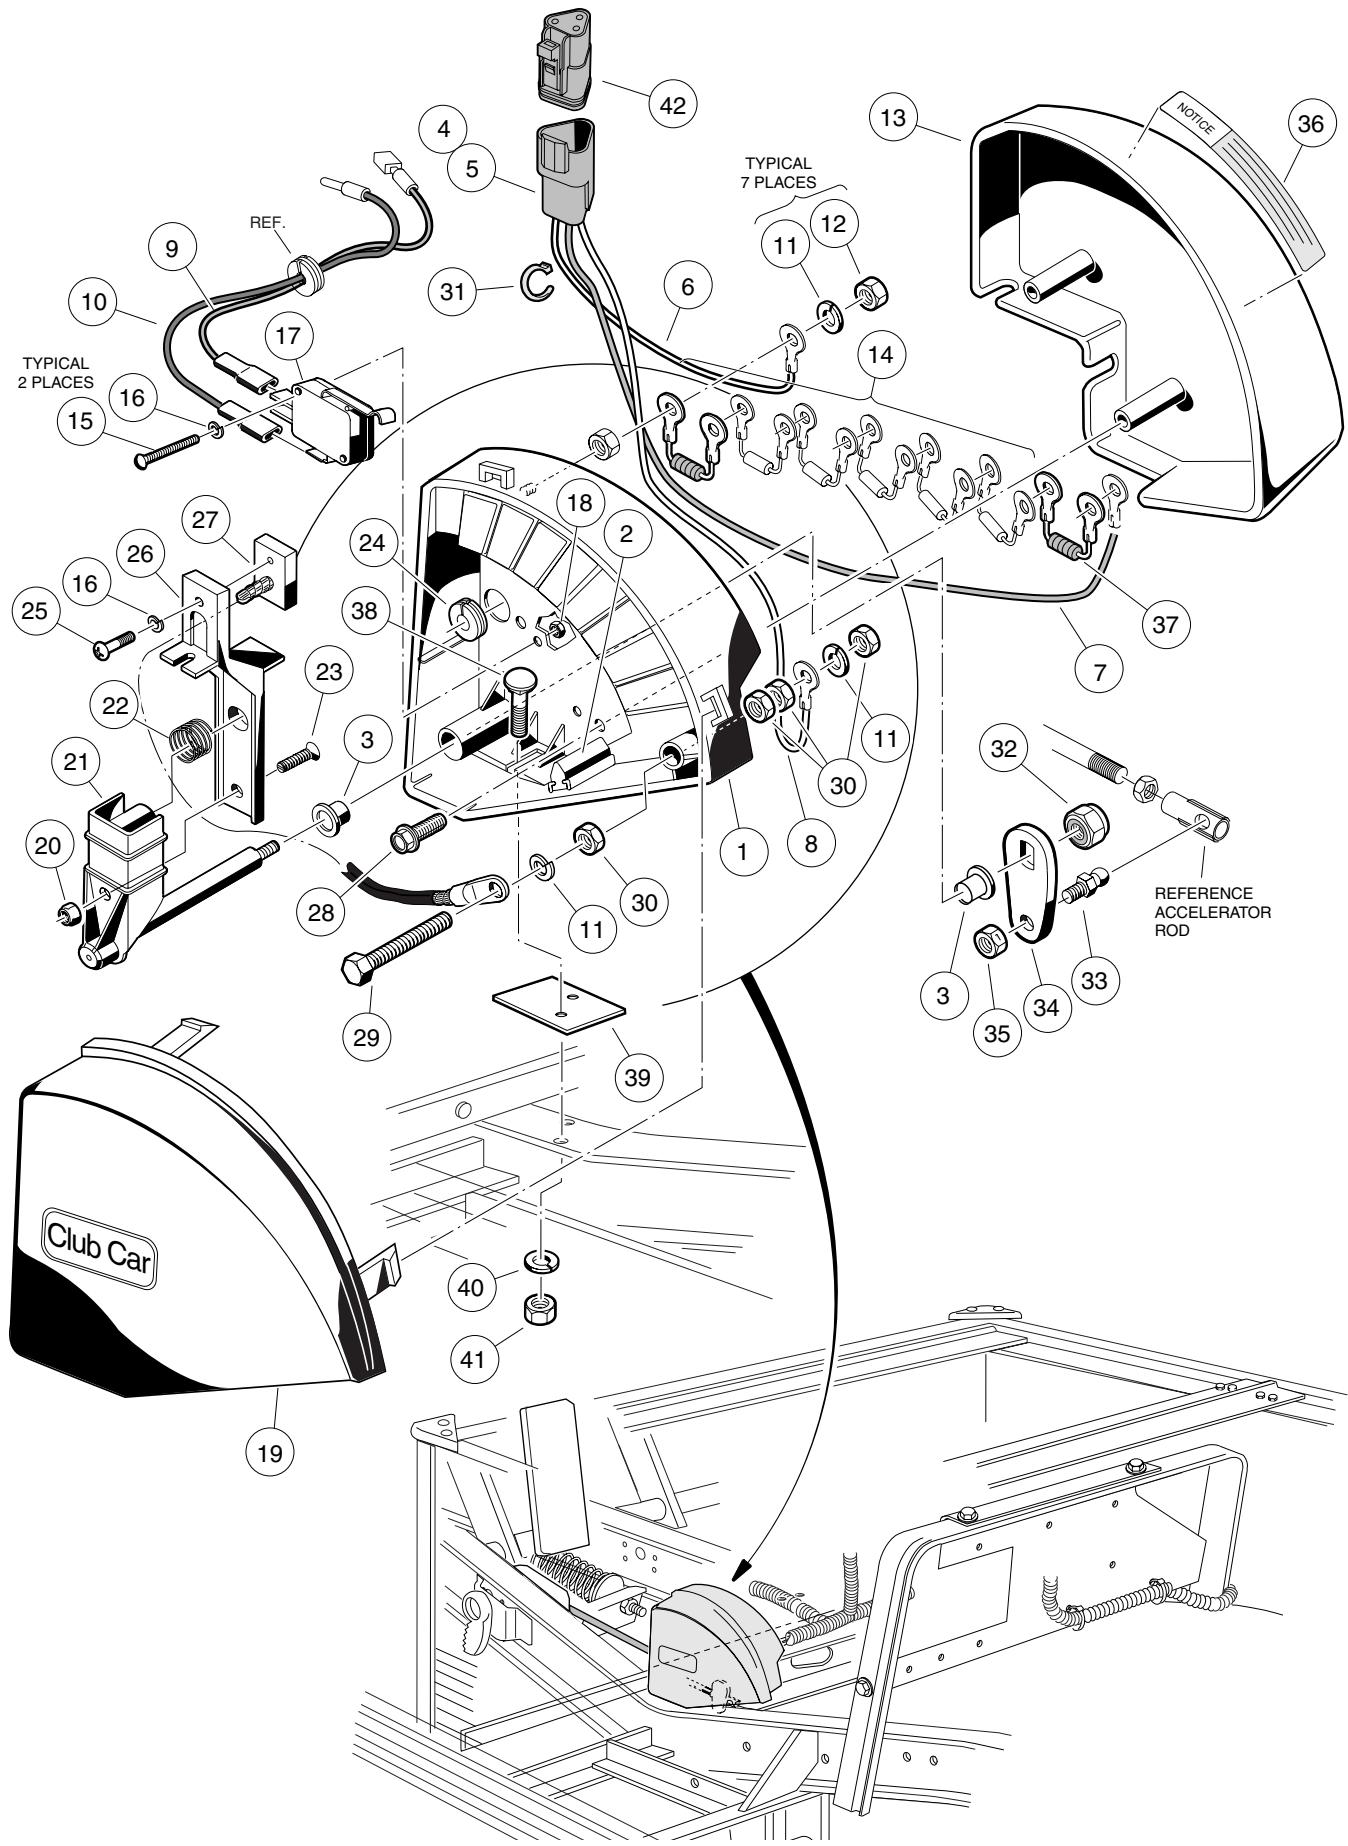


# MULTI-STEP POTENTIOMETER— TOURALL POWERDRIVE ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	101932001	ASSEMBLY, WIPER SWITCH (INCLUDES ITEMS 1 - 37) .....	1
1	1014999	ASSEMBLY, WIPER SWITCH CASE, 6-SPEED (INCLUDES ITEMS 2 AND 3) .....	1
2	1014414	BUMPER, WIPER SWITCH .....	1
3	1012903	BEARING, BRONZE .....	2
4	101932801	ASSEMBLY, 3-WIRE AND RECEPTACLE (INCLUDES ITEMS 5 - 8) .....	1
5	101942301	KIT, 3-PIN RECEPTACLE .....	1
6	N/A	WIRE ASSEMBLY, #18 WHITE/BLACK .....	1
7	N/A	WIRE ASSEMBLY, #18 PURPLE.....	1
8	N/A	WIRE ASSEMBLY, #18 YELLOW.....	1
9	N/A	WIRE ASSEMBLY, #18 GREEN/WHITE .....	1
10	N/A	WIRE ASSEMBLY, #18 BLUE .....	1
11	451	WASHER, LOCK, 1/4 .....	9
12	1028	NUT, HEX, STEEL, 1/4 - 20 .....	7
13	101946901	PROTECTOR, WIPER SWITCH RESISTOR .....	1
14	101971101	KIT, RESISTOR ASSEMBLY .....	1
15	8056	SCREW, ROUND-HEAD MACHINE, #4 - 40 x 3/4 .....	2
16	8058	WASHER, LOCK, #4 .....	3
17	1014807	SWITCH, LIMIT.....	1
18	8057	NUT, HEX, #4 - 40 .....	2
19	1013886	COVER, WIPER SWITCH .....	1
20	1013061	NUT, NYLON LOCK, #10 - 32 .....	1
21	1014017	CARRIER, WIPER SWITCH ARM .....	1
22	1013998	SPRING, WIPER SWITCH BRUSH .....	1
23	1014	STUD, WIPER SWITCH ADJUSTING .....	1
24	1014010	GROMMET, SPLIT .....	1
25	1014019	SCREW, SELF-TAPPING, #4 - 40 x 3/8 .....	1
26	1013887	ARM, SPEED SWITCH .....	1
27	1013860	ASSEMBLY, SWITCH BRUSH .....	1
28	1013461	SCREW, HEX HEAD HI-LO, #10 - 16 x 1/2 .....	2
29	1014189	SCREW, HEX HEAD CAP, 1/4 - 20 x 2 .....	1
30	1014253	NUT, BRASS HEX JAM, 1/4 - 20 .....	4
31	8990	TIE, WIRE .....	1
32	7473	NUT, NYLON LOCK, 5/16 - 18 .....	1
33	1012353	STUD, SHORT BALL, 1/4 - 28 .....	1
34	1014003	CRANK, BELL .....	1
35	8449	NUT, DIMPLED LOCK, 1/4 - 28 .....	1
36	101610901	DECAL, WIPER SWITCH WARNING .....	1
37	102058701	RESISTOR, ZERO OHM.....	1
38	1014109	SCREW, ROUND-HEAD SQUARE-NECK, #10 - 24 x 1 .....	2
39	101949201	SHIM, WIPER SWITCH .....	1
40	1016175	WASHER, LOCK, #10 .....	2
41	1017	NUT, HEX, #10 - 24 .....	2
42	101920101	KIT, 3-PIN PLUG ASSEMBLY .....	1

12

E

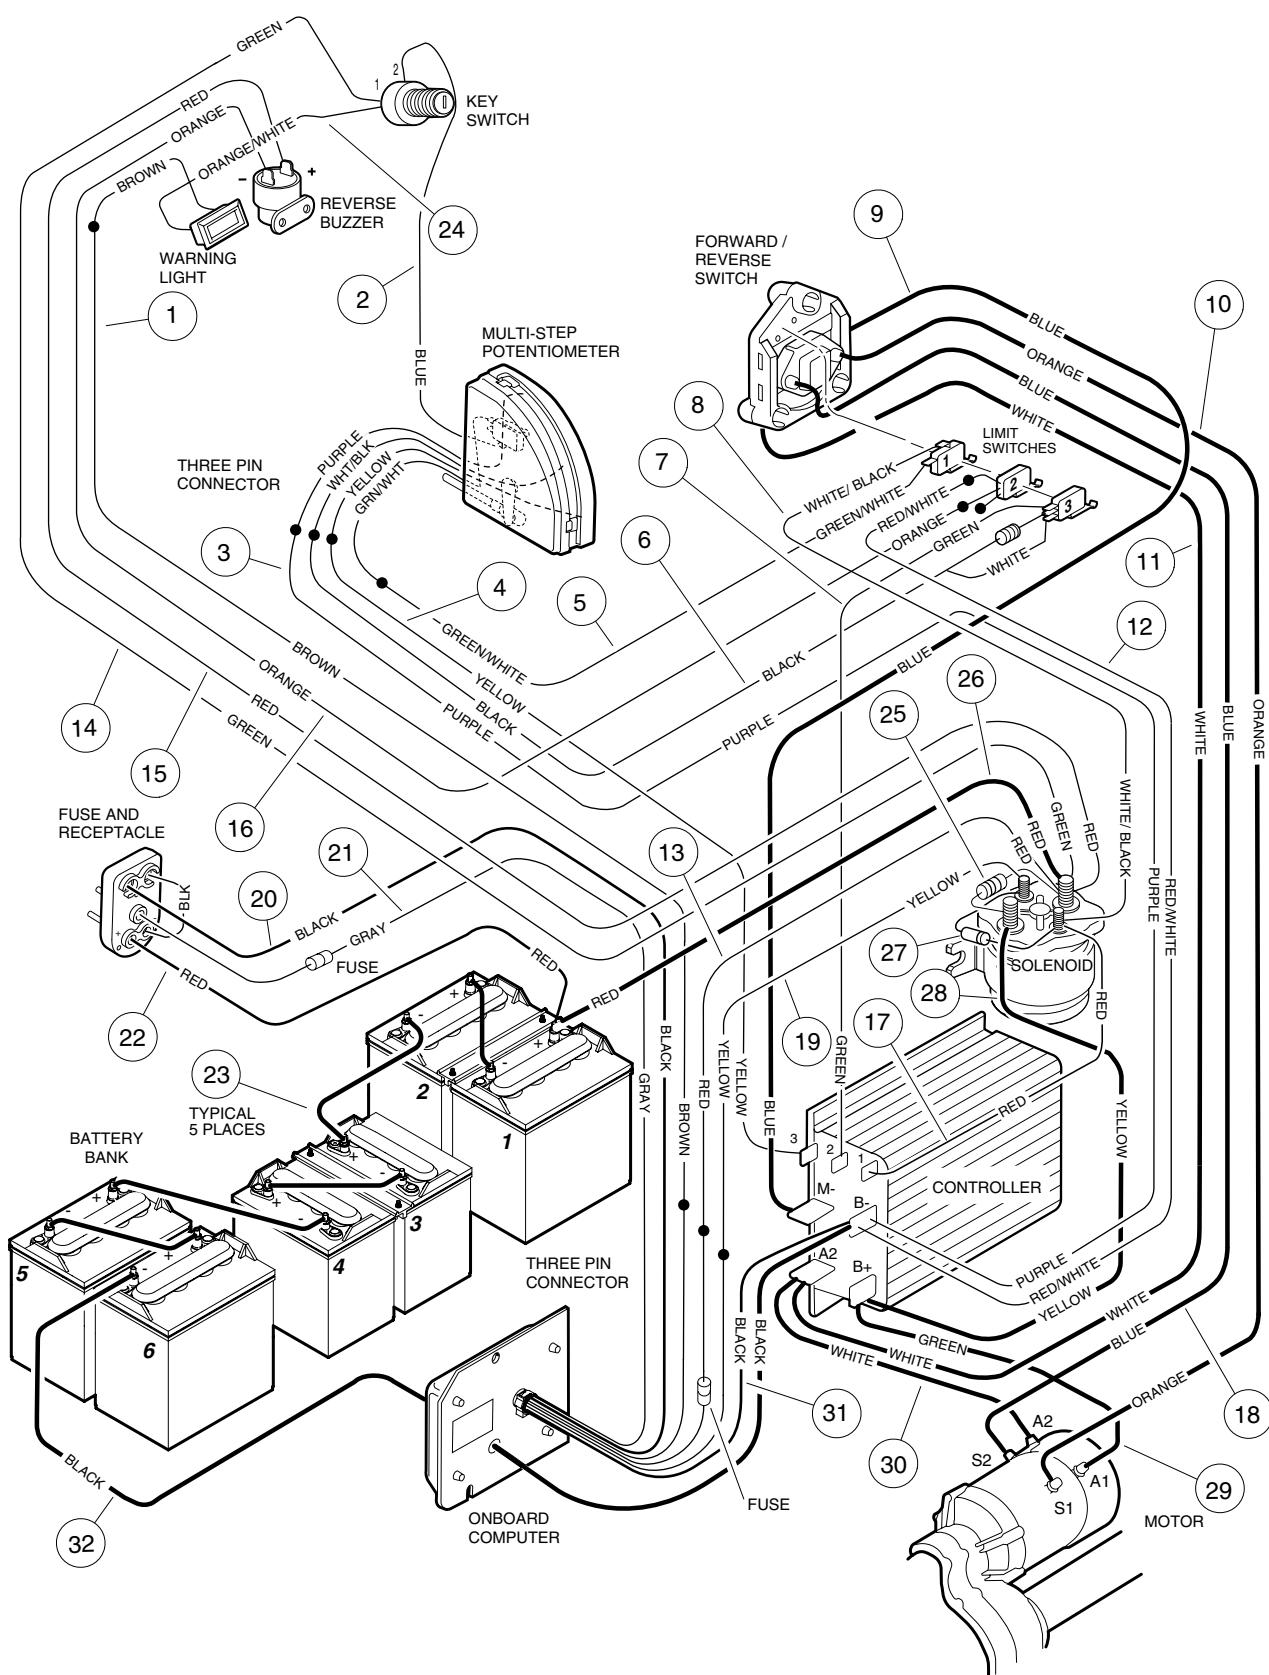


# WIRING— TOURALL POWERDRIVE ELECTRIC VEHICLE

**12**

**E**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	101911004	WIRE HARNESS (INCLUDES ITEMS 1 - 20) .....	1
1	N/A	WIRE ASSEMBLY, #18 BROWN .....	1
2	N/A	WIRE ASSEMBLY, #18 BLUE .....	1
3	N/A	WIRE ASSEMBLY, #18 PURPLE .....	1
4	N/A	WIRE ASSEMBLY, #18 YELLOW .....	1
5	N/A	WIRE ASSEMBLY, #18 GREEN/WHITE .....	1
6	101883002	WIRE ASSEMBLY, #18 BLACK (INCLUDES RESISTOR AND #18 WHITE WIRE) .....	1
7	N/A	WIRE ASSEMBLY, #18 GREEN .....	1
8	N/A	WIRE ASSEMBLY, #18 WHITE/BLACK .....	1
9	101901401	WIRE ASSEMBLY, #6 BLUE .....	1
10	101901201	WIRE ASSEMBLY, #6 ORANGE .....	1
11	101911101	WIRE ASSEMBLY, #6 WHITE .....	1
12	N/A	WIRE ASSEMBLY, #18 RED/WHITE .....	1
13	N/A	WIRE ASSEMBLY, #18 RED .....	1
14	N/A	WIRE ASSEMBLY, #18 GREEN .....	1
15	N/A	WIRE ASSEMBLY, #18 RED .....	1
16	N/A	WIRE ASSEMBLY, #18 ORANGE .....	1
17	N/A	WIRE ASSEMBLY, #18 RED .....	1
18	101901301	WIRE ASSEMBLY, #6 BLUE .....	1
19	N/A	WIRE ASSEMBLY, #18 YELLOW .....	1
20	N/A	WIRE ASSEMBLY, #10 BLACK (PART OF ONBOARD COMPUTER ASSEMBLY) .....	1
21	N/A	WIRE ASSEMBLY, #18 GRAY (PART OF ONBOARD COMPUTER ASSEMBLY) .....	1
22	N/A	WIRE ASSEMBLY, #10 RED (PART OF FUSE AND RECEPTACLE ASSEMBLY) .....	1
23	101795701	WIRE ASSEMBLY, #6 BLACK .....	5
24	N/A	WIRE ASSEMBLY, #18 ORANGE/WHITE (PART OF BATTERY LIGHT) .....	1
25	1014947	ASSEMBLY, RESISTOR .....	1
26	101902801	WIRE ASSEMBLY, #6 RED .....	1
27	1014948	ASSEMBLY, DIODE .....	1
28	101903001	WIRE ASSEMBLY, #6 YELLOW .....	1
29	101902901	WIRE ASSEMBLY, #6 GREEN .....	1
30	1014856	WIRE ASSEMBLY, #6 WHITE .....	1
31	N/A	WIRE ASSEMBLY, #10 BLACK (PART OF ONBOARD COMPUTER ASSEMBLY) .....	1
32	N/A	WIRE ASSEMBLY, #6 BLACK .....	1

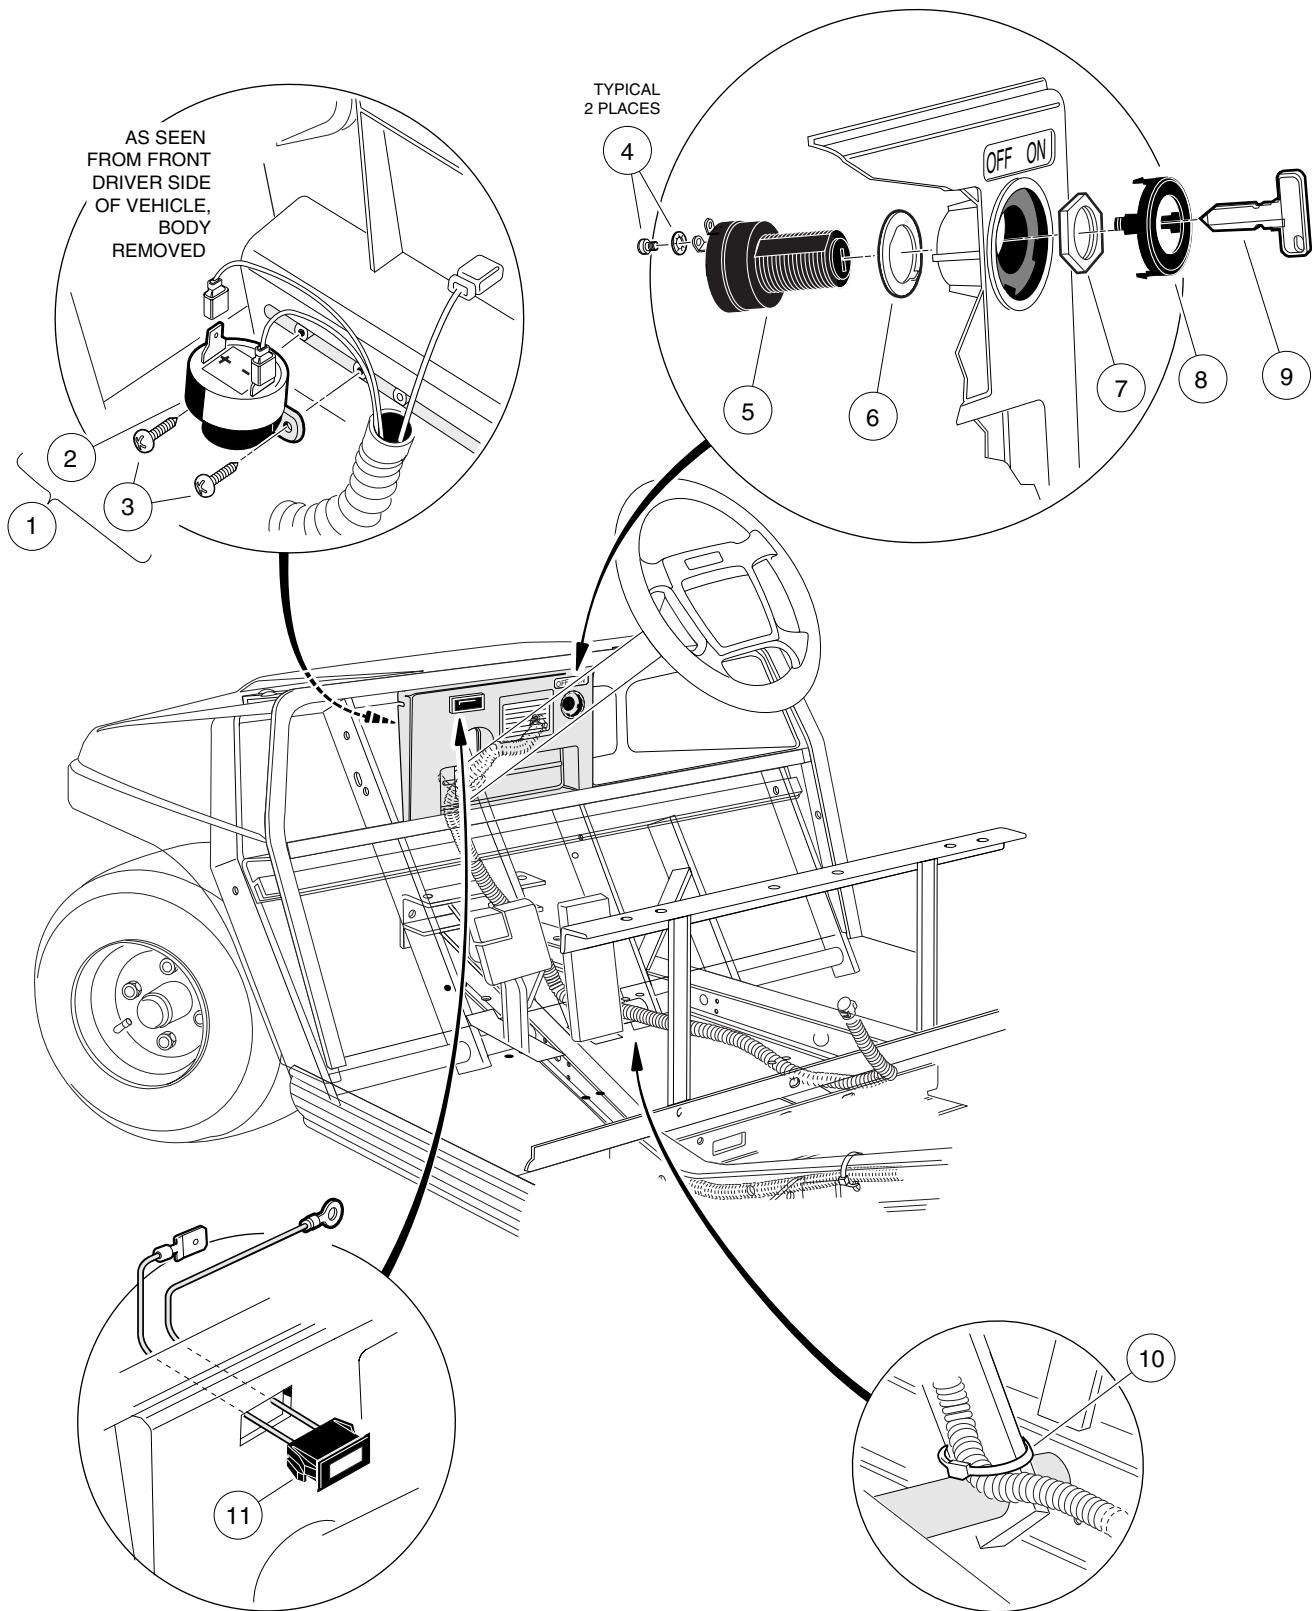
**12****E**

# ELECTRICAL COMPONENTS, FRONT BODY— TOURALL POWERDRIVE ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016859	KIT, REVERSE BUZZER (INCLUDES ITEMS 2 AND 3) .....	1
2	1016851	BUZZER, REVERSE .....	1
3	1016849	SCREW, PAN HEAD HI-LO, #4 - 24 x 5/16 .....	2
4	101830601	ASSEMBLY, SCREW AND WASHER .....	2
5	101826201	SWITCH, KEY .....	1
6	101851101	WASHER, KEY SWITCH .....	1
7	101830701	NUT, KEY SWITCH .....	1
8	101834502	CAP, KEY SWITCH .....	1
9	1012505	KEY (PAIR) .....	1
10	8990	TIE, WIRE .....	2
11	101935501	LIGHT, BATTERY WARNING (AMBER) .....	1

**12**

**E**

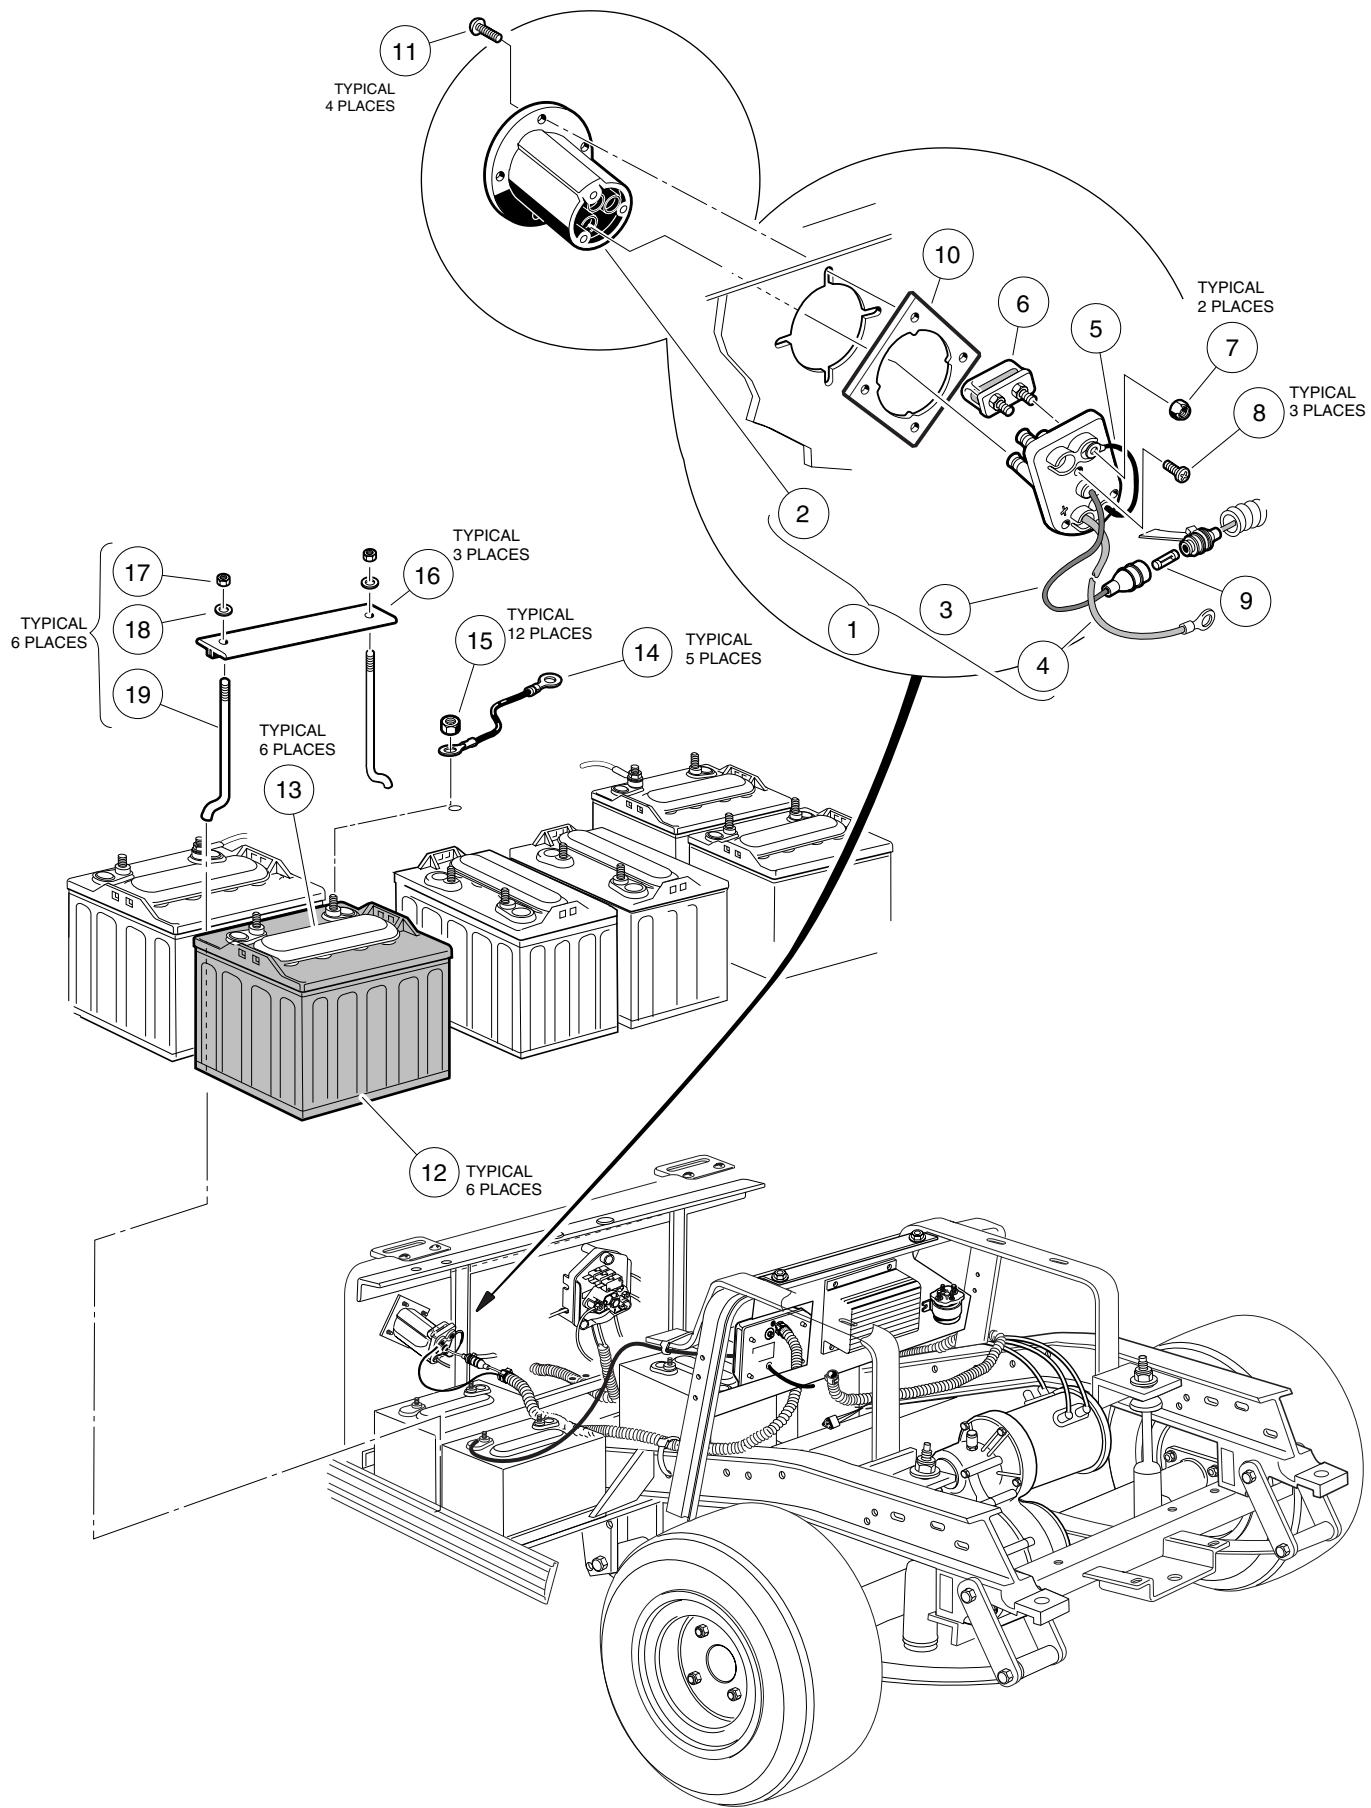**12****E**


# BATTERIES, CHARGER RECEPTACLE— TOURALL POWERDRIVE ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101802101	KIT, FUSE AND RECEPTACLE (INCLUDES ITEMS 2 - 9) .....	1
2	101796501	BEZEL, RECEPTACLE .....	1
3	N/A	WIRE ASSEMBLY, SENSE LEAD, GRAY .....	1
4	N/A	WIRE ASSEMBLY, #10 RED .....	1
5	N/A	WIRE ASSEMBLY, #10 BLACK .....	1
6	101796801	ASSEMBLY, FUSE, 48 VOLT (INCLUDES ITEM 7) .....	1
7	1013061	NUT, NYLON LOCK, #10 .....	2
8	1017705	SCREW, PHILLIPS PAN HEAD, #8 TYPE AB .....	3
9	101894901	FUSE, 3/8-AMP .....	1
10	101801001	PLATE, RECEPTACLE BACKING .....	1
11	101832001	SCREW, PHILLIPS PAN HEAD, #7 - 18 x 3/4 .....	4
12	101797701	BATTERY, 8-VOLT POWERDRIVE (INCLUDES ITEM 13) .....	6
12	101797702	BATTERY, 8-VOLT POWERDRIVE, DRY (INCLUDES ITEM 13) .....	6
13	101797801	CAP, BATTERY, 4 PORT GANG .....	1
14	101795701	WIRE ASSEMBLY, #6 BLACK .....	5
15	1014304	NUT, HEX, STAINLESS STEEL, 5/16 - 18 .....	12
16	101090801	HOLD-DOWN, BATTERY .....	3
17	1015072	NUT, NYLON LOCK, STAINLESS STEEL, 5/16 - 18 .....	6
18	1011578	WASHER, FLAT, TYPE B WIDE, 5/16 .....	6
19	1013683	J-BOLT .....	6

**12**

**E**

**12**  
**E**

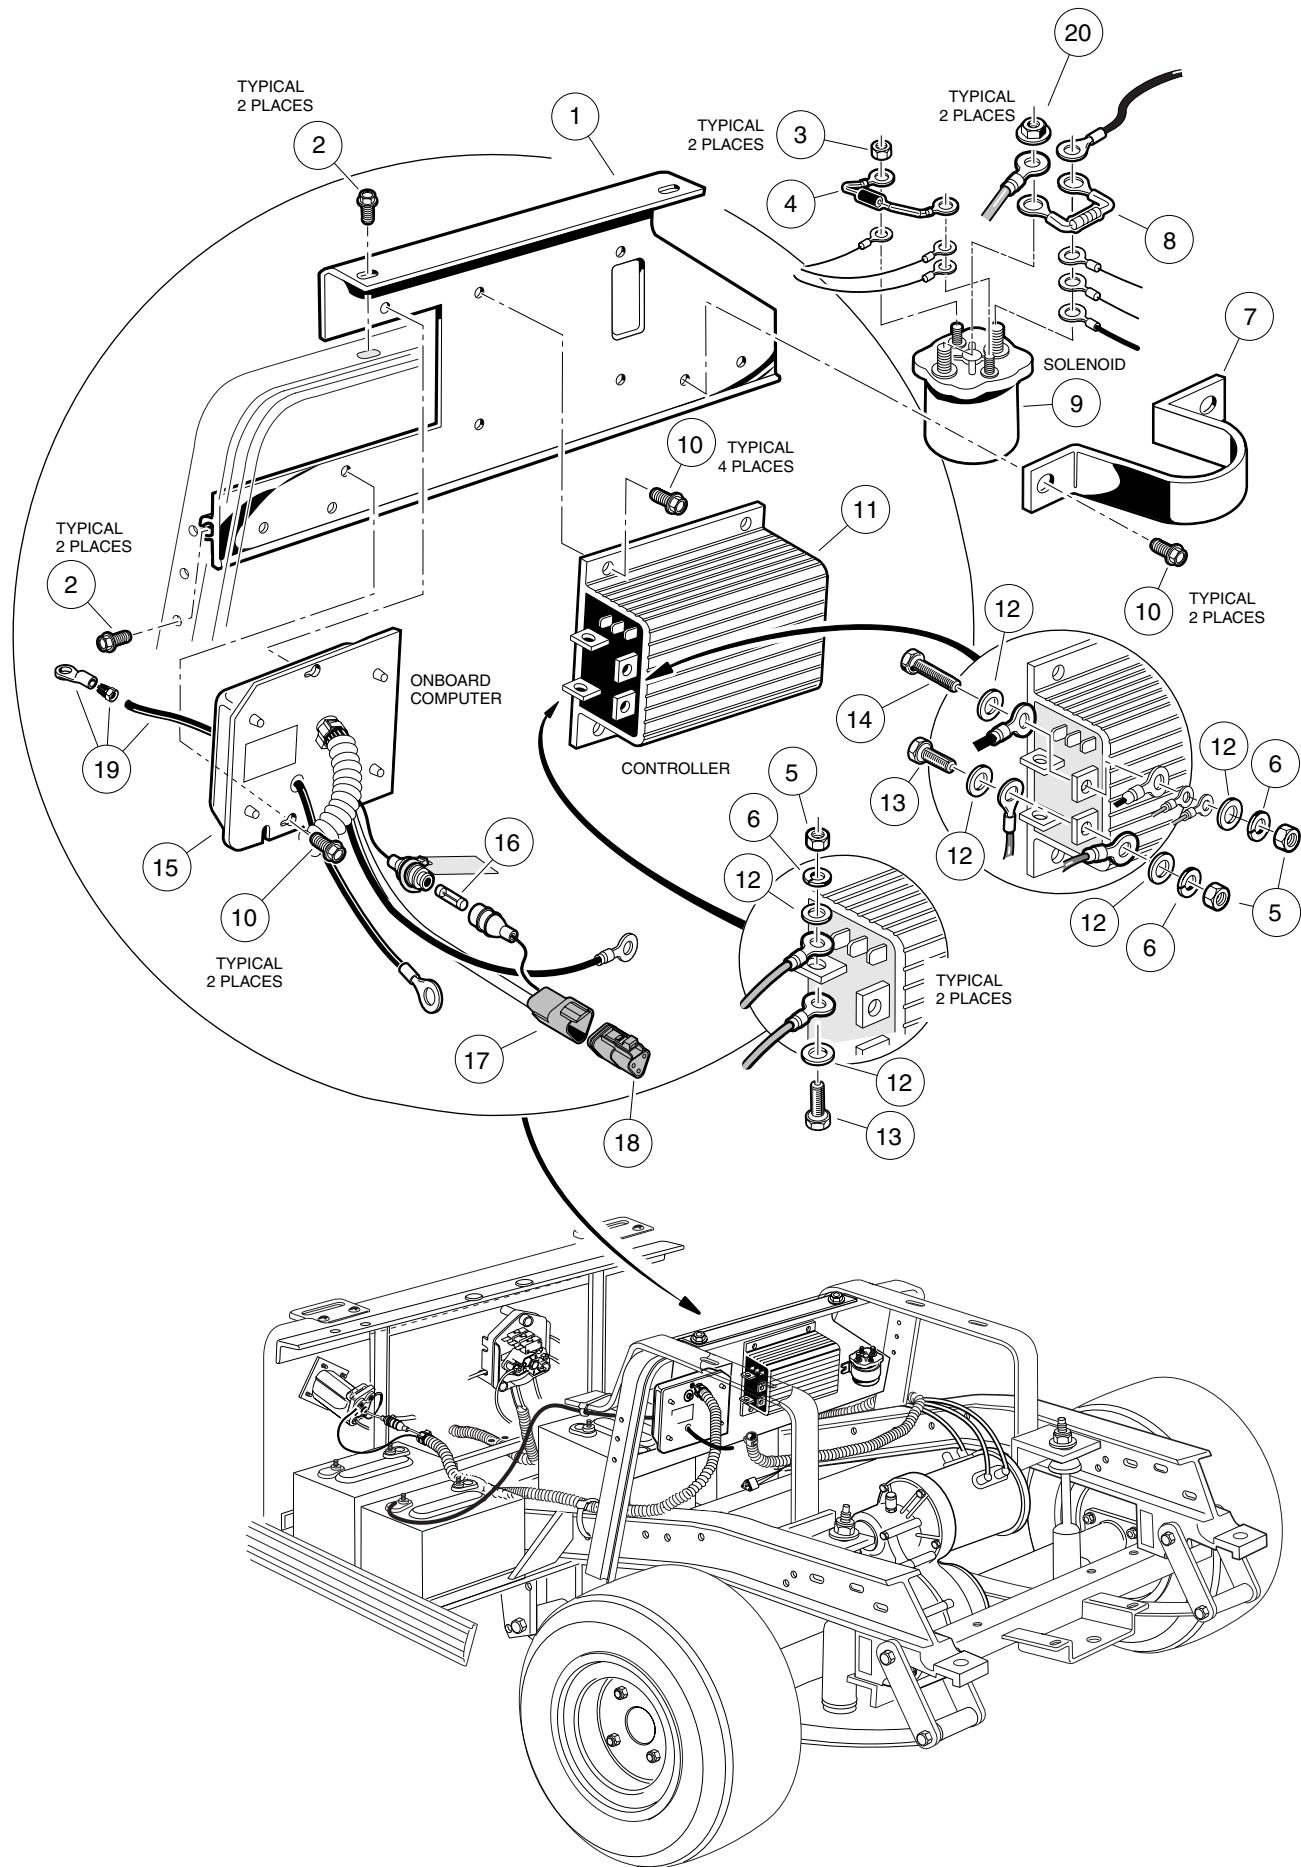


# COMPUTER, CONTROLLER, AND SOLENOID— TOURALL POWERDRIVE ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101965201	PLATE, COMPONENT MOUNTING .....	1
2	1014288	SCREW, THREAD-FORMING, 5/16 - 18 x 3/4 .....	4
3	7893	NUT, HEX, #10 - 32 .....	2
4	1014948	ASSEMBLY, DIODE .....	1
5	1242	NUT, HEX, 5/16 - 18 .....	4
6	7174	WASHER, LOCK, 5/16 .....	4
7	101957901	BRACKET, MOUNTING .....	1
8	1014947	ASSEMBLY, RESISTOR .....	1
9	101883601	SOLENOID, 48-VOLT (WITH MOUNTING BRACKET) .....	1
10	1012285	SCREW, THREAD-ROLLING, 1/4 - 20 x 5/8 .....	8
11	101840203	CONTROLLER, 48-VOLT (300-AMP) .....	1
12	1241	WASHER, FLAT, 5/16 .....	8
13	7173	SCREW, HEX HEAD CAP, 5/16 - 18 x 3/4 .....	3
14	1218	SCREW, HEX HEAD CAP, 5/16 - 18 x 1-1/4 .....	1
15	101909901	COMPUTER, ONBOARD (INCLUDES ITEMS 16 AND 17) .....	1
16	101894901	FUSE, 3/8-AMP .....	1
17	101942301	KIT, 3-PIN RECEPTACLE .....	1
18	101920101	KIT, 3-PIN PLUG ASSEMBLY .....	1
19	101827801	KIT, WIRE AND TERMINAL, #6 BLACK .....	1
20	1017237	NUT, FLANGE, 5/16 - 24 .....	2

**12**

**E**

**12**  
**E**

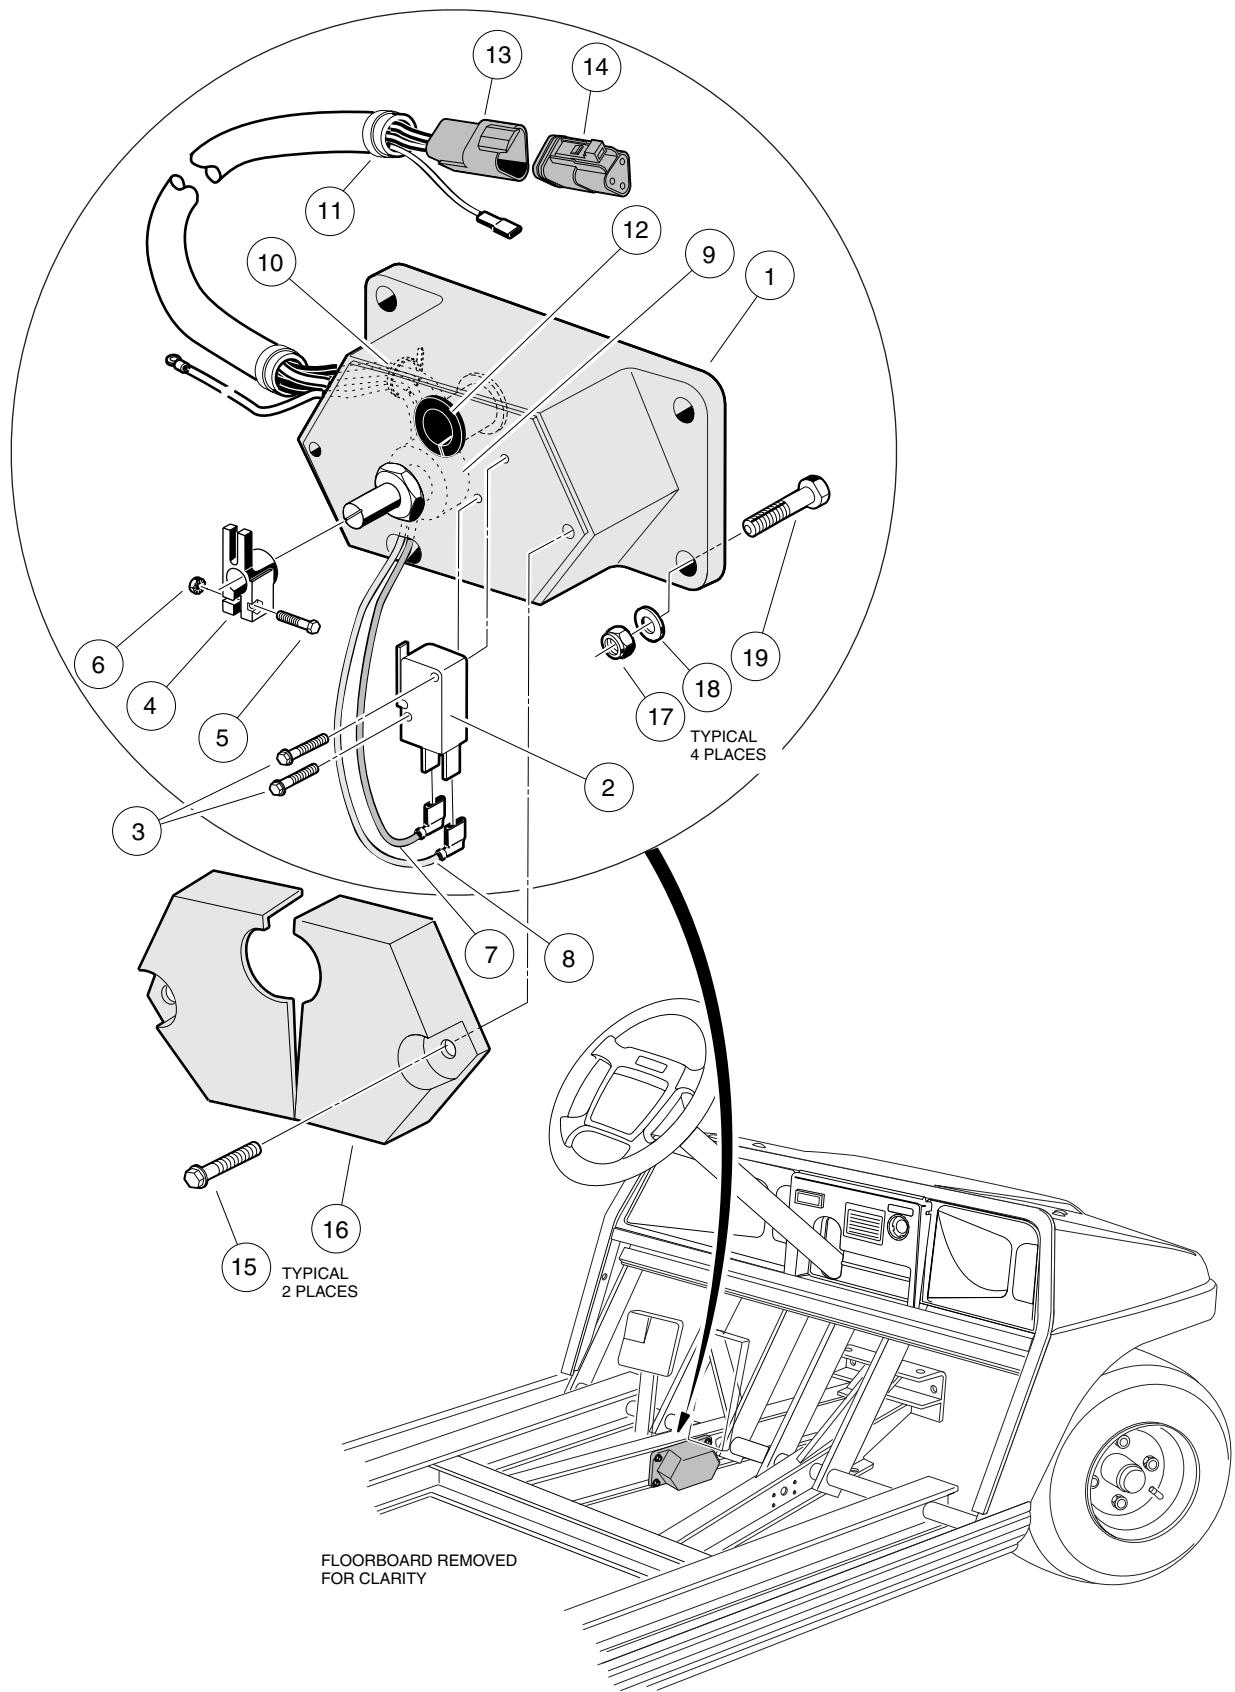


# CONTINUOUSLY VARIABLE POTENTIOMETER— RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	101739201	ASSEMBLY, POTENTIOMETER HOUSING WITH GRAY PLUG (INCLUDES ITEMS 1 - 13) .....	1
1	N/A	HOUSING, POTENTIOMETER .....	1
2	1017830	SWITCH, LIMIT .....	1
3	101822601	SCREW, HEX HEAD, #4 - 24 .....	2
4	101809001	LEVER, POTENTIOMETER .....	1
5	1017853	SCREW, HEX HEAD, #6 - 32 x 3/4 .....	1
6	1011229	NUT, LOCK, "K", #6 - 32 .....	1
7	N/A	WIRE ASSEMBLY, #18 BLUE .....	1
8	N/A	WIRE ASSEMBLY, #18 GREEN/WHITE .....	1
9	N/A	POTENTIOMETER .....	1
10	8990	TIE, WIRE .....	3
11	N/A	CONDUIT, ELECTRICAL .....	1
12	1017424	BEARING, PIVOT SUPPORT .....	1
13	101895101	RECEPTACLE, 3-PIN .....	1
14	101920101	KIT, 3-PIN PLUG .....	1
15	101804301	SCREW, HI-LO HEX HEAD, #8 - 18 x 1/2 .....	2
16	1017743	COVER, ACCELERATOR .....	1
17	8233	NUT, NYLON LOCK, 1/4 - 20 .....	4
18	332	WASHER, FLAT, 1/4 .....	4
19	101861901	SCREW, HEX HEAD CAP, 1/4 - 20 x 1-1/8 .....	4


12

E

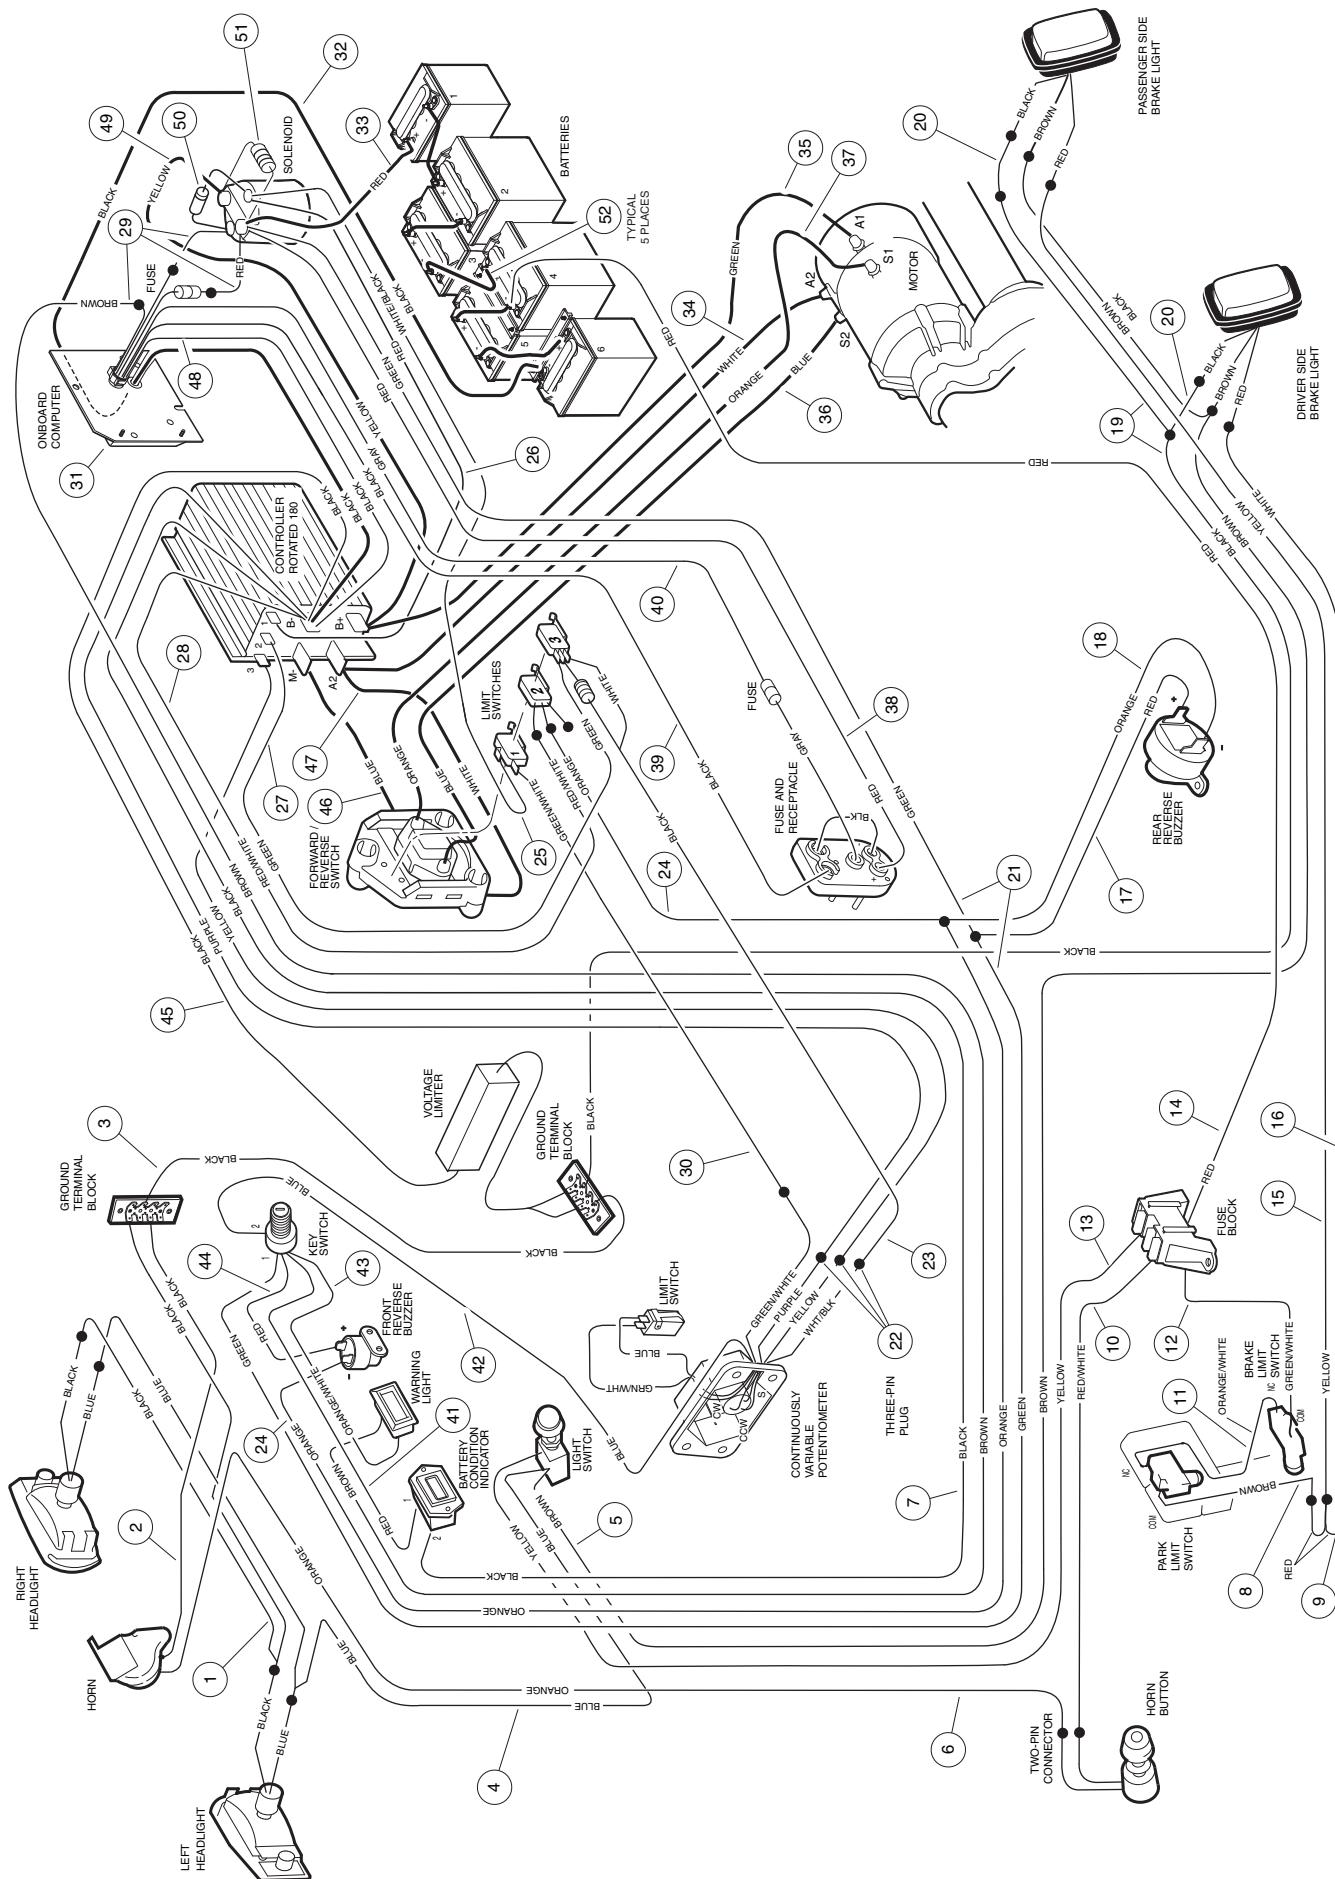

**WIRING—****RESORT VILLAGER POWERDRIVE ELECTRIC VEHICLE****12****E**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101969301 N/A	WIRE HARNESS, LIGHTING (CONTAINS ITEMS 1 - 20) ..... WIRE ASSEMBLY, #16 BLACK .....	1 1
2	N/A	WIRE ASSEMBLY, #16 BLACK .....	1
3	N/A	WIRE ASSEMBLY, #14 BLACK .....	1
4	N/A	WIRE ASSEMBLY, #18 BLUE .....	1
5	N/A	WIRE ASSEMBLY, #16 BROWN .....	1
6	N/A	WIRE ASSEMBLY, #16 ORANGE .....	1
7	N/A	WIRE ASSEMBLY, #18 BLACK .....	1
8	N/A	WIRE ASSEMBLY, #16 BROWN .....	1
9	N/A	WIRE ASSEMBLY, #18 RED .....	1
10	N/A	WIRE ASSEMBLY, #16 RED/WHITE .....	1
11	N/A	WIRE ASSEMBLY, #16 ORANGE/WHITE .....	1
12	N/A	WIRE ASSEMBLY, #16 GREEN/WHITE .....	1
13	N/A	WIRE ASSEMBLY, #14 YELLOW .....	1
14	1016698	WIRE ASSEMBLY, #10 RED .....	1
15	N/A	WIRE ASSEMBLY, #18 YELLOW .....	1
16	N/A	WIRE ASSEMBLY, #18 WHITE .....	1
17	N/A	WIRE ASSEMBLY, #18 RED .....	1
18	N/A	WIRE ASSEMBLY, #18 ORANGE .....	1
19	N/A	WIRE ASSEMBLY, #18 BLACK .....	1
20	N/A	WIRE ASSEMBLY, #18 BLACK .....	1
21	101911601 N/A	WIRE HARNESS, POWER (INCLUDES ITEMS 21 - 30) ..... WIRE ASSEMBLY, #18 GREEN .....	1 1
22	101865106	ASSEMBLY, 3-WIRE PLUG (INCLUDES #18 PURPLE, #18 YELLOW AND ITEM 23) .....	1
23	101883002	WIRE ASSEMBLY, #18 BLACK (INCLUDES RESISTOR AND #18 WHITE WIRE) .....	1
24	N/A	WIRE ASSEMBLY, #18 ORANGE .....	1
25	N/A	WIRE ASSEMBLY, #18 WHITE/BLACK .....	1
26	N/A	WIRE ASSEMBLY, #18 RED .....	1
27	N/A	WIRE ASSEMBLY, #18 GREEN .....	1
28	N/A	WIRE ASSEMBLY, #18 RED/WHITE .....	1
29	101930801	ASSEMBLY, 3-PIN PLUG (INCLUDES #18 BROWN, #18 YELLOW, AND #18 RED) .....	1
30	N/A	WIRE ASSEMBLY, #18 GREEN/WHITE .....	1
31	101909903	COMPUTER, ONBOARD (SEE PAGE 12-22) .....	1
32	N/A	WIRE ASSEMBLY, #6 BLACK .....	1
33	101904502	WIRE ASSEMBLY, #6 RED .....	1
34	101908902	WIRE ASSEMBLY, #6 WHITE .....	1
35	101904402	WIRE ASSEMBLY, #6 GREEN .....	1
36	101904602	WIRE ASSEMBLY, #6 BLUE .....	1
37	101904702	WIRE ASSEMBLY, #6 ORANGE .....	1
38	N/A	WIRE ASSEMBLY, #10 RED (PART OF FUSE AND RECEPTACLE ASSEMBLY) .....	1
39	N/A	WIRE ASSEMBLY, #10 BLACK (PART OF ONBOARD COMPUTER ASSEMBLY) .....	1
40	N/A	WIRE ASSEMBLY, #18 GRAY (PART OF ONBOARD COMPUTER ASSEMBLY) .....	1
41	N/A	WIRE ASSEMBLY, #16 RED .....	1
42	N/A	WIRE ASSEMBLY, #18 BLUE (PART OF POTENTIOMETER ASSEMBLY) .....	1
43	N/A	WIRE ASSEMBLY, #18 ORANGE/WHITE .....	1
44	N/A	WIRE ASSEMBLY, #18 RED .....	1
45	N/A	WIRE ASSEMBLY, #10 BLACK (PART OF VOLTAGE LIMITER ASSEMBLY) .....	1
46	101908801	WIRE ASSEMBLY, #6 BLUE .....	1
47	1016729	WIRE ASSEMBLY, #6 WHITE .....	1
48	N/A	WIRE ASSEMBLY, #10 BLACK (PART OF ONBOARD COMPUTER ASSEMBLY) .....	1
49	1016732	WIRE ASSEMBLY, #6 YELLOW .....	1
50	1014948	ASSEMBLY, DIODE .....	1
51	1014947	ASSEMBLY, RESISTOR .....	1
52	101795701	WIRE ASSEMBLY, #6 BLACK .....	5

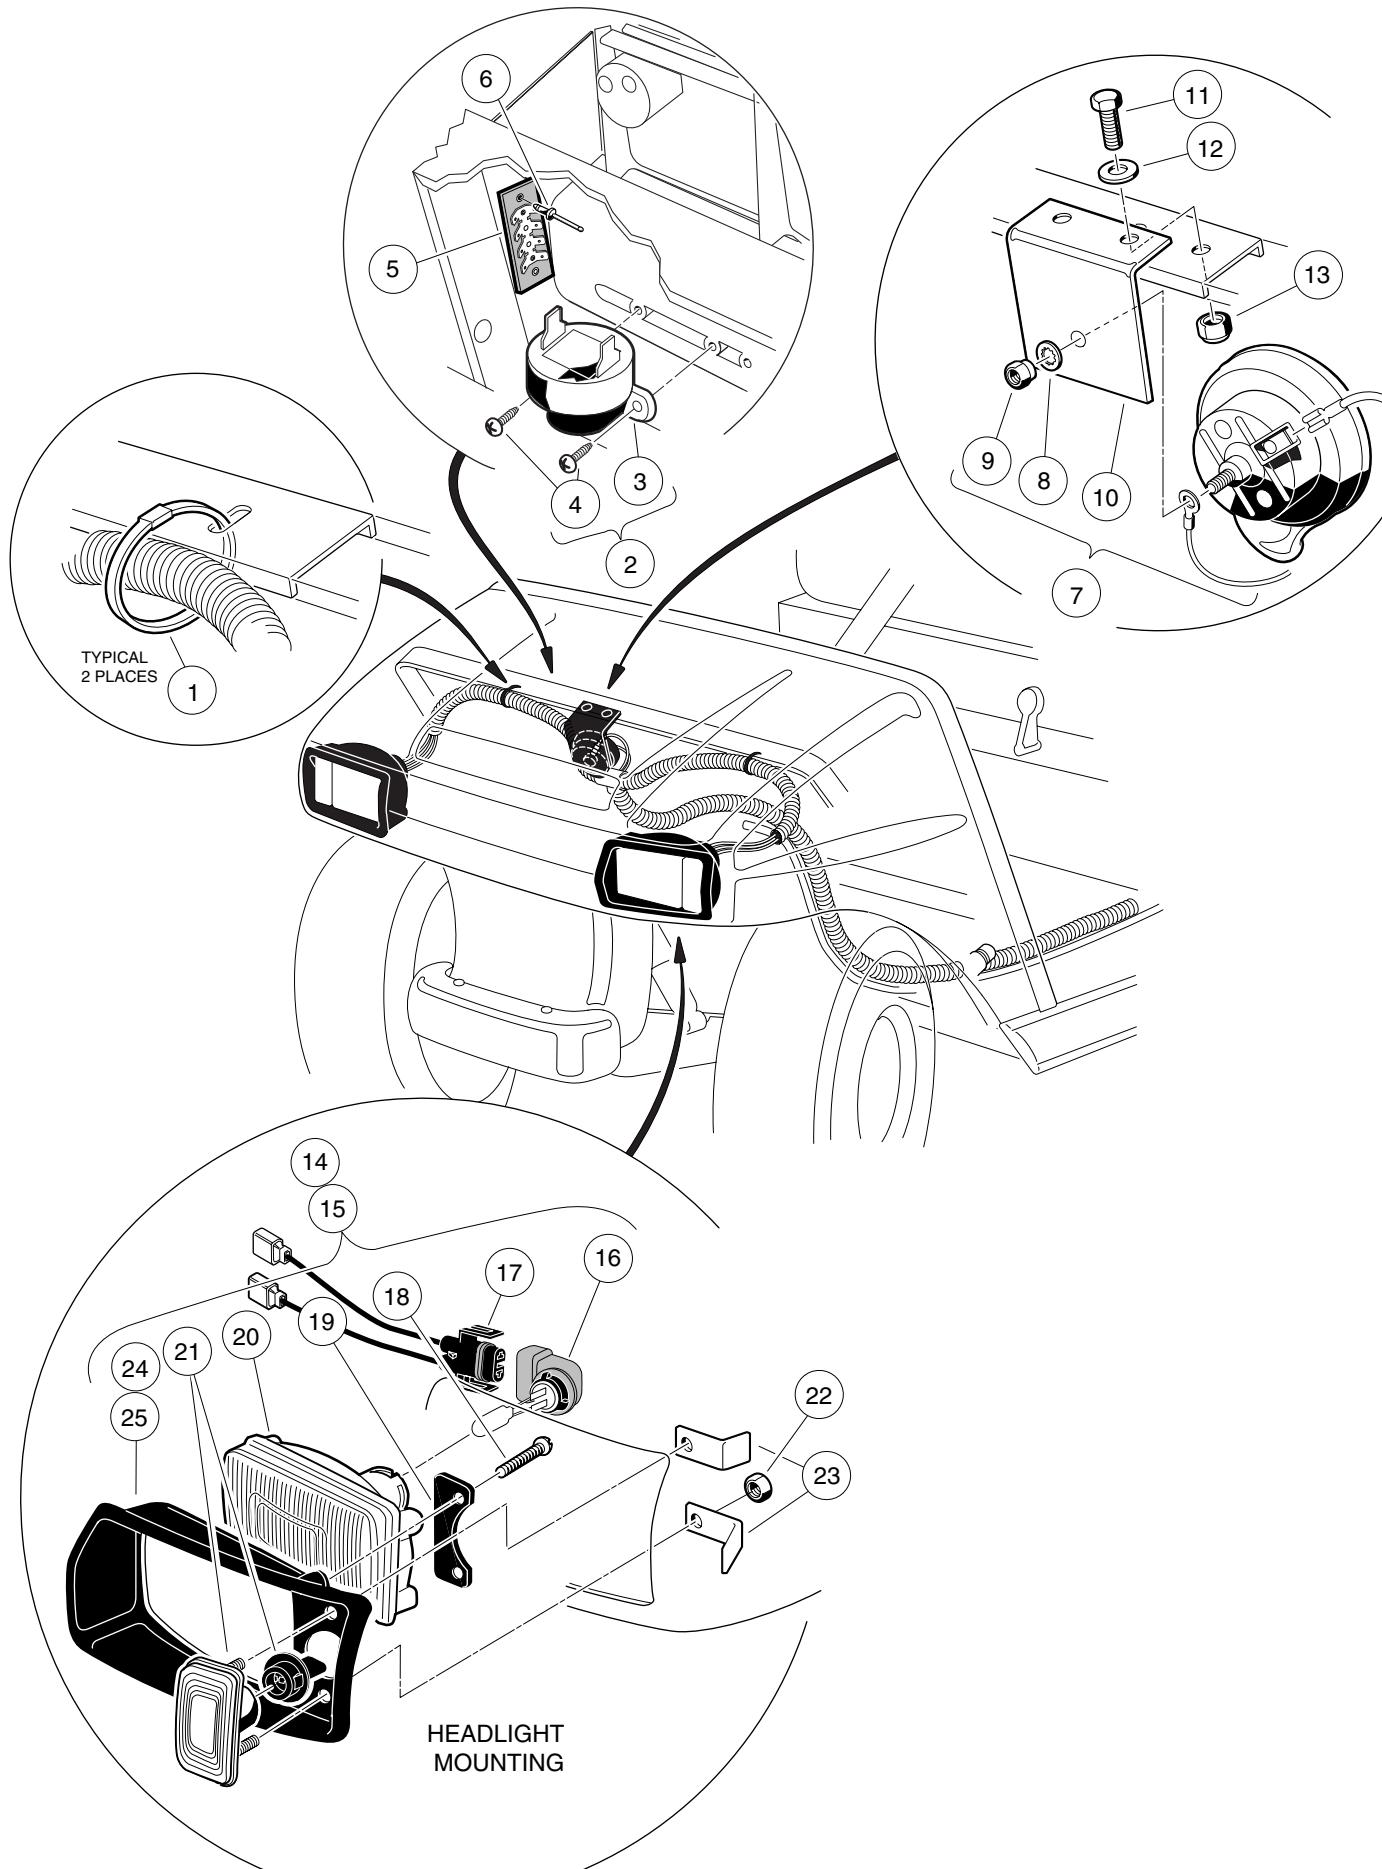**12****E**


# ELECTRICAL COMPONENTS, FRONT BODY— RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	8639	TIE, WIRE .....	2
2	1016859	KIT, REVERSE BUZZER (INCLUDES ITEMS 3 AND 4) .....	1
3	1016851	BUZZER, REVERSE .....	1
4	1016849	SCREW, PAN HEAD HI-LO, #4 - 24 x 5/16 .....	2
5	1016356	BLOCK, TERMINAL .....	1
6	1013357	RIVET, ALUMINUM POP, 5/32 x 3/8 .....	2
7	4029	ASSEMBLY, HORN (INCLUDES ITEMS 8, 9 AND 10) .....	1
8	7820	WASHER, INTERNAL TOOTH, 5/16 .....	1
9	101955101	NUT, M6 x 1-1/4 .....	1
10	1011825	BRACKET, HORN .....	1
11	304	SCREW, HEX HEAD CAP, 1/4 - 20 x 1 .....	2
12	332	WASHER, FLAT, 1/4 .....	2
13	8233	NUT, NYLON LOCK, 1/4 - 20 .....	2
14	101988001	ASSEMBLY, HEADLIGHT, DRIVER SIDE (INCLUDES ITEMS 16 - 24) .....	1
15	101988002	ASSEMBLY, HEADLIGHT, PASSENGER SIDE (INCLUDES ITEMS 16 - 23 AND 25) .....	1
16	101988101	BULB, HALOGEN .....	1
17	101987901	HARNESS, HEADLIGHT WIRE .....	1
18	1013461	SCREW, HI-LO, #10 - 16 .....	2
19	1017065	RETAINER, HEADLIGHT .....	1
20	101988201	LENS, HEADLIGHT .....	1
21	1017062	ASSEMBLY, TURN SIGNAL LENS .....	1
22	7893	NUT, HEX, #10 - 32 .....	2
23	1017064	BRACKET, MOUNTING .....	2
24	1016880	BEZEL, HEADLIGHT, DRIVER SIDE .....	1
25	1016879	BEZEL, HEADLIGHT, PASSENGER SIDE .....	1

**12**

**E**

**12**  
**E**

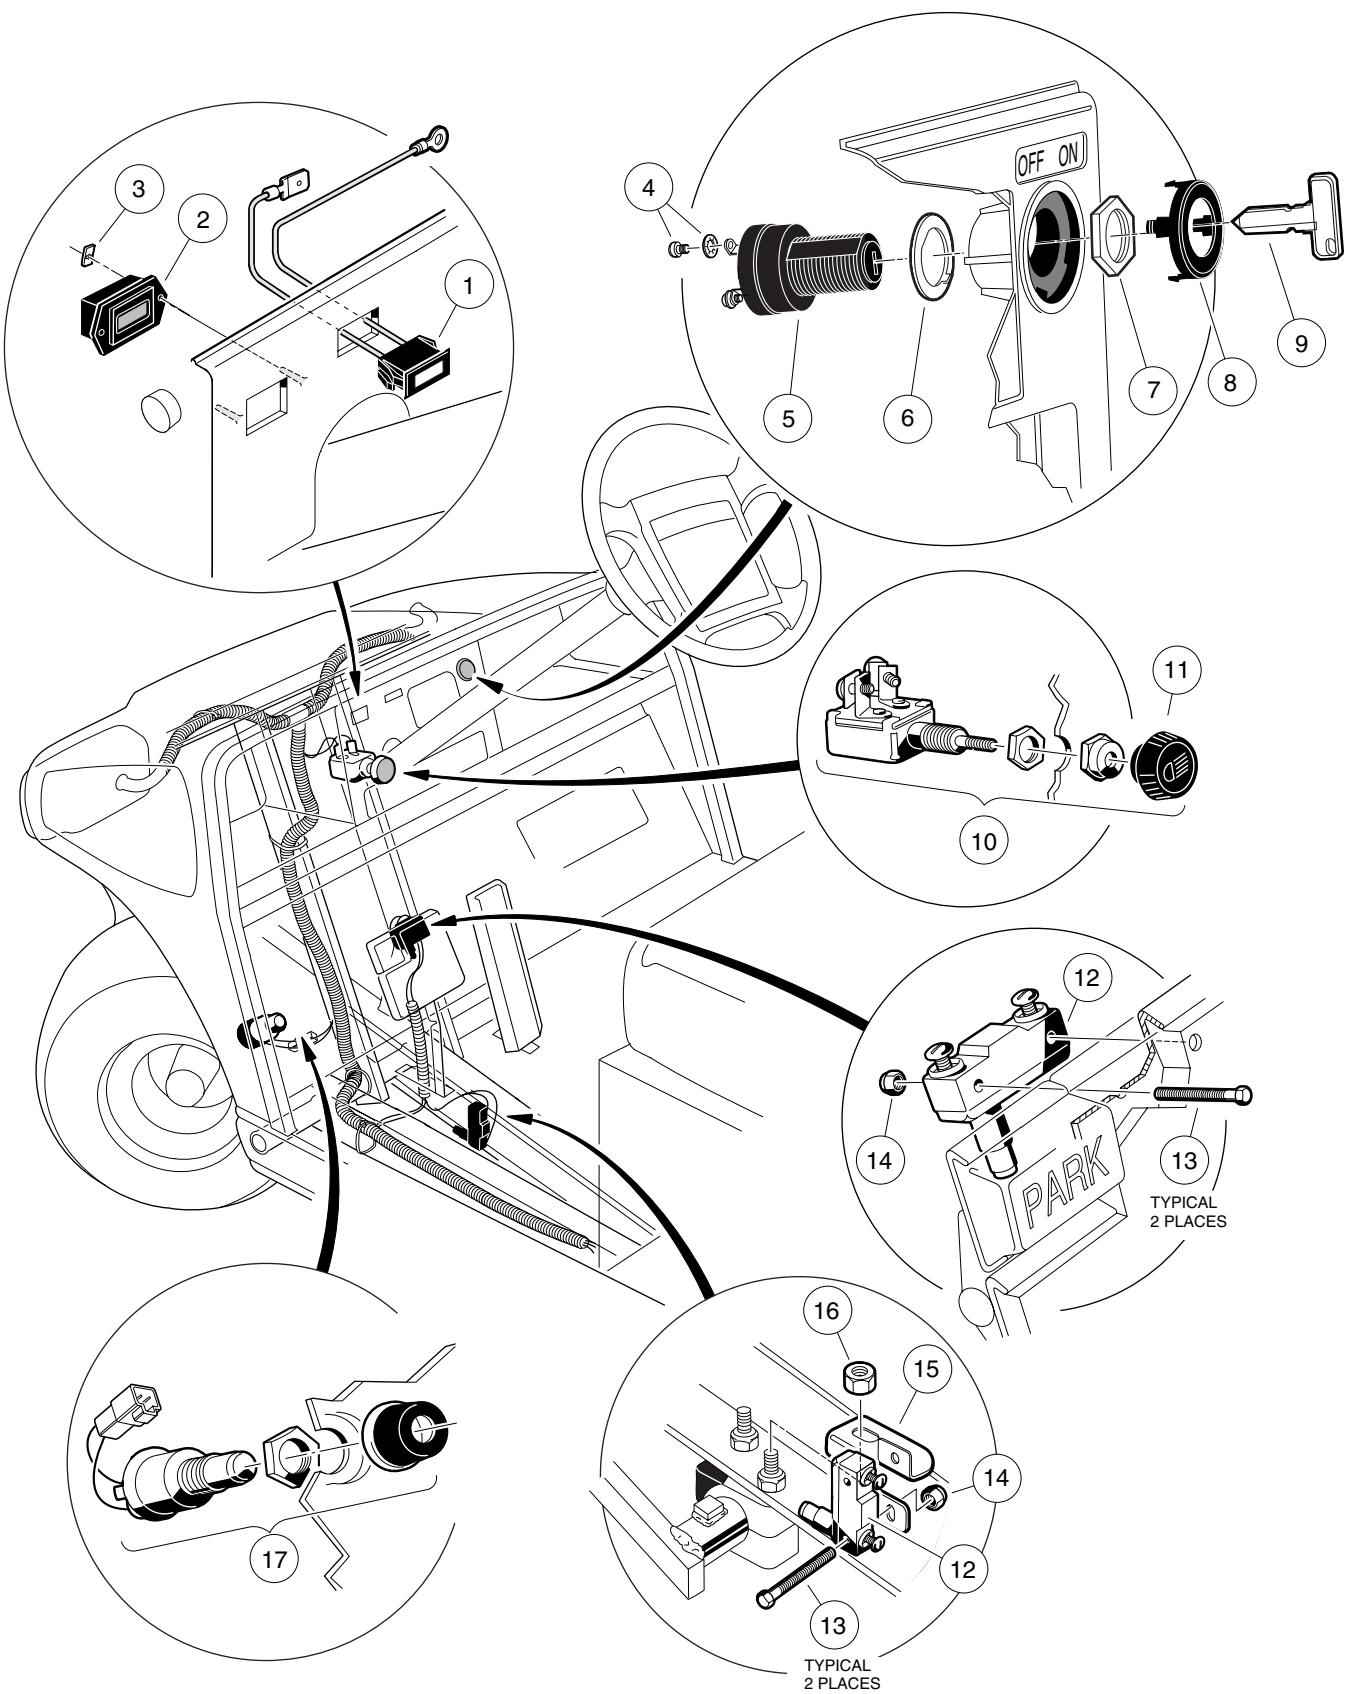


**SWITCHES AND GAUGES—  
RESORT VILLAGER, TRANS-PORTER/TRANS-SENDER**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101935501	LIGHT, BATTERY WARNING (AMBER) .....	1
2	101814201	INDICATOR, BATTERY .....	1
3	101814701	RETAINER, PUSH ON .....	2
4	101830601	ASSEMBLY, SCREW AND WASHER .....	2
5	101826201	SWITCH, KEY .....	1
6	101851101	WASHER, KEY SWITCH .....	1
7	101830701	NUT, KEY SWITCH .....	1
8	101834502	CAP, KEY SWITCH .....	1
9	1012505	KEY (PAIR) .....	1
10	4034	SWITCH, LIGHT (INCLUDES ITEM 13) .....	1
11	1013857	KNOB, LIGHT SWITCH .....	1
12	1011439	SWITCH, LIMIT .....	2
13	1011557	SCREW, HEX HEAD MACHINE, #6 - 32 x 1 .....	4
14	101932201	NUT, NYLON LOCK, #6 - 32 .....	4
15	101957101	BRACKET, BRAKE LIGHT SWITCH .....	1
16	1011280	NUT, LOCK, 5/16 - 18 .....	1
17	101969701	BUTTON, HORN .....	1

**12**

**E**

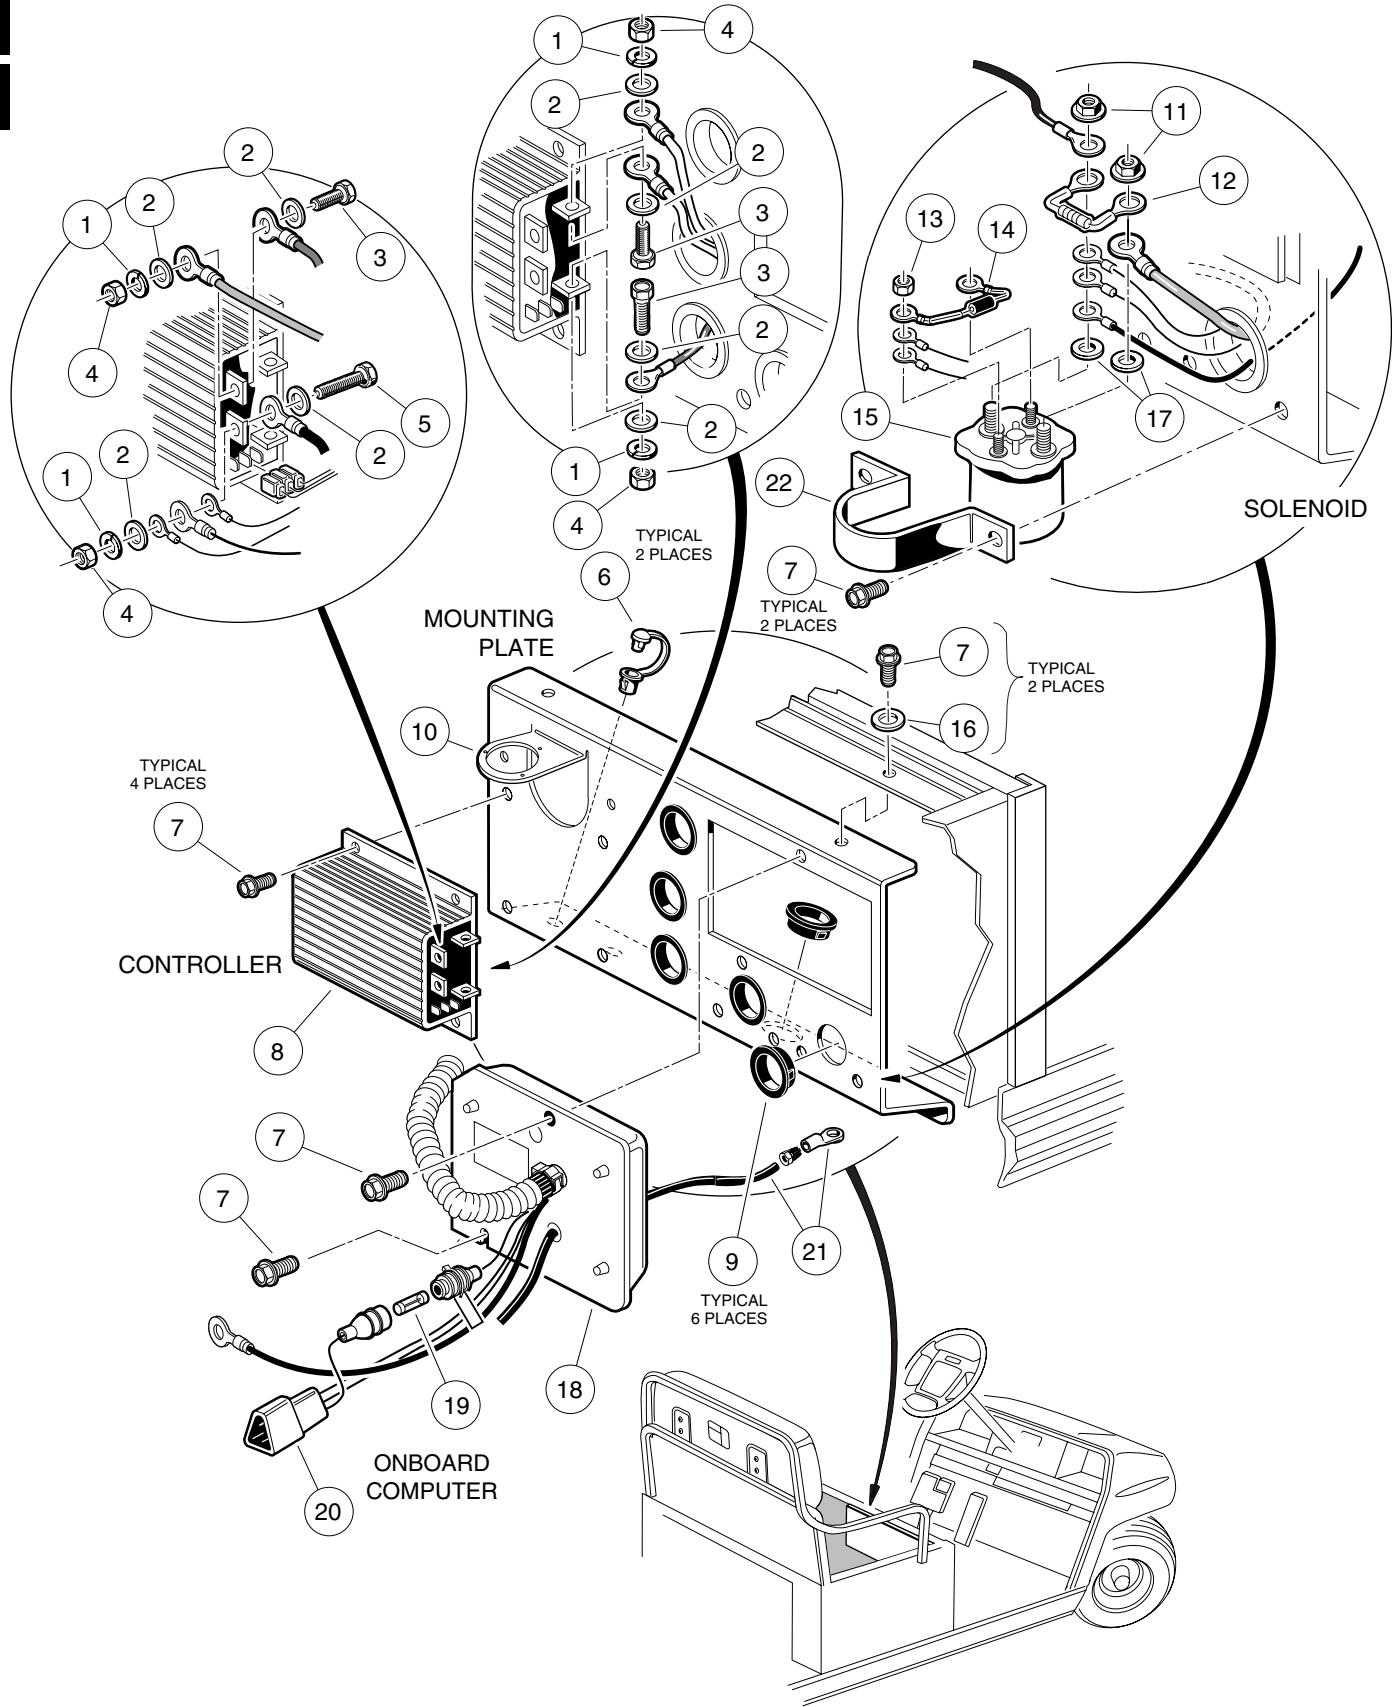
**12****E**

# COMPUTER, CONTROLLER, AND SOLENOID— RESORT VILLAGER POWERDRIVE ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	7174	WASHER, LOCK, 5/16 .....	4
2	1241	WASHER, FLAT, 5/16 .....	8
3	7173	SCREW, HEX HEAD CAP, 5/16 - 18 x 3/4 .....	3
4	1242	NUT, HEX, 5/16 - 18 .....	4
5	1218	SCREW, HEX HEAD CAP, 5/16 - 18 x 1 1/4 .....	1
6	101918301	CLAMP, WIRE .....	2
7	1012285	SCREW, HEX HEAD THREAD ROLLING, 1/4 - 20 x 5/8 .....	10
8	101840203	CONTROLLER, 48-VOLT (300 AMP) .....	1
9	101924301	BUSHING, SNAP .....	6
10	101911701	PLATE, MOUNTING .....	1
11	1017237	NUT, FLANGE, 5/16 - 24 .....	2
12	1014947	ASSEMBLY, RESISTOR .....	1
13	7893	NUT, HEX, #10 - 32 .....	2
14	1014948	ASSEMBLY, DIODE .....	1
15	101883601	SOLENOID, 48-VOLT (WITH MOUNTING BRACKET) .....	1
16	332	WASHER, FLAT, 1/4 .....	2
17	101934401	WASHER, FLAT, 5/16 .....	2
18	101909903	COMPUTER, ONBOARD (INCLUDES ITEMS 19 AND 20) .....	1
19	101894901	FUSE, 3/8-AMP .....	1
20	101942301	KIT, 3-PIN RECEPTACLE .....	1
21	101827802	KIT, WIRE AND TERMINAL, #6 BLACK .....	1
22	101957901	BRACKET, MOUNTING .....	1

12

E

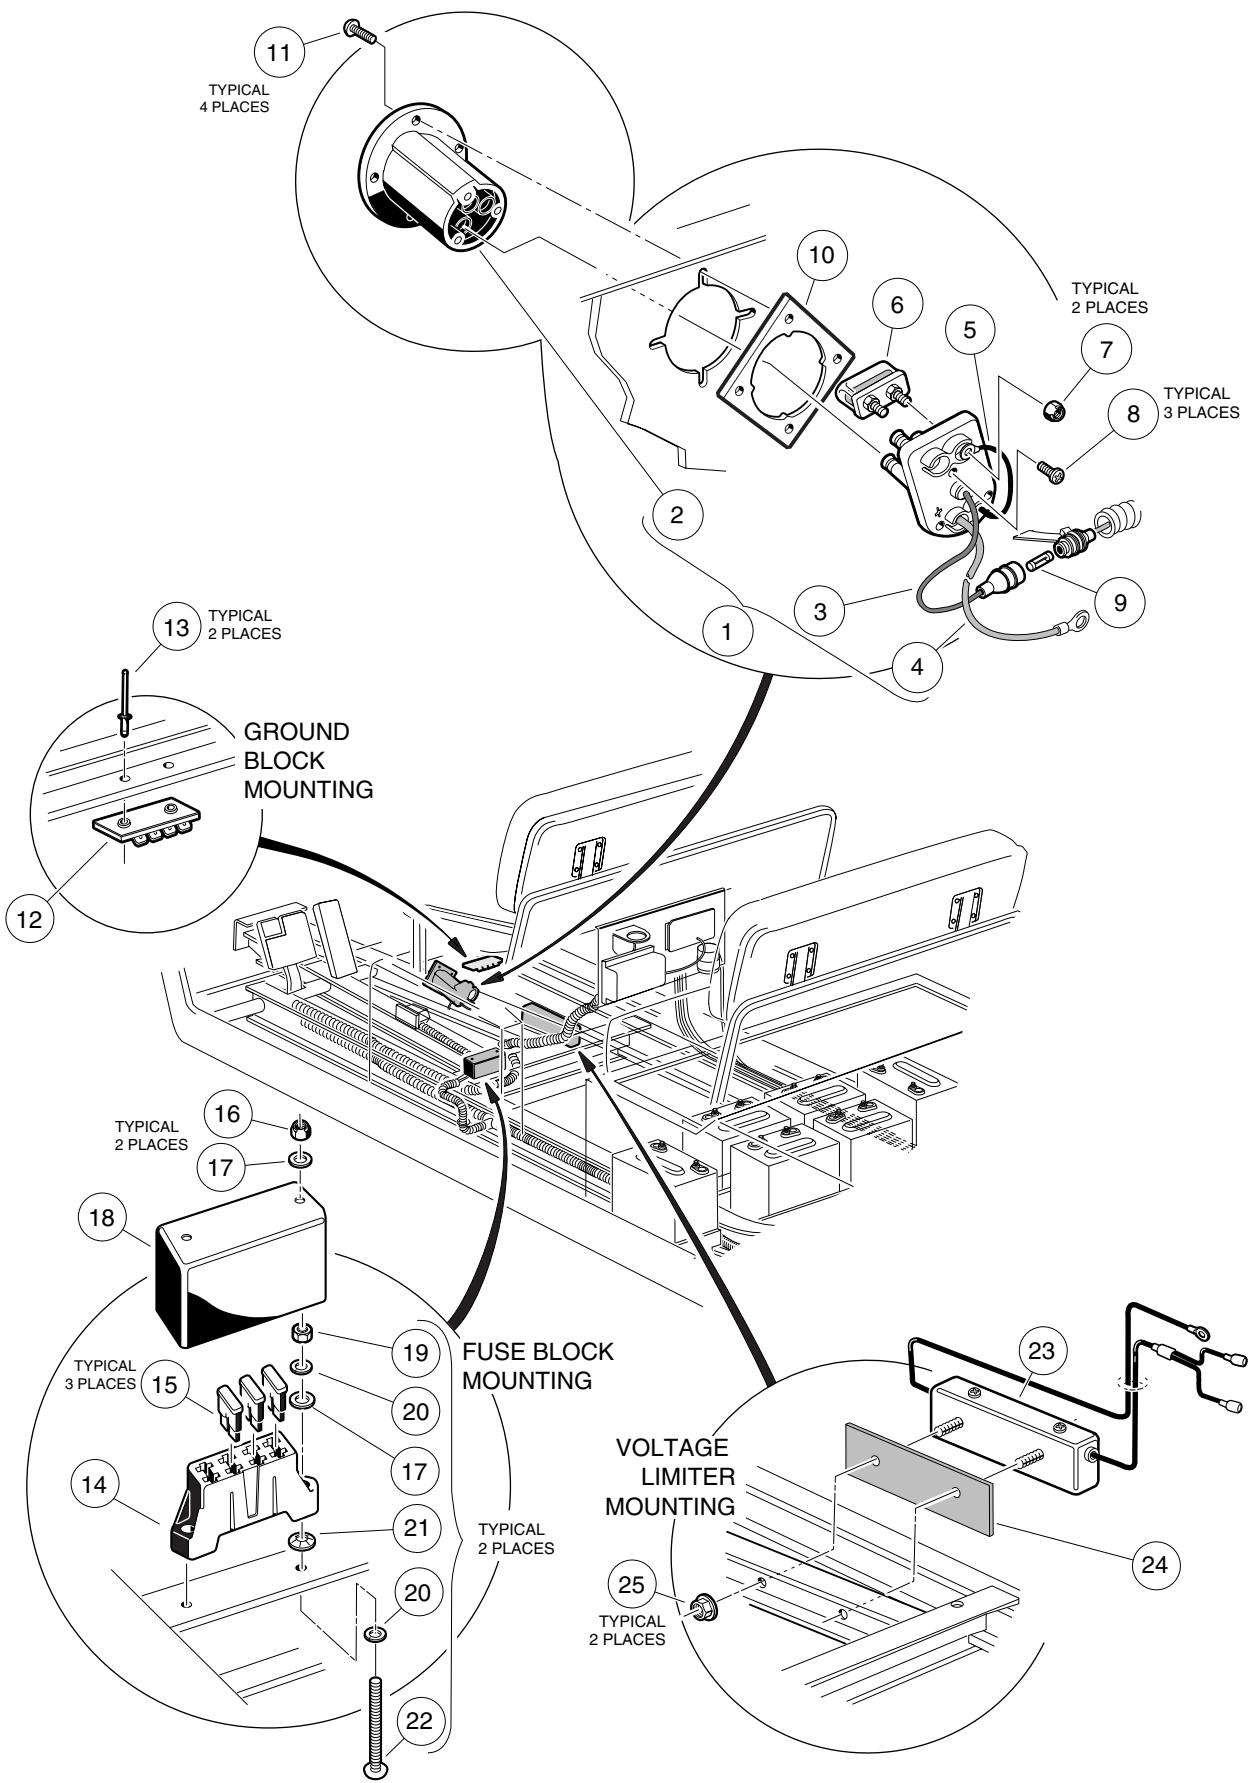


# ELECTRICAL COMPONENTS, CENTER BODY— RESORT VILLAGER POWERDRIVE ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101802101	KIT, FUSE AND RECEPTACLE (INCLUDES ITEMS 2 - 9) .....	1
2	101796501	BEZEL, RECEPTACLE .....	1
3	N/A	WIRE ASSEMBLY, SENSE LEAD, GRAY .....	1
4	N/A	WIRE ASSEMBLY, #10 RED .....	1
5	N/A	WIRE ASSEMBLY, #10 BLACK .....	1
6	101796801	ASSEMBLY, FUSE, 48-VOLT (INCLUDES ITEM 7) .....	1
7	1013061	NUT, NYLON LOCK, #10 .....	2
8	1017705	SCREW, PHILLIPS PAN HEAD, #8 TYPE AB .....	3
9	101894901	FUSE, 3/8-AMP .....	1
10	101801001	PLATE, RECEPTACLE BACKING .....	1
11	101832001	SCREW, PHILLIPS PAN HEAD, #7 - 18 x 3/4 .....	4
12	1016356	BLOCK, TERMINAL .....	1
13	1013357	RIVET, ALUMINUM POP, 5/32 x 1/4 .....	2
14	1015741	BLOCK, FUSE .....	1
15	1016423	FUSE, 20-AMP .....	3
16	1012438	NUT, NYLON LOCK, #10 - 24 .....	2
17	183	WASHER, FLAT, #10 .....	4
18	1016363	COVER, FUSE BLOCK .....	1
19	1017	NUT, HEX, #10 - 24 .....	2
20	1016	WASHER, LOCK, #10 .....	4
21	1016631	NUT, PUSH .....	2
22	1016366	SCREW, ROUND HEAD, #10 - 24 x 3 .....	2
23	101810801	LIMITER, VOLTAGE (INCLUDES ITEMS 24 AND 25) .....	1
24	101962601	GASKET .....	1
25	101835601	NUT, FLANGED LOCK, 1/4 - 20 .....	2

12

E

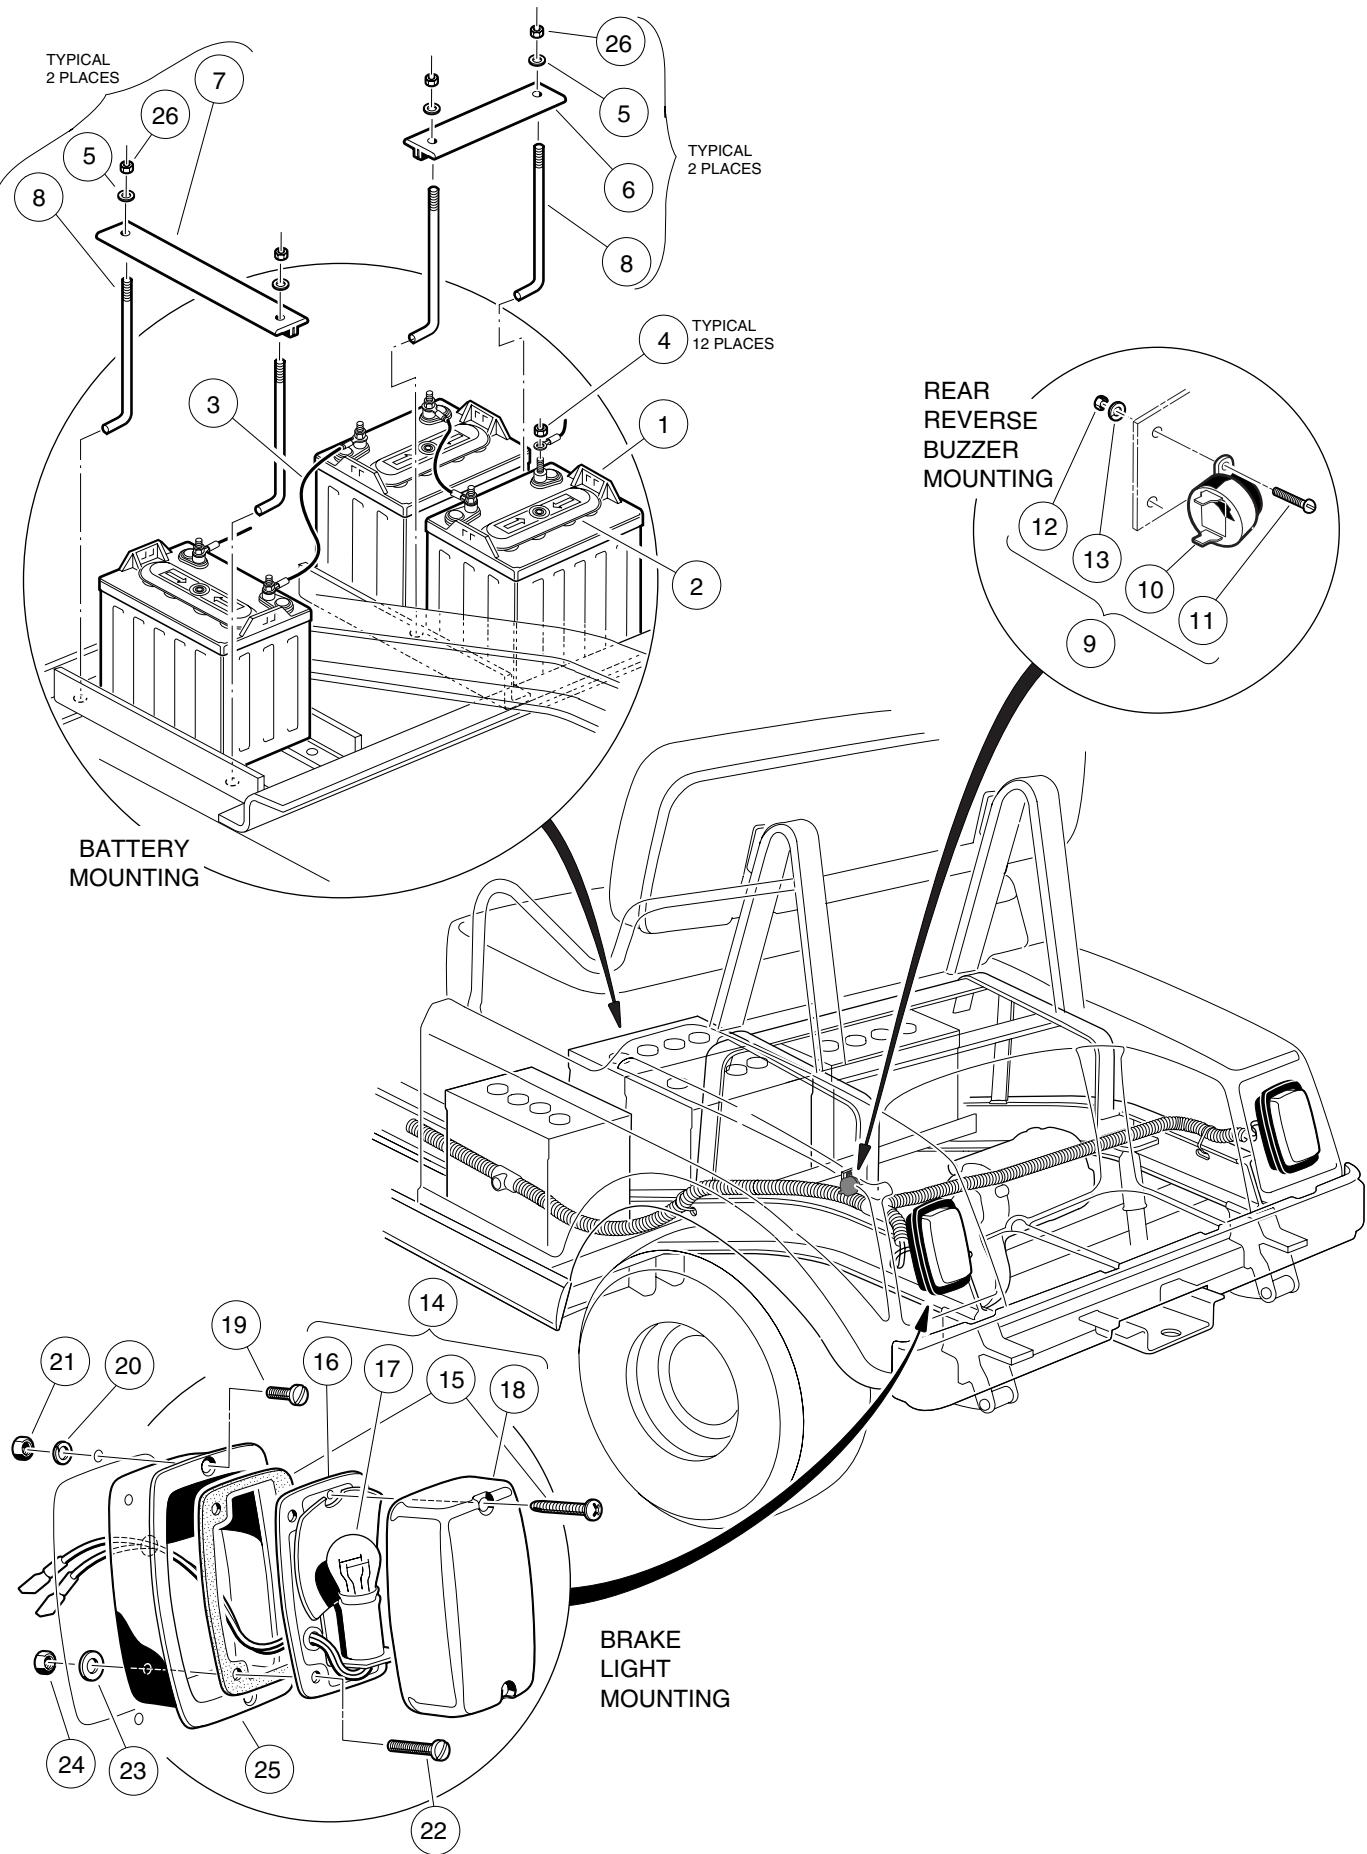
**12****E**

# ELECTRICAL COMPONENTS, REAR BODY— RESORT VILLAGER POWERDRIVE ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101797701	BATTERY, 8-VOLT POWERDRIVE (INCLUDES ITEM 2) .....	6
1	101797702	BATTERY, 8-VOLT POWERDRIVE, DRY (INCLUDES ITEM 2) .....	6
2	101797801	CAP, BATTERY, 4 PORT GANG .....	1
3	101795701	WIRE ASSEMBLY, #6 BLACK .....	5
4	1014304	NUT, HEX, STAINLESS STEEL, 5/16 - 18 .....	12
5	1011578	WASHER, FLAT, TYPE B WIDE, 5/16 .....	8
6	101090801	HOLD-DOWN, BATTERY, SHORT .....	2
7	101090802	HOLD-DOWN, BATTERY, LONG .....	2
8	101668201	ROD, BATTERY HOLD-DOWN .....	8
9	1016859	KIT, REVERSE BUZZER (INCLUDES ITEMS 10 - 13) .....	1
10	1016851	BUZZER, REVERSE .....	1
11	8056	SCREW, MACHINE, #4 - 40 x 3/4 .....	2
12	8057	NUT, HEX, #4 - 40 .....	2
13	8058	WASHER, LOCK, #4 .....	2
14	1017035	ASSEMBLY, TAILLIGHT (INCLUDES ITEMS 15 - 18) .....	2
15	1017699	KIT, HARDWARE .....	1
16	N/A	BASE, TAILLIGHT .....	1
17	1011582	BULB .....	1
18	1011843	LENS .....	1
19	1011498	SCREW, MACHINE, #8 - 32 x 1/2 .....	4
20	1011610	WASHER, LOCK, #8 .....	4
21	1011571	NUT, HEX, #8 - 32 .....	4
22	1011557	SCREW, MACHINE, #6 - 32 x 1 .....	4
23	7591	WASHER, FLAT, #6 .....	4
24	1011558	NUT, HEX, #6 .....	6
25	1011497	BEZEL, TAILLIGHT .....	2
26	1015072	NUT, NYLON LOCK, STAINLESS STEEL, 5/16 - 18 .....	8

12

E

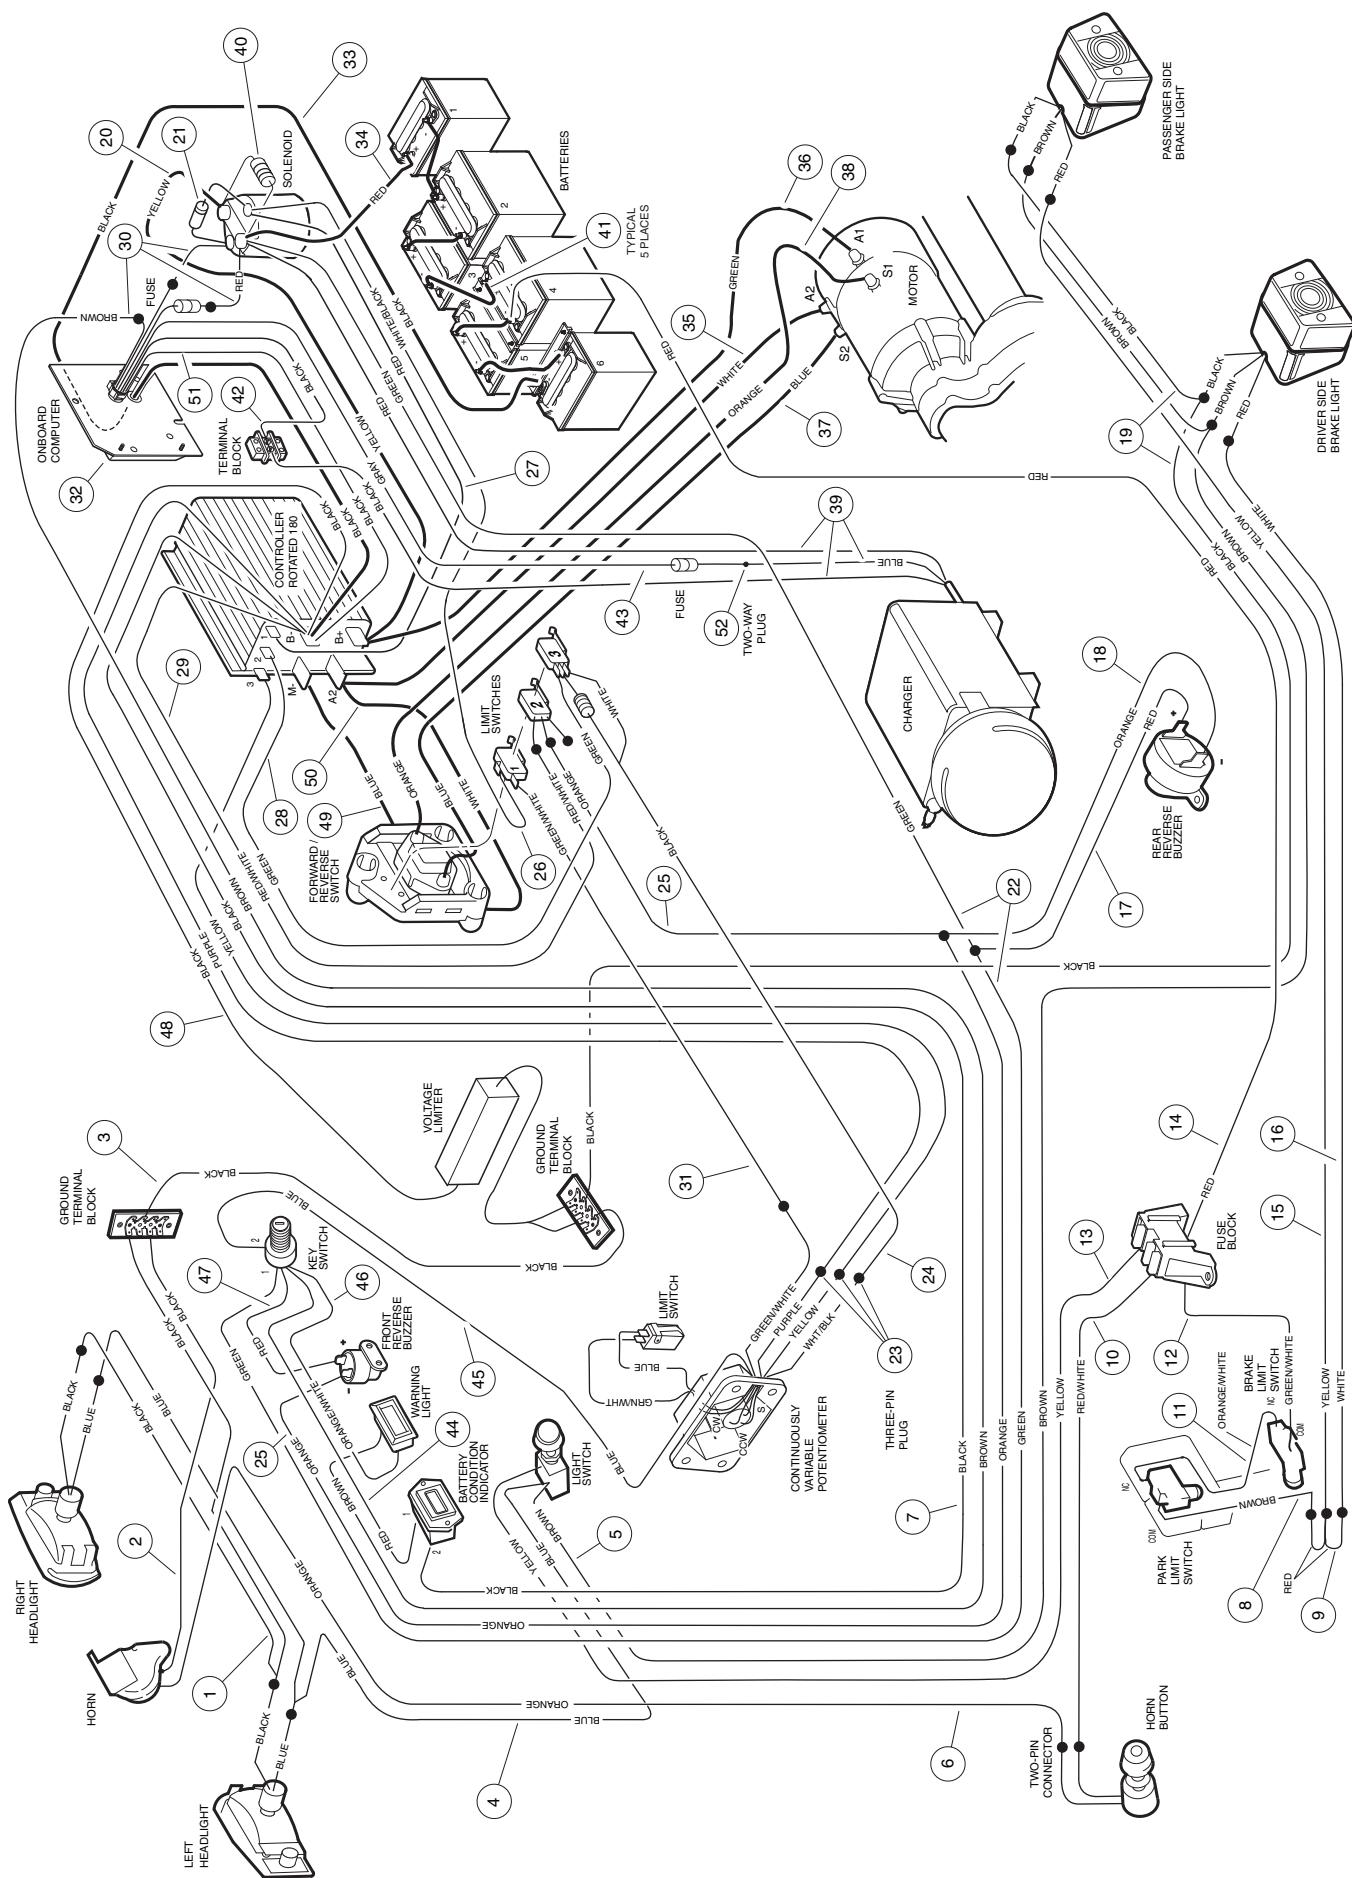


## WIRING—

## TRANS-PORTER/TRANS-SENDER ELECTRIC VEHICLES

12

E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101989901 N/A	WIRE HARNESS, LIGHTING (CONTAINS ITEMS 1 - 19) ..... WIRE ASSEMBLY, #16 BLACK .....	1 1
2	N/A	WIRE ASSEMBLY, #16 BLACK .....	1
3	N/A	WIRE ASSEMBLY, #14 BLACK .....	1
4	N/A	WIRE ASSEMBLY, #18 BLUE .....	1
5	N/A	WIRE ASSEMBLY, #16 BROWN .....	1
6	N/A	WIRE ASSEMBLY, #16 ORANGE .....	1
7	N/A	WIRE ASSEMBLY, #18 BLACK .....	1
8	N/A	WIRE ASSEMBLY, #16 BROWN .....	1
9	N/A	WIRE ASSEMBLY, #18 RED .....	1
10	N/A	WIRE ASSEMBLY, #16 RED/WHITE .....	1
11	N/A	WIRE ASSEMBLY, #16 ORANGE/WHITE .....	1
12	N/A	WIRE ASSEMBLY, #16 GREEN/WHITE .....	1
13	N/A	WIRE ASSEMBLY, #14 YELLOW .....	1
14	1016698	WIRE ASSEMBLY, #10 RED .....	1
15	N/A	WIRE ASSEMBLY, #18 YELLOW .....	1
16	N/A	WIRE ASSEMBLY, #18 WHITE .....	1
17	N/A	WIRE ASSEMBLY, #18 RED .....	1
18	N/A	WIRE ASSEMBLY, #18 ORANGE .....	1
19	N/A	WIRE ASSEMBLY, #16 BLACK .....	1
20	1016732	WIRE ASSEMBLY, #6 YELLOW .....	1
21	1014948	ASSEMBLY, DIODE .....	1
	101911601	WIRE HARNESS, POWER (INCLUDES ITEMS 22 - 31) .....	1
22	N/A	WIRE ASSEMBLY, #18 GREEN .....	1
23	101865106	ASSEMBLY, 3-WIRE PLUG (INCLUDES #18 PURPLE, #18 YELLOW AND ITEM 24) .....	1
24	101883002	WIRE ASSEMBLY, #18 BLACK (INCLUDES RESISTOR AND #18 WHITE WIRE) .....	1
25	N/A	WIRE ASSEMBLY, #18 ORANGE .....	1
26	N/A	WIRE ASSEMBLY, #18 WHITE/BLACK .....	1
27	N/A	WIRE ASSEMBLY, #18 RED .....	1
28	N/A	WIRE ASSEMBLY, #18 GREEN .....	1
29	N/A	WIRE ASSEMBLY, #18 RED/WHITE .....	1
30	101930801	ASSEMBLY, 3-PIN PLUG (INCLUDES #18 BROWN, #18 YELLOW, AND #18 RED) .....	1
31	N/A	WIRE ASSEMBLY, #18 GREEN/WHITE .....	1
32	101909903	COMPUTER, ONBOARD (SEE PAGE 12-32) .....	1
33	N/A	WIRE ASSEMBLY, #6 BLACK .....	1
34	101904502	WIRE ASSEMBLY, #6 RED .....	1
35	101908902	WIRE ASSEMBLY, #6 WHITE .....	1
36	101904402	WIRE ASSEMBLY, #6 GREEN .....	1
37	101904602	WIRE ASSEMBLY, #6 BLUE .....	1
38	101904702	WIRE ASSEMBLY, #6 ORANGE .....	1
39	101829101	DC CORD, #10 BLUE, #10 RED, #10 BLACK (PART OF CHARGER) .....	1
40	1014947	ASSEMBLY, RESISTOR .....	1
41	101795701	WIRE ASSEMBLY, #6 BLACK .....	5
42	N/A	WIRE ASSEMBLY, #10 BLACK (PART OF ONBOARD COMPUTER ASSEMBLY) .....	1
43	N/A	WIRE ASSEMBLY, #18 GRAY (PART OF ONBOARD COMPUTER ASSEMBLY) .....	1
44	N/A	WIRE ASSEMBLY, #18 RED .....	1
45	N/A	WIRE ASSEMBLY, #18 BLUE (PART OF POTENTIOMETER ASSEMBLY) .....	1
46	N/A	WIRE ASSEMBLY, #18 ORANGE/WHITE .....	1
47	N/A	WIRE ASSEMBLY, #18 RED .....	1
48	N/A	WIRE ASSEMBLY, #10 BLACK (PART OF VOLTAGE LIMITER ASSEMBLY) .....	1
49	101908801	WIRE ASSEMBLY, #6 BLUE .....	1
50	1016729	WIRE ASSEMBLY, #6 WHITE .....	1
51	N/A	WIRE ASSEMBLY, #10 BLACK (PART OF ONBOARD COMPUTER ASSEMBLY) .....	1
52	101957501	PLUG, 2-WAY (INCLUDES ITEM 53) .....	1
53	101894901	FUSE, 3/8-AMP (NOT SHOWN) .....	1

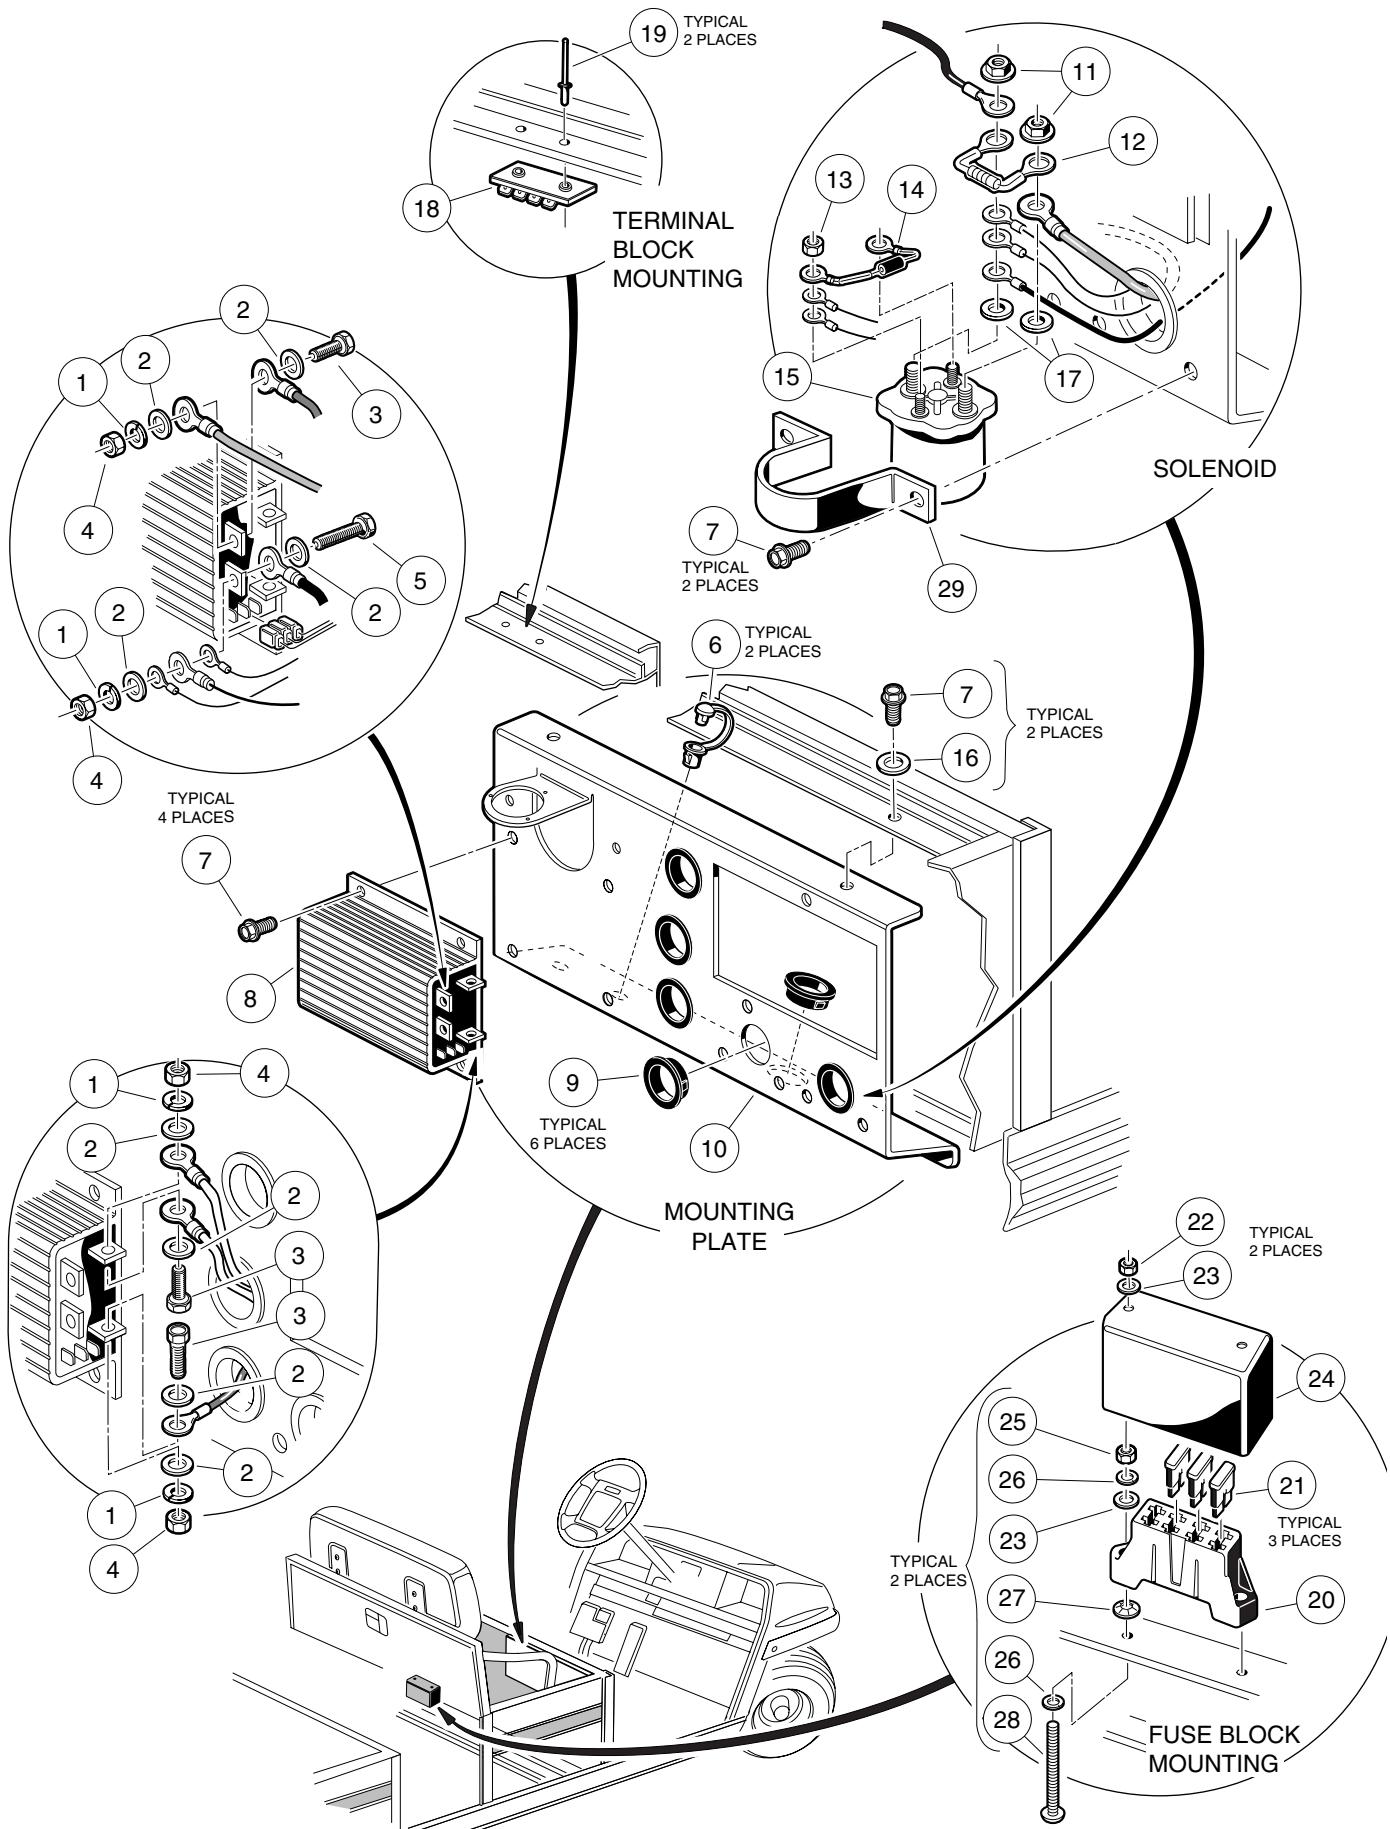


# ELECTRICAL COMPONENTS, CENTER BODY— TRANS-PORTER/TRANS-SENDER ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	7174	WASHER, LOCK, 5/16 .....	4
2	1241	WASHER, FLAT, 5/16 .....	8
3	7173	SCREW, HEX HEAD CAP, 5/16 - 18 x 3/4 .....	3
4	1242	NUT, HEX, 5/16 - 18 .....	4
5	1218	SCREW, HEX HEAD CAP, 5/16 - 18 x 1 1/4 .....	1
6	101918301	CLAMP, WIRE .....	2
7	1012285	SCREW, HEX HEAD THREAD ROLLING, 1/4 - 20 x 5/8 .....	8
8	101840203	CONTROLLER, 48-VOLT (300 AMP) .....	1
9	101924301	BUSHING, SNAP .....	6
10	101911701	PLATE, MOUNTING .....	1
11	1017237	NUT, FLANGE, 5/16 - 24 .....	2
12	1014947	ASSEMBLY, RESISTOR .....	1
13	7893	NUT, HEX, #10 - 32 .....	2
14	1014948	ASSEMBLY, DIODE .....	1
15	101883601	SOLENOID, 48-VOLT (WITH MOUNTING BRACKET) .....	1
16	332	WASHER, FLAT, 1/4 .....	2
17	101934401	WASHER, FLAT, 5/16 .....	2
18	1016356	BLOCK, TERMINAL .....	1
19	1013357	RIVET, ALUMINUM POP, 5/32 x 1/4 .....	2
20	1015741	BLOCK, FUSE .....	1
21	1016423	FUSE, 20-AMP .....	3
22	1012438	NUT, NYLON LOCK, #10 - 24 .....	2
23	183	WASHER, FLAT, #10 .....	4
24	1016363	COVER, FUSE BLOCK .....	1
25	1017	NUT, HEX, #10 - 24 .....	2
26	1016	WASHER, LOCK, #10 .....	4
27	1016631	NUT, PUSH .....	2
28	1016366	SCREW, ROUND HEAD, #10 - 24 x 3 .....	2
29	101957901	BRACKET, MOUNTING.....	1

12

E

**12**  
**E**

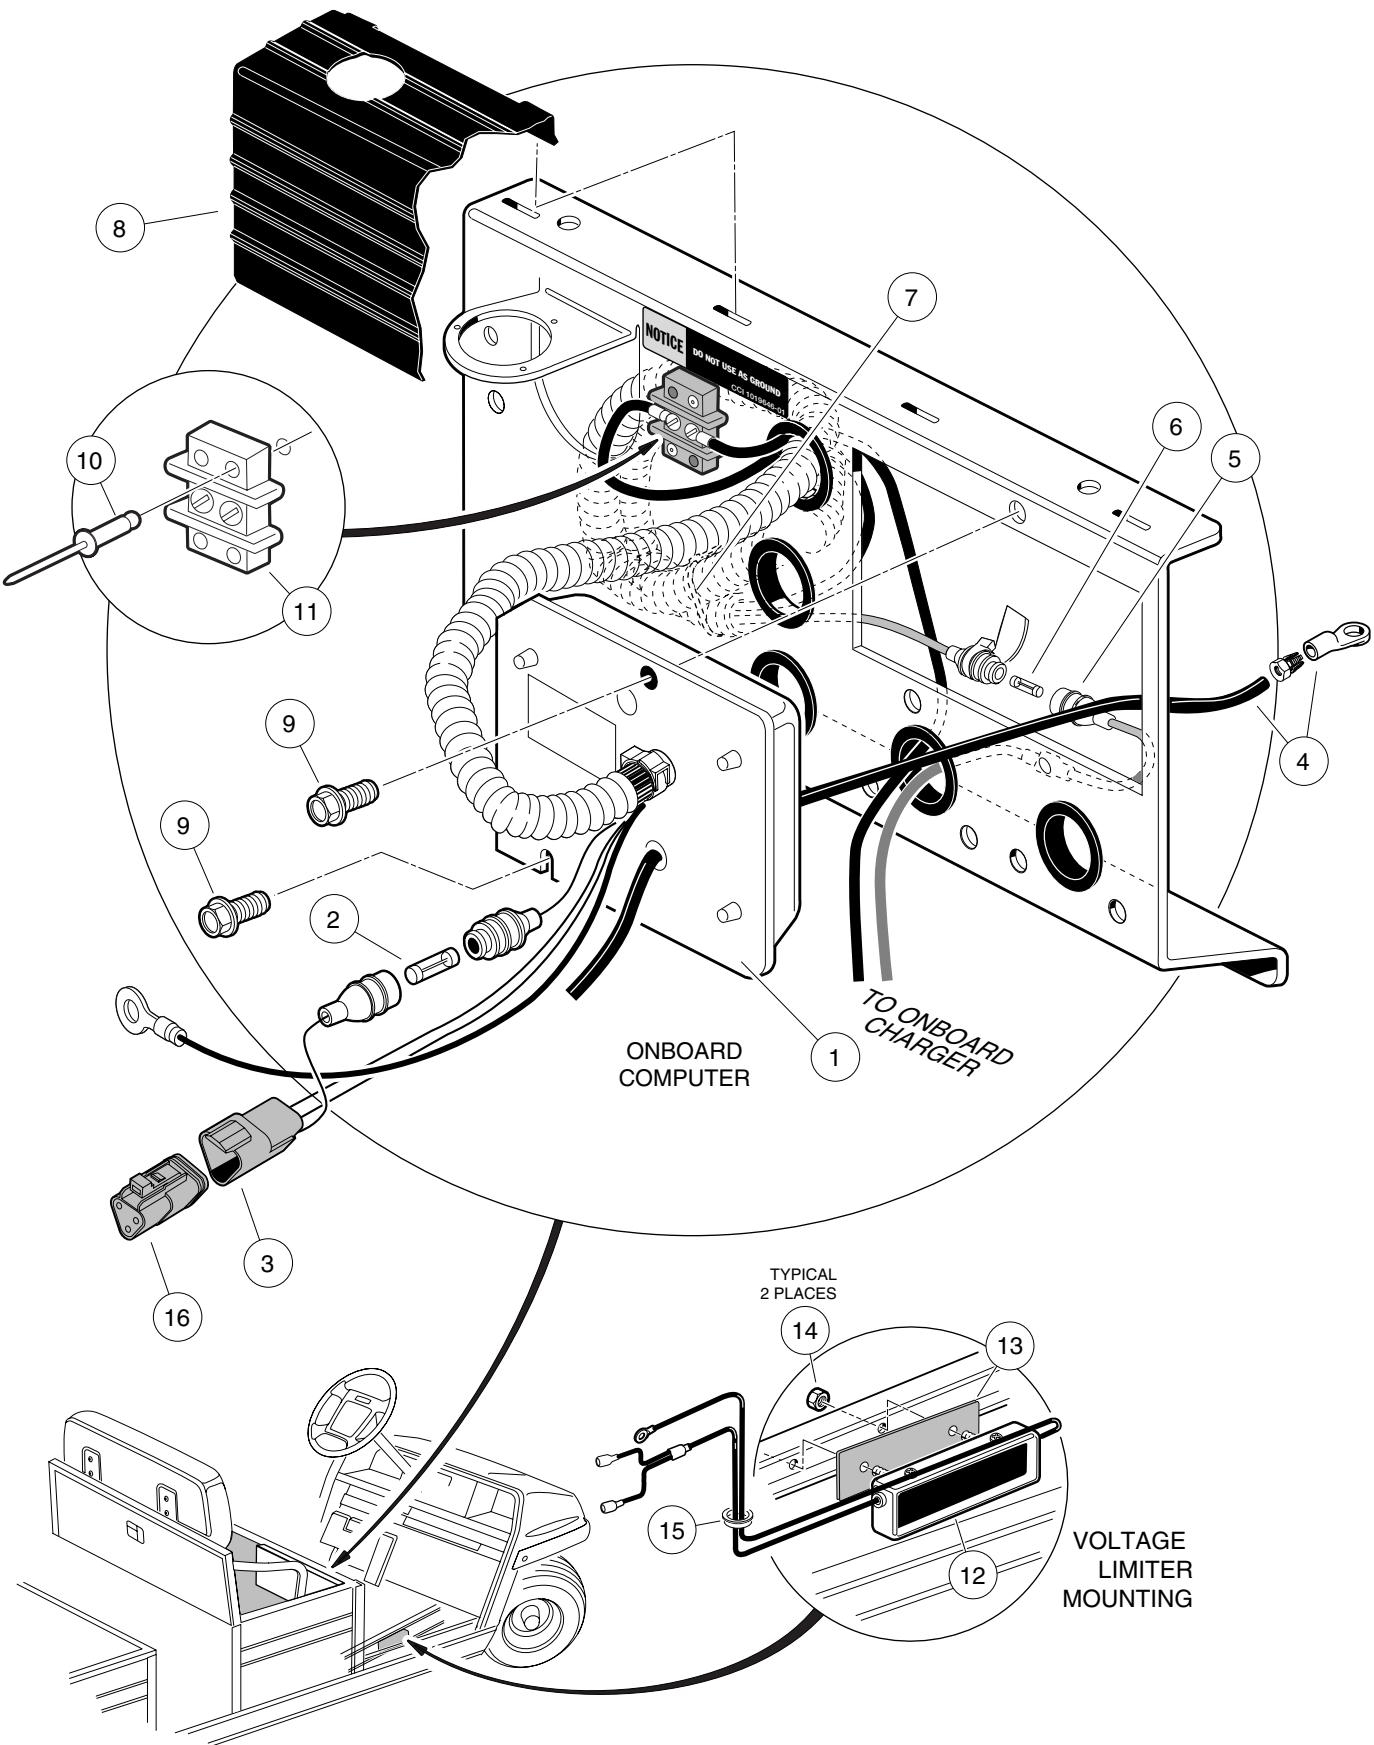

# ELECTRICAL COMPONENTS, CENTER BODY, CONTINUED— TRANS-PORTER/TRANS-SENDER ELECTRIC VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101909903	COMPUTER, ONBOARD (INCLUDES ITEMS 2 AND 3) .....	1
2	101894901	FUSE, 3/8-AMP .....	1
3	101942301	CONNECTOR, 3-PIN .....	1
4	101827802	KIT, WIRE AND TERMINAL, #6 BLACK .....	1
5	101957501	ADAPTER, TWO-WAY (INCLUDES ITEM 6).....	1
6	101894901	FUSE, 3/8-AMP .....	1
7	8990	TIE, WIRE .....	1
8	101931601	COVER, COMPONENT .....	1
9	1012285	SCREW, HEX HEAD THREAD-ROLLING, 1/4 - 20 x 5/8 .....	2
10	101968801	RIVET, POP, 3/16 x 13/16 .....	2
11	101966801	BLOCK, TERMINAL .....	1
12	101810801	LIMITER, VOLTAGE (INCLUDES ITEM 13 AND 14) .....	1
13	101962601	GASKET .....	1
14	101835601	NUT, FLANGED LOCK, 1/4 - 20 .....	2
15	101802401	GROMMET, 5/8 .....	1
16	101920101	KIT, 3-PIN PLUG ASSEMBLY .....	1

**12**

**E**

**12**

**E**

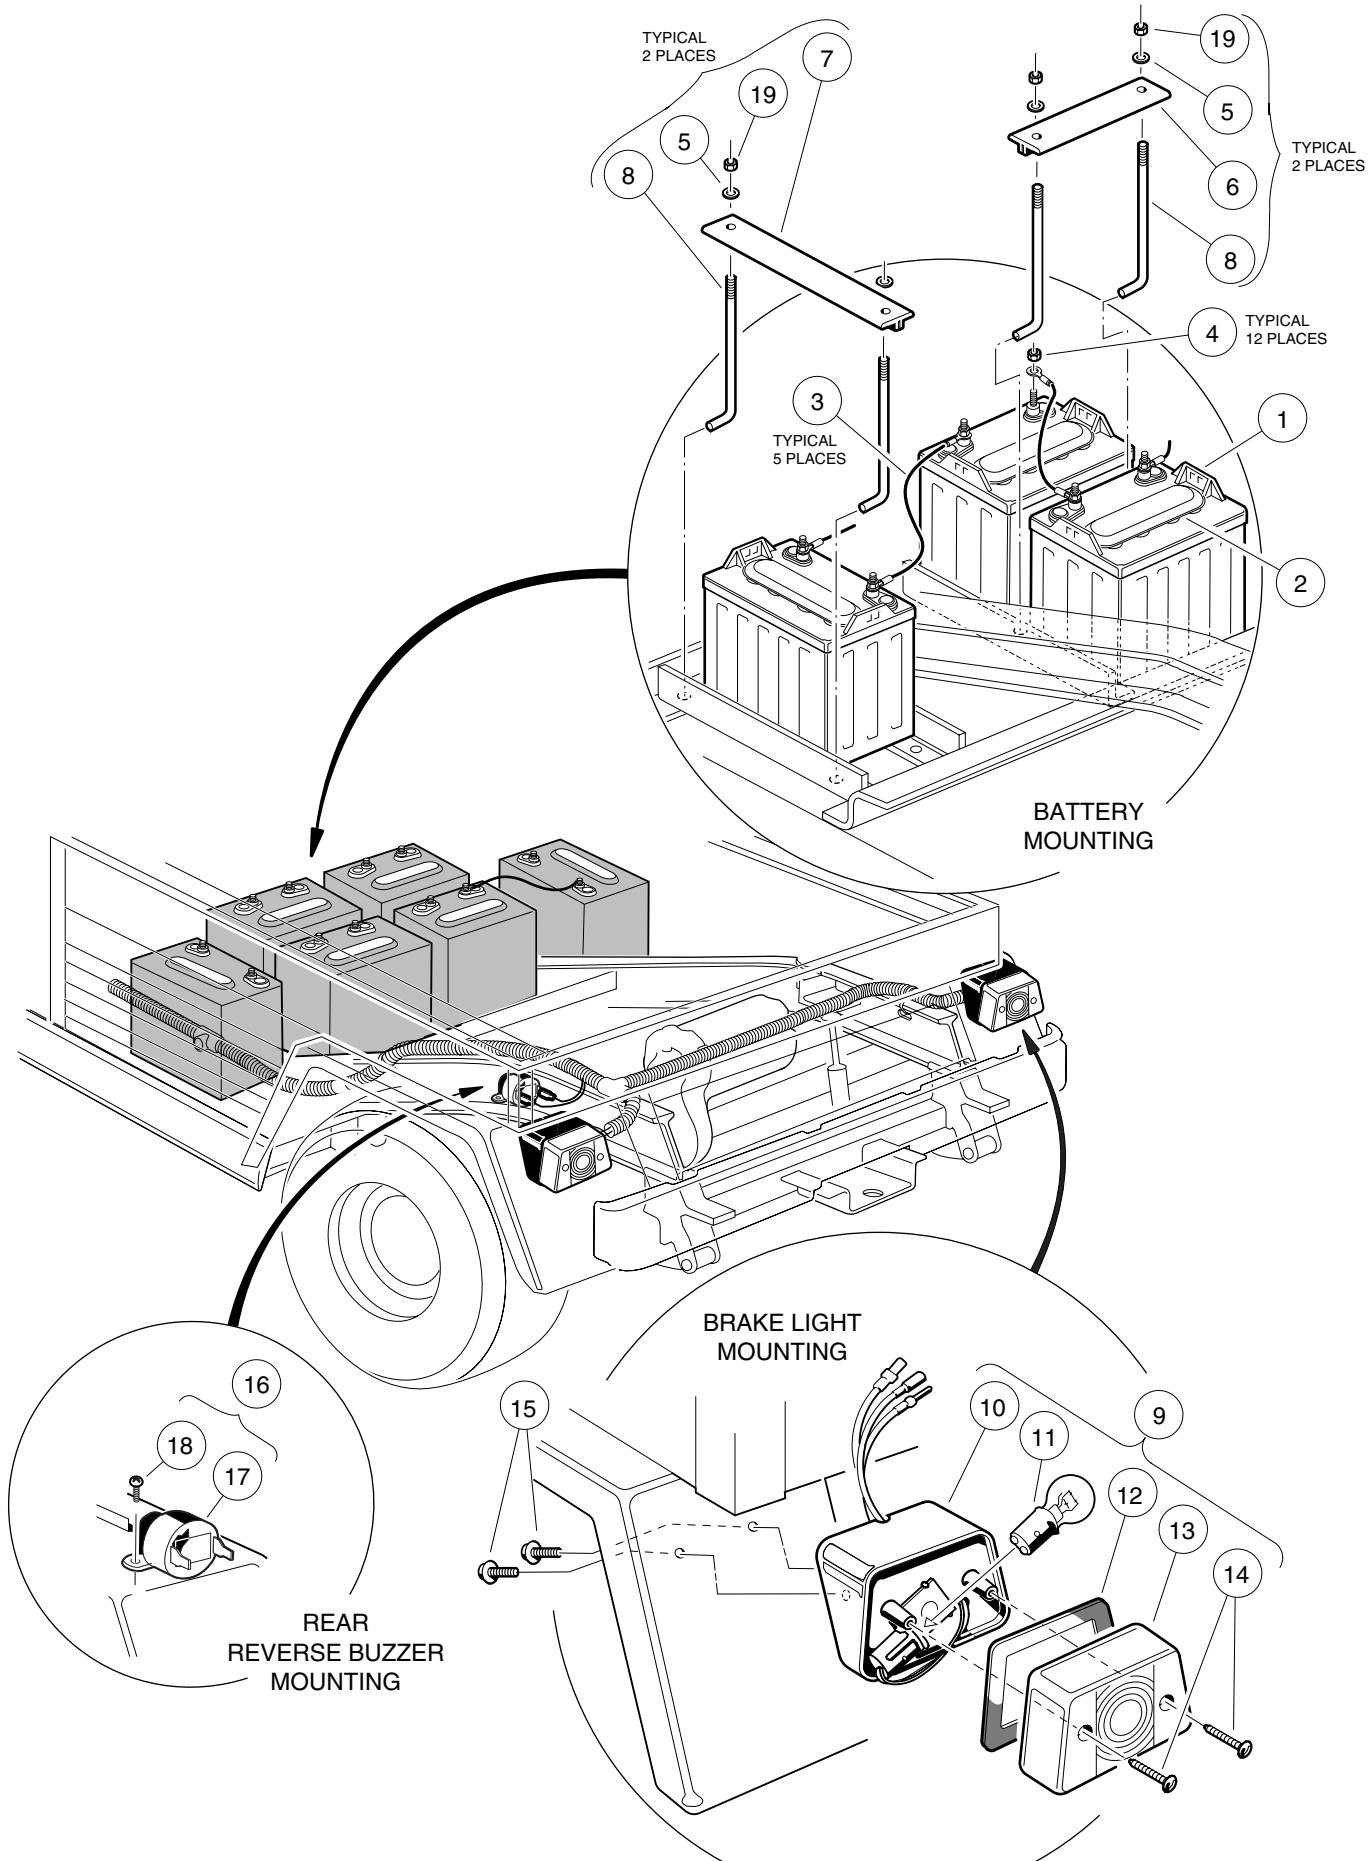

# ELECTRICAL COMPONENTS, REAR BODY— TRANS-PORTER/TRANS-SENDER ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101797701	BATTERY, 8-VOLT POWERDRIVE (INCLUDES ITEM 2) .....	6
1	101797702	BATTERY, 8-VOLT POWERDRIVE, DRY (INCLUDES ITEM 2) .....	6
2	101797801	CAP, BATTERY, 4 PORT GANG .....	6
3	101795701	WIRE ASSEMBLY, #6 BLACK .....	5
4	1014304	NUT, HEX, STAINLESS STEEL, 5/16 -18 .....	12
5	1011578	WASHER, FLAT, TYPE B WIDE, 5/16 .....	8
6	101090801	HOLD-DOWN, BATTERY, SHORT .....	2
7	101090802	HOLD-DOWN, BATTERY, LONG .....	2
8	101668201	ROD, BATTERY HOLD-DOWN .....	8
9	1016717	ASSEMBLY, TAILLIGHT (INCLUDES ITEMS 10 - 14) .....	2
10	N/A	HOUSING, TAILLIGHT .....	1
11	1011582	BULB .....	1
12	N/A	GASKET .....	1
13	N/A	LENS .....	1
14	N/A	SCREW, LENS .....	2
15	1015752	SCREW, HI-LO, #12 - 16 x 5/8 .....	4
16	1016859	KIT, REVERSE BUZZER (INCLUDES ITEMS 17 AND 18) .....	1
17	1016851	BUZZER, REVERSE .....	1
18	1016849	SCREW, PAN HEAD HI-LO, #4 - 24 x 5/16 .....	2
19	1015072	NUT, NYLON LOCK, STAINLESS STEEL, 5/16 - 18 .....	8

12

E




# BATTERY CHARGER

---

13

E

**13**  
**E**

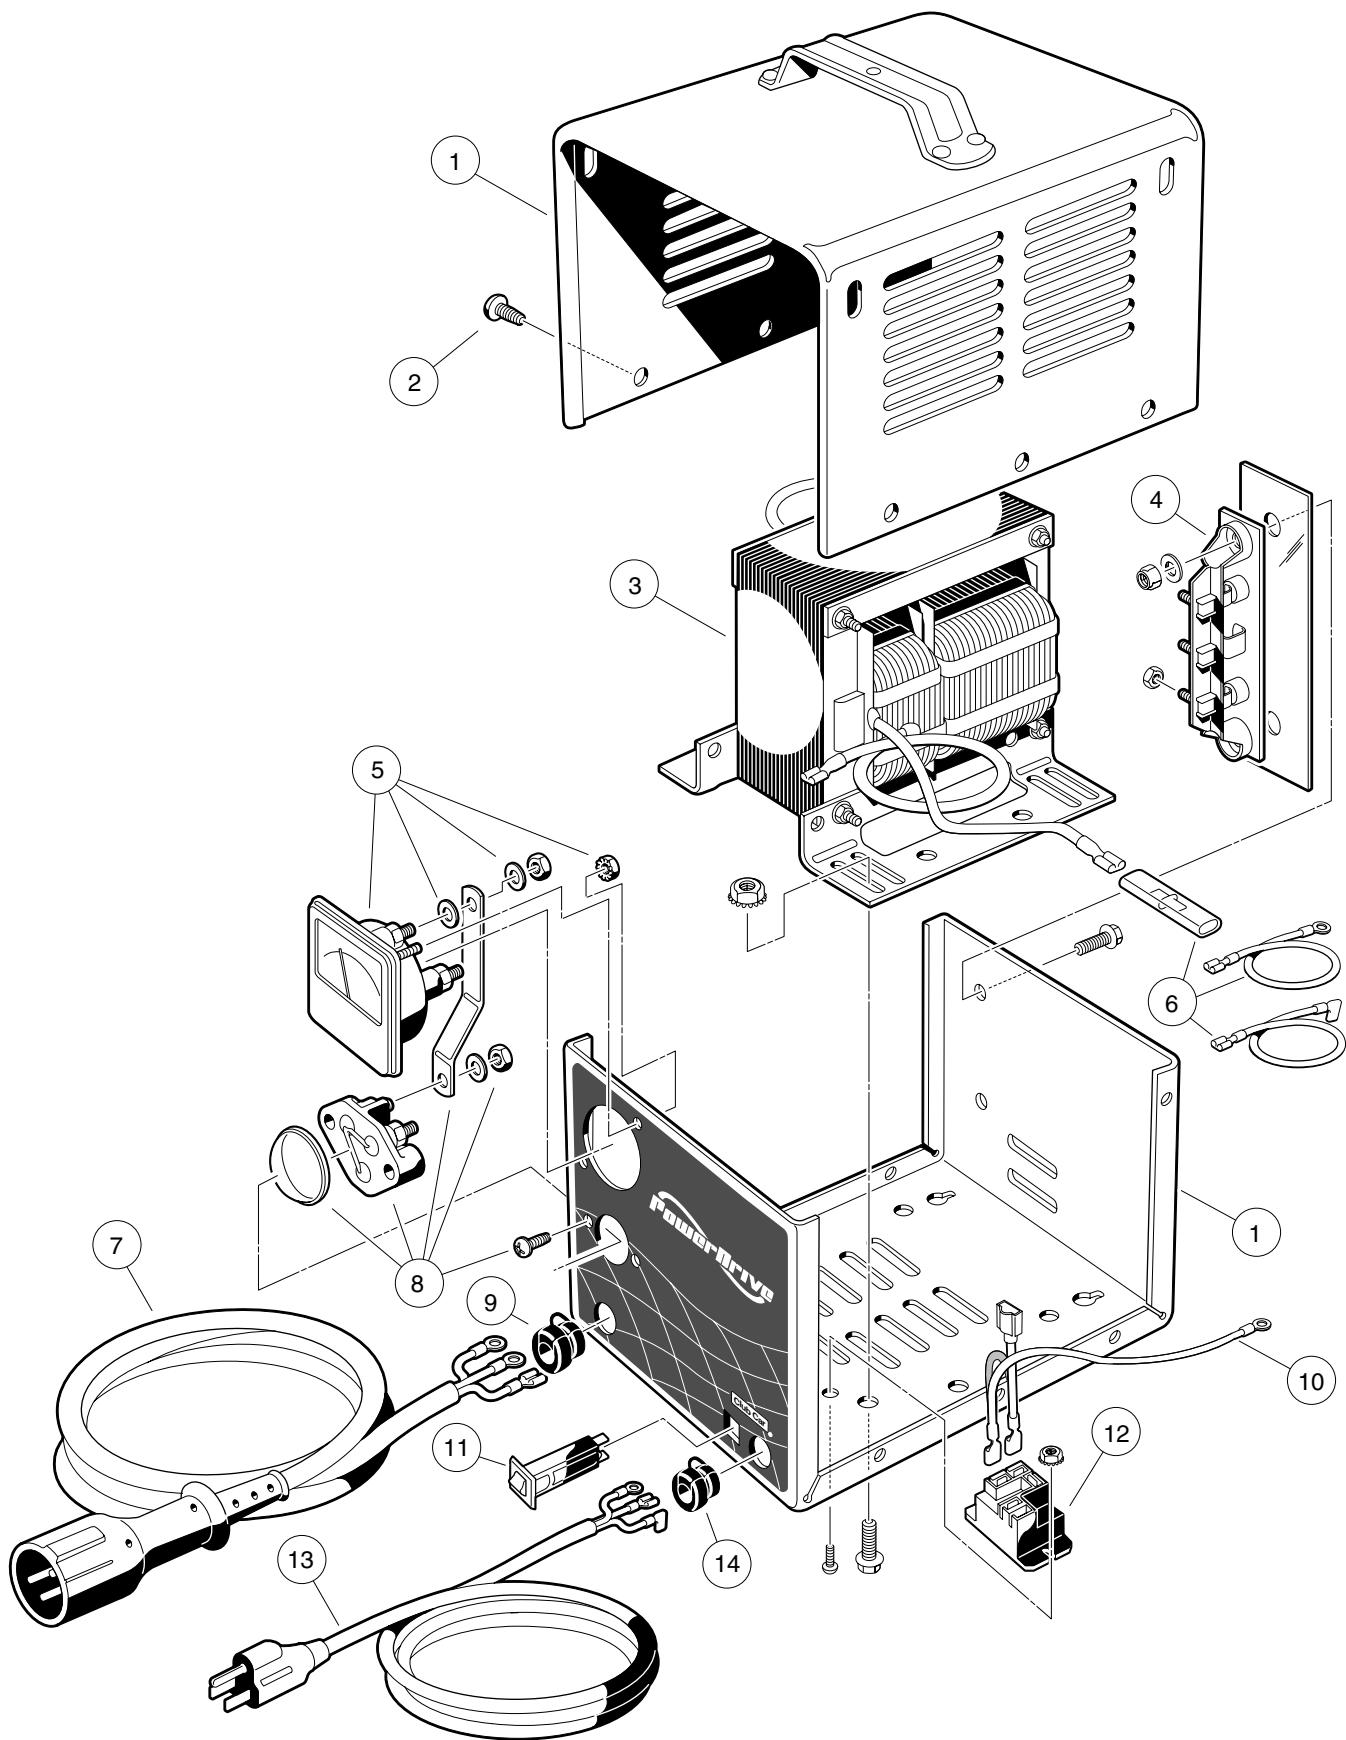


# POWERDRIVE BATTERY CHARGER, DOMESTIC–TOURALL AND RESORT VILLAGER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	101802201	CHARGER, BATTERY, POWERDRIVE, DOMESTIC, 120 VAC 48 VDC 60 HZ (MODEL NUMBER 17930-11) (INCLUDES ITEMS 1 - 14) 103 INCHES DC CORD WITH MALE 3-PIN PLUG, 12 AWG 74 INCHES AC CORD WITH MALE GROUNDED PLUG .....	1
	101802202	CHARGER, BATTERY, POWERDRIVE 120VAC 48VDC 60 HZ (MODEL NUMBER 17930-18) (INCLUDES ITEMS 1 - 14) 144 INCHES DC CORD WITH MALE 3-PIN PLUG, 12 AWG 108 INCHES AC CORD WITH MALE GROUNDED PLUG .....	1
	101802203	CHARGER, BATTERY, POWERDRIVE 120 VAC 48 VDC 60 HZ (MODEL NUMBER 17930-19) (INCLUDES ITEMS 1 - 14) 240 INCHES DC CORD WITH MALE 3-PIN PLUG, 12 AWG 108 INCHES AC CORD WITH MALE GROUNDED PLUG .....	1
1	101828301	ASSEMBLY, CASE (INCLUDES ITEM 2) .....	1
2	7577	SCREW, PAN HEAD, SELF-TAPPING, #10 - 16 x 1/2 .....	10
3	101819701	ASSEMBLY, TRANSFORMER .....	1
4	1015914	ASSEMBLY, HEATSINK, WITH DIODES (INCLUDES MOUNTING HARDWARE) .....	1
5	101828501	AMMETER (INCLUDES MOUNTING HARDWARE) .....	1
6	101831101	KIT, WIRE ASSEMBLY .....	1
7	101828901	CORDSET, DC, 113 INCHES LONG WITH MALE 3-PIN PLUG, 12 AWG .....	1
7	101828902	CORDSET, DC, 154 INCHES LONG WITH MALE 3-PIN PLUG, 12 AWG .....	1
7	101828903	CORDSET, DC, 250 INCHES LONG WITH MALE 3-PIN PLUG, 12 AWG .....	1
8	1012101	ASSEMBLY, FUSE (INCLUDES MOUNTING HARDWARE) .....	1
9	1012098	BUSHING, STRAIN RELIEF, DC CORD, 12 AWG .....	1
10	101914401	ASSEMBLY, VOLTAGE SUPPRESSOR .....	1
11	101828701	BREAKER, CIRCUIT, 15-AMP .....	1
12	101828601	RELAY, POWER, 48 VDC .....	1
13	101828801	CORDSET, AC, 80 INCHES LONG .....	1
13	101828802	CORDSET, AC, 116 INCHES LONG .....	1
14	1015917	BUSHING, STRAIN RELIEF, AC CORD .....	1

13

E

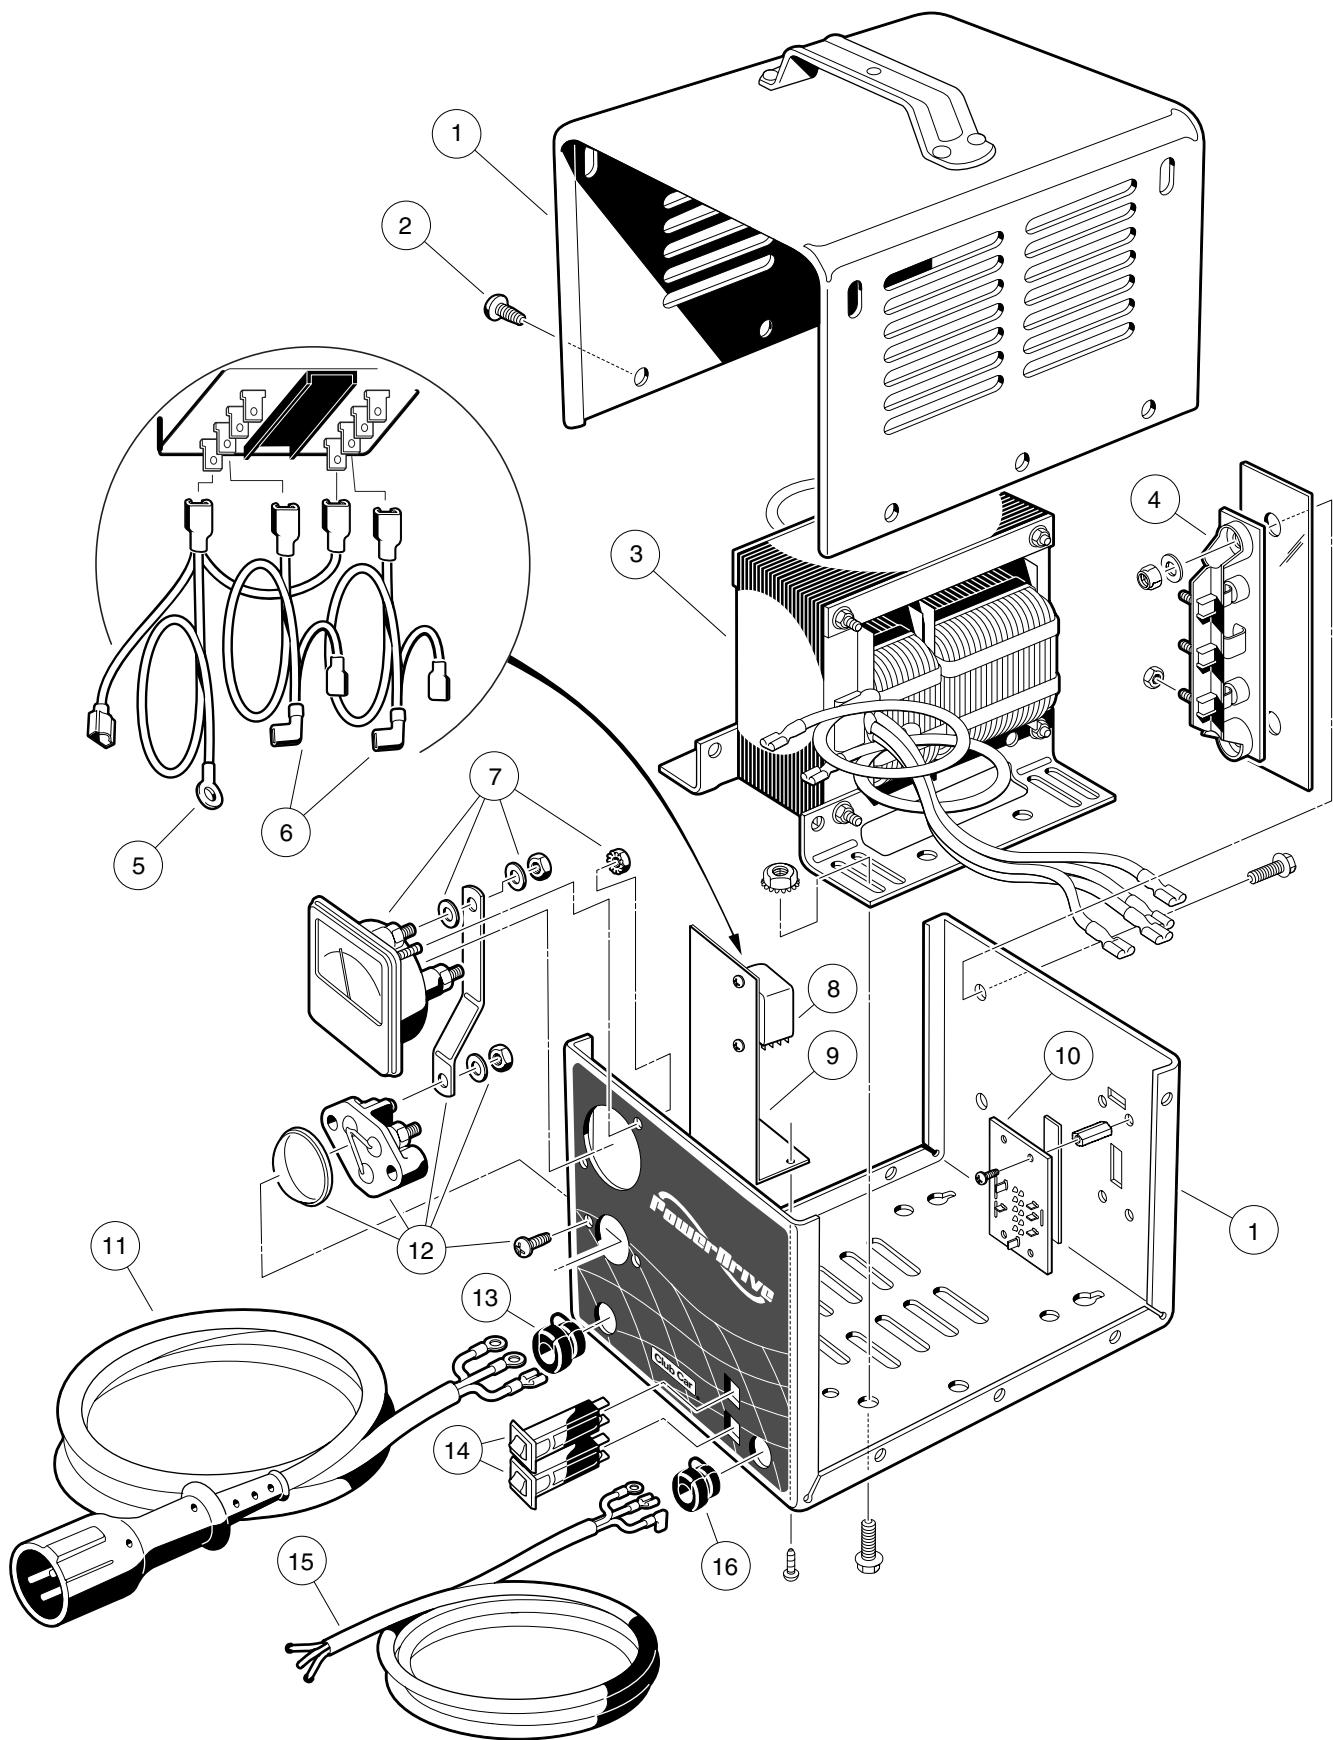
**13****E**

# POWERDRIVE BATTERY CHARGER, EXPORT-TOURALL AND RESORT VILLAGER

**13**

**E**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	101831503	CHARGER, BATTERY, POWERDRIVE, EXPORT WITH 4-POSITION SWITCH 100 - 200 - 220 - 240 VAC, 48 VDC 50/60 HZ (MODEL NUMBER 18780-11) (INCLUDES ITEMS 1 - 16) 103 INCHES DC CORD WITH MALE 3-PIN PLUG, 12 AWG 74 INCHES AC CORD WITH NO PLUG .....	1
	101831504	CHARGER, BATTERY, POWERDRIVE EXPORT WITH 4-POSITION SWITCH 100 - 200 - 220 - 240 VAC, 48 VDC 50/60 HZ (MODEL NUMBER 18780-18) (INCLUDES ITEMS 1 - 16) 144 INCHES DC CORD WITH MALE 3-PIN PLUG, 12 AWG 108 INCHES AC CORD WITH NO PLUG .....	1
1	N/A	ASSEMBLY, CASE (INCLUDES ITEM 2) .....	1
2	7577	SCREW, PAN HEAD, SELF-TAPPING, #10 - 16 x 1/2 .....	10
3	101838201	ASSEMBLY, TRANSFORMER .....	1
4	1015914	ASSEMBLY, HEATSINK, WITH DIODES (INCLUDES MOUNTING HARDWARE) .....	1
5	101914401	ASSEMBLY, VOLTAGE SUPPRESSOR .....	1
6	101838501	KIT, WIRE ASSEMBLY .....	1
7	101828501	AMMETER (INCLUDES HARDWARE) .....	1
8	101838301	RELAY, POWER, 48 VDC (INCLUDES MOUNTING HARDWARE) .....	1
9	101838701	BRACKET, POWER RELAY MOUNTING .....	1
10	101838601	SWITCH, 4-POSITION, SLIDE .....	1
11	101828901	CORDSET, DC, 113 INCHES LONG WITH MALE 3-PIN PLUG, 12 AWG .....	1
11	101828902	CORDSET, DC, 154 INCHES LONG WITH MALE 3-PIN PLUG, 12 AWG .....	1
11	101828903	CORDSET, DC, 250 INCHES LONG WITH MALE 3-PIN PLUG, 12 AWG .....	1
12	1012101	ASSEMBLY, FUSE (INCLUDES HARDWARE) .....	1
13	1012098	BUSHING, STRAIN RELIEF, DC CORD, 12 AWG .....	1
14	101838401	BREAKER, CIRCUIT, 15-AMP .....	2
15	101831701	CORDSET, AC, 80 INCHES LONG, WITH LEADS (NO PLUG) .....	1
15	101831702	CORDSET, AC, 116 INCHES LONG, WITH LEADS (NO PLUG) .....	1
16	1015917	BUSHING, STRAIN RELIEF, AC CORD .....	1

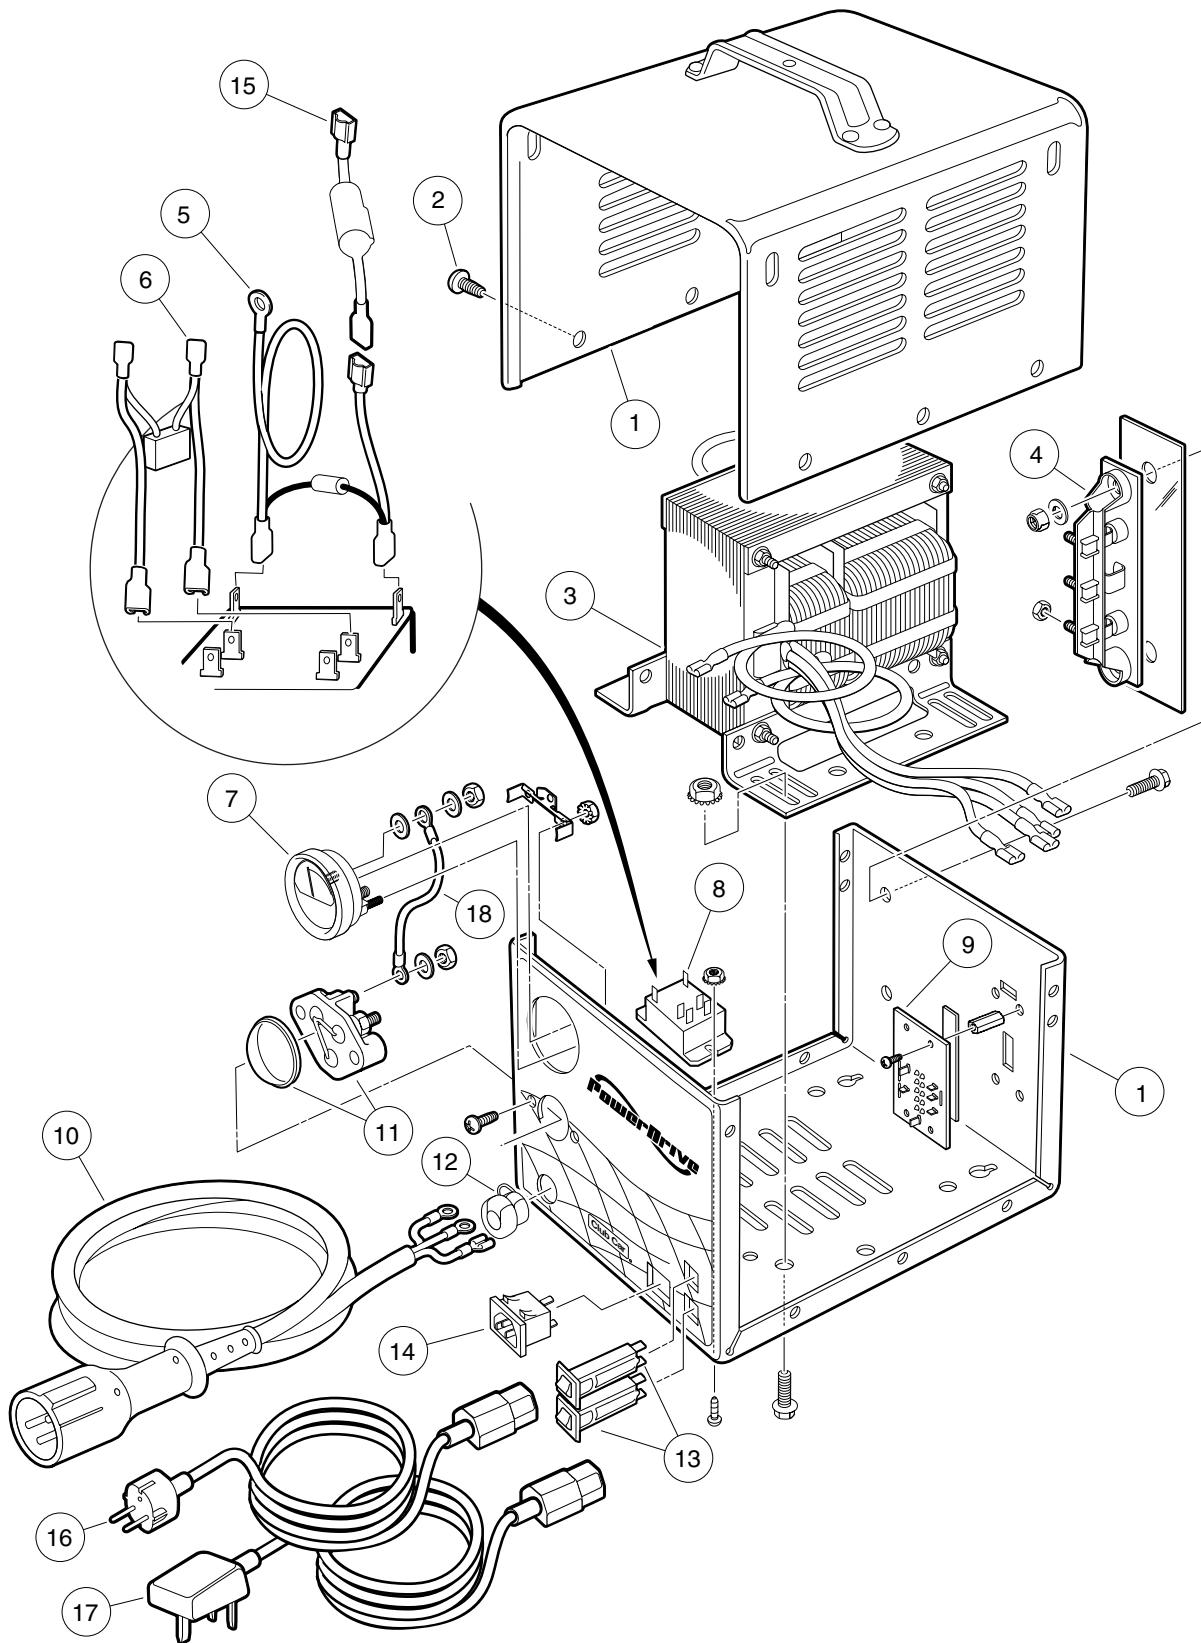


# POWERDRIVE BATTERY CHARGER, EUROPEAN-TOURALL AND RESORT VILLAGER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	101956201	CHARGER, BATTERY, POWERDRIVE, EUROPEAN WITH 4-POSITION SWITCH 100 - 200 - 220 - 240 VAC, 48 VDC 50/60 HZ (MODEL NUMBER 20300) (INCLUDES ITEMS 1 - 15) 103 INCHES DC CORD WITH MALE 3-PIN PLUG, 12 AWG .....	1
	101956202	CHARGER, BATTERY, POWERDRIVE EUROPEAN WITH 4-POSITION SWITCH 100 - 200 - 220 - 240 VAC, 48 VDC 50/60 HZ (MODEL NUMBER 20310) (INCLUDES ITEMS 1 - 15) 144 INCHES DC CORD WITH MALE 3-PIN PLUG, 12 AWG .....	1
1	N/A	ASSEMBLY, CASE (INCLUDES ITEM 2) .....	1
2	7577	SCREW, PAN HEAD, SELF-TAPPING, #10 - 16 x 1/2 .....	10
3	****	ASSEMBLY, TRANSFORMER .....	1
4	1015914	ASSEMBLY, HEATSINK, WITH DIODES (INCLUDES MOUNTING HARDWARE) .....	1
5	****	ASSEMBLY, AC VOLTAGE SUPPRESSOR .....	1
6	****	KIT, WIRE ASSEMBLY .....	1
7	101976601	AMMETER (INCLUDES HARDWARE) .....	1
8	101987501	RELAY, POWER, 48 VDC (INCLUDES MOUNTING HARDWARE) .....	1
9	101838601	SWITCH, 4-POSITION, SLIDE .....	1
10	101828901	CORDSET, DC, 103 INCHES LONG WITH MALE 3-PIN PLUG, 12 AWG .....	1
10	101828902	CORDSET, DC, 144 INCHES LONG WITH MALE 3-PIN PLUG, 12 AWG .....	1
10	101828903	CORDSET, DC, 250 INCHES LONG WITH MALE 3-PIN PLUG, 12 AWG .....	1
11	1012101	ASSEMBLY, FUSE (INCLUDES HARDWARE) .....	1
12	1012098	BUSHING, STRAIN RELIEF, DC CORD, 12 AWG .....	1
13	101838401	BREAKER, CIRCUIT, 15-AMP .....	2
14	101973501	RECEPTACLE, AC CORD .....	1
15	****	ASSEMBLY, CURRENT LIMITER .....	1
16	101958301	CORDSET, AC, CONTINENTAL EUROPE, 96 INCHES LONG (WITH MALE 2-PIN PLUG) .	1
17	101958201	CORDSET, AC, U.K., 96 INCHES LONG (WITH MALE 3-PIN PLUG) .....	1
18	N/A	WIRE, JUMPER .....	1
	****	Special order item available on request.	

**13**

**E**

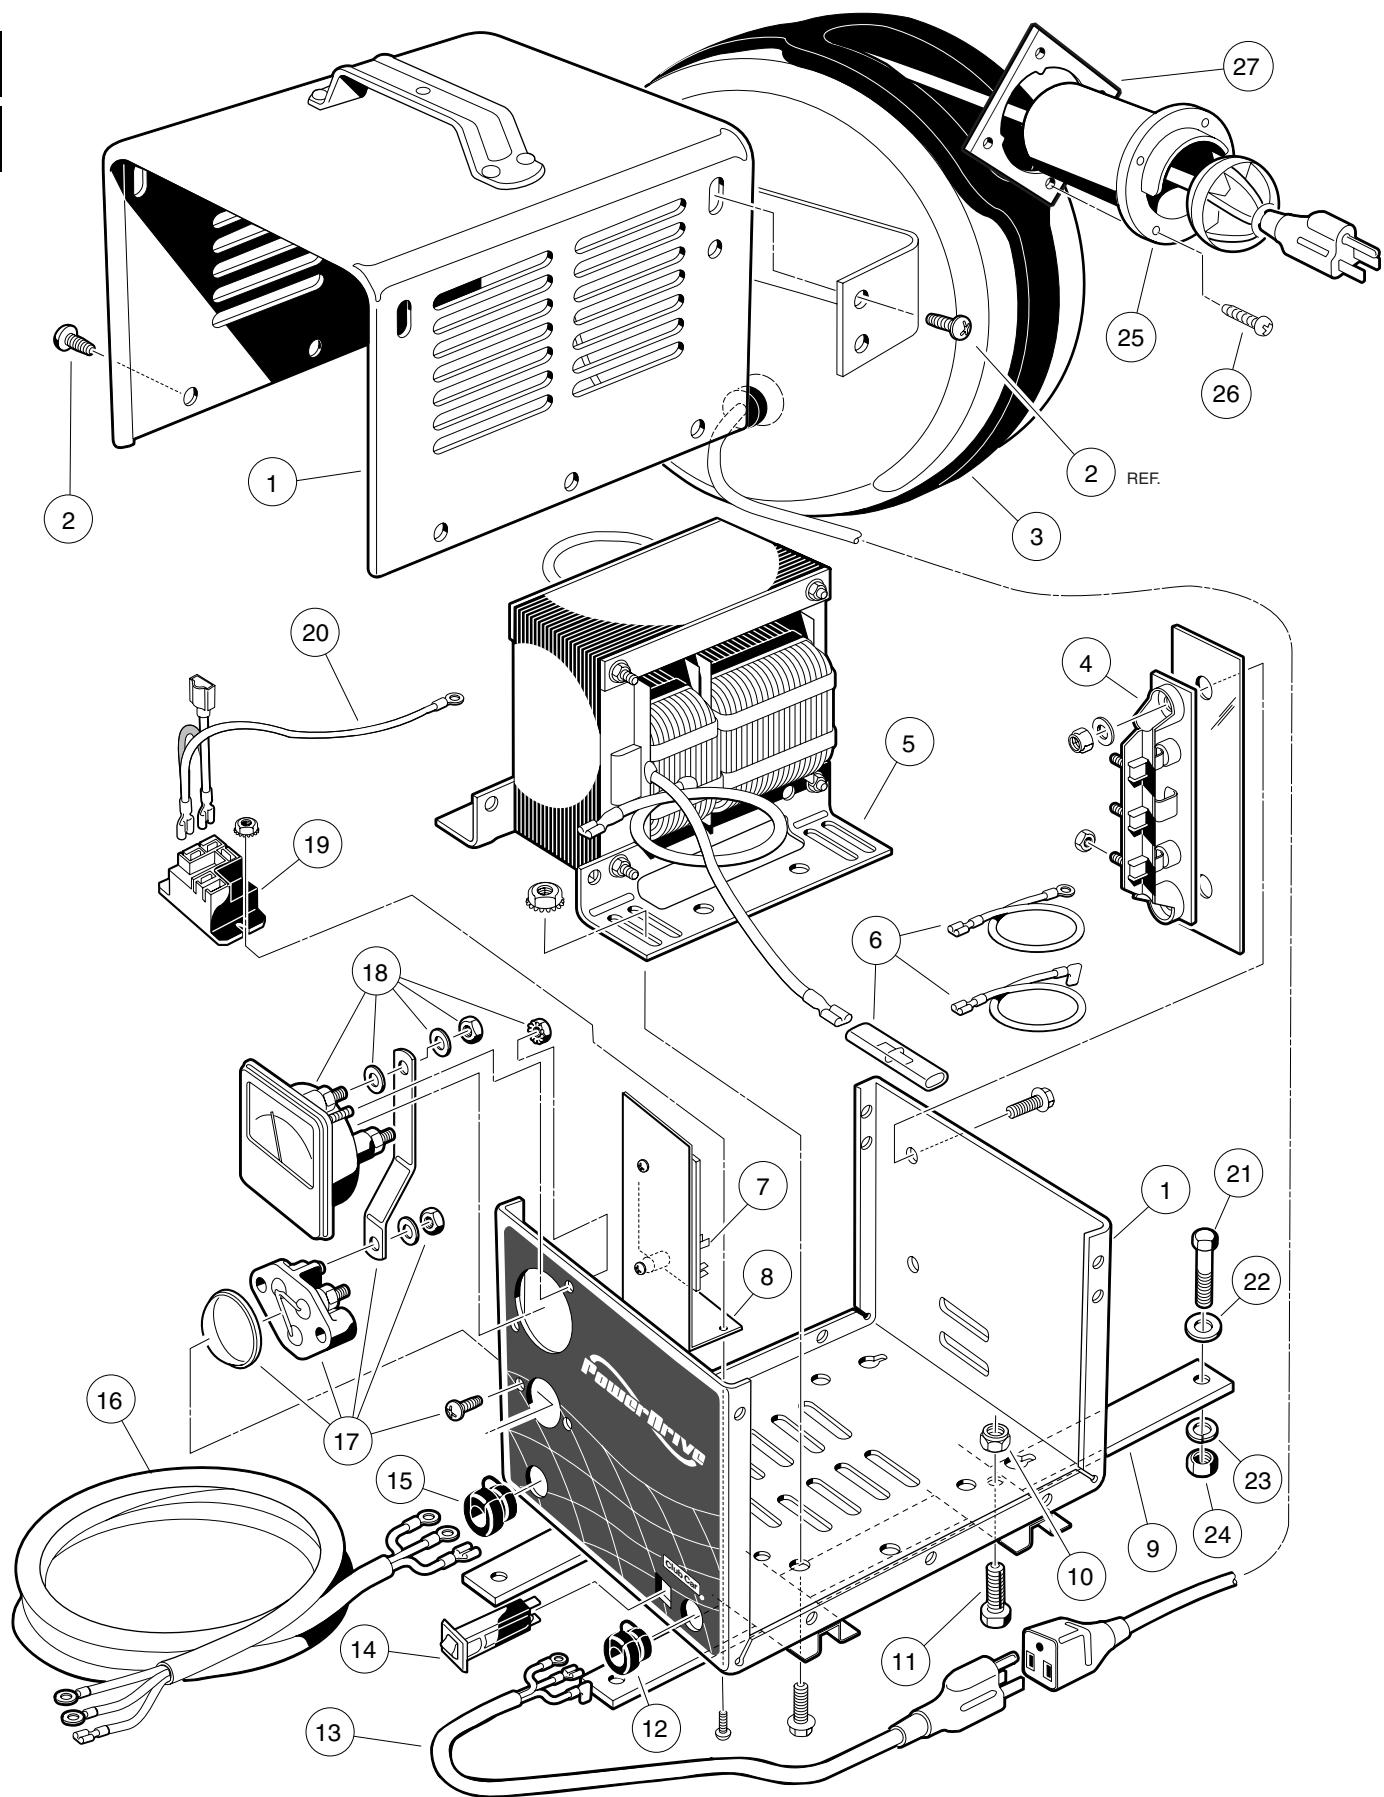
**13****E**

# ONBOARD POWERDRIVE BATTERY CHARGER, DOMESTIC-TRANS-PORTER/TRANS-SENDER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	101814301	ASSEMBLY, POWERDRIVE BATTERY CHARGER WITH REEL, ONBOARD 120 VAC 48 VDC 60 HZ (INCLUDES ITEMS 1 - 20) .....	1
	101802301	ASSEMBLY, POWERDRIVE BATTERY CHARGER, ONBOARD 120 VAC 48 VDC 60 HZ (INCLUDES ITEMS 1 - 2 AND 4 - 20) .....	1
1	101816101	ASSEMBLY, CASE (INCLUDES ITEM 2) .....	1
2	7577	SCREW, PAN HEAD, SELF-TAPPING, #10 - 16 x 1/2 .....	12
3	1017187	ASSEMBLY, RETRACTABLE CORD REEL .....	1
4	1015914	ASSEMBLY, HEATSINK, WITH DIODES (INCLUDES HARDWARE) .....	1
5	101819701	ASSEMBLY, TRANSFORMER .....	1
6	101841701	KIT, WIRE ASSEMBLY .....	1
7	101841901	BOARD, CONTROL .....	1
8	101838701	BRACKET, RELAY AND RESET BOARD MOUNTING .....	1
9	1011707	BRACKET, MOUNTING .....	2
10	8233	NUT, LOCK, 1/4 - 20 .....	4
11	7847	SCREW, HEX HEAD CAP, 1/4 - 20 x 3/4 .....	4
12	1015917	BUSHING, STRAIN RELIEF, AC CORD .....	1
13	101829001	CORDSET, AC, 3 x 1.5 MM x 24 INCHES LONG, WITH GROUNDED PLUG .....	1
14	101828701	BREAKER, CIRCUIT, 15-AMP .....	1
15	1012098	BUSHING, STRAIN RELIEF, DC CORD, 12 AWG .....	1
16	101829101	CORDSET, DC, 90.5 INCHES LONG, WITH LEADS, 12 AWG .....	1
17	1012101	ASSEMBLY, FUSE (INCLUDES HARDWARE) .....	1
18	101828501	AMMETER (INCLUDES HARDWARE) .....	1
19	101828601	RELAY, POWER, 48 VDC .....	1
20	101914401	ASSEMBLY, VOLTAGE SUPPRESSOR .....	1
21	7479	SCREW, HEX HEAD CAP, 1/4 - 20 x 1-1/4 .....	4
22	1014306	WASHER, FLAT, 1/4 .....	4
23	451	WASHER, LOCK, 1/4 .....	4
24	1028	NUT, HEX, 1/4 - 20 .....	4
25	1016673	HOUSING, CORD .....	1
26	8796	SCREW, PHILLIPS HEAD, #7 - 19 x 3/4 .....	4
27	101801001	PLATE, RECEPTACLE BACKING .....	1
	1017189	SHRINK, HEAT (1-1/2 INCH x 4 FEET) (NOT SHOWN) .....	A/R
		(HEAT SHRINK IS AVAILABLE IN 3-INCH LENGTHS, NONSTANDARD)	

**13**

**E**

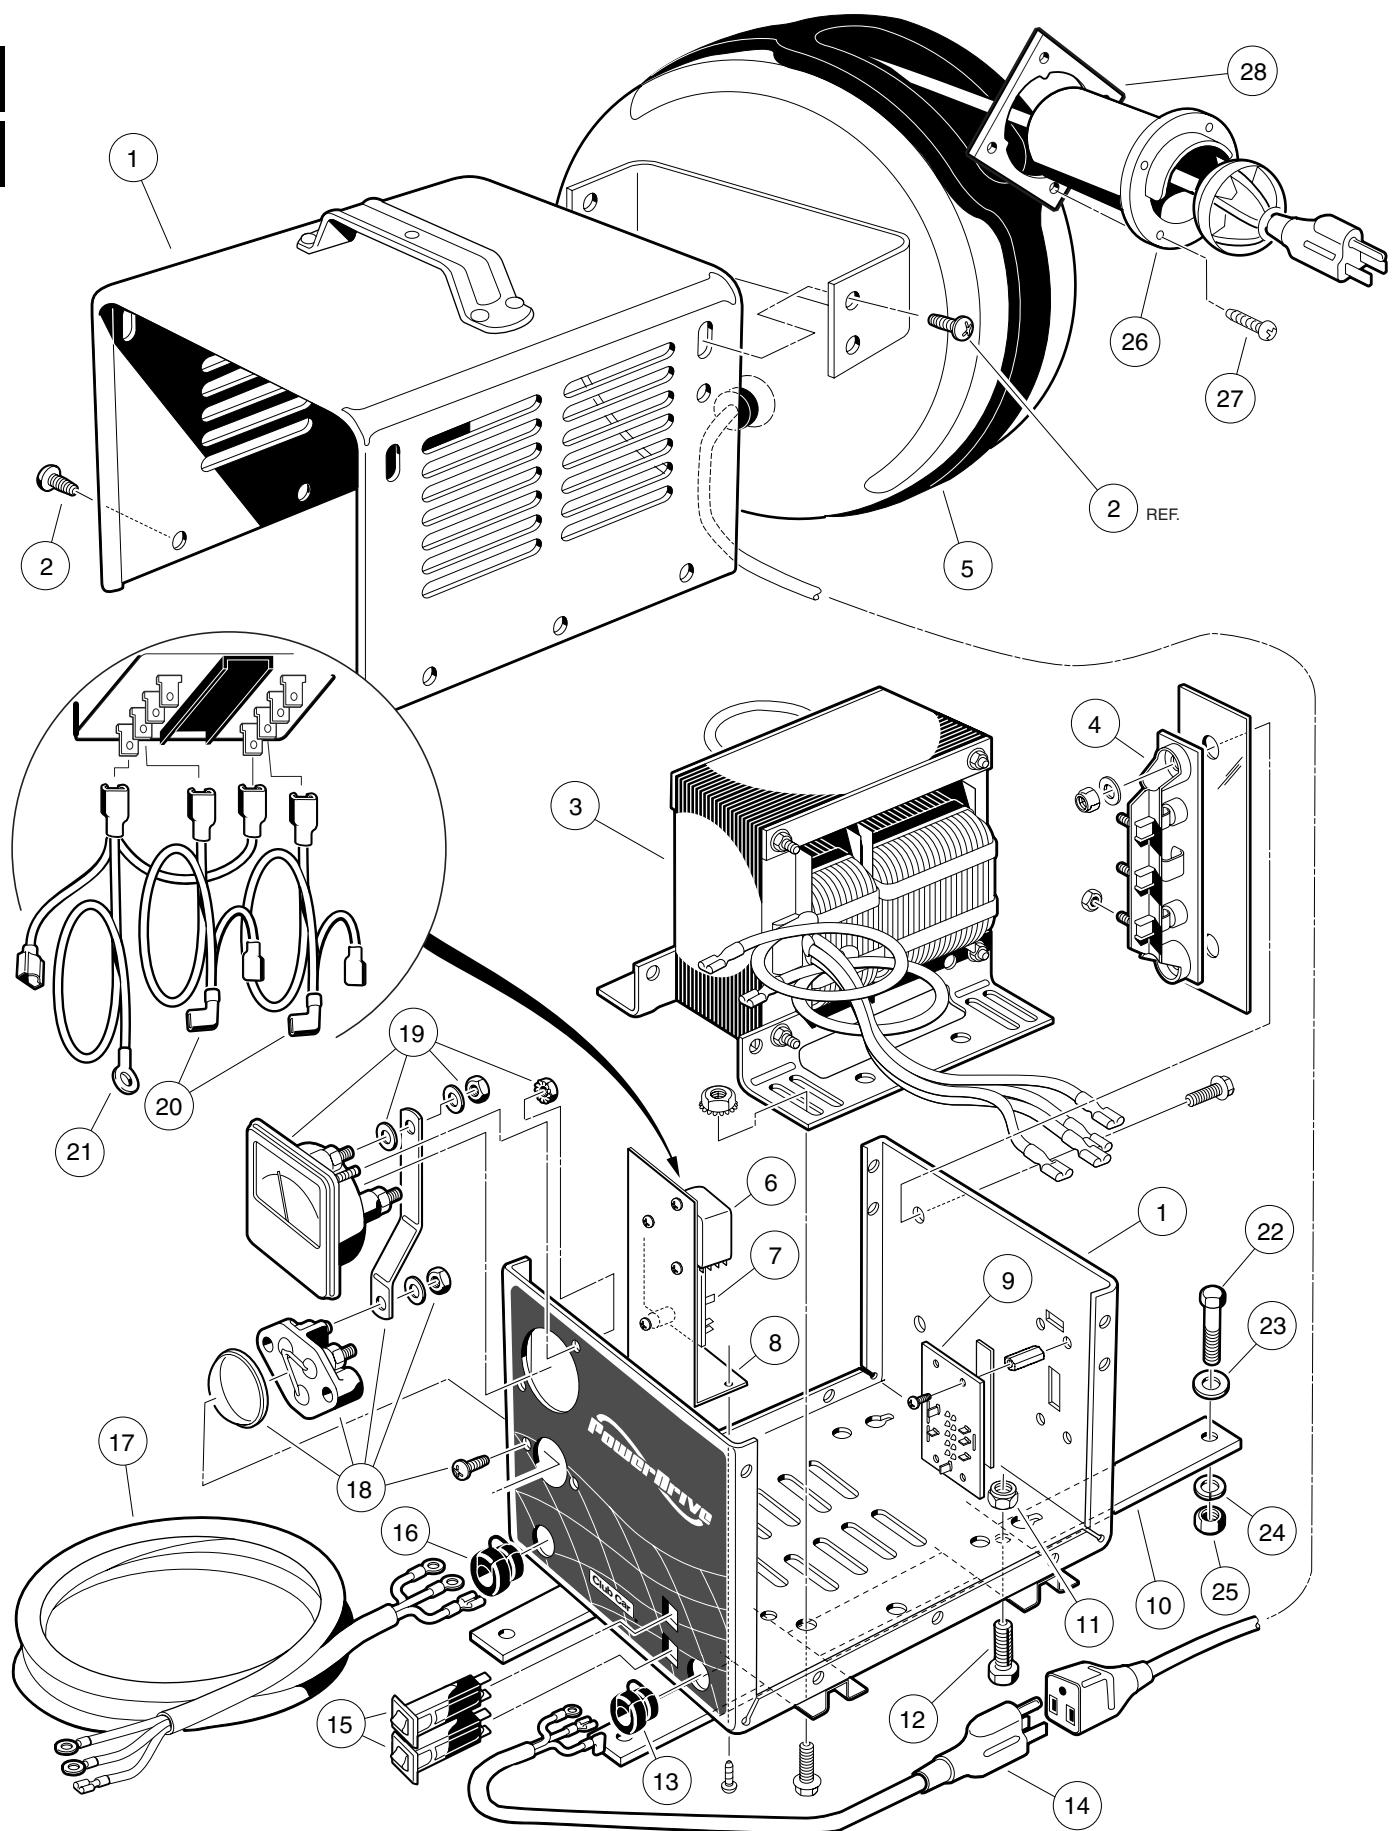**13****E**

# ONBOARD POWERDRIVE BATTERY CHARGER, EXPORT-TRANS-PORTER/TRANS-SENDER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	101814302	ASSEMBLY, POWERDRIVE BATTERY CHARGER AND REEL, ONBOARD WITH 4-POSITION SWITCH, 100 - 200 - 220 - 240 VAC, 48 VDC 50/60 HZ (INCLUDES ITEMS 1 - 21) .....	1
	101831601	ASSEMBLY, POWERDRIVE BATTERY CHARGER, ONBOARD WITH 4-POSITION SWITCH, 100 - 200 - 220 - 240 VAC, 48 VDC 50/60 HZ (INCLUDES ITEMS 1 - 4 AND 6 - 21) .....	1
1	101841601	ASSEMBLY, CASE (INCLUDES ITEM 2) .....	1
2	7577	SCREW, PAN HEAD, SELF-TAPPING, #10 - 16 x 1/2 .....	12
3	101838201	ASSEMBLY, TRANSFORMER .....	1
4	1015914	ASSEMBLY, HEATSINK, WITH DIODES (INCLUDES MOUNTING HARDWARE) .....	1
5	1017187	ASSEMBLY, RETRACTABLE CORD REEL .....	1
6	101838301	RELAY, POWER (INCLUDES MOUNTING HARDWARE) .....	1
7	101841901	BOARD, CONTROL .....	1
8	101838701	BRACKET, MOUNTING, RELAY AND RESET BOARD .....	1
9	101838601	SWITCH, 4-POSITION, SLIDE .....	1
10	1011707	BRACKET, MOUNTING .....	2
11	8233	NUT, LOCK, 1/4 - 20 .....	4
12	7847	SCREW, HEX HEAD CAP, 1/4 - 20 x 3/4 .....	4
13	1015917	BUSHING, STRAIN RELIEF, AC CORD .....	1
14	101829001	CORDSET, AC, 3 x 1.5 MM x 24 INCHES LONG, WITH GROUNDED PLUG .....	1
15	101838401	BREAKER, CIRCUIT .....	2
16	1012098	BUSHING, STRAIN RELIEF, DC CORD, 12 AWG .....	1
17	101829101	CORDSET, DC, 90.5 INCHES LONG, WITH LEADS, 12 AWG .....	1
18	1012101	ASSEMBLY, FUSE (INCLUDES HARDWARE) .....	1
19	101828501	AMMETER (INCLUDES HARDWARE) .....	1
20	101841801	KIT, WIRE ASSEMBLY .....	1
21	101914401	ASSEMBLY, VOLTAGE SUPPRESSOR .....	1
22	7479	SCREW, HEX HEAD CAP SCREW, HEX HEAD CAP, 1/4 - 20 x 1-1/4 .....	4
23	1014306	WASHER, FLAT, 1/4 .....	4
24	451	WASHER, LOCK, 1/4 .....	4
25	1028	NUT, HEX, 1/4 - 20 .....	4
26	1016673	HOUSING, CORD .....	1
27	8796	SCREW, PHILLIPS HEAD, #7 - 19 x 3/4 .....	4
28	101801001	PLATE, RECEPTACLE BACKING .....	1
	1017189	SHRINK, HEAT (1-1/2 INCH x 4 FEET) (NOT SHOWN) .....	A/R
		(HEAT SHRINK IS AVAILABLE IN 3-INCH LENGTHS, NONSTANDARD)	

13

E




# ELECTRIC MOTOR

---

14  
E

**14**

**E**

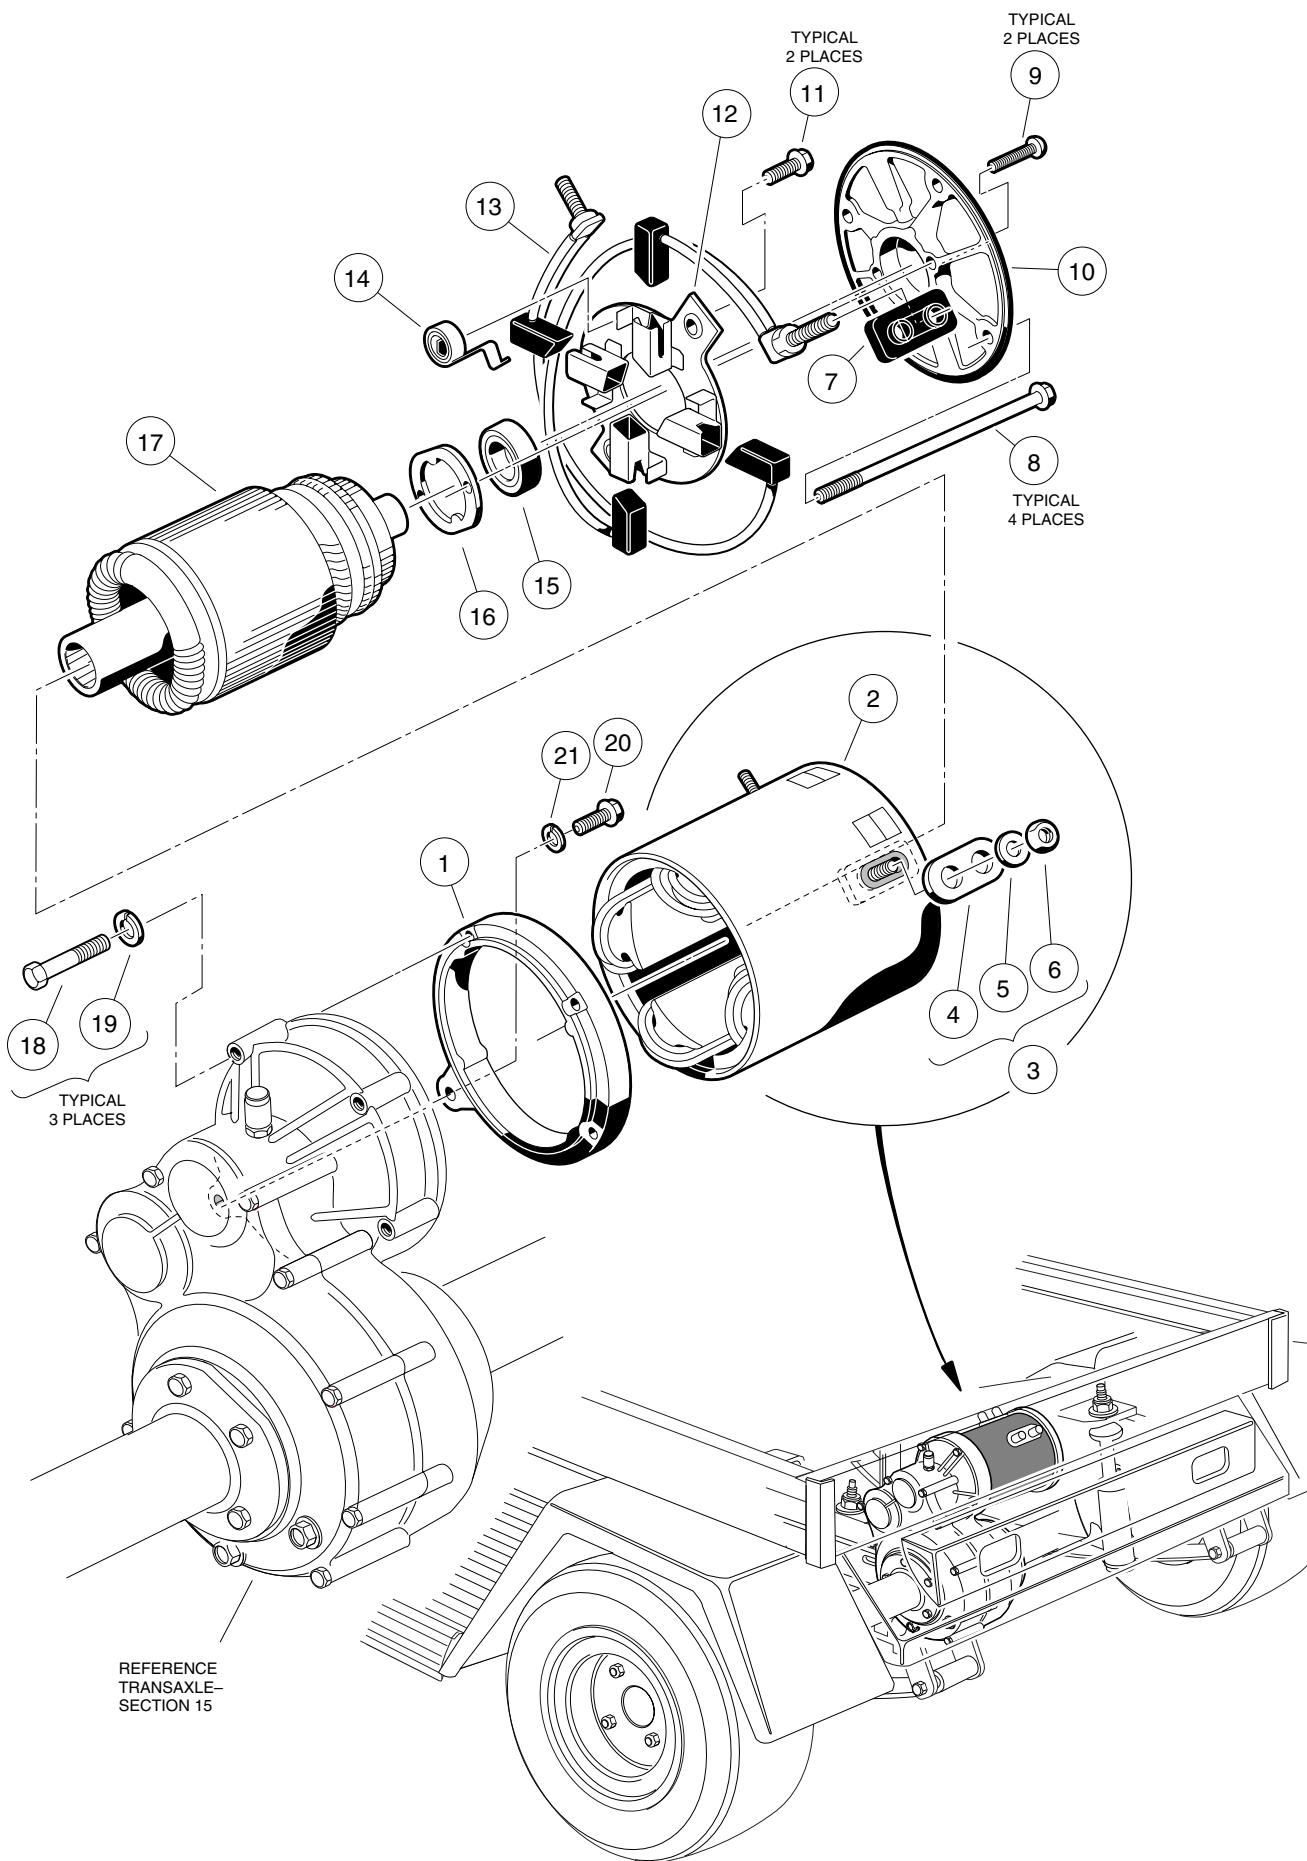

# MOTOR-POWERDRIVE ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101785701	ASSEMBLY, 48 VOLT MOTOR, 3.10 HP (INCLUDES ITEMS 1 - 17) .....	1
1	1017944	SHIELD, END .....	1
2	1017958	ASSEMBLY, STATOR SHELL AND WINDING .....	1
3	1017947	PACKAGE, HARDWARE (INCLUDES ITEMS 4 - 7) .....	1
4	N/A	BUSHING, INSULATOR .....	2
5	N/A	WASHER, FLAT, 5/16 .....	4
6	N/A	NUT, HEX, 5/16 - 18 .....	4
7	N/A	BUSHING, INSULATOR .....	2
8	1017961	SCREW, CLAMP, UNF, #10 - 32 x 8-5/8 .....	4
9	1017953	SCREW, BEARING RETAINER, #8 - 32 x 7/8 .....	2
10	1017951	SHIELD, END .....	1
11	1017949	SCREW, BRUSH HOLDER, #6 - 32 x 1/2 .....	2
12	1017948	RIGGING, BRUSH .....	1
13	1017946	PACKAGE, BRUSH (2 PIECES) (INCLUDES 4 BRUSHES) .....	1
14	1011411	PACKAGE, BRUSH SPRING (4 PIECES) .....	1
15	1011290	BEARING, BALL .....	1
16	1017950	RETAINER, BEARING .....	1
17	N/A	ARMATURE .....	1
18	1014201	SCREW, HEX HEAD CAP, 1/4 - 20 x 2-1/4 .....	3
19	451	WASHER, LOCK, 1/4 .....	3
20	1010934	SCREW, HEX HEAD CAP, 5/16 - 18 x 1 .....	1
21	7174	WASHER, LOCK, 5/16 .....	1

14

E




# TRANSAXLE- ELECTRIC VEHICLE

---

15  
E

15

E

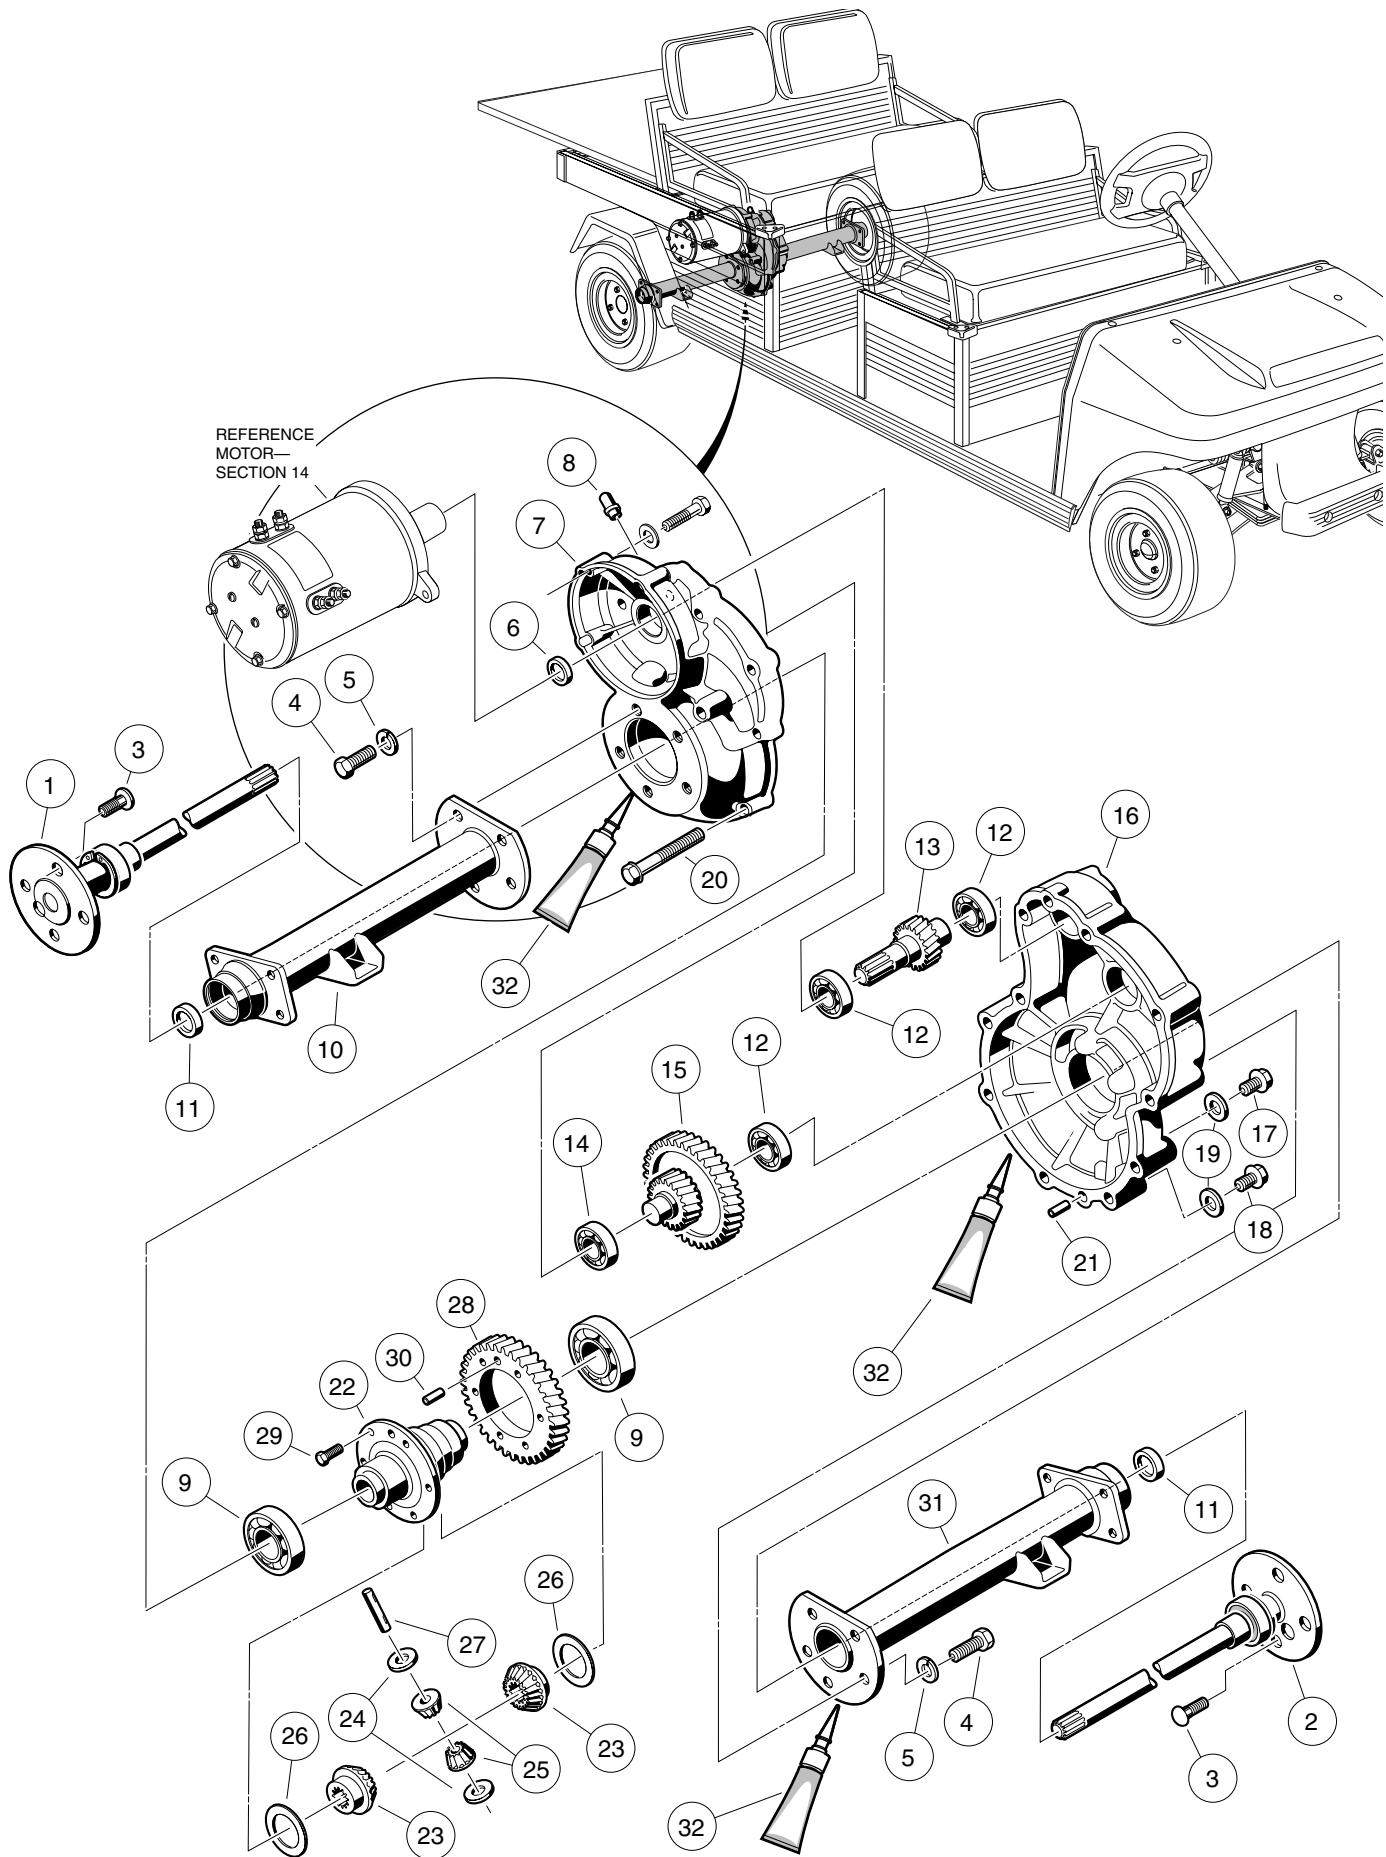

# TRANSAXLE, TYPE G– POWERDRIVE ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	101896001	TRANSAXLE, TYPE G (INCLUDES ITEMS 1 - 32) .....	1
1	101895801	AXLE ASSEMBLY, PASSENGER SIDE (INCLUDES ITEM 3) .....	1
2	101895901	AXLE ASSEMBLY, DRIVER SIDE (INCLUDES ITEM 3) .....	1
3	101922201	STUD, LUG .....	4
4	101976001	BOLT, M10 x 1.5 x 35MM .....	10
5	101897901	WASHER, LOCK, 20MM .....	10
6	101923501	SEAL, OIL, INPUT SHAFT .....	1
7	101895501	GEAR CASE, PASSENGER SIDE .....	1
8	101897201	BREATHER .....	1
9	7330	BEARING, DIFFERENTIAL .....	2
10	101895601	ASSEMBLY, AXLE TUBE, PASSENGER SIDE .....	1
11	1013794	SEAL, OIL, AXLE SHAFT .....	2
12	7335	BEARING, INPUT GEAR.....	3
13	101923701	SHAFT, INPUT .....	1
14	7336	BEARING, INTERMEDIATE GEAR .....	1
15	101906901	ASSEMBLY, INTERMEDIATE GEAR .....	1
16	101895401	GEAR CASE, DRIVER SIDE .....	1
17	101972201	PLUG, FILL .....	1
18	101972101	PLUG, MAGNETIC .....	1
19	101923201	GASKET, PLUG .....	2
20	101897001	BOLT, M8 x 1.25 x 60MM .....	11
21	101897601	PIN, DOWEL .....	2
22	101923601	HOUSING, DIFFERENTIAL .....	1
23	101923901	GEAR, DIFFERENTIAL .....	2
24	101903601	PLATE, THRUST (IDLER GEAR) .....	2
25	101923001	GEAR, DIFFERENTIAL IDLER .....	2
26	101903701	PLATE, THRUST .....	2
27	101922101	PIN, DIFFERENTIAL .....	1
28	101906201	GEAR, OUTPUT .....	1
29	101897401	BOLT, M10 x 1.5 x 25MM .....	4
30	101972401	PIN, DOWEL .....	1
31	101895701	ASSEMBLY, AXLE TUBE, DRIVER SIDE .....	1
32	101928701	GASKET, LIQUID, 8.8 OZ. (250 GRAM) .....	A/R
		NOTE: TRANSAXLE TYPE IS IDENTIFIED BY ORIENTATION OF GEAR CASE BOLTS (ITEM 20). THE TYPE G TRANSAXLE HAS GEAR CASE BOLT HEADS FACING TOWARD THE PASSENGER SIDE OF THE VEHICLE.	

**15**

**E**




# MAINTENANCE AND SERVICE TOOLS

---

16

G

E

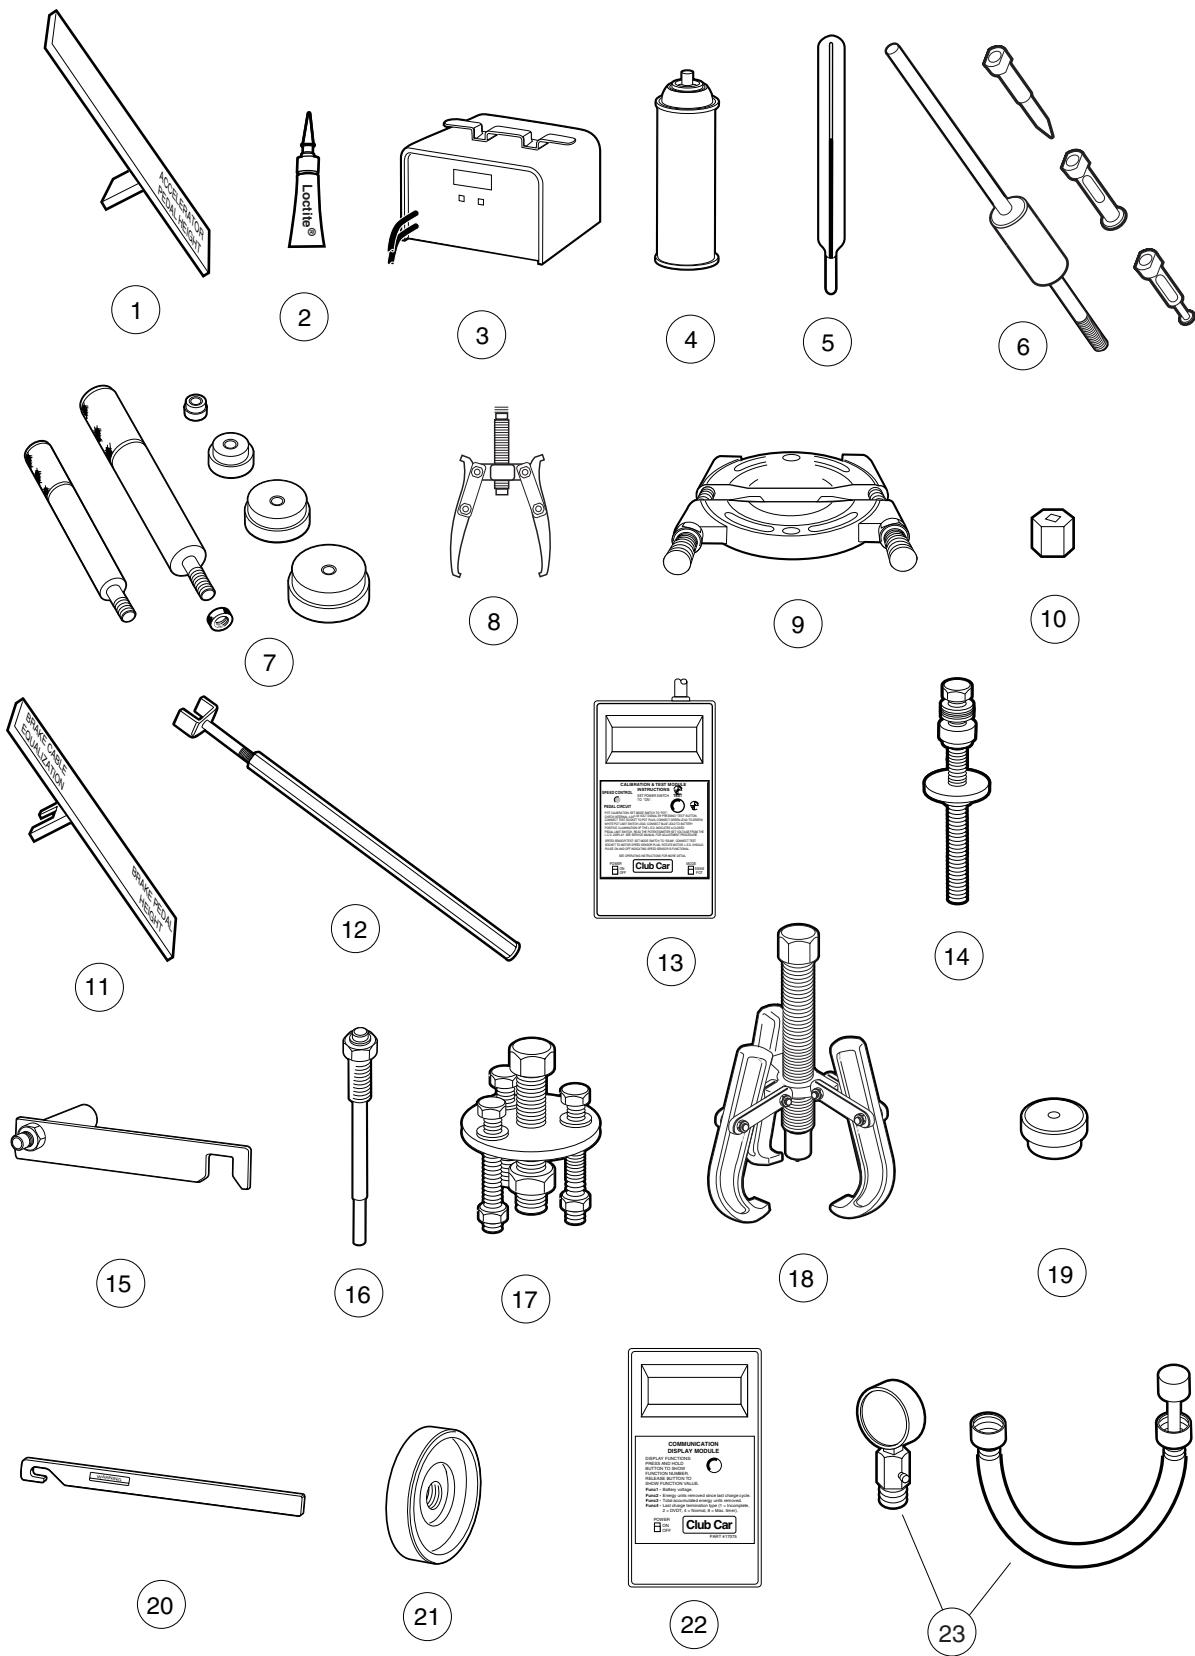**16****G****E**




# MAINTENANCE AND SERVICE TOOLS

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		<p>1 2 3 4</p> <p>The following tool list includes all tools available from Club Car for maintenance and service procedures for gasoline and/or electric vehicles, both past and present models. Be sure to carefully examine the tool list for applicability to your vehicle before ordering.</p>		
1	101871001	Accelerator Pedal Adjustment Tool .....	1	1
2	101813202	Adhesive, Guide Ring, 3-Gram Tube .....	1	1
3	101831901	Battery Discharge Machine, 36/48 Volt .....		1
4	1014305	Battery Terminal Protector Spray .....	1	1
5	1011767	Battery Thermometer .....		1
6	1016417	Bearing and Oil Seal Remover Assembly .....	1	1
7	1016416	Bearing Driver Set .....	1	1
8	1012811	Bearing Puller .....	1	1
9	1012812	Bearing Puller Wedge Attachment .....	1	1
10	1013582	Brake Adjustment Tool (used only on vehicles with manually adjusted mechanical brakes) .....	1	1
	102249901	Brake Pedal Adjustment Tool Kit (used for the Carryall electric industrial truck only) (includes items 11 and 12)		1
11	****	Brake Pedal Adjustment Tool .....		1
12	****	Brake Pedal Tension Tool .....		1
13	101887101	Calibration Test Module .....		1
14	101808401	Cam Installation Tool .....	1	
	1014510	Clutch Tool Kit (includes items 15 - 21) .....		1
15	1014498	Clutch Alignment Tool (for pre-unitized transaxle vehicles built prior to 1997 model year) .....	1	
16	1014496	Drive Clutch Puller .....	1	
17	1014497	Drive Clutch Hub Puller .....	1	
18	1014508	Driven Clutch Cam Puller .....	1	
19	1014507	Driven Clutch Puller Plug .....	1	
20	1015524	Drive Clutch Holder Tool Assembly .....	1	
21	101809101	Press Weldment .....	1	
22	101831801	Communication Display Module .....		1
23	101641002	Compression Gauge and Adapter .....	1	
		<p>Please refer to the maintenance and service manual for proper tool application.</p> <p>**** Special order item available upon request</p>		

**16**


**G**

**E**

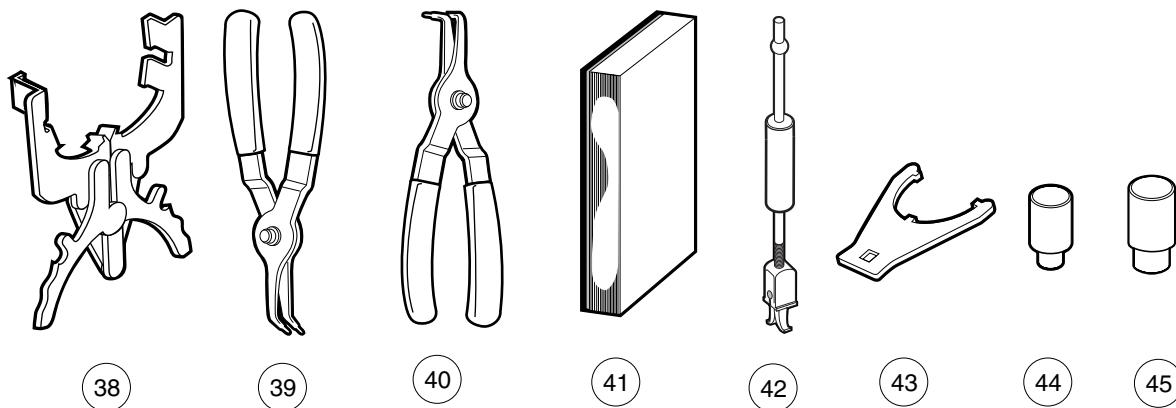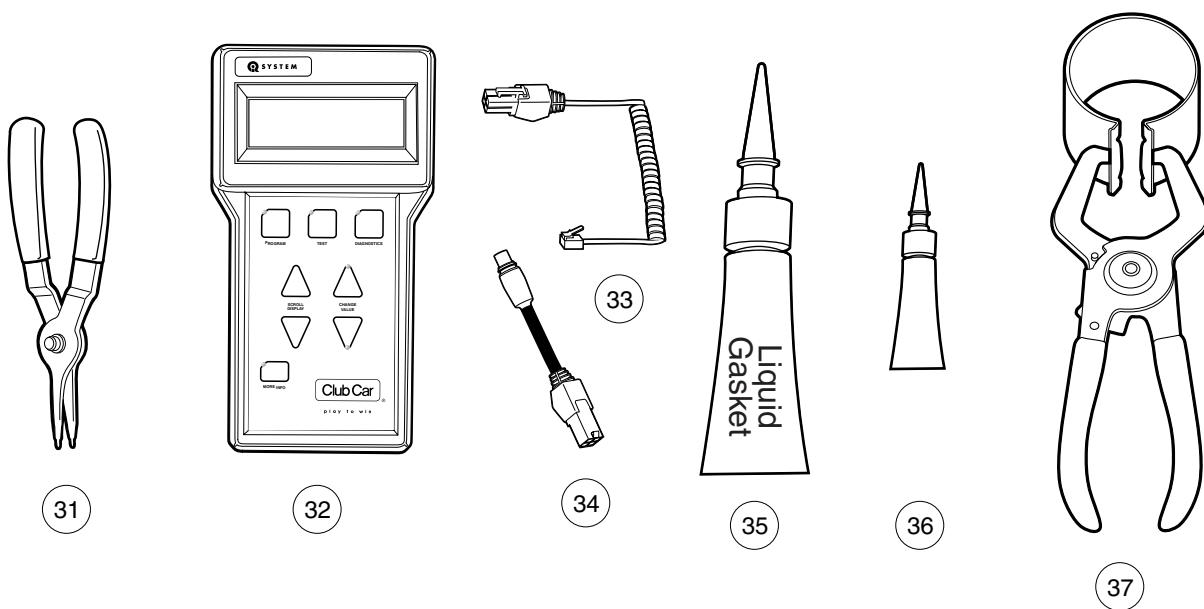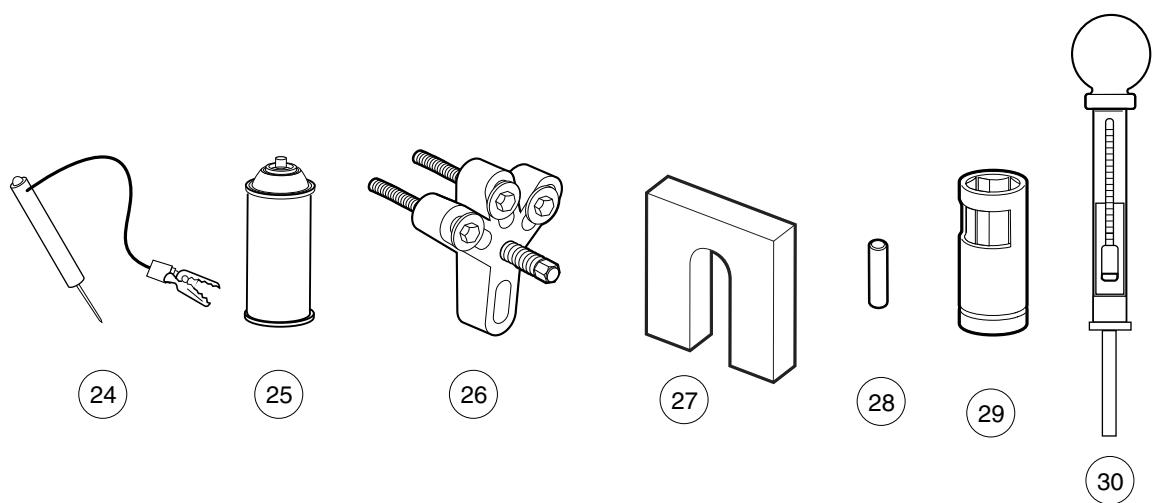
**16****G****E**

# MAINTENANCE AND SERVICE TOOLS, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	
		1 2 3 4			<b>16</b>
24	1011273	Continuity Tester .....	1	1	<b>G</b>
25	1012151	Dry Moly Lubricant .....	1	1	
26	1016627	Flywheel Puller Kit .....	1		<b>E</b>
27	1016418	Gear Yoke .....	1	1	
28	101933101	Governor Shaft Installation Tool .....	1		
29	102169401	Hydraulic Brake Adjuster (for vehicles equipped with hydraulic brakes) .....	1		
30	1011478	Hydrometer .....	1	1	
31	1013593	Internal Retaining Ring Pliers .....	1	1	
32	102248801	IQ Display Module (IQDM) Kit (for IQ System vehicles only) .....	1		
		(includes items 33 and 34)			
33	102241501	Cable, IQDM .....		1	
34	102251501	Adaptor, Cable .....		1	
35	101928701	Liquid Gasket (transaxle case) .....	1	1	
36	102243402	Moly-Teflon Lubricant (4-oz. (113-gram) tube) .....		1	
37	1016414	Piston Ring Compressor Kit (FE290, FE350 and FE400 engines) .....	1		
38	1016415	Piston Ring Pliers .....		1	
39	1012549	Retaining Ring Pliers, 45° External .....	1	1	
40	1012560	Retaining Ring Pliers, 90° Internal .....	1	1	
41	101823101	Safety First Card (50 per pack) .....	1	1	
42	1012809	Seal Puller .....	1	1	
43	102330901	Spanner Wrench (for coil over shock front suspension vehicles only) .....	1	1	
44	1014264	Steering Column Bearing Press Tool .....	1	1	
45	1014259	Steering Column Retaining Ring Tool .....	1	1	
		Please refer to the maintenance and service manual for proper tool application.			

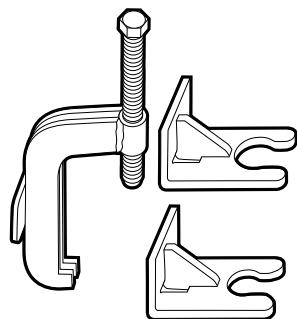**16****G****E**


46

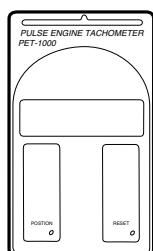


47

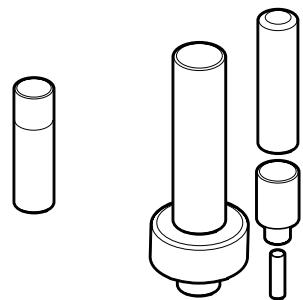


48




49



50

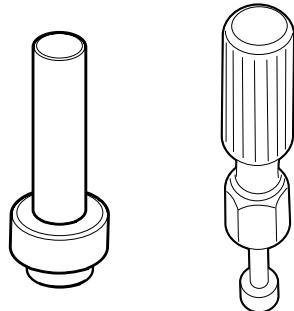

51




52



53




54

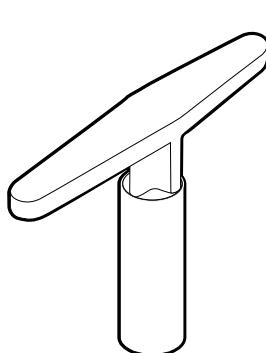


55




56

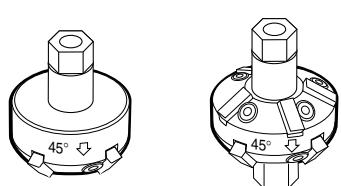


57

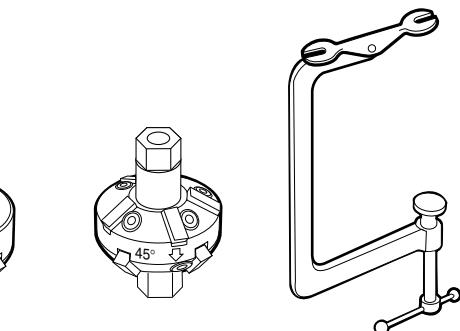

58

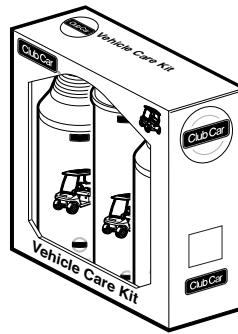

59

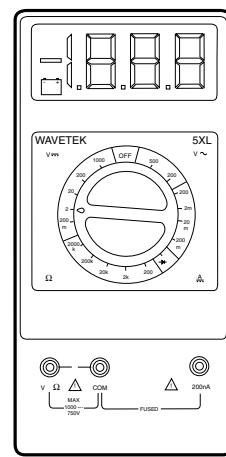

60

# MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	
		1 2 3 4			<b>16</b>
46	102061201	Steering Wheel Puller Tool .....	1	1	<b>G</b>
47	1016112	Tachometer .....	1		
48	101972001	Paint, Touch-Up – Beige .....	1	1	
48	101972002	Paint, Touch-Up – White .....	1	1	
48	101972003	Paint, Touch-Up – Red .....	1	1	
48	101972004	Paint, Touch-Up – Gray .....	1	1	
48	101972005	Paint, Touch-Up – Dark Gray .....	1	1	
48	101972006	Paint, Touch-Up – Royal Blue (Pacific Blue) .....	1	1	
48	101972007	Paint, Touch-Up – Black .....	1	1	
48	101972009	Paint, Touch-Up – Dark Green .....	1	1	
48	101972011	Paint, Touch-Up – Classic Blue (Navy) .....	1	1	
48	101972012	Paint, Touch-Up – Burgundy .....	1	1	
49	1014115	Transmission Tool Kit .....	1		
50	1014161	Transaxle Pinion Seal Tool .....	1		
51	1014162	Transaxle Axle Seal Tool .....	1		
52	1016413	Valve Clearance Adjuster Screw Holder (for FE290 engines only) .....	1		
53	101641201	Valve Guide Reamer .....	1		
54	101641202	Arbor .....	1		
55	1016551	Valve Seat Cutter T-Wrench .....	1		
56	1016552	Valve Seat Cutter Guide .....	1		
57	1016553	Valve Seat Cutter, 45° (32 mm diameter) (for FE290 engines only) .....	1		
58	1016554	Valve Seat Cutter, 45°/30° (35 mm diameter) .....	1		
59	101641101	Valve Spring Compressor .....	1		
60	AM10021	Vehicle Care Kit .....	1	1	
61	1011480	Volt Ohm Meter .....	1	1	
62	101611003	Tune-Up Kit, All OHV (includes air filter, spark plug, oil filter, fuel filters) (not shown) .....	1		
		Please refer to the maintenance and service manual for proper tool application.			



# INDEX

## **Part Number and Page**

183	1-13, 1-3	1010177	5-13	1011466	4-3, 4-5, 4-11
332	1-13, 1-3, 1-5, 1-31	1010219	5-7, 5-11	1011467	4-5, 4-11
451	1-17, 1-3, 1-5, 1-3	1010347	5-9	1011478	16-5
am10021	16-7	1010348	5-9	1011480	16-7
1014	1-5	1010434	1-3, 1-11, 1-13, 1-15, 1-19, 1-21, 1-25	1011494	4-5, 4-11
1032	4-7	1010435	1-3, 1-11, 1-25, 1-29	1011497	6-19, 1-27
1035	4-3, 4-5, 4-7, 4-9, 5-5	1010543	1-7, 1-9, 1-17, 1-19, 1-21, 1-23	1011498	6-19, 1-27
1241	1-27	1010545	1-23	1011557	6-17, 6-19, 1-21, 1-27
1242	6-7	1010695	1-9	1011558	6-19, 6-21, 1-27
1606	1-13	1010805	4-7, 4-9	1011571	6-19, 1-27
1631	1-15	1010829	4-3, 4-5, 4-7, 4-9, 4-11	1011578	5-3, 1-11, 1-27, 1-35
4029	6-15	1010850	4-3, 4-5, 4-11	1011582	6-19, 6-21, 1-27, 1-35
4034	6-17, 1-21	1010877	4-7, 4-9	1011610	6-19, 1-27
7048	5-9, 5-13	1010878	1-29, 4-7, 4-9	1011622	6-21
7173	1-5	101090801	1-11, 1-27, 1-35	1011652	1-7, 1-17, 1-23
7174	1-11, 1-3, 1-5, 1-3	101090802	1-27, 1-35	1011694	4-13, 4-15
7310	2-3	1010909	6-15	1011697	1-27, 1-9, 1-11
7330	1-7, 1-3	1010921	4-7, 4-9	1011700	4-13
7335	1-5, 1-3	1010927	4-7, 4-9	1011707	1-9, 1-11
7336	1-5, 1-3	1010932	4-7, 4-9	1011734	4-13
7473	1-11, 4-9, 1-27	1010933	4-7, 4-9	1011767	16-3
7532	1-29	1010934	1-19, 6-27, 1-3	1011779	4-3, 4-5, 4-7, 4-9, 4-11
7539	5-7, 5-11	1010954	6-3, 6-7, 6-13, 1-3	1011825	6-15, 1-19
7540	5-5, 5-7, 5-11	1010984	5-13	1011843	6-19, 1-27
7555	5-5	1011014	1-3	101187702	4-7, 4-9, 4-13, 4-15
7569	5-15, 5-17	1011017	1-3	1011887	5-9, 5-13
7591	6-21	1011084	4-13	1011892	5-9, 5-13
7602	5-5	1011114	4-11	1011930	5-5, 5-7, 5-11
7716	4-7	1011137	4-11	1011988	1-11, 1-25, 1-3
7818	1-27	1011154	4-5, 4-11	1011990	1-23, 1-29
7847	1-3, 1-5	1011182	1-9	1012030	5-9, 5-13
7893	6-7, 1-19, 1-31	1011210	1-9	1012047	1-3, 1-5, 1-15
7973	1-3, 6-3, 1-15	1011219	1-9	1012098	1-3, 1-5, 1-7, 1-9
8028	1-9	1011220	1-9	1012101	1-3, 1-5, 1-7, 1-9, 1-11
8056	1-5, 1-27	1011221	1-9	1012151	16-5
8057	1-5	1011222	1-9	1012164	1-27
8058	1-5	1011229	6-9, 6-15, 1-15	1012285	1-17, 1-27, 6-3, 1-3, 1-11, 1-3, 1-13, 1-23, 1-31, 1-33
8067	5-9, 5-13	1011273	16-5	1012295	6-7, 6-13
8168	1-15	1011280	6-17, 1-21	1012303	1-29, 5-9, 5-13, 5-15, 5-17
8233	1-3	1011290	1-3	1012304	5-15, 5-17
8248	1-3	1011291	1-7	1012328	6-27
8450	6-13	1011303	4-5, 4-11	1012333	6-3
8455	6-3	1011304	5-9, 5-13	1012353	1-5
8639	6-15, 1-19	1011389	1-9	1012382	6-5, 6-11
8717	1-3	1011393	5-9, 5-13	1012412	1-5, 1-13, 1-15
8745	5-9, 5-13	1011394	1-3	1012431	6-13, 6-19
8754	6-25	1011402	4-7, 4-9	1012438	1-15, 1-25, 1-31
8990	5-5, 1-5, 1-9, 1-15, 1-33	1011403	4-3, 4-5, 4-7, 4-9	1012467	5-5
1010005	5-13	1011411	1-3	1012499	5-3
1010028	5-9, 5-13	1011415	5-15, 5-17	1012505	6-9, 6-17, 1-9, 1-21
1010124	5-7, 5-11	1011418	4-7, 4-9	1012528	1-3, 1-5
1010138	5-7, 5-11	1011439	6-17, 1-21	1012549	16-5
1010145	5-15, 5-17	101146302	4-5, 4-11	1012560	16-5
1010150	5-9, 5-13	1011464	4-5, 4-11	1012571	1-27
		1011465	4-5, 4-11	1012581	1-13

# INDEX

1012594	6-3	1013593	16-5	1014125	5-3
1012597	1-7, 1-17	1013609	6-7, 6-13	1014126	5-3
1012604	5-3	1013677	3-5, 3-9, 3-13	1014145	6-3, 6-7, 6-13
1012605	5-3	1013683	1-11	1014153	4-3, 4-5
1012649	1-3	1013687	1-3	1014161	16-7
1012656	1-7, 1-17	1013692	1-3	1014162	16-7
1012657	1-7, 1-17	1013700	1-11	1014189	1-5
1012711	1-3	1013734	1-3, 1-5	1014193	1-7
1012714	1-5	1013746	1-3, 1-9	1014198	1-3
1012740	1-5	1013759	1-3	1014201	1-3
1012741	1-5	1013768	1-7	1014207	1-7
1012747	1-5	1013769	1-7	1014211	5-3
1012748	1-5	1013770	1-7	1014213	5-3
1012752	1-3	1013771	1-7	1014214	5-3
1012809	16-5	1013772	1-7	1014216	5-3
1012811	16-3	1013773	1-7	1014217	5-3
1012812	16-3	1013774	1-7	1014235	5-7
1012830	6-25, 1-3, 1-5	1013787	1-7	1014236	5-15
1012896	1-3	1013790	1-7	1014253	1-5
1012903	1-5	1013791	1-7	1014259	16-5
1012981	1-5, 1-17	1013792	1-7	1014264	16-5
1012986	6-17	1013794	1-7, 1-3	1014276	5-9, 5-13
1012987	6-3, 1-3	1013857	6-17, 1-21	1014288	5-3, 6-27, 1-13
1013001	6-23	1013860	1-5	1014289	6-23
1013003	6-23	1013861	5-3	1014304	1-11, 1-27, 1-35
1013005	6-23	1013869	4-7, 4-9	1014305	16-3
101301102	6-23	1013870	4-7, 4-9	1014321	1-19, 1-21, 1-23
1013032	1-5, 1-15	1013871	4-13, 4-15	1014374	6-27
1013035	5-5	1013872	1-29	1014375	6-27
1013044	5-5	1013876	4-9	1014387	1-19, 1-21, 1-23
1013051	5-5	1013886	1-5	1014392	1-15
1013052	5-5	1013887	1-5	1014413	1-11
1013061	1-23, 1-3, 1-5, 1-11, 1-25	1013924	4-3, 4-5, 1-27	1014414	1-5
1013135	5-9, 5-13	1013998	1-5	1014453	1-3
1013164	5-15	1014003	1-5	1014454	1-5
1013169	1-23	1014007	1-3	1014471	1-29
1013198	6-3, 1-3	1014010	1-5	1014496	16-3
1013207	4-3, 4-5, 5-15, 5-17	1014017	1-5	1014497	16-3
1013309	1-19, 1-21, 1-23	1014049	1-3	1014498	16-3
1013311	1-19, 1-21	1014050	1-3	1014507	16-3
1013312	1-17, 1-19, 1-21, 1-23	1014051	1-3	1014508	16-3
1013335	1-9	1014052	1-3	1014510	16-3
1013343	1-3	1014055	1-3	1014523	1-3
1013344	1-3	1014056	1-3	1014524	1-3
1013357	1-15, 1-23, 1-29, 6-15, 1-19, 1-25, 1-31	1014057	1-3	1014528	1-3
1013461	6-15, 1-5, 1-19	1014058	1-3	101454602	5-15
101347501	1-3	1014059	1-3	101454902	5-15
101347503	1-3	1014065	6-3	1014555	5-15, 5-17
101347505	1-11, 1-25	1014070	1-5	1014573	5-15
1013531	4-7, 4-9	1014072	1-5	1014645	1-3
1013582	16-3	1014078	1-5	1014675	5-15
1013587	6-3	1014080	1-5	1014727	6-3
1013589	6-3, 6-7, 6-13	1014089	6-3	1014771	2-3
1013590	6-3	1014115	16-7	1014807	6-3, 6-7, 6-13, 1-5
1013591	6-3	1014116	1-3	1014808	6-7, 1-3
		1014119	6-5, 6-11	1014856	1-7

# INDEX

1014871	1-3	101564808	1-7, 1-9	1016356	6-15, 1-19, 1-25, 1-31
1014901	5-15	1015649	1-3, 1-15	1016363	1-25, 1-31
1014902	5-15, 5-17	101565202	1-9	1016366	1-25, 1-31
1014928	1-3	101565205	1-9	1016379	1-27
1014947	1-7, 1-13, 1-17, 1-23, 1-29, 1-31	101565206	1-9	1016380	6-11
1014948	6-13, 1-7, 1-13, 1-17, 1-23, 1-29, 1-31	1015654	1-31	1016384	5-9, 5-13
1014999	1-5	1015656	1-31	1016385	5-7, 5-11
1015032	1-3	1015660	1-31	1016386	5-9, 5-13
1015072	1-11, 1-27, 1-35	1015661	4-15	1016387	5-9, 5-13
1015075	1-3, 1-5	1015670	1-7	1016389	5-9, 5-13
1015091	1-9	101567202	2-3	101641002	16-3
1015137	1-3, 1-9	101570506	2-3	101641101	16-7
1015139	1-3, 1-15	101570507	2-3	101641201	16-7
1015143	1-3	101570509	2-3	101641202	16-7
1015188	1-3	1015707	2-3	1016413	16-7
101524001	6-25	1015720	6-9, 6-15, 6-21	1016414	16-5
101524002	6-25	1015737	6-5, 6-7, 6-11, 6-13	1016415	16-5
1015330	1-3	1015741	6-7, 6-13, 1-25, 1-31	1016416	16-3
1015332	6-5, 6-11, 1-3, 1-15	1015752	6-7, 6-13, 6-21, 1-13, 1-15, 1-35	1016417	16-3
1015345	6-13	1015760	5-19	1016418	16-5
1015356	1-29	1015769	6-5, 6-11	1016423	6-13, 1-25, 1-31
1015371	6-7	1015777	6-7	101642572	1-5
1015372	6-7, 6-13	1015814	1-3, 1-5	101642575	1-5, 1-7
1015373	6-7, 6-13	1015845	1-11	101642578	1-5, 1-7
1015399	1-29	1015878	6-7, 6-13	101642580	1-5, 1-7
1015405	6-7, 6-13	1015914	1-3, 1-5, 1-7, 1-9, 1-11	101642582	1-5, 1-7
1015408	1-11	1015917	1-3, 1-5, 1-9, 1-11	101642585	1-7
1015426	1-13, 1-15	1015920	6-5, 6-25	1016429	1-7, 1-19
1015453	5-19	1015932	6-25	1016430	1-9
1015457	5-19	1015969	1-3, 1-15	1016431	1-9
101547601	3-5, 3-9, 3-13	1016004	1-3	1016432	1-7, 1-19, 1-3
1015507	1-29	1016074	6-25	1016435	1-7
1015524	16-3	1016077	1-31	1016436	1-9, 1-21
1015525	1-5, 1-15	101609401	3-15	1016437	1-5, 1-7
1015530	1-27	101610901	3-5, 1-5	1016438	1-9
1015539	1-31	101611003	16-7	1016439	1-9
101553901	3-15	1016112	16-7	1016440	1-9
1015545	5-3	101615502	5-3	1016441	1-9
1015583	1-29, 5-9, 5-13, 5-15, 5-17	1016156	5-3	1016442	1-9, 1-21
1015597	5-5, 5-7, 5-9, 5-11, 5-13	1016175	1-5	1016443	1-3
1015613	5-19	1016181	5-3	1016444	1-9
1015614	5-19	1016183	5-3	1016445	1-5, 1-17
1015625	1-7	1016202	1-11	1016446	1-11
101562602	1-9	1016203	1-3, 1-5	1016447	1-9
101562604	1-9	101621601	3-3, 3-7, 3-11	1016448	1-9
101562605	1-9	1016263	5-3	1016449	1-9, 1-21
101562701	1-17	1016269	5-3	1016450	1-9, 1-21
101562702	1-7, 1-9, 1-17, 1-19, 1-21, 1-23	1016289	1-3	1016451	1-9
101562704	1-7, 1-9, 1-17, 1-19, 1-21, 1-23	1016337	1-5	1016452	1-9, 1-21
101562710	1-7, 1-9, 1-17, 1-19, 1-21, 1-23	1016338	1-5	1016453	1-11
101564502	1-19, 1-21	1016341	1-3	1016454	1-11, 1-23
101564503	1-19, 1-21	1016342	6-3	1016455	1-5, 1-17
101564505	1-19, 1-21	1016346	5-7, 5-11	1016456	1-3, 1-5, 1-11, 1-15, 1-17
101564805	1-7, 1-9	1016349	5-7, 5-11	1016457	1-7, 1-19
101564807	1-7, 1-9	1016350	5-7, 5-11	1016458	1-9, 1-11, 1-21
		1016353	5-7, 5-11	101645901	1-13

# INDEX

101645902	1-13	1016537	1-7, 1-19	1016630	6-9, 6-17
101645903	1-13	1016538	1-11, 1-23	1016631	1-25, 1-31
1016460	1-13	1016539	1-3, 1-15	1016663	5-3
101646101	1-13	1016541	1-13, 1-25	1016668	1-11, 1-25
101646102	1-13	1016542	1-9	1016670	1-19
101646103	1-13	1016544	1-5, 1-9, 1-11, 1-17, 1-21, 1-23	1016672	1-7
1016467	1-7, 1-19	1016545	1-9	1016673	1-19, 1-9, 1-11
1016469	1-13	1016546	1-11	1016679	1-27
1016470	1-13, 1-25	1016547	1-3, 1-13, 1-15, 1-25, 1-9	101668201	1-27, 1-35
1016471	1-9	1016548	1-5	1016698	1-17, 1-29
1016472	1-11, 1-23	1016549	1-9, 1-21	101670201	1-3
1016473	1-7, 1-19	101655001	1-13	1016717	6-21, 1-35
1016474	1-9, 1-21	101655002	1-13	1016718	1-3
101647501	1-13	101655003	1-13	1016723	1-19, 1-21
101647502	1-13	101655004	1-13	1016724	1-29
1016479	1-9, 1-21	101655005	1-13	101672501	3-13
1016480	1-9	101655006	1-13	101672502	3-13
101648102	1-9	101655007	1-13	101672601	3-13
101648203	1-7, 1-19	101655008	1-13	101672602	3-13
1016483	1-9, 1-21	101655009	1-13	101672701	6-3
1016484	1-7	1016551	16-7	1016729	1-17, 1-29
1016486	1-5, 1-7	1016552	16-7	1016732	1-17, 1-29
1016489	1-9, 1-21	1016553	16-7	101674702	4-13
101649002	1-9	1016554	16-7	1016751	1-17, 1-19, 1-21, 1-23
1016493	1-5	1016557	4-5, 4-11	101675501	1-17
1016494	1-11, 1-23	1016558	1-13	101675502	1-17, 1-19, 1-21, 1-23
1016496	1-11, 1-23	1016559	1-13	101675504	1-17, 1-19, 1-21, 1-23
1016497	1-5, 1-17	1016560	1-9, 1-21	101675505	1-23
1016499	1-5, 1-7	1016561	1-5, 1-17	101675506	1-17, 1-19, 1-21
1016501	1-5, 1-7	1016562	1-5, 1-13, 1-17, 1-25	1016757	3-11
1016502	1-7, 1-19	1016563	1-9, 1-21	101677701	1-17, 1-19, 1-21, 1-23
1016505	1-5	1016564	1-11, 1-23	101677702	1-17, 1-19, 1-21, 1-23
1016506	1-11, 1-23	1016565	1-11	101677703	1-17
1016507	1-3, 1-15	1016566	1-9, 1-21	101677705	1-17, 1-19, 1-21, 1-23
1016509	1-13	1016567	1-11	1016801	1-3
1016510	1-11, 1-23	1016568	1-13	1016813	5-19
1016512	1-3, 1-15	1016569	1-9, 1-21	1016814	5-19
1016513	1-3	1016570	1-7, 1-19	1016816	1-23
101651402	2-3	1016571	1-13, 1-25	1016819	1-23
101651406	2-3	1016572	1-9	1016824	1-23
101651407	2-3	1016573	4-5, 4-11	1016838	1-25
101651409	2-3	1016576	1-7, 1-19	1016839	1-21, 1-23
1016516	1-13	1016578	1-5, 1-17	101684102	1-23
1016517	1-9, 1-21	1016579	1-5, 1-17	101684103	1-23
1016519	1-9, 1-21	1016580	1-13	101684105	1-23
1016520	1-11	1016581	1-7, 1-19	1016842	1-11, 1-25
1016521	1-11, 1-23	1016582	1-9	1016843	1-25
1016523	1-9	1016583	1-9, 1-21	1016845	1-3
1016524	1-3	1016584	1-11, 1-23	1016849	6-9, 6-15, 6-21, 1-9, 1-19, 1-35
1016525	1-3	1016585	1-5, 1-7	1016851	6-9, 6-15, 6-19, 6-21, 1-9, 1-19, 1-27, 1-35
1016526	1-3	1016586	1-5, 1-17	1016859	6-9, 6-15, 6-19, 6-21, 1-9, 1-19, 1-27, 1-35
1016531	1-3, 1-15	1016587	1-5, 1-17	1016868	1-3
1016532	1-13	1016588	1-5, 1-17	1016875	1-27
1016533	1-13	101660404	1-3	1016876	1-27
1016535	1-11, 1-23	1016622	5-3		
1016536	1-3	1016627	16-5		

# INDEX

1016879	6-15, 1-19	101728701	1-15	1017474	1-15
1016880	6-15, 1-19	101728702	1-15	1017475	1-15
1016883	6-25	101728704	1-15	1017476	1-15
1016901	1-3	101728708	1-15	1017483	1-25
1016904	1-5	101728709	1-15	1017484	1-25
101692504	1-3	101728711	1-15	1017486	1-15
101692508	1-3	101728712	1-15	1017487	1-23
101692604	1-5	1017289	1-3	1017490	1-17
1016930	1-23	1017310	1-17	1017500	1-15
101693201	3-7, 3-11	1017313	5-3	1017501	1-25
101693901	1-3	101731601	1-13	1017502	1-25
101693902	1-3	101731602	1-13	1017503	1-25
101693904	1-3	101731604	1-13	1017504	1-23
101693909	1-3	101731608	1-13	1017507	1-7, 1-19
101693911	1-3	101731609	1-13	1017508	1-23
101693912	1-3	101731611	1-13	1017510	1-25
1016947	6-3	101731612	1-13	1017511	1-23
1016952	1-3	1017327	1-5	1017512	1-25
1016967	1-3	1017328	1-3	1017513	1-23
1016970	1-19	101737002	2-3	1017514	1-23
1016997	6-13	1017378	4-13, 4-15	101751801	1-23
1017029	4-7, 4-9	1017380	4-13, 4-15	101751802	1-23
1017035	6-19, 1-27	101738301	1-3	101751803	1-23
101705701	3-3, 3-7, 3-15	1017384	1-7, 1-17	101753005	1-3
1017062	6-15, 1-19	101739201	1-15	1017653	6-23
1017064	6-15, 1-19	1017400	4-15	1017686	1-5
1017065	6-15, 1-19	1017424	4-13, 4-15, 1-15	1017689	1-3, 1-5
101707801	3-15	1017434	1-21	101769302	2-3
1017079	1-27	1017435	1-21	1017695	1-17
1017080	1-3	1017442	1-19	1017696	4-13, 4-15
1017082	1-3	1017443	1-23	1017699	6-19, 1-27
101708301	1-3	1017444	1-21	1017705	1-11, 1-25
1017141	1-5, 1-15	1017445	1-21	1017721	6-15
1017187	1-9, 1-11	1017446	1-21	101773301	1-25
1017188	1-3, 1-5	1017447	1-23	101773302	1-25
1017189	1-9, 1-11	1017448	1-5, 1-17	101773303	1-25
1017203	1-3	101744901	1-25	101773304	1-25
1017211	4-9	101744902	1-25	101773305	1-25
1017221	1-3	1017450	1-25	101773306	1-25
1017226	5-3	101745101	1-25	101773307	1-25
1017231	1-3	101745102	1-25	101773308	1-25
1017235	5-15	1017453	1-25	101773309	1-25
1017237	1-13, 1-23, 1-31	1017454	1-21	101773310	1-25
1017238	6-13	1017455	1-5, 1-17	101773311	1-25
1017239	6-13	1017456	1-7, 1-19	1017743	4-15, 1-15
1017243	6-13	101745701	1-25	1017748	1-5, 1-15
1017259	1-17	101745702	1-25	1017774	1-9, 1-17
1017266	5-7, 5-11	1017458	1-19	1017799	1-3
101728201	1-17	1017460	1-19	1017814	1-5
101728202	1-17	1017461	1-5, 1-7	1017815	1-5
101728203	1-17	1017463	1-17	1017830	1-15
101728204	1-17	1017466	1-9	1017853	1-15
101728210	1-17	1017467	1-17	101785701	1-3
101728211	1-17	1017471	1-25	101791101	4-3, 4-5
101728213	1-17	1017472	1-23	1017936	1-5, 1-15
101728214	1-17	1017473	1-21	1017944	1-3

# INDEX

1017946	1-3	101822601	1-15	101833904	1-3
1017947	1-3	101823101	16-5	101834001	1-5
1017948	1-3	101823201	4-3	101834502	6-9, 6-17, 1-9, 1-21
1017949	1-3	101823301	4-3	101834601	1-27
1017950	1-3	101823302	4-3	101834801	1-3
1017951	1-3	101823801	4-3	101835601	1-19, 1-21, 1-25
1017953	1-3	101823901	4-3	101836201	1-5
101795701	1-7, 1-11, 1-17, 1-27, 1-29, 1-35	101824001	4-3	101837001	1-15, 1-23, 1-29
		101824002	4-3	101837101	1-13, 1-15
1017958	1-3	101824401	1-3	101837301	6-5, 6-11, 6-25
1017961	1-3	101825101	3-3, 3-7, 3-11	101838201	1-5, 1-11
101796201	4-13, 4-15	101825102	3-7, 3-11	101838301	1-5, 1-11
101796501	1-11, 1-25	101825701	1-15	101838401	1-5, 1-7, 1-11
101796801	1-11, 1-25	101826201	1-9, 1-21	101838501	1-5
1017976	1-29	101826301	6-9	101838601	1-5, 1-7, 1-11
101797701	1-11, 1-27, 1-35	101826401	6-17	101838701	1-5, 1-9, 1-11
101797702	1-11, 1-27, 1-35	101827101	1-27	101840203	1-13, 1-23, 1-31
101797801	1-11, 1-27, 1-35	101827801	1-13	101840901	1-11
101799201	1-17	101827802	1-23, 1-33	101841101	1-11
101801001	1-19, 1-11, 1-25, 1-9, 1-11	101828301	1-3	101841201	1-11
101802101	1-11, 1-25	101828501	1-3, 1-5, 1-9, 1-11	101841202	1-11
101802201	1-3	101828601	1-3, 1-9	101841301	1-11
101802202	1-3	101828701	1-3, 1-9	101841601	1-11
101802203	1-3	101828801	1-3	101841701	1-9
101802401	1-33	101828802	1-3	101841801	1-11
101804201	4-15	101828901	1-3, 1-5, 1-7	101841901	1-9, 1-11
101804301	4-15, 1-13, 1-15	101828902	1-3, 1-5, 1-7	101846301	1-25
101805701	1-13	101828903	1-3, 1-5, 1-7	101850301	1-13
101806901	1-15	101829001	1-9, 1-11	101851101	6-9, 6-17, 1-21
101808401	16-3	101829101	1-29, 1-9, 1-11	101855801	6-3
101809001	1-15	101830601	6-9, 6-17, 1-9, 1-21	101855901	1-27
101809101	16-3	101830701	6-9, 6-17, 1-9, 1-21	101856102	6-7, 6-13
101810801	1-25, 1-33	101831101	1-3	101856201	1-13
101811301	1-15	101831503	1-5	101859301	1-3
101811401	1-13	101831504	1-5	101859401	1-5
101811501	1-13	101831701	1-5	101861901	4-13, 4-15, 1-15
101811901	1-13, 1-15	101831702	1-5	101862001	4-15
101812301	1-13, 1-15	101831801	16-3	101864601	1-27
101813001	1-13, 1-15	101831901	16-3	101865106	1-17, 1-29
101813202	16-3	101832001	1-11, 1-25	101865301	4-7, 4-9
101814201	1-21	101832101	1-27	101869001	4-11
101814301	1-9	101832201	1-11	101869302	6-23
101814302	1-11	101832301	1-11	101870401	1-3
101814701	1-21	101832401	1-11	101870501	5-11
101815501	4-3	101832402	1-11	101870601	5-11
101815502	4-3	101832501	1-11	101871001	16-3
101816101	1-9	101832701	1-27	101871901	4-13
101816301	4-3	101832901	1-27	101874601	4-9, 4-11
101816501	4-3	101833001	1-27	101874901	6-23
101816502	4-3	101833101	1-27	101875001	6-23
101817401	4-13, 4-15	101833201	1-27	101875101	6-23
101818801	4-13	101833301	1-27	101875201	6-23
101819701	1-3, 1-9	101833401	1-5	101875301	6-23
101820201	1-9	101833601	1-3	101875401	6-23
101821301	6-7	101833701	6-23, 6-25	101875501	6-23
101821501	1-13, 1-15	101833902	1-3	101875601	6-23

# INDEX

101875701	6-23	101892501	1-5	101910401	1-9, 1-17
101875802	6-23	101892601	1-5	101910501	1-7
101876001	6-23	101892701	1-7	101911003	1-7
101876202	6-23	101892901	1-3	101911101	1-7
101876301	6-23	101893201	1-5	101911601	1-17, 1-29
101876402	6-23	101893801	1-3	101911701	1-23, 1-31
101876501	6-23	101893901	1-5	101912401	4-13
101876901	5-13	101894303	1-19, 1-21	101914401	1-3, 1-5, 1-9, 1-11
101877001	5-13	101894901	1-11, 1-13, 1-23, 1-25, 1-29, 1-33	101915201	3-5, 3-9, 3-15
101877601	6-23	101895101	1-15	101915401	1-11
101877701	6-23	101895401	1-3	101915501	1-13
101878101	6-23	101895501	1-3	101915601	1-3
101878201	4-7, 4-9	101895601	1-3	101915701	1-5
101878302	5-5	101895701	1-3	101915801	1-5
101879001	6-23	101895801	1-3	101915901	1-23
101879401	5-5	101895901	1-3	101916001	1-25
101879501	5-5	101896001	1-3	101916101	1-15
101879601	5-5	101896501	6-23	101916201	1-17
101879701	5-5	101896901	1-3	101916301	1-17
101879801	5-5	101897001	1-3	101916501	1-3
101879901	5-5	101897201	1-3	101916701	6-25, 1-3
101880001	5-5	101897401	1-3	101917601	1-13, 1-15
101880101	5-5	101897601	1-3	101917701	1-13
101880201	5-5	101897901	1-3	101918301	1-23, 1-31
101880301	5-5	101898001	6-27	101918401	2-3
101880901	1-7, 1-17, 1-23	101900801	4-3, 5-15	101918402	2-3
101881101	1-5, 1-17	101900901	6-9	101920101	1-5, 1-13, 1-15, 1-33
101881701	1-17, 1-23, 1-13, 1-15	101901201	1-7	101921501	1-13, 1-15
101883002	1-7, 1-17, 1-29	101901301	1-7	101921901	3-3, 3-9, 3-13
101883601	1-13, 1-23, 1-31	101901401	1-7	101922101	1-3
101884801	1-27	101902801	1-7	101922201	1-3
101884901	2-3	101902901	1-7	101922301	1-13
101886101	1-3	101903001	1-7	101922302	1-25
101887101	16-3	101903101	5-9, 5-13	101922601	6-3, 1-3
101887601	1-3, 1-15, 1-9	101903501	1-11	101923001	1-3
101888501	1-19, 1-21	101903601	1-3	101923201	1-3
101888502	1-19	101903701	1-3	101923501	1-3
101889401	1-5	101904101	1-5, 1-15	101923601	1-3
101889501	1-5	101904402	1-17, 1-29	101923701	1-3
101889901	1-5	101904502	1-17, 1-29	101923901	1-3
101890001	1-5	101904602	1-17, 1-29	101924301	1-23, 1-31
101890101	1-3	101904702	1-17, 1-29	101925601	1-3
101890201	1-3	101905601	1-5, 1-9	101925701	1-13, 1-15
101890501	1-3	101905901	1-7, 1-9	101926501	5-15, 5-17
101890601	1-3	101906201	1-3	101926802	1-15
101890901	1-7	101906901	1-3	101926901	1-3
101891001	1-7	101908801	1-17, 1-29	101927101	1-3
101891301	1-3	101908902	1-17, 1-29	101927201	1-3
101891401	1-7	101909201	1-5, 1-17	101927301	1-3
101891501	1-7	101909301	1-5, 1-17	101927501	1-5
101891601	1-5	101909401	1-5, 1-17	101927601	1-5
101891901	1-5	101909501	1-5, 1-17	101927701	1-5
101892001	1-5	101909701	1-3	101927801	1-5
101892201	1-5	101909901	1-13	101927901	1-5
101892301	1-5	101909903	1-17, 1-23, 1-29, 1-33	101928001	1-5
101892401	1-5			101928101	1-5

# INDEX

101928201	1-5	101971001	1-13, 1-15	102169401	16-5
101928301	1-7	101971101	1-5	102241501	16-5
101928601	1-3	101971301	1-13, 1-15	102243402	16-5
101928701	1-3, 16-5	101972001	16-7	102248801	16-5
101929401	5-15, 5-17	101972002	16-7	102249901	16-3
101929501	1-3	101972003	16-7	102251501	16-5
101929801	1-3	101972004	16-7	102330901	16-5
101930801	1-17, 1-29	101972005	16-7	3-pin receptacle	1-5
101931501	3-13	101972006	16-7		
101931601	1-33	101972007	16-7		
101932004	1-5	101972009	16-7		
101932201	6-17, 1-21	101972011	16-7		
101932801	1-5	101972012	16-7		
101933101	16-5	101972101	1-3		
101934401	1-23, 1-31	101972201	1-3		
101935301	5-11	101972401	1-3		
101935501	1-9, 1-21	101972801	1-13, 1-15		
101939901	6-23	101973101	1-5, 1-7		
101942301	1-5, 1-13, 1-23, 1-33	101973201	1-5		
101946201	1-19, 1-21, 1-23	101973301	1-7		
101946901	1-5	101973401	1-9		
101949201	1-5	101973501	1-7		
101951101	1-7	101975101	5-17		
101951501	6-3	101975201	5-17		
101953001	4-7, 4-9	101976001	1-3		
101953101	4-7, 4-9	101976301	4-9		
101953103	4-9	101976601	1-7		
101953801	1-15	101977101	1-3		
101953901	1-3	101979101	6-3, 1-3		
101954301	1-17, 1-19, 1-21, 1-23	101980801	1-5		
101955001	5-11	101980901	1-5		
101955101	6-15, 1-19	101981001	1-5		
101955301	1-3	101984801	5-3		
101956201	1-7	101987402	6-5		
101956202	1-7	101987501	1-7		
101957101	6-17, 1-21	101987701	1-3		
101957501	1-29, 1-33	101987901	6-15, 1-19		
101957901	1-13, 1-23, 1-31	101988001	6-15, 1-19		
101958101	1-13	101988002	6-15, 1-19		
101958201	1-7	101988101	6-15, 1-19		
101958301	1-7	101988201	6-15, 1-19		
101958601	1-19, 1-21	101989901	1-17, 1-29		
101960001	3-11	101990402	6-11		
101960501	3-5, 3-9, 3-13	101990701	6-9, 6-17		
101960601	3-3, 3-7, 3-11	101990801	4-7, 4-9		
101962601	1-25, 1-33	101991101	6-9, 6-17		
101963301	1-19, 1-21	101992601	6-7		
101963401	1-19, 1-21	101992701	6-13		
101963901	1-19, 1-21	102003201	1-3		
101964001	1-19, 1-21	102022101	4-3, 4-7		
101964601	3-13	102025901	6-9, 6-17		
101965201	1-13	102026001	4-13, 4-15		
101966801	1-33	102048501	1-3		
101966901	4-13	102058701	1-5		
101968801	1-33	102061201	16-7		
101969701	6-17, 1-21	102166901	4-5, 4-9		

## A

accelerator cable 1-11  
 accelerator cover 4-15, 1-15  
 accelerator pedal 4-13, 4-15  
 accelerator pedal adjustment tool 16-3  
 accelerator pedal pad 4-13, 4-15  
 accelerator pivot rod 4-13, 4-15  
 accelerator pivot rod support 4-13, 4-15  
 accelerator rod 4-13  
 actuator lever 4-15  
 adapter, cable (iqdm) 16-5  
 adapter, two-way 1-33  
 adhesive, guide ring 16-3  
 adjuster, hydraulic brake 16-5  
 air box 1-13, 1-15  
 air box bottom 1-13, 1-15  
 air box top 1-13, 1-15  
 air duct 1-13, 1-15  
 air duct repair 1-13, 1-15  
 air filter 1-13, 1-15  
 ammeter 1-3, 1-5, 1-7, 1-9, 1-11  
 anchor body, brake 4-5, 4-11  
 anchor piston 4-5  
 angle, seat hinge 1-23  
 arbor 16-7  
 arm, brake lever 4-11  
 arm, governor lever 1-3  
 arm, pivot 1-3  
 arm, rocker 1-9, 1-21  
 arm, speed switch 1-5  
 armature 1-3  
 armature assembly, starter/generator 6-23  
 armrest mounting 1-17  
 armrest, driver 1-19  
 armrest, front 1-7, 1-17  
 armrest, passenger 1-21  
 armrest, rear 1-11  
 armrest, rear seat 1-25  
 assembly  
     current limiter 1-7  
 axle assembly 1-7, 1-3  
 axle tube 1-3  
 axle tube assembly 1-7

## B

backing plate, brake 4-3, 4-5, 4-11

# INDEX

bag rest mat 1-15  
 ball bearing, starter/generator 6-23  
 ball joint 4-7, 4-9, 5-7, 5-11  
 ball joint, inner 5-5  
 ball joint, left-hand thread 5-5, 5-7, 5-11  
 ball stud 4-13  
 ball, steel 1-5  
 ball, steel, pressure relief 1-7, 1-19  
 bar, bus 1-3  
 bar, connecting, footrest 1-11, 1-25  
 bar, stabilizer 5-19  
 barb, vent 1-3  
 barrel, plastic 1-3, 1-13, 1-15, 1-19, 1-21  
 base, forward/reverse shifter 6-3  
 base, taillight 6-19, 1-27  
 battery cap 1-11, 1-27, 1-35  
 battery charger 1-3, 1-5, 1-7  
 battery charger and reel, onboard 1-11  
 battery charger with reel, onboard 1-9  
 battery charger, onboard 1-9, 1-11  
 battery clamp 6-27  
 battery discharge machine 16-3  
 battery hold-down 1-11, 1-27, 1-35  
 battery hold-down rod 1-27, 1-35  
 battery indicator 1-21  
 battery insulator 1-15, 1-23  
 battery terminal protector spray 16-3  
 battery thermometer 16-3  
 battery warning light 1-9, 1-21  
 battery, 12-volt 6-27  
 battery, 8-volt 1-11, 1-27, 1-35  
 bearing and oil seal remover 16-3  
 bearing assembly, steering column 5-3  
 bearing driver set 16-3  
 bearing puller 16-3  
 bearing puller wedge 16-3  
 bearing seal 5-3  
 bearing, ball 1-11, 1-5, 1-3  
 bearing, bronze 1-5  
 bearing, counterbalance 1-25  
 bearing, crankshaft 1-23  
 bearing, differential 1-3  
 bearing, idler 1-3  
 bearing, inner axle tube 1-7  
 bearing, input gear 1-3  
 bearing, intermediate gear 1-3  
 bearing, lower pinion 5-5  
 bearing, needle 1-5  
 bearing, outer axle tube 1-7  
 bearing, pivot support 4-13, 4-15, 1-15  
 bearing, plain, crankshaft 1-13  
 bearing, thrust 5-9, 5-13  
 bearing, upper pinion 5-5  
 bell crank 1-5  
 bell crank and shaft 6-7, 6-13  
 belt, drive 1-3, 1-5

belt, starter/generator 6-25, 1-3  
 bezel, headlight 6-15, 1-19  
 bezel, receptacle 1-11, 1-25  
 bezel, taillight 6-19, 1-27  
 block, fuse 6-7, 6-13, 1-25, 1-31  
 block, terminal 6-15, 1-19, 1-25, 1-31, 1-33  
 board, control 1-9, 1-11  
 body, center 1-13  
 body, front 1-3  
 body, rear 1-5, 1-15  
 bolt, clamp 6-23  
 boot, dust 5-5  
 boot, rubber 1-3  
 boot, steering column 5-3  
 box, electrical component 6-7, 6-13  
 bracket, accelerator support 1-11  
 bracket, adjusting 6-25  
 bracket, armrest 1-11  
 bracket, brake cable guide 5-11  
 bracket, brake light switch 6-17, 1-21  
 bracket, fuel pump mounting 1-3  
 bracket, fuel/hour gauge 6-9, 6-17  
 bracket, governor cable 1-11  
 bracket, horn 6-15, 1-19  
 bracket, mounting 6-15, 6-25, 1-13, 1-19,  
     1-23, 1-31, 1-9, 1-11  
 bracket, mounting, relay 1-11  
 bracket, muffler mounting 1-3, 1-5  
 bracket, oil filter 1-7, 1-19  
 bracket, oil level switch 1-11, 1-23  
 bracket, power relay mounting 1-5  
 bracket, relay 1-9  
 bracket, relay mounting 6-13  
 bracket, retaining 1-15  
 bracket, rpm limiter 1-5, 1-17  
 bracket, seat back 1-21  
 bracket, seat back mounting 1-23  
 bracket, seat support 1-7, 1-17  
 bracket, shroud 1-3  
 bracket, snubber 1-27  
 bracket, stabilizer bar mounting 5-19  
 bracket, stake side 1-31  
 bracket, support, governor cable 1-11  
 bracket, throttle 1-9  
 bracket, transmission cable support 6-3,  
     1-3  
 brake actuator 4-5, 4-11  
 brake adjustment bolt 4-11  
 brake adjustment tool 16-3  
 brake anchor body 4-11  
 brake anchor piston 4-11  
 brake cable 4-5, 4-7, 4-9, 4-11  
 brake cable clamp 5-11  
 brake cable guide bracket 5-11  
 brake cable hanger 4-5, 5-15, 5-17  
 brake cluster 4-3, 4-5, 4-11

brake drum 4-3, 4-5, 4-11  
 brake dust cover 4-11  
 brake equalizer 4-7, 4-9  
 brake equalizer rod 4-7, 4-9  
 brake lever arm 4-5, 4-11  
 brake mounting block 4-7, 4-9  
 brake pedal 4-7, 4-9  
 brake pedal adjustment tool 16-3  
 brake pedal pad 4-7  
 brake pedal tension tool 16-3  
 brake return spring 4-7, 4-9  
 brake shoe 4-3, 4-5, 4-11  
 brake shoe retainer 4-3, 4-5  
 brake spring 4-3, 4-5, 4-11  
 brake, adjusting mechanism 4-3  
 breaker, circuit 1-11  
 breaker, circuit, 15-amp 1-3, 1-5, 1-7, 1-9  
 breather, drain plug 1-3  
 breather, transaxle 1-3  
 brush connector 6-23  
 brush holder 6-23  
 brush inspection port cover 6-23  
 brush spring, motor 1-3  
 brush, motor 1-3  
 bulb, halogen 6-15, 1-19  
 bulb, taillight 6-19, 6-21, 1-27, 1-35  
 bumper guard 1-11, 1-25  
 bumper, front 1-3  
 bumper, jounce 5-15  
 bumper, long seat 1-23  
 bumper, rear 1-27  
 bumper, return spring 4-13, 4-15  
 bumper, rubber 1-9, 1-29, 4-7, 4-9  
 bumper, seat 1-7, 1-17  
 bumper, seat-long 1-19  
 bumper, seat-short 1-21  
 bumper, wiper switch 1-5  
 bushing, bronze 5-9, 5-13, 6-3, 6-7, 6-13  
 bushing, bronze spindle 5-9, 5-13  
 bushing, insulator 1-3  
 bushing, moveable face 1-3  
 bushing, nylon 1-9, 4-7, 4-9  
 bushing, snap 1-23, 1-31  
 bushing, stabilizer bar 5-19  
 bushing, steel 1-29, 5-9, 5-13, 5-15, 5-17  
 bushing, strain relief 1-3, 1-5, 1-7, 1-9, 1-11  
 bushing, urethane 1-29, 5-7, 5-9, 5-11,  
     5-13, 5-15, 5-17  
 button, horn 6-17, 1-21

## C

cable  
     IQDM 16-5  
 cable, accelerator 1-11  
 cable, choke 1-15  
 cable, governor 1-11

# INDEX

cable, transmission 6-3  
calibration test module 16-3  
cam installation tool 16-3  
cam, driven clutch 1-5  
cam, electrical box 6-7, 6-13  
cam, neutral lock-out 6-3  
camshaft, complete 1-11  
cap, adjustment bolt 4-5, 4-11  
cap, battery 1-11, 1-27, 1-35  
cap, corner 1-19, 1-21, 1-23  
cap, fuel tank 1-3  
cap, key switch 6-9, 6-17, 1-9, 1-21  
cap, seat back 1-9, 1-17, 1-21, 1-23  
carburetor 1-5, 1-7, 1-9  
carburetor insulator 1-9  
card, safety first 16-5  
carrier, wiper switch arm 1-5  
case assembly, battery charger 1-3, 1-5, 1-7, 1-9, 1-11  
case, gear carrier 1-7  
case, rocker 1-9, 1-21  
charger, battery 1-3, 1-5, 1-7  
choke button 1-13  
choke cable 1-15  
choke lever 1-13, 1-15  
choke lever guide 1-13  
choke positioner 1-13  
choke valve 1-13, 1-15  
clamp, battery 6-27  
clamp, brake cable 5-11  
clamp, cable retaining 1-11  
clamp, crankcase 1-11, 1-23  
clamp, forward/reverse shifter 6-3  
clamp, hose 1-3, 1-9  
clamp, hose (air intake) 1-13, 1-15  
clamp, ignition 1-5  
clamp, muffler 1-3, 1-5  
clamp, plastic 1-3  
clamp, rpm limiter 1-17  
clamp, wire 1-23, 1-31  
clevis, upper delta 5-9, 5-13  
clip, body keeper 1-5, 1-15  
clutch alignment tool 16-3  
clutch tool kit 16-3  
coil, ignition 1-5, 1-17  
collar, 25 mm 1-7  
collet, cylinder head 1-9, 1-21  
communication display module 16-3  
component cover 1-33  
component mounting plate 1-13  
compression gauge 16-3  
compression mount 5-19  
compressor, piston ring 16-5  
compressor, valve spring 16-7  
computer, onboard 1-13, 1-17, 1-23, 1-29, 1-33

conduit, potentiometer 1-15  
connecting bar, footrest 1-25  
connecting rod, crankcase 1-13, 1-25  
connector, 3-pin 1-33  
connector, brush holder 6-23  
connector, cord, crankcase 1-11  
connector, oil sending unit 1-23  
continuity tester 16-5  
control board 1-9, 1-11  
controller, 48-volt 1-13, 1-23, 1-31  
cord housing, front seat 1-19  
cordset, ac, battery charger 1-3, 1-5, 1-7, 1-9, 1-11  
cordset, dc, battery charger 1-3, 1-5, 1-7, 1-9, 1-11  
cover, accelerator 4-15, 1-15  
cover, brush inspection port 6-23  
cover, component 1-33  
cover, crankcase 1-11, 1-23  
cover, dust 4-11, 5-9, 5-13  
cover, electrical component box 6-7, 6-13  
cover, fuse block 1-25, 1-31  
cover, gear case 1-7  
cover, pump 1-7, 1-19  
cover, screw head 1-3  
cover, seat back support 1-19  
cover, steering column 5-3  
cover, vinyl seat back 1-9, 1-17, 1-19, 1-21, 1-23  
cover, vinyl seat bottom 1-7, 1-9, 1-17, 1-19, 1-21, 1-23  
cover, wiper switch 1-5  
crank, bell 1-5  
crankcase cover 1-11, 1-23  
crankcase cover gasket 1-11  
crankcase vent tube 1-9  
crankcase, complete, fe350 1-25  
crankcase, complete, ohv 1-13  
crankshaft bearing 1-23  
crankshaft seal 1-11, 1-23  
crankshaft, fe290 1-13  
crankshaft, fe350 1-25  
cup, spring 4-13, 4-15  
current limiter 1-7  
cushion, shock absorber 5-15, 5-17  
cutter, valve seat 16-7  
cylinder head 1-21  
cylinder head assembly, fe290 1-9  
cylinder head shroud 1-15  
cylinder plate head 1-9

## D

damper, rpm limiter 1-5, 1-17  
dash, driver side 1-3  
dash, passenger side 1-3  
dc cord, computer 1-29

decal, battery danger 3-5, 3-9, 3-13  
decal, bed bolt warning 3-15  
decal, bed load 1-31  
decal, bed load warning 3-15  
decal, component cover caution 3-13  
decal, crush area 3-15  
decal, driver/passenger warning 3-3, 3-7, 3-11  
decal, frame ground and governor warning 3-5, 3-9, 3-15  
decal, gasoline warning 3-5, 3-9, 3-13  
decal, ingersoll-rand 3-3, 3-9, 3-13  
decal, key switch 3-3, 3-7, 3-11  
decal, no ground 3-13  
decal, operating instructions 3-3, 3-7, 3-11  
decal, passenger warning 3-3, 3-7, 3-15  
decal, potentiometer caution 3-5  
decal, rotating parts and hot manifold warning 3-5, 3-9, 3-13  
decal, side front 3-11  
decal, trans-porter 3-13  
decal, trans-sender 3-13  
decal, vehicle loading 3-11  
decal, wiper switch warning 1-5  
delta a-plate 5-7, 5-11  
delta shock and gear support 5-7, 5-11  
differential bearing 1-3  
differential gear 1-7, 1-3  
differential gear case 1-7  
differential housing 1-3  
differential idler gear 1-7, 1-3  
differential pin 1-7, 1-3  
diode assembly 6-13, 1-7, 1-13, 1-17, 1-23, 1-29, 1-31  
dipstick 1-3  
dipstick, fe350 1-15  
door, access 1-5, 1-15  
dowel pin 1-7  
drink holder 1-3  
drive belt 1-3, 1-5  
drive clutch 1-3  
drive clutch button 1-3  
drive clutch holder tool 16-3  
drive clutch hub puller 16-3  
drive clutch puller 16-3  
drive clutch weight 1-3  
drive hub assembly 1-3  
driven clutch assembly 1-5  
driven clutch cam puller 16-3  
driven clutch puller plug 16-3  
drum, brake 4-3, 4-5, 4-11  
dry moly lubricant 16-5  
duct, air 1-15  
dust boot 5-5  
dust cover 5-13  
dust cover, brake 4-3, 4-5

# INDEX

dust seal 5-5, 5-7, 5-9, 5-11

## E

eccentric assembly 5-13  
 eccentric, front suspension 5-9  
 electrical box cam 6-7, 6-13  
 electrical component box 6-7, 6-13  
 electrical component box cover 6-7, 6-13  
 end bell 6-23  
 end shield, motor 1-3  
 equalizer 4-7, 4-9  
 equalizer and pivot limiter 4-7, 4-9  
 equalizer pivot pin 4-9  
 equalizer spacer 4-9  
 exhaust gasket 1-3, 1-5  
 exhaust system 1-3, 1-5

## F

fan housing 1-3, 1-15  
 fan, flywheel 1-17  
 fastener, plastic barrel 1-11, 1-25  
 fe290 ohv gasoline engine 1-3  
 fe350 ohv gasoline engine 1-15  
 fender 1-3  
 fender, inner 1-5, 1-15  
 fender, rear 1-27  
 field coil 6-23  
 field coil housing 6-23  
 fill plug 1-3  
 filter, air 1-13, 1-15  
 filter, fe350 1-19  
 filter, fuel 1-3  
 fitting, grease 5-9, 5-13  
 fitting, thread-forming grease 5-5, 5-7, 5-11  
 fixed face assembly 1-3, 1-5  
 float assembly, carburetor 1-5, 1-7  
 float chamber 1-5, 1-7  
 flywheel 1-5  
 flywheel fan 1-5  
 flywheel fan plate 1-5  
 flywheel puller 16-5  
 flywheel, fe350 1-17  
 footrest mat 1-11  
 footrest, rear 1-11, 1-25  
 fork, shift 1-5  
 forward/reverse bell crank 6-3  
 forward/reverse cam spring 6-3  
 forward/reverse shifter 6-3  
 forward/reverse shifter base 6-3  
 forward/reverse shifter clamp 6-3  
 forward/reverse switch 1-3  
 forward/reverse switch handle 6-3  
 fuel filter 1-3  
 fuel impulse pump 1-3  
 fuel line 1-3

fuel strap assembly 1-3  
 fuel strap, front 1-3  
 fuel tank 1-3  
 fuel tank vent 1-3  
 fuel/hour gauge 6-17  
 fuse and receptacle 1-11, 1-25  
 fuse assembly, battery charger 1-3, 1-5,  
     1-7, 1-9, 1-11  
 fuse block 6-7, 6-13, 1-25, 1-31  
 fuse block cover 1-25, 1-31  
 fuse, 10-amp 6-7, 6-13  
 fuse, 20-amp 6-13, 1-25, 1-31  
 fuse, 3/8-amp 1-11, 1-13, 1-23, 1-25, 1-29,  
     1-33

## G

gasket  
     liquid 16-5  
 gasket, carburetor 1-9  
 gasket, crankcase cover 1-11, 1-23  
 gasket, drain plug 1-7, 1-19, 1-3  
 gasket, exhaust 1-3, 1-5  
 gasket, float chamber 1-5, 1-7  
 gasket, head 1-9, 1-21  
 gasket, insulator 1-9  
 gasket, liquid 1-3  
 gasket, oil pump 1-7, 1-19  
 gasket, plug 1-3  
 gasket, rocker case 1-9, 1-21  
 gasket, seat-long 1-7, 1-17  
 gasket, seat-short 1-7, 1-17  
 gasket, taillight 6-21, 1-35  
 gasket, throttle bracket 1-9  
 gasket, voltage limiter 1-25, 1-33  
 gauge, compression 16-3  
 gauge, fuel/hour 6-9, 6-17  
 gear carrier case 1-7  
 gear case 1-3  
 gear yoke 16-5  
 gear, 17-tooth 1-5  
 gear, 61-tooth 1-5  
 gear, cluster idler 1-5  
 gear, differential 1-7, 1-3  
 gear, differential idler 1-7, 1-3  
 gear, helical 1-13  
 gear, helical, crankshaft 1-25  
 gear, input 1-5  
 gear, intermediate 1-3  
 gear, output 1-7, 1-3  
 gear, spur 1-13, 1-25, 1-5  
 governor assembly 1-5  
 governor cable 1-11  
 governor guard 1-9  
 governor lever arm 1-3  
 governor shaft installation tool 16-5  
 grommet, 5/8 1-33

grommet, choke cable 1-15  
 grommet, fe350 1-17  
 grommet, ignition 1-5  
 grommet, insulation 1-3  
 grommet, split 1-5  
 guard, governor 1-9  
 guide  
     valve seat cutter 16-7  
 guide ring adhesive 16-3  
 guide, choke lever 1-13  
 guide, f&r transmission 1-5  
 guide, oil 1-5  
 guide, steering rack 5-5  
 guide, valve 1-21  
 guide, valve, fe290 1-9

## H

handle, forward/reverse switch 6-3, 1-3  
 handrail, first seat 1-19  
 handrail, rear seat 1-11, 1-25  
 hanger, brake cable 4-3, 4-5, 5-15, 5-17  
 harness, headlight wire 6-15, 1-19  
 harness, wire 6-11  
 headlight assembly 6-15, 1-19  
 headlight bezel 6-15, 1-19  
 headlight lens 6-15, 1-19  
 headlight retainer 6-15, 1-19  
 headlight wire harness 6-15  
 heatsink, with diodes 1-3, 1-5, 1-7, 1-9,  
     1-11  
 helical gear 1-13  
 hinge, long 1-9  
 hinge, seat 1-23  
 hinge, short 1-9  
 hold-down, battery 1-11, 1-27, 1-35  
 holder, brush 6-23  
 horn assembly 6-15, 1-19  
 horn bracket 6-15, 1-19  
 horn button 6-17, 1-21  
 hose clamp 1-3, 1-9  
 hose clamp (air intake) 1-13, 1-15  
 hose, intake 1-13, 1-15  
 housing, cord 1-11  
 housing, cord, battery charger 1-9  
 housing, cord, front seat 1-19  
 housing, differential 1-3  
 housing, fan 1-3, 1-15  
 housing, field coil 6-23  
 housing, potentiometer 1-15  
 housing, taillight 6-21, 1-35  
 hub assembly 5-9, 5-13  
 hub bearing 5-9  
 hub bearing package 5-13  
 hub, synchronizer clutch 1-5  
 hydraulic brake adjuster 16-5  
 hydrometer 16-5

# INDEX

## I

idle screw 1-5, 1-7  
ignition clamp 1-5  
ignition coil 1-5, 1-17  
indicator, battery 1-21  
insert, synchronizer 1-5  
insert, wood 1-7, 1-9, 1-17, 1-21, 1-23  
insulation, rear cargo bed 1-29  
insulator gasket 1-9  
insulator, battery 1-15, 1-23, 1-29  
insulator, carburetor 1-9  
insulator, df terminal 6-23  
insulator, f terminal 6-23  
intake hose 1-13, 1-15  
intake seal 1-13, 1-15  
intermediate gear assembly 1-3  
internal retaining ring pliers 16-5  
iq display module (iqdm) 16-5

## J

j-bolt 1-11  
jet, main 1-5, 1-7  
jet, pilot 1-5, 1-7  
joint, ball 4-7, 4-9, 6-3  
joint, compound steering 5-3  
joint, inner ball 5-5  
joint, spring-loaded ball 4-13  
jumper wire 1-7

## K

key (pair) 6-9, 6-17, 1-21  
key switch 6-17, 1-9, 1-21  
key switch cap 6-17  
key switch nut 6-17  
key switch washer 6-17  
key, crankshaft 1-13, 1-25  
key, fe350 1-17  
key, flywheel 1-5  
key, gear assembly 1-5  
key, key switch 1-9  
key, square transmission 1-5  
key, woodruff 6-23, 1-3  
kingpin, front suspension 5-9, 5-13  
kit  
  brake pedal adjustment tool 16-3  
  IQ display module (IQDM) 16-5  
  tune-up 16-7  
kit, 3-pin plug 1-5, 1-15, 1-33  
kit, 3-pin receptacle 1-5, 1-13, 1-23  
kit, air duct repair 1-13, 1-15  
kit, button 1-5  
kit, drink holder 1-3  
kit, equalizer and pivot limiter 4-9  
kit, front armrest 1-7  
kit, hardware, taillight 6-19, 1-27

## M

kit, pulley nut and screw 6-23  
kit, rebuild, fuel impulse pump 1-3  
kit, resistor 1-5  
kit, reverse buzzer 6-9, 6-15, 6-19, 6-21  
kit, shock absorber 5-15  
kit, shock absorber cushion 5-17  
kit, snap washer 1-3  
kit, stake side 1-31  
kit, steering column rebuild 5-3  
kit, wire and terminal 1-13, 1-23, 1-33  
knob, light switch 1-21

**L**

latch, wire 1-13, 1-15  
lens, headlight 6-15, 1-19  
lens, taillight 6-19, 6-21, 1-27, 1-35  
lens, turn signal 1-19  
lever arm, brake 4-5  
lever, actuator 4-15  
lever, brake 4-3  
lever, choke 1-13, 1-15  
lever, potentiometer 1-15  
lever, shifter 1-3  
lever, transmission shifter 1-3  
lifter, hydraulic 1-23  
light switch 1-21  
light switch knob 6-17, 1-21  
light, battery warning 1-9, 1-21  
light, oil warning 6-9, 6-17  
limit switch 6-3  
limiter, rpm 1-5, 1-17  
limiter, voltage 6-15, 1-25, 1-33  
line, fuel 1-3  
line, vent 1-3, 1-9  
link, rack and pinion drag 5-5  
link, stabilizer bar 5-19  
liquid gasket 1-3  
liquid gasket 16-5  
lubricant, dry moly 16-5  
lubricant, moly-teflon 16-5

mounting bracket 1-13, 1-19, 1-23, 1-31, 1-9, 1-11  
mounting plate 1-27, 1-23, 1-31  
moveable face assembly 1-3, 1-5  
muffler clamp 1-3, 1-5  
muffler mounting bracket 1-3, 1-5

## N

nameplate, club car 1-3  
needle bearing 1-5  
neutral lock-out cam 6-3  
nozzle, main 1-5, 1-7  
nut, key switch 6-9, 6-17, 1-9, 1-21  
nut, lug 5-9, 5-13  
nut, push 1-25, 1-31  
nut, slab base "t" 1-3

## O

oil filler tube 1-15  
oil filter 1-7, 1-19  
oil filter bracket 1-7, 1-19  
oil filter screen 1-11  
oil filter screen plate 1-11  
oil guide 1-5  
oil pump gasket 1-7, 1-19  
oil pump plate 1-7, 1-19  
oil seal 1-13, 1-25, 1-3, 1-7  
oil seal, axle shaft 1-3  
oil seal, input shaft 1-3  
oil warning light 6-17  
o-ring, crankcase 1-11, 1-23  
o-ring, crankshaft 1-13, 1-25  
o-ring, oil filter 1-19  
o-ring, oil filter mount 1-7  
o-ring, rocker case 1-9, 1-21  
o-ring, shroud 1-3  
o-ring, upper cylinder 1-15  
output gear 1-3

## P

pad, accelerator pedal 4-13, 4-15  
pad, brake pedal 4-7, 4-9  
pad, park brake 4-7, 4-9  
pad, spring 5-15, 5-17  
paint, touch-up 16-7  
panel, center dash 1-3  
panel, rear seat frame 1-23  
park brake latch 4-7, 4-9, 4-13, 4-15  
park brake pad 4-7, 4-9  
park brake pedal 4-7, 4-9  
park brake ratchet 4-13, 4-15  
park brake rod and pawl 4-7  
park brake rod sleeve 4-7, 4-9  
park brake spacer 4-9  
park brake torsion spring 4-9

# INDEX

pedal, park brake 4-7, 4-9  
pilot air screw 1-5, 1-7  
pin, cylinder head 1-9  
pin, differential 1-7, 1-3  
pin, dowel 1-7  
pin, equalizer pivot 4-7, 4-9  
pin, governor cable clevis 1-11  
pin, hair spring cotter 1-11  
pin, hinge-long 1-9  
pin, piston 1-13, 1-25  
pinion, steering 5-5  
pipe, intake 1-9  
piston pin 1-13, 1-25  
piston ring compressor 16-5  
piston ring pliers 16-5  
piston ring set 1-13  
piston, anchor 4-5, 4-11  
piston, crankcase 1-13  
piston, standard 1-25  
pivot arm 1-3  
pivot support bearing 4-13, 4-15  
plate, backing, brake 4-11  
plate, body hinge 1-5, 1-15  
plate, body kick 1-5, 1-15  
plate, component mounting 1-13  
plate, cylinder head 1-9, 1-21  
plate, flywheel fan 1-5  
plate, flywheel fan, fe350 1-17  
plate, front spring retainer 5-9, 5-13  
plate, mounting 1-27, 1-23, 1-31  
plate, oil filter screen 1-11, 1-23  
plate, oil pump 1-7, 1-19  
plate, receptacle backing 1-19, 1-11, 1-25, 1-9, 1-11  
plate, retainer 4-9  
plate, scorecard 5-3  
plate, seat hinge 1-7, 1-13, 1-17, 1-23  
plate, spring mounting 5-7, 5-11  
plate, thrust 1-5, 1-7, 1-3  
pliers  
    internal retaining ring 16-5  
    piston ring 16-5  
    retaining ring 16-5  
plug  
    driven clutch puller 16-3  
    plug cap assembly 1-5  
    plug cap assembly, fe350 1-17  
    plug gasket 1-3  
    plug, 2-way 1-29  
    plug, 3-pin 1-5, 1-13, 1-33  
    plug, 3-wire 1-17, 1-29  
    plug, crankcase 1-23  
    plug, drain 1-19, 1-3  
    plug, drain, fe290 1-7  
    plug, drive clutch 1-3  
    plug, fill 1-3

    plug, magnetic 1-3  
    plug, oil filter 1-7, 1-19  
    plug, spark 1-5, 1-17  
    pole set 6-23  
    positioner, choke 1-13  
    potentiometer housing 1-15  
    potentiometer lever 1-15  
    power relay 1-3, 1-5, 1-9, 1-11  
    press weldment 16-3  
    pressure relief steel ball 1-7  
    protector spray, battery terminal 16-3  
    protector, wiper switch resistor 1-5  
    puller  
        bearing 16-3  
        drive clutch 16-3  
        drive clutch hub 16-3  
        driven clutch cam 16-3  
        flywheel 16-5  
        seal 16-5  
    pulley, starter/generator 6-23  
    pully nut and screw 6-23  
    pump cover 1-7, 1-19  
    pump, fuel impulse 1-3  
    pump, oil, and rotor 1-7, 1-19  
    push nut 1-25, 1-31  
    push on retainer 1-21  
    push rod 1-9, 1-21

## R

rachet, park brake 4-13, 4-15  
rack and pinion drag link 5-5  
rack, steering 5-5  
reamer, valve guide 16-7  
rear seat frame panel 1-23  
receptacle backing plate 1-11, 1-25  
receptacle bezel 1-25  
receptacle, 3-pin 1-13, 1-15  
receptacle, ac cord 1-7  
regulator, voltage 6-13  
relay, electrical component box 6-13  
relay, power 1-3, 1-5, 1-7, 1-9, 1-11  
remover, bearing and oil seal 16-3  
resistor assembly 1-5, 1-7, 1-13, 1-17, 1-23, 1-29, 1-31  
resistor, zero ohm 1-5  
retainer 4-15  
retainer plate 4-9  
retainer, bearing 6-23, 1-3  
retainer, brake shoe 4-3, 4-5  
retainer, cable 6-3  
retainer, harness 6-9  
retainer, headlight 6-15, 1-19  
retainer, moveable face 1-3  
retainer, push on 1-21  
retainer, shock absorber cushion 5-15, 5-17

retainer, snubber 1-27  
retainer, spring 4-13, 4-15, 5-15  
retainer, valve spring 1-9, 1-21  
retaining ring pliers 16-5  
retractable cord reel 1-9, 1-11  
reverse buzzer 6-9, 6-15, 6-19, 6-21, 1-9, 1-19, 1-27, 1-35  
rigging, brush 1-3  
ring set, piston 1-13, 1-25  
ring, snap 1-9, 1-13, 1-21, 1-25  
ring, spiral back-up 1-3  
ring, synchronizer 1-5  
rocker arm 1-9, 1-21  
rocker case 1-9, 1-21  
rod and pawl, park brake 4-7, 4-9  
rod assembly, crankshaft 1-13  
rod, battery hold-down 1-27, 1-35  
rod, crankshaft 1-25  
rod, equalizer 4-7, 4-9  
rod, push 1-9, 1-21  
rod, shift 1-5  
rod, tie 5-7, 5-11  
rpm limiter 1-5, 1-17  
rpm limiter bracket 1-5, 1-17  
rpm limiter damper 1-5  
rpm limiter mount 1-5, 1-17

## S

safety first card 16-5  
scorecard plate 5-3  
screen, oil filter 1-11, 1-23  
screw  
    valve clearance adjuster 16-7  
screw, lens 6-21  
screw, pole piece 6-23  
screw, rack guide 5-5  
screw, stud 1-9  
seal puller 16-5  
seal, bearing 5-3  
seal, bed 1-29  
seal, crankshaft 1-11, 1-23  
seal, double lip 5-9, 5-13  
seal, dust 5-5, 5-7, 5-11  
seal, intake 1-13, 1-15  
seal, oil 1-13, 1-25, 1-3, 1-7  
seal, oil, axle shaft 1-3  
seal, oil, input shaft 1-5, 1-3  
seal, valve 1-9, 1-21  
seat back 1-9, 1-17, 1-19, 1-21, 1-23  
seat back cap 1-9  
seat back support 1-9  
seat bottom 1-7, 1-9, 1-17, 1-19, 1-21, 1-23  
seat hinge plate 1-23  
seat support 1-9  
seat support and armrest 1-7  
seat support panel 1-19, 1-21

# INDEX

- seat, bearing 5-3  
seat, spring 1-9, 1-21  
seat, valve 1-7, 1-19  
sensor, oil level 1-11, 1-23  
set, pole 6-23  
shackle, rear spring 5-15  
shackle, rear suspension 5-17  
shaft, guide counterbalance 1-13, 1-25  
shaft, input 1-5, 1-3  
shaft, rocker 1-9, 1-21  
shaft, shifter 1-3  
shaft, steering column 5-3  
shield, end 1-3  
shield, heat 1-15  
shift fork 1-5  
shift rod 1-5  
shifter lever 1-3  
shifter shaft 1-3  
shim, crankshaft 1-13, 1-25  
shim, oil filter 1-23  
shim, tilt bed pivot 1-29  
shim, wiper switch 1-5  
shock absorber 5-15  
shock absorber cushion 5-15, 5-17  
shock absorber, front 5-7, 5-11  
shock absorber, rear 5-17  
shoe retainer 4-11  
shrink, heat 1-9, 1-11  
shroud, cylinder head 1-15  
shroud, engine, fe290 1-3  
shroud, fan 1-3, 1-15  
shroud, lower cylinder 1-3, 1-15  
shroud, upper cylinder 1-3, 1-15  
sleeve, delta 5-7, 5-11  
sleeve, governor assembly 1-5  
sleeve, park brake rod 4-7, 4-9  
sleeve, synchronizer 1-5  
snap ring 1-9, 1-13, 1-21, 1-25  
snubber 1-27  
snubber bracket 1-27  
snubber retainer 1-27  
solenoid 6-13  
solenoid, 12-volt 6-7  
solenoid, 48-volt 1-13, 1-23, 1-31  
spacer 4-13  
spacer, 1/2 1-5  
spacer, 1-7/8 1-5  
spacer, 5/16, starter/generator 6-23  
spacer, battery terminal bolt 6-27  
spacer, body 1-9, 1-17  
spacer, crankshaft 1-13, 1-25  
spacer, equalizer 4-7, 4-9  
spacer, fixed face shaft 1-3  
spacer, overload bumper 5-15  
spacer, park brake 4-7, 4-9  
spacer, stabilizer bar 5-19  
spacer, transaxle 1-27  
spanner wrench 16-5  
spindle assembly 5-9  
spindle, front suspension 5-13  
spray, battery terminal protector 16-3  
spring brush 6-23  
spring cup 4-13, 4-15  
spring mounting plate 5-7, 5-11  
spring retainer 4-13, 4-15  
spring, brake return 4-7, 4-9  
spring, brush 6-23  
spring, compression 5-3, 1-13  
spring, compression release 1-23  
spring, drive clutch 1-3  
spring, driven clutch 1-5  
spring, engine valve 1-9, 1-21  
spring, f&r transmission 1-5  
spring, forward/reverse cam 6-3  
spring, park brake torsion 4-7, 4-9  
spring, pressure relief 1-7, 1-19  
spring, rear leaf 5-15, 5-17  
spring, retainer 1-3  
spring, return 4-13, 4-15, 1-13, 1-15  
spring, synchronizer 1-5  
spring, tapered leaf 5-9, 5-13  
spring, throttle return 1-9  
spring, wiper switch brush 1-5  
spring, yoke 5-5  
spring-loaded ball joint 4-13  
spur gear 1-13  
stabilizer bar 5-19  
stabilizer bar bushing 5-19  
stabilizer bar bushing support 5-19  
stabilizer bar link 5-19  
stabilizer bar mounting bracket 5-19  
starter/generator 6-23, 6-25  
stator shell and winding 1-3  
steering column 5-3  
steering column bearing assembly 5-3  
steering column bearing press tool 16-5  
steering column bearing seat 5-3  
steering column boot 5-3  
steering column compression spring 5-3  
steering column cover 5-3  
steering column mounting bracket 5-3  
steering column retaining ring tool 16-5  
steering column shaft 5-3  
steering column wedge 5-3  
steering column, aluminum 5-3  
steering gear box 5-5  
steering pinion 5-5  
steering rack 5-5  
steering rack guide 5-5  
steering wheel 5-3  
steering wheel puller tool 16-7  
steering, compound joint 5-3  
stem, valve 2-3  
stiffener, flywheel side 1-27  
stiffener, seat 1-19, 1-21  
strap, a-plate 5-7, 5-11  
strap, seat bottom 1-19, 1-21, 1-23  
stud, ball 4-13, 6-3, 6-7, 6-13, 1-3  
stud, lug 5-9, 5-13, 1-7, 1-3  
stud, m8 1-27  
stud, short ball 1-5  
stud, wiper switch adjusting 1-5  
support, accelerator pivot rod 4-13, 4-15  
support, front body 1-5, 1-15  
support, rear seat 1-23  
support, seat 1-9  
support, seat back 1-9  
support, stabilizer bar bushing 5-19  
switch brush 1-5  
switch, 4-position, slide 1-5, 1-7, 1-11  
switch, key 6-9, 6-17, 1-9, 1-21  
switch, light 6-17, 1-21  
switch, limit 6-3, 6-7, 6-13, 6-17, 1-3, 1-5, 1-15, 1-21  
switch, limit, sealed 1-3  
synchronizer clutch hub 1-5  
synchronizer insert 1-5  
synchronizer ring 1-5  
synchronizer sleeve 1-5  
synchronizer spring 1-5

## T

- tachometer 16-7  
taillight assembly 6-19, 6-21, 1-27, 1-35  
taillight base 6-19, 1-27  
taillight bulb 1-35  
taillight housing 1-35  
tailskirt 1-27  
tappet, camshaft 1-11  
terminal block 6-15, 1-19, 1-25, 1-31, 1-33  
terminal hardware 6-23  
tester, continuity 16-5  
thermometer, battery 16-3  
thrust plate 1-5, 1-7, 1-3  
tie, wire 6-15, 1-15, 1-19, 1-33  
tilt bed 1-29  
tilt bed hinge 1-29  
tire, unmounted 2-3  
tool  
accelerator pedal adjustment 16-3  
brake adjustment 16-3  
brake pedal adjustment 16-3  
brake pedal tension 16-3  
cam installation 16-3  
clutch alignment 16-3  
drive clutch holder 16-3  
governor shaft installation 16-5  
steering column bearing press 16-5

# INDEX

steering column retaining ring 16-5  
steering wheel puller 16-7  
transaxle axle seal 16-7  
transaxle pinion seal 16-7  
transmission 16-7  
tool kit, clutch 16-3  
touch-up paint 16-7  
transaxle axle seal tool 16-7  
transaxle pinion seal tool 16-7  
transaxle, type g 1-3  
transaxle, unitized 1-3  
transformer assembly 1-3, 1-5, 1-7, 1-9, 1-11  
transmission cable 6-3  
transmission cable support bracket 6-3, 1-3  
transmission shifter lever 1-3  
transmission tool 16-7  
trim, seat bottom 1-19, 1-21  
trim, side bumper guard 1-3  
tube, crankcase vent 1-9  
tube, fe350 1-17  
tube, ignition coil 1-5  
tube, oil filler 1-3, 1-15  
tune-up kit 16-7  
turn signal lens 6-15, 1-19  
wedge, bearing puller 16-3  
wedge, steering column 5-3  
weight, counterbalance 1-13, 1-25  
weldment, armrest mounting 1-17  
weldment, press 16-3  
wheel and tire 2-3  
wheel rim 2-3  
wheel, steering 5-3  
wheels and tires 2-3  
wiper switch 1-5  
wiper switch bumper 1-5  
wiper switch case 1-5  
wire and terminal 1-13, 1-33  
wire assembly 6-5, 6-11, 1-7  
wire assembly, battery charger 1-3, 1-5, 1-7, 1-9, 1-11  
wire assembly, computer 1-17  
wire assembly, lighting 1-17, 1-29  
wire assembly, sense lead 1-25  
wire assembly, wiper switch 1-5  
wire harness 6-5, 6-11, 1-7  
wire harness, lighting 1-17, 1-29  
wire harness, power 1-17, 1-29  
wire, jumper 1-7  
wire, lead 1-5, 1-17  
wrench, spanner 16-5

## V

valve clearance adjuster screw 16-7  
valve guide 1-9, 1-21  
valve guide reamer 16-7  
valve seat 1-7, 1-19  
valve seat cutter 16-7  
valve seat cutter guide 16-7  
valve seat t-wrench 16-7  
valve spring compressor 16-7  
valve spring retainer 1-21  
valve, choke 1-13, 1-15  
valve, cylinder head 1-9, 1-21  
valve, exhaust 1-9, 1-21  
valve, fuel pickup tube 1-3  
valve, intake 1-9, 1-21  
vehicle care kit 16-7  
vent barb 1-3  
vent line 1-3, 1-9  
volt ohm meter 16-7  
voltage limiter 6-15, 1-25, 1-33  
voltage regulator 6-7, 6-13  
voltage suppressor 1-3, 1-5, 1-7, 1-9, 1-11

## W

washer, key switch 6-9, 6-17, 1-21  
washer, kingpin wave 5-9, 5-13  
washer, mounting 1-5  
washer, nylon flat 6-3  
washer, plastic, 1/4 1-3  
washer, tab 5-5

## Y

yoke spring 5-5  
yoke, gear 16-5

## Z

zero ohm resistor 1-5



**Club Car**®

## NOTES

**Club Car**

## NOTES



**CLUB CAR**  

---

**INGERSOLL-RAND**

**Transportation and Utility Vehicles**  
Club Car Inc.  
P.O. Box 204658  
Augusta, GA 30917-4658